

Keyless Lock

There are several locking options for the keyless lock:

- **Supervisor Code** - Allows the lock to be overridden and to change operational modes.

Default Code is 071856. It is highly recommended that the supervisor code be changed

To Lock - Dial the supervisor code and press the lock button

To Unlock - Dial the supervisor code and press the unlock button

- **User Code (Single Use Mode)** Code allows for a revolving user code so the lock can be used by multiple people for shared or day use lockers or cabinets.

To Lock - Dial a 4 to 8 digit code and press the lock button

To Unlock - Redial the previous 4 to 8 digit code and press the unlock button.



Keyless Lock Programming

Tools Required

- Pencil
- Paper Clip

Supervisor Code

- Press and hold the receiver learn button until the yellow LED begins a **two blink** pattern... then release. **(Figure A).**
- Enter the current supervisor code and press the unlock button. Wait for the green transmitter light to go out. **(Figure B).**

Default supervisor code is **071856**.

- Enter the new four to eight digit supervisor code and press the lock button. Wait for green transmitter light to go out. **(Figure C).**
- To confirm, re-enter the new supervisor code & press lock button.
- If successful, the green LED on the Receiver Latch will light and learn mode will be exited. **(Figure D).**
- **Test new supervisor code before locking cabinet. Make sure to record new supervisor code in a safe place.**

Figure A



Figure B

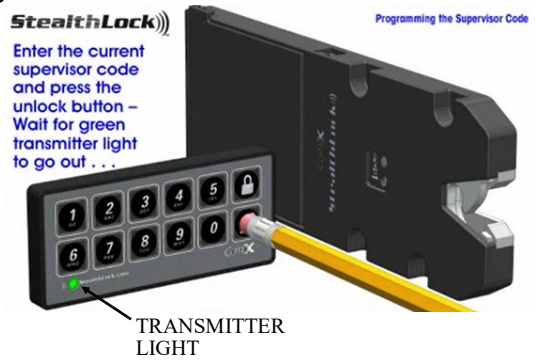


Figure C

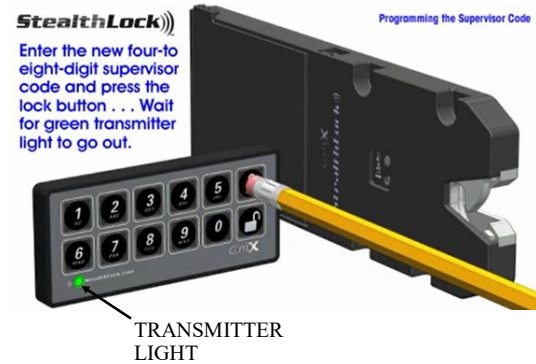


Figure D

