

Joya® Task Seating

Four-Position Lock Synchro Control

Height Adjustable Arm

Available on certain models.
Push button in and adjust arm to desired height.

Back Tension Adjustment

Standard on all models.
Turn knob backward for less tension. Turn knob forward for more tension.

Seat Height Adjustment

Standard on all models.
To raise, pull up on lever while not seated until seat is at preferred height.
To lower, pull up on lever while seated until seat is at preferred height.

Adjustable Lumbar

Standard on all models.
Adjust lumbar up or down to desired position.

Adjustable Arm Pad

Available on certain models.
Move arm pad front to back to desired location.

Back Angle Lock/Unlock

Standard on all models.
Turn knob backward to lock. Turn knob forward to unlock.

Seat Depth Adjustment

Available on certain models.
Pull up on lever and slide seat forward or backward to desired position.



Joya® Task Seating

One-Position Lock Synchro Control

Height Adjustable Arm

Available on certain models.

Push button in and adjust arm to desired height.

Back Angle Lock/Unlock

Standard on all models.

To unlock pull handle out.
To lock push handle in.

Seat Height Adjustment

Standard on all models.

To raise, pull up on lever while not seated until seat is at preferred height. To lower, pull up on lever while seated until seat is at preferred height.

Adjustable Lumbar

Standard on all models.

Adjust lumbar up or down to desired position.

Adjustable Arm Pad

Available on certain models.

Move arm pad front to back to desired location.

Back Tension Adjustment

Standard on all models.

As seated, turn knob left for more tension. Turn knob right for less tension.

