 


Towers

InstallationInstructions

Index

General Guidelines	2
Foot Installation	3
Glide Adjustment	4
Caster Installation	5
Door Adjustments	6

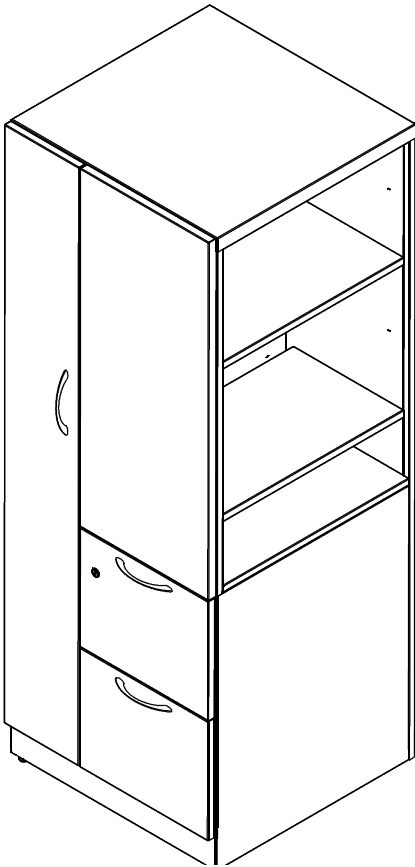

⚠ WARNING

Failure to install product as instructed, use of hardware other than that which is provided, or failure to comply with instructions can result in product failure, personal injury, or property damage.

General Usage Notes:

1. If necessary to turn a unit on its back or side, ensure that the floor is clean and free of debris which may scratch the unit.
2. Attachment hardware is provided in hardware packs unless otherwise noted.

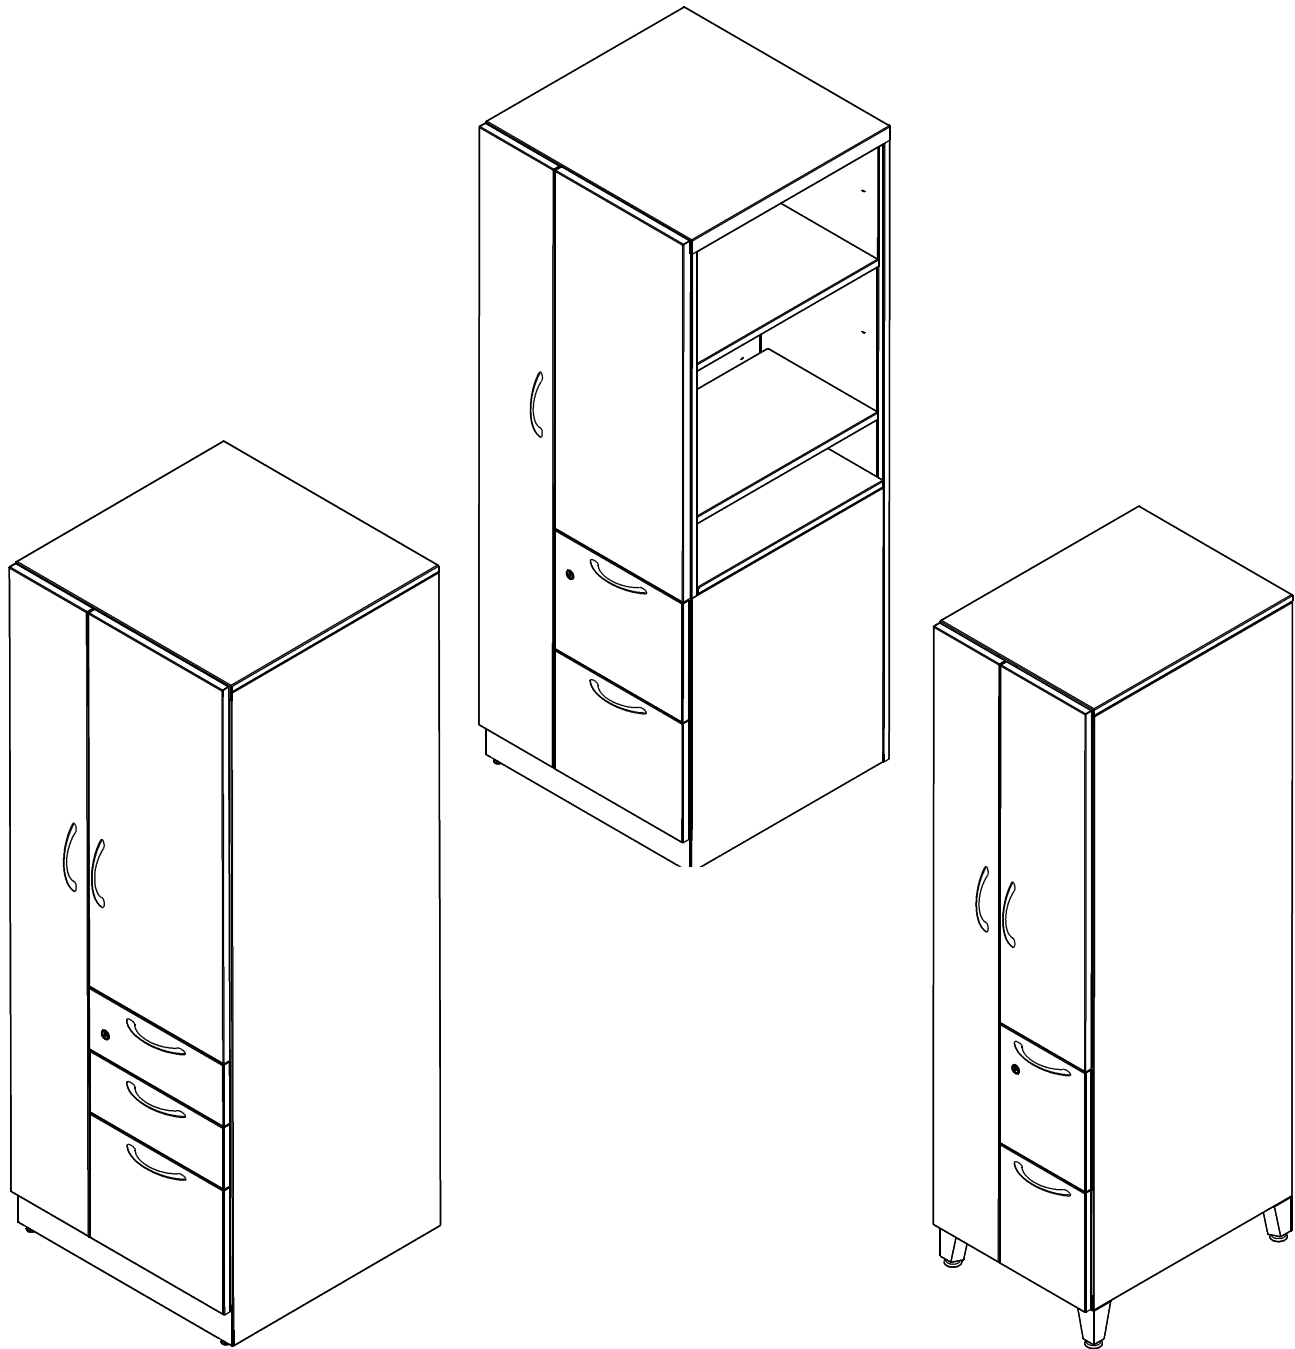 
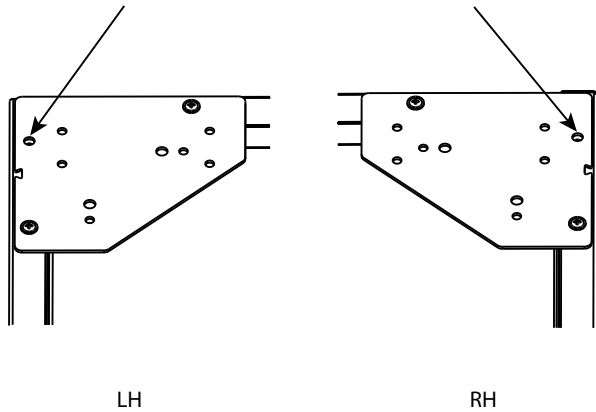 


 
Illustration 1. Foot Installation**1a.**

Step 1 - Place tower onto its back on a clean carpeted surface or cardboard.

 
Step 2 - Remove one screw from each corner bracket as shown by arrows below

**1b.**

Step 3 - Install longer screw & shoulder sleeve.

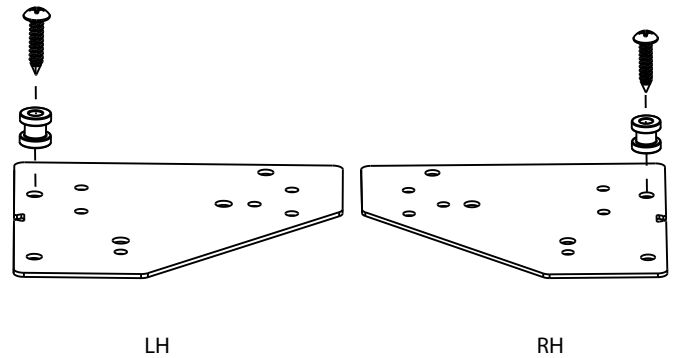**1c.**

Step 4 - Engage mounting feature of foot with shoulder sleeve then align locating pins with bracket

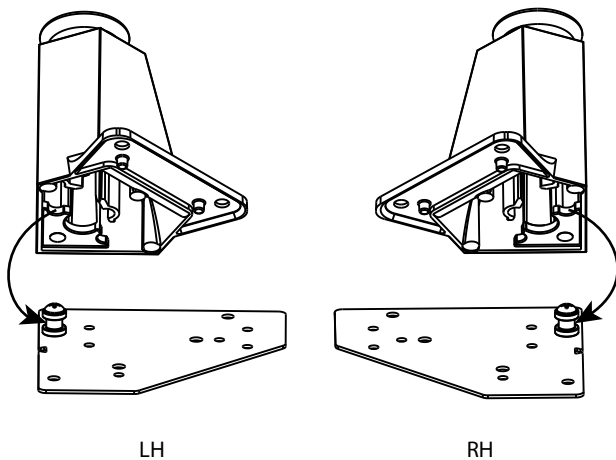**1d.**

Step 5 - Install remaining shorter screws

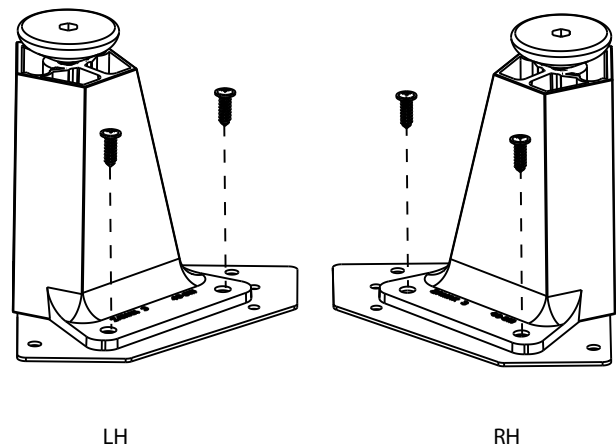 


Illustration 3. Level Towers**3a.**

NOTE: When possible, locate the highest point of the floor and start leveling from there. On carpeted floors, be sure the glides are supporting the weight of the unit. If tipping the locker is necessary, be aware of the doors opening.

Step 1 - Place tower as close to final location as possible.

Step 2 - Level the tower from side to side and front to back.
When possible use a level across the locker.

Step 3 - Tower should be flush to adjoining tower both on the front edge and the top side.

Illustration 4. Glide Adjustment**4a.**

Step 1 - Fully open door.

Step 2 - Adjust glide from inside case by using a ¼" hex driver.

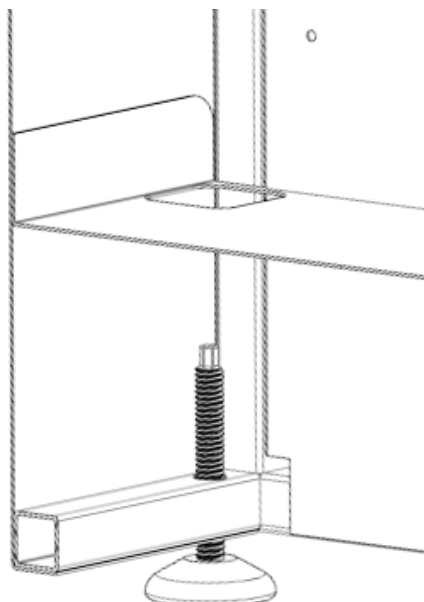 
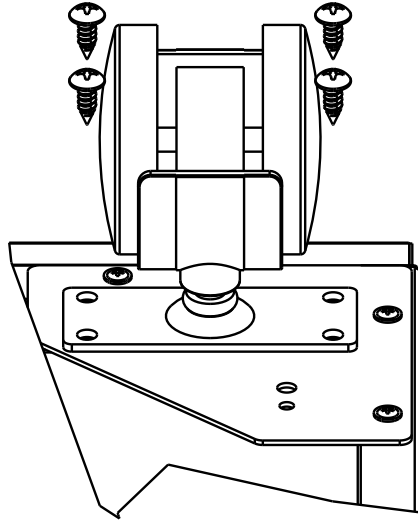 


Illustration 5. Caster Installation**5a.**

Step 1 - Line up brackets

**5b.**

Step 2 - Install fixed casters in the front location facing forward and swivel casters in the rear location.

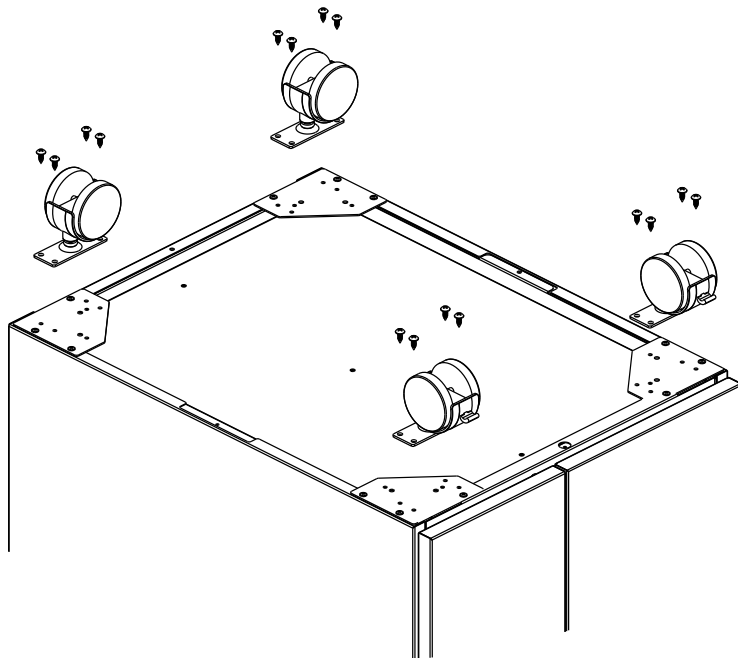 
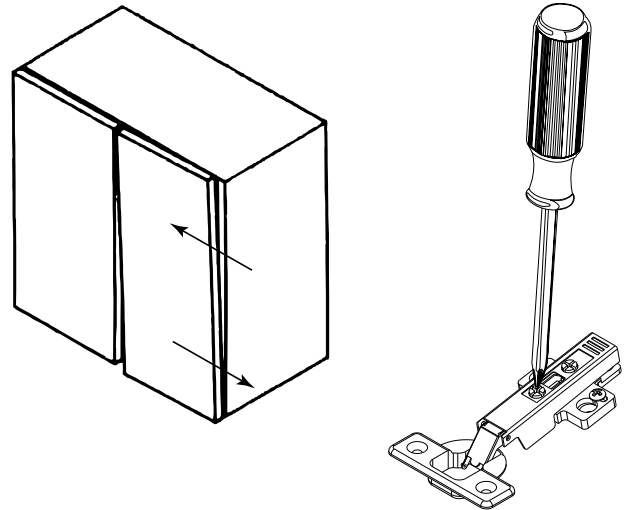 
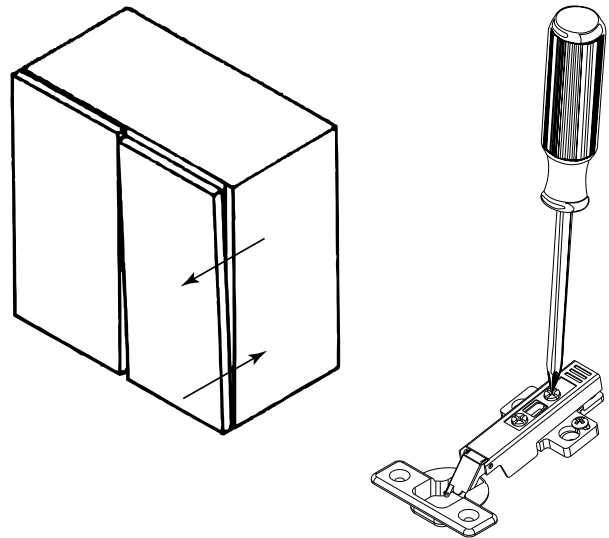 


Illustration 6. Door Adjustments**6a. Door Hinge Adjustment**

 
- Step 1 - Fully open cabinet doors.
- Step 2 - Locate door alignment screw on door hinge assembly.
- Step 3 - Use the Phillips screwdriver to adjust door alignment screw.
- Step 4 - Turn door alignment screw clockwise to adjust door out or counterclockwise to adjust door in.

**6b. Door Depth Hinge Adjustment**

- Step 1 - Fully open cabinet doors.
- Step 2 - Locate hinge mounting screw on door hinge assembly.
- Step 3 - Use the Phillips screwdriver to loosen (but do not remove) the hinge mounting screw.
- Step 4 - Adjust alignment of door and re-tighten hinge mounting screw.

**6c. Door Height Hinge Adjustment**

- Step 1 - Fully open cabinet doors.
- Step 2 - Locate door alignment screw on door hinge assembly.
- Step 3 - Use the Phillips screwdriver to adjust door alignment screw.
- Step 4 - Turn door alignment screw clockwise to adjust door down or counterclockwise to adjust door up.

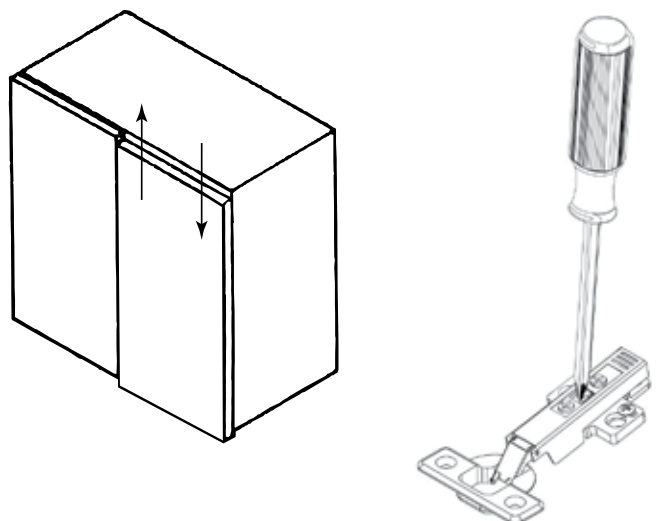 


NOTE: Hinge plate may be slotted and require adjustment by loosening screws.

Illustration 6. Door Adjustments Continued**6d. Hinge Door Removal**

NOTE: Door removal should only be necessary to replace a damaged door.

- Step 1 - Press hinge catch at rear of hinge mounting plate (attached to door hinge support).
- Step 2 - While pressing hinge catch, pivot rear of hinge away from hinge mounting plate.
- Step 3 - Pull forward on hinge until hinge mounting hooks come free of mounting plate lugs.
- Step 4 - Repeat procedure for remaining hinge.
- Step 5 - Reinstall door by reversing this procedure.

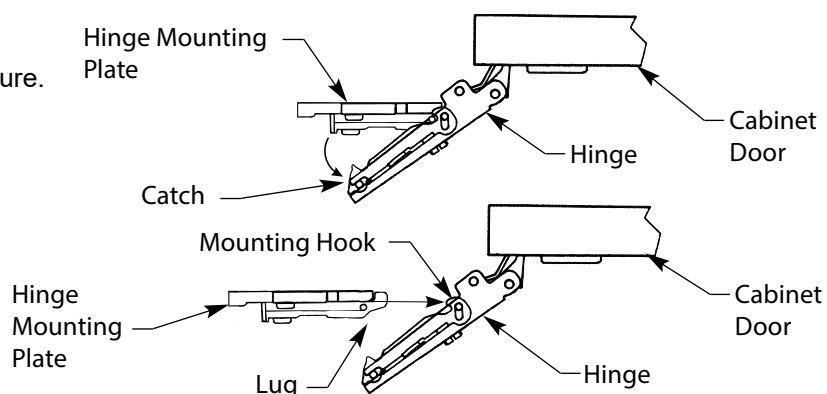**6e. Hinge Door Installation**

- Step 1 - Push forward on hinge until the mounting hooks contact the mounting plate lugs.
- Step 2 - When the mounting hooks engage the mounting plate lugs, press the rear of the hinge toward the mounting plate until it latches with the catch.

