

Air End Serial Number

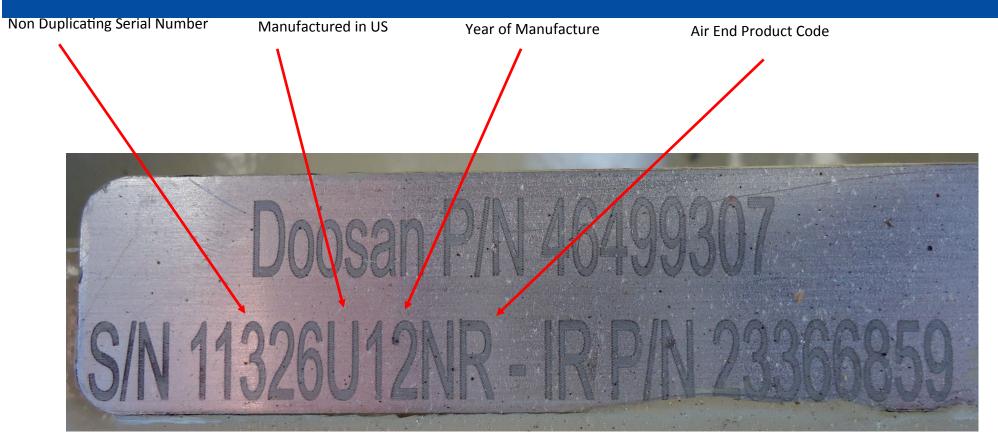

Please note airend serial numbers which contain "RU" or "U" were built by Doosan Airend Rebuild.

Air End Serial Number Locations

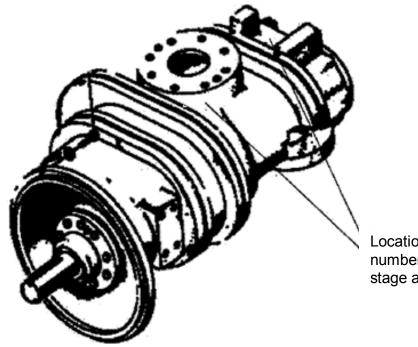


Location of serial number on single stage airend Location of serial number on over and under airend



Page 85

Locations of serial numbers on two-stage high pressure airend

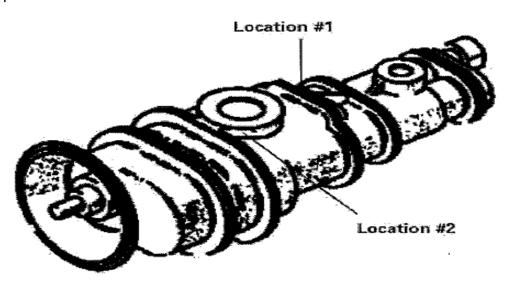




Doosan Infracore Portable Power

> Air End Serial Numbers Small to Medium Air Compressors





Air End Serial Number Locations Large Air Compressors

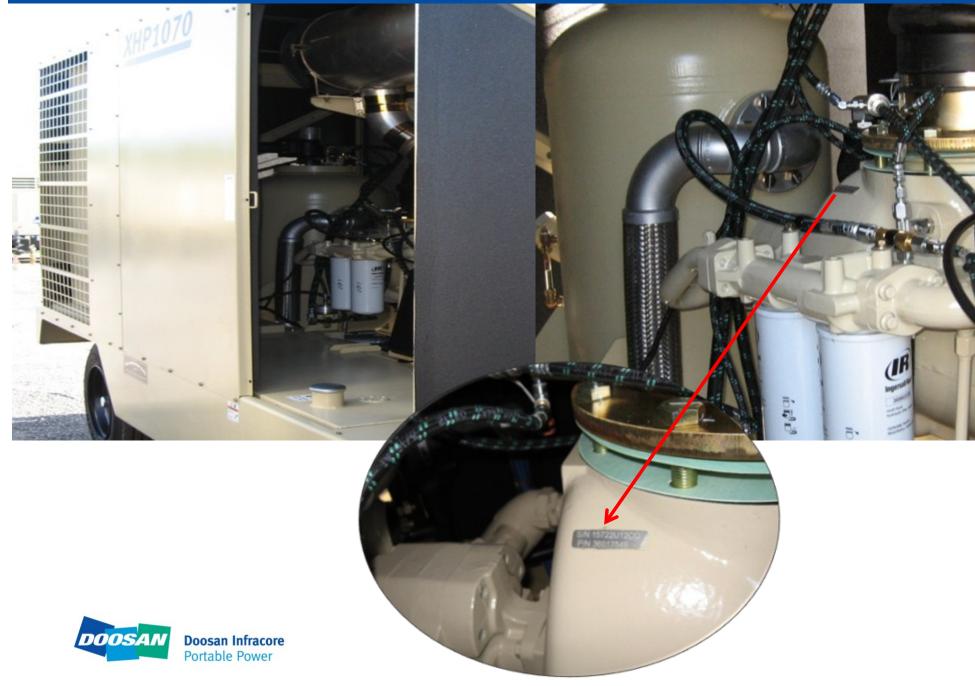

Page 87