


⚠ BEFORE OPERATING

The Operation & Maintenance Manual, Operator's Handbook and machine signs (decals) provide proper operation and maintenance instructions. Failure to follow warnings and instructions can cause serious injury or death.

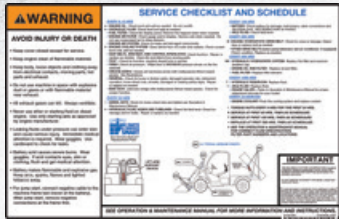

The service schedule provides service and maintenance instructions. Check fluid levels, lubricate and grease the machine as required. Check for leaks and broken or damaged parts before operating.

Never smoke when fueling!

Know the location and function of all safety features, interlocks, gauges and operating controls.

Activate the auxiliary hydraulics mode switch for hydraulic attachment operation.



Always fasten the seat belt(s) snugly and lower the armrest before operating.

⚠ Wear proper clothing and use personal protective equipment as required for the job.

⚠ SERVICING

Service and repair work should only be done by qualified service personnel.

If the lift arms are raised for service, they must be secured by an approved lift arm support.



⚠ TRANSPORTING THE MACHINE AND ATTACHMENT



Always drive up the ramp with the heavy end uphill. Place the travel direction control lever in PARK.

Secure the machine and attachments to the tie-down points using chains and binders (see Operation & Maintenance Manual for more details). Use a towing vehicle and trailer of adequate capacity.

⚠ OPTIONS AND ACCESSORIES

Additional machine options and accessories are available (enclosures, backup alarms, fire extinguisher, special application kits, etc.).



Bobcat

One Tough Animal.

Bobcat Company • 250 East Beaton Drive • West Fargo, ND 58078

Bobcat®, the Bobcat logo and the colors of the Bobcat machine are registered trademarks of Bobcat Company in the United States and various other countries.
©2024 Bobcat Company. All rights reserved.

B-1784 (05/24)
EP-1875-0524-13482-F

Printed in U.S.A.



RENT IT

SAFELY ⚠



SAFETY RULES FOR TOOLCAT UTILITY WORK MACHINES FROM BOBCAT

Know the equipment and the worksite before you operate.

Remember: Safe operation begins with the operator.

Scan the code to watch the Toolcat utility work machine safety video.



RENT IT SAFELY

! KNOWING THE WORKSITE

Understand and comply with applicable laws and regulations. Call local utilities before you dig: 1-888-258-0808.


- Know the location of underground gas, water and electrical lines.
- Inspect the work area for holes, drop-offs or unstable ground.
- Know the weight limitations of operating surfaces and clearances.



Know what's below. Call before you dig.



! CHANGING AND USING ATTACHMENTS

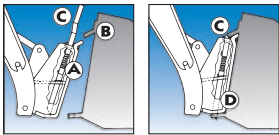

For fast, secure attachment change, **A** moves into attachment flange **B**, and handle **C** pushes down easily, pressing wedge **D** through the attachment mounting frame for solid connection.

Make sure the attachment is securely fastened to the machine. The Bob-Tach® attachment mounting system levers should be fully down and locked with the wedge extended through the attachment mounting frame. Use only approved attachments.

The attachment signs (decals) and Operation & Maintenance Manual provide operating and maintenance instructions. **Failure to follow warnings and instructions can cause serious injury or death.**

! LEAVING THE MACHINE

Before leaving the operator's seat:

- 1 Put the travel direction control lever in PARK and all controls in NEUTRAL.
- 2 Lower the lift arm and put the attachment and implement flat on the ground.
- 3 Stop the engine and raise the armrest.

Always park the machine on flat, level ground.



! WHILE OPERATING

To start the engine and operate the machine:

- 1 Fasten seat belt(s).
- 2 Put travel direction control lever in PARK and hydraulic controls in NEUTRAL.
- 3 Start the engine.
- 4 Lower armrest to activate lift, tilt, auxiliary hydraulics and drive functions.



Power Take-Off (PTO) Safety

- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.



! Keep bystanders away from the machine and work area. Do not raise the lift arm and attachment over another person.

- On slopes, keep the machine's heavy end uphill.
- Travel directly up and down slopes, not across them.
- Load, unload and turn on flat, level ground. Do not travel or turn with the lift arm up. Slow down when turning. Carry the load low.
- Keep the load level when raising the lift arm to prevent material from falling.
- Never carry riders in the cargo box. Carry one rider only in the passenger seat.
- Always maintain a clear view of the direction of travel.



! Know the machine capacity.

Never exceed machine capacities. See the machine signs (decals) or the Operation & Maintenance Manual for more information on:

- Loader rated operating capacity
- Maximum cargo box load
- Machine rated capacity
- Maximum trailer hitch and towing weight
- Total rated capacity

! Keep hands and feet inside the operator's area. Never lean out of the cab with the engine running.

- Never operate controls from the ground.
- Always sit in the operator's seat when activating the controls.

TRAINING & SAFETY
PREPARE TO PERFORM



Operator training and safety resources, including a safety video for Toolcat™ utility work machines, are available in English and Spanish at Bobcat.com/training

TRAIN NOW

