

! BEFORE OPERATING

The Operation & Maintenance Manual and machine safety signs (decals) provide proper operation and maintenance instructions. Failure to obey warnings and instructions can cause serious injury or death.



The service schedule under the hood provides service and maintenance instructions. Check fluid levels, lubricate and grease the machine as required. Check for leaks and broken or damaged parts before operating.

Never smoke when fueling!

Know the location and function of all safety features, interlocks, lockouts, gauges and operating controls.

Use the auxiliary hydraulic control lever or AUX button (if equipped) to activate hydraulic attachment operation. Use the continuous flow shutoff pedal for detent operation.



Make sure all controls are in NEUTRAL before starting the engine.

The engine will not start if the steering controls or the auxiliary hydraulic controls are engaged.

! **Wear proper clothing and use personal protective equipment as required for the job.**

! SERVICING

Maintenance procedures that are not in the Operation & Maintenance Manual must be performed only by qualified service personnel. Park the machine on flat, level ground, lower the lift arms and shut down the machine before servicing. If the lift arms are raised for service, they must be secured by an approved lift arm support.



! TRANSPORTING THE MACHINE AND ATTACHMENT



Use a towing vehicle and trailer of adequate capacity. Always drive up the ramp with the heavy end uphill. With an empty bucket or no attachment, the rear of the machine is heavier. Engage the parking brake. Secure the machine and attachments to the tie-down points using chains and binders (see Operation & Maintenance Manual for more details).

! OPTIONS AND ACCESSORIES

Additional machine options and accessories are available, such as an engine block heater or operating light kit.



One Tough Animal

BOBCAT COMPANY • 250 EAST BEATON DRIVE • WEST FARGO, ND 58078

Bobcat®, the Bobcat logo and the colors of the Bobcat machine are registered trademarks of Bobcat Company in the United States and various other countries.
©2025 Bobcat Company. All rights reserved.

Printed in U.S.A.

B-1765 (05/25)
EP-1.5M-0525-19587-F



RENT IT

SAFELY !



SAFETY RULES FOR BOBCAT MINI TRACK LOADERS

Know the equipment and the worksite before you operate.

Remember: Safe operation begins with the operator.

Scan the code to watch the mini track loader safety video.



RENT IT SAFELY

! KNOWING THE WORKSITE


Obey applicable laws and regulations. Call local utilities before you dig: 811 or 1-888-258-0808.

- Know the location of underground gas, water and electrical lines.
- Inspect the work area for holes, drop-offs or unstable ground.
- Know the weight limitations of operating surfaces and clearances.



Know what's below.
Call before you dig.

! CHANGING AND USING ATTACHMENTS

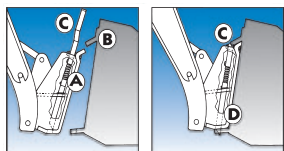

For fast, secure attachment change, **A** moves into attachment flange **B**, and handle **C** pushes down easily, pressing wedge **D** through the attachment mounting frame for solid connection.

Make sure the attachment is securely fastened to the machine. The Bob-Tach® attachment mounting system levers should be fully down and locked with the wedge extended through the attachment mounting frame. Use only Bobcat-approved attachments.

See the Operation & Maintenance Manual for the correct procedure for machines equipped with CII. Ensure the CII locking pins are fully engaged in the mounting frame.

The attachment safety signs (decals) and Operation & Maintenance Manual provide operating and maintenance instructions. **Failure to obey warnings and instructions can cause serious injury or death.**

! LEAVING THE MACHINE

Before leaving the operator's position:

- 1 Stop the machine on flat, level ground.
- 2 Lower the lift arms and put the attachment flat on the ground.
- 3 Put all controls in NEUTRAL.
- 4 Engage the parking brake.
- 5 Shut down the machine.
- 6 Remove the key (if equipped) to prevent unauthorized starting.

! WHILE OPERATING

- Operate only from the operator's position at the rear of the loader.
- Start the engine with the steering lever controls and hydraulic controls in NEUTRAL. Keep bystanders away.
- Move the steering lever controls smoothly. The drive system is responsive, and the loader will move immediately when the controls are activated. Do not pull back suddenly on the steering lever controls to stop the loader. Slow down when approaching the dump site.



! Keep bystanders away from the mini track loader and work area. Do not raise the lift arms and attachment over another person.



- Never exceed the loader's rated operating capacity.
- Use the correct bucket size for the type and density of material being handled.
- Always maintain a clear view of the direction of travel.
- Never carry riders or use the loader as a manlift.
- On slopes, keep the heavy end of the loader uphill. With an empty bucket or no attachment, the rear of the machine is heavier.
- Travel directly up and down slopes, not across them.
- Load, unload and turn on flat, level ground. Do not travel or turn with the lift arms raised.
- Carry the load low.

! Never drive over obstructions or drop-offs.

- Always keep your hands on the controls. Stay away from the tracks.
- Keep the bucket level when raising the lift arms to prevent material from falling out of the bucket.



TRAIN NOW

Operator training and safety resources, including a safety video and operator training course for mini track loaders, are available in English and Spanish at Bobcat.com/training

