

 










 



Explanation of the service intervals:

- **10:** Every 10 hours or daily (before starting the machine).
- **50:** Every 50 hours.
- **100:** Every 100 hours.
- **250:** Every 250 hours or every 12 months, whichever comes first.
- **500:** Every 500 hours or every 12 months, whichever comes first.
- **1000:** Every 1000 hours or every 12 months, whichever comes first.
- **1500:** Every 1500 hours or every 24 months, whichever comes first.

Service Schedule								
O	Check condition / proper operation. Adjust or replace as needed	V	Refill as needed.					
D	Check the display. Service only when required.	C	Clean.					
W	Service every 10 hours when operating in water.	R	Replace.					
F	First time only.	G	Grease.					
Item	Service Required	Service Interval (hours)						
		10	50	100	250	500	1000	2000
Tracks 	Tension	O						
Operator Cab and HVAC	Filters	C						
Safety Signs (decals)		CO						
Seat Belt	Seat belt, mounting hardware, and seat belt retractors	CO						
Control Console Lockout		O						
X-Change / Attachment Coupler		O						
Travel Motion Alarm and Horn		O						
Operator Canopy / Cab	Canopy / cab, mounting hardware	O						
Indicators and Lights		O						
Pivot Points 	Pivot points, clamp (if equipped)	G						
Fuel System	Drain water from fuel filter.	O						
Swing Bearing 	Swing bearing, swing pinion	W	G					
Engine Oil and Filter  		V	FR			R		

**Service Schedule**

O	Check condition / proper operation. Adjust or replace as needed	V	Refill as needed.					
D	Check the display. Service only when required.	C	Clean.					
W	Service every 10 hours when operating in water.	R	Replace.					
F	First time only.	G	Grease.					
Item	Service Required	Service Interval (hours)						
		10	50	100	250	500	1000	2000
Engine Air Filters and Air System 		DO				O		
Hydraulic Fluid 		V					R	
Engine Coolant 	Coolant level (check cold)	V						R
Travel Motors (Final Drive) 	Fluid		FR		V		R	
Hydraulic Filters 	Hydraulic filter and case drain filter		FR			R		
Alternator and Starter	Electrical connections		FO			O		
Exhaust System	Spark arrester			C				
Battery 	Cables and electrical connections				O			
Fuel Filter 	Fuel Filter				R			
Hydraulic Reservoir 	Breather cap					R		
Engine Cooling System 	Radiator, fuel cooler, hydraulic fluid cooler, air conditioning condenser (if equipped)					C		
Alternator 	Belt					O		

Service Schedule								
O	Check condition / proper operation. Adjust or replace as needed	V	Refill as needed.					
D	Check the display. Service only when required.	C	Clean.					
W	Service every 10 hours when operating in water.	R	Replace.					
F	First time only.	G	Grease.					
Item	Service Required	Service Interval (hours)						
		10	50	100	250	500	1000	2000
Air Conditioning (if equipped)	Belt					O		
HVAC	Housing and coils					C		