

9994002(AU) KAW FX651V 20.5HP 48"SD S/N 999400200070 & Above 9994003(AU) KAW FT730V EFI 26HP 52"SD S/N 999400300070 & Above

9994004(AU) KAW FT730V EFI 26HP 61"SD S/N 999400400070 & Above

MAINTENANCE OPERATION	Maintenance is an ongoing job. These intervals are maximum times between maintenance operations. Perform more often under severe conditions.									
	FIRST 5 HOURS	BEFORE EACH USE	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 200 HOURS	EVERY 400 HOURS	YEARLY		
ENGINE										
Consult the engine manual for additional information and instructions										
Check /Top Off Oil Level		X								
Check for Leaks		х								
Clean Air Intake Screen		x								
Clean Air Cleaner Pre-Cleaner			x							
Clean Air Cleaner Element			x							
Clean Cooling Fins					x					
Change Oil And Filter	Х	See engine manufacturer's manual								
Check / Replace Spark Plugs						x				
				NSAXLE						
	*CH	IANGE TRA	NSAXLE O	IL AFTER IN	ITIAL 75-100	HOURS	ı			
Check for Leaks	X	X								
Change Oil and Filter	*						X			
MACHINE										
Check Interlock Operation		x								
Check Tire Pressures		x								
Check/Top Off Battery								х		
Lubricate All Points		x								

## **MAINTENANCE RECORD**

NOTES

	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS
						IERAL				11110		
Check Tire Pressures												
Lubricate All Points												
Check Nuts and Bolts												
ENGINE												
Check Oil Level												
Change Oil												
Clean Air Cleaner Element												
Clean Cooling Fins												
Replace Air Cleaner Element												
Clean and Gap Spark Plugs												
TRANSAXLE												
Change Oil and Filter												
	NOTE: After first 5 hours of operation change engine oil and filter.											