



Bobcat®

MAINTENANCE CHART ZT7000 Mowers

9997010(AU) KAW FX1000V 35HP 61 SD
S/N 999701000070 & Above
9997011(AU) KAW FX1000V 35HP 72 SD
S/N 999701100070 & Above
9997012 B&S VANGUARD EFI 37HP 61 SD
S/N 999701200070 & Above
9997013 B&S VANGUARD EFI 37HP 72 SD
S/N 999701300070 & Above

MAINTENANCE OPERATION	Maintenance is an ongoing job. These intervals are maximum times between maintenance operations. Perform more often under severe conditions.						
	FIRST 5 HOURS	DAILY	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 200 HOURS	EVERY 400 HOURS
ENGINE Consult the engine manual for additional information and instructions							
Check/Top Off Oil Levels		X					
Check For Leaks		X					
Clean Air Intake Screen		X					
Clean Air Cleaner Element		X				X	
Clean Cooling Fins					X		
Change Oil and Filter	X	See engine manufacturer's Manual					
Check/Replace Spark Plugs						X	
TRANSAXLE							
Check/Top Off Oil Level	X				X		
Change Oil And Filter					X*		X
MACHINE							
Check Interlock Operation		X					
Check Tire Pressure		X					
Lubricate All Points				X			

* First 100 hours then every 400 hours.

SPECIFIC TORQUES

BLADE BOLT TORQUE: 70 ft.-lb. (95 Nm)
WHEEL HUB NUTS: 150 ft.-lb. (203 Nm)
ENGINE CRANKSHAFT BOLT: 50 ft.-lb. (68 Nm)
TRANSAXLE PULLEY NUT: 28.3 - 41.6 ft.-lb. (38 - 56 Nm)
TRANSAXLE FILTER 17-25 ft.-lb. (55 - 65 Nm)

MAINTENANCE RECORD

NOTES

GENERAL	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS
Check Tire Pressures												
Lubricate All Points												
Check Nuts & Bolts												
ENGINE												
Check Engine Coolant Level (Where Applicable)												
Check Oil Level												
Change Oil												
Clean Air Cleaner Element												
Clean Cooling Fins												
Replace Air Cleaner Element												
Clean & Gap Spark Plugs												
NOTE: After first 5 hours of operation replace engine oil, hydraulic oil and both filters.												