

SERVICE SCHEDULE

Maintenance Intervals


Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures.

The maintenance items listed under the maintenance intervals on the following pages are the required tasks to be performed. Those items provide additional details and include maintenance that is not shown on the decal.

All maintenance intervals are for machines operating in general environmental conditions. Keep in mind that filter and oil life can be reduced:

- When machines are operating in high dust environments or extreme temperature applications,
- When fuel is taken from uncontrolled storage tanks,
- When other non-standard conditions exist.

For more details, contact your Bobcat dealer.

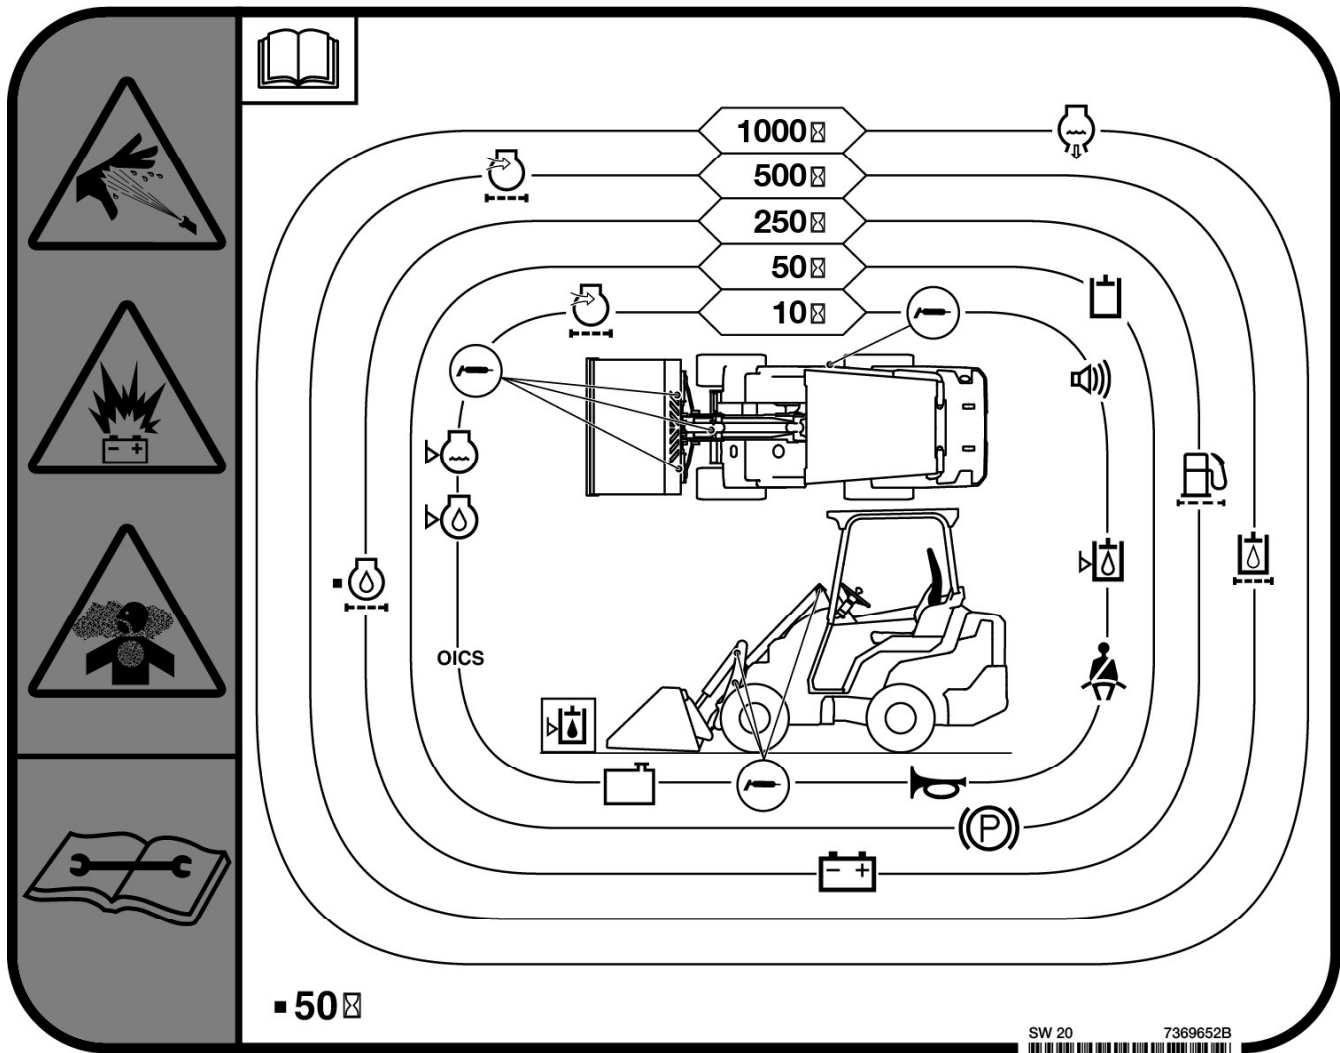

7369652B

⚠ WARNING

INSUFFICIENT INSTRUCTIONS HAZARD



Untrained operators or failure to follow instructions can cause serious injury or death.



 


- Read and understand the Operation & Maintenance Manual, Operator's Handbook and decals on machine.
- Follow warnings and instructions in the manuals when making repairs, adjustments or servicing.
- Check for correct function after adjustments, repairs or service. ◀

10-2003

Explanation of the service intervals:

- **10:** Every 10 hours or daily (before starting the machine).
- **50:** Every 50 hours.
- **250:** Every 250 hours or every 12 months, whichever comes first.
- **500:** Every 500 hours or every 12 months, whichever comes first.
- **1000:** Every 1000 hours or every 24 months, whichever comes first.

Service Schedule							
O	Check condition / proper operation. Adjust or replace as needed.					V	Refill as needed.
D	Service only when required.					C	Clean.
T	Service every 10 hours or daily for the first 30 hours.					R	Replace.
F	First time only.					G	Grease.
Item	Service Required	Service Interval (hours)					
		10	50	250	500	1000	
Operator Interlock Control System (OICS)	(See Page 70)	O					
Front Horn / Back-Up Alarm	(See Page 74)	O					
Fresh Air / Recirculation Filter (If Equipped)	• Cab Air Filter (If Equipped) (7406119)	CO					
Indicators And Lights		O					
Safety Signs And Safety Treads		O					
Tyres		O					
Engine Coolant 	• Propylene Glycol ▷ Premixed – 1 quart (6983128)	O				R	
Wheel Nuts	(See Page 99)	TO	O				
Fuel Filter – Water Separator	(See Page 82)	O					
Fuel Tank	(See Page 81)	OV					
Seat Belt	(See Page 71)	CO					
Engine Oil 	(See Page 84)	OV					

Service Schedule						
O	Check condition / proper operation. Adjust or replace as needed.	V	Refill as needed.			
D	Service only when required.	C	Clean.			
T	Service every 10 hours or daily for the first 30 hours.	R	Replace.			
F	First time only.	G	Grease.			
Item	Service Required	Service Interval (hours)				
		10	50	250	500	1000
Grease Fittings 	(See Page 101)	G				
Hydraulic Fluid 	(See Page 94) <ul style="list-style-type: none"> • 2.5 U.S. gal (2) (6903117) • 5 U.S. gal (1) (6903118) • 55 U.S. gal (1) (6903119) 	OV				R
Engine Cooling System 		C				
Engine Air Filters And Air System 	(See Page 79) (See Page 80) <ul style="list-style-type: none"> • Outer Air Filter (6672467) • Inner Air Filter (6672468) 	DO				
Engine Oil and Filter 	(See Page 85) <ul style="list-style-type: none"> • Engine Oil Filter (6657635) • Engine Oil <ul style="list-style-type: none"> – SAE 15W40: <ul style="list-style-type: none"> 1 qt (7354881) (Quantity 12) 1 U.S. gal (7354882) (Quantity 6) 2.5 U.S. gal (7354883) (Quantity 2) ▷ SAE 10W30: <ul style="list-style-type: none"> 1 qt (7354875) (Quantity 12) 1 U.S. gal (7354876) (Quantity 6) 2.5 U.S. gal (7354877) (Quantity 2) ▷ SAE 5W40: <ul style="list-style-type: none"> 1 qt (7403513) (Quantity 12) 1 U.S. gal (7403514)(Quantity 6) 2.5 U.S. gal (7403515) (Quantity 2) 		FR	R		
Hydraulic Hoses And Tubelines			O			