

SERVICE SCHEDULE

Maintenance Intervals

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures.


The service schedule decal is a guide for correct maintenance of the Bobcat excavator.

The maintenance items listed under the maintenance intervals on the following pages are the required tasks to be performed. Those items provide additional details and include maintenance that is not shown on the decal.

All maintenance intervals are for machines operating in general environmental conditions. Keep in mind that filter and oil life can be reduced:

- When machines are operating in high dust environments or extreme temperature applications,
- When fuel is taken from uncontrolled storage tanks,
- When other non-standard conditions exist.

For more details, contact your Bobcat dealer.

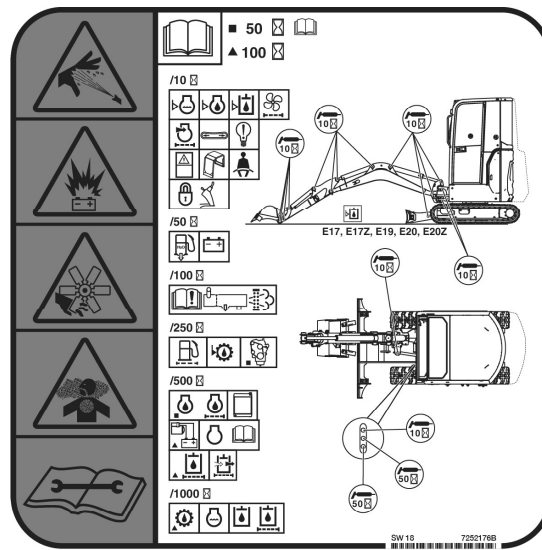

⚠ WARNING

INSUFFICIENT INSTRUCTIONS HAZARD








Untrained operators or failure to follow instructions can cause serious injury or death.




- Read and understand the Operation & Maintenance Manual, Operator's Handbook and decals on machine.
- Follow warnings and instructions in the manuals when making repairs, adjustments or servicing.
- Check for correct function after adjustments, repairs or service. ◀


 

 
 




Service Schedule

Explanation of the service intervals:

- **10:** Every 10 hours or daily (before starting the machine).
- **50:** Every 50 hours.
- **250:** Every 250 hours or every 12 months, whichever comes first.
- **500:** Every 500 hours or every 12 months, whichever comes first.
- **750:** Every 750 hours or every 12 months, whichever comes first.
- **1000:** Every 1000 hours or every 12 months, whichever comes first.
- **2000:** Every 2000 hours or every 24 months, whichever comes first.

Service Schedule								
O	Check condition / proper operation. Adjust or replace as needed.		V	Refill as needed.				
D	Drain water.		C	Clean.				
W	Service every 10 hours when operating in water.		R	Replace.				
F	First time only.		G	Grease.				
Item	Service Required	Service Interval (hours)						
		10	50	100	250	500	1000	2000
Engine Air Filters and Air System 	(See Page 108) • Outer Air Filter (6673752) • Inner Air Filter (6673753)	O						
Engine Oil and Filter  	(See Page 114) • Engine Oil (Packaging: A = 5 L can, B = 25 L container, C = 209 L drum, D = 1000 L tank): ▷ SAE 15W-40 (-20°C – +40°C) (6987819) ▷ SAE 10W-30 (-25°C – +30°C) (6987818) • Engine Oil Filter (6671057)	V	FR			R		
Hydraulic Fluid 	(See Page 124) • Hydraulic Fluid (Packaging: A = 5 L can, B = 25 L container, C = 209 L drum, D = 1000 L tank): ▷ Bobcat Superior SH Hydraulic / Hydrostatic (-35°C – +50°C) (6987791) ▷ Bobcat Biodegradable Hydraulic / Hydrostatic (-35°C – +50°C) (6987792)	V					R	
Engine Coolant 	Coolant level (check cold) (See Page 116) • Coolant (Packaging: A = 5 L can, B = 25 L container, C = 209 L drum, D = 1000 L tank): ▷ Bobcat EG Coolant Concentrated (6987803) ▷ Bobcat PG Coolant 4 Seasons (6987793)	V					R	
Tracks 	Tension (See Page 128)	O						
Fuel Filter and Pre-Filter 	(See Page 112) • Fuel Filter (6667352) • Fuel Pre-Filter (7247169)	O			R			

Service Schedule								
O	Check condition / proper operation. Adjust or replace as needed.				V	Refill as needed.		
D	Drain water.				C	Clean.		
W	Service every 10 hours when operating in water.				R	Replace.		
F	First time only.				G	Grease.		
Item	Service Required	Service Interval (hours)						
		10	50	100	250	500	1000	2000
Operator Cab (if equipped) 	Filter (See Page 107) • Fresh Air Filter (7176099)	C O						
Safety Signs (decals)	(See Page 18)	C O						
Seat Belt	Seat belt, mounting hardware, and seat belt retractors (See Page 103)	C O						
Control Console Lockout	(See Page 102)	O						
Attachment Coupler (if equipped)	(See Page 132)	O						
Motion Alarm and Horn (if equipped)	(See Page 104)	O						
Operator Canopy / Cab	Canopy / cab, mounting hardware	O						
Indicators and Lights		O						
Pivot Points 	Pivot points, clamp (if equipped) (See Page 133) • Grease (Packaging: 400 g tube): ▷ Bobcat Multipurpose Grease (Drop Point from 260°C) (6987888) ▷ Bobcat Supreme HD Grease (Drop Point from 280°C) (6987889) ▷ Bobcat Extreme HP Grease (Drop Point from 260°C) (6987890)	G						
Swing Bearing 	Swing bearing, swing pinion (See Page 133) • Grease (Packaging: 400 g tube): ▷ Bobcat Multipurpose Grease (Drop Point from 260°C) (6987888) ▷ Bobcat Supreme HD Grease (Drop Point from 280°C) (6987889) ▷ Bobcat Extreme HP Grease (Drop Point from 260°C) (6987890)	W	G					

Service Schedule								
O	Check condition / proper operation. Adjust or replace as needed.		V	Refill as needed.				
D	Drain water.		C	Clean.				
W	Service every 10 hours when operating in water.		R	Replace.				
F	First time only.		G	Grease.				
Item	Service Required	Service Interval (hours)						
		10	50	100	250	500	1000	2000
Alternator 	Belt (See Page 131)		F O		O			
Battery 	Cables and electrical connections (See Page 120) • Battery (6669600)		O					
Fuel Tank 	(See Page 112)		D					
Spark Arrester 	(See Page 127)			C				
Travel Motors (Final Drive) 	Fluid (See Page 130) • API GL-4 Low speed/high torque multipurpose oil (6987794) • API GL-5 LS/EP, SAE 80W90 (6987805)			FR	V		R	
Hydraulic System 	Hydraulic filter (See Page 124) • Primary Hydraulic Filter (6661248)			FR		R		
Alternator and Starter 	Electrical connections			FO		O		
Hydraulic System 	Breather cap (See Page 124) • Hydraulic Fill / Breather Cap (6692836)					R		
Engine Cooling System 	Radiator, fuel cooler, and hydraulic fluid cooler (See Page 116) • Radiator Cap (7257434)					C		
Cab Heater (if equipped)	Housing and coils					C		
Engine Valves	Clearance						O	