

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures.

The maintenance items listed under the maintenance intervals on the following pages are the required tasks to be performed. Those items provide additional details and include maintenance that is not shown on the decal.

All maintenance intervals are for machines operating in general environmental conditions. Keep in mind that filter and oil life can be reduced:

- When machines are operating in high dust environments or extreme temperature applications,
- When fuel is taken from uncontrolled storage tanks,
- When other non-standard conditions exist.

For more details, contact your Bobcat dealer.

7300375

100462 G7 7300375 enFR

⚠ WARNING

INSUFFICIENT INSTRUCTIONS HAZARD

Untrained operators or failure to follow instructions can cause serious injury or death.

- Read and understand the Operation & Maintenance Manual, Operator's Handbook and decals on machine.
- Follow warnings and instructions in the manuals when making repairs, adjustments or servicing.
- Check for correct function after adjustments, repairs or service. ◀






W2003

Service Schedule




Explanation of the service intervals:

- **10:** Every 10 hours or daily (before starting the machine).
- **50:** Every 50 hours.
- **100:** Every 100 hours.
- **250:** Every 250 hours.
- **500:** Every 500 hours or every 12 months, whichever comes first.
- **1000:** Every 1000 hours or every 12 months, whichever comes first.
- **2000:** Every 2000 hours or every 24 months, whichever comes first.






- **3000:** Every 3000 hours or every 36 months, whichever comes first.

Service Schedule									
O	Check condition / proper operation. Adjust or replace as needed.	V	Refill as needed						
D	Check the display. Service only when required.	C	Clean						
W	Drain water	R	Replace						
F	First time only.	G	Grease						
Item	Service Required	Service Interval (hours)							
		10	50	100	250	500	1000	2000	3000
Tyres 	Condition and pressure. Use only approved tyres. (See Tyre Maintenance on Page 212)	O							
Engine Oil 	(See Engine Lubrication System on Page 186) • Engine Oil 10W30 (7341377) • Engine Oil 15W40 (7395725)	VD					R		
Engine Oil Filter 	(See Engine Lubrication System on Page 186) • Engine Oil Filter (7343102)						R		
Exhaust system	Check exhaust system and exhaust aftertreatment components for leaks.	CO							
Cooling System 	Oil, charge air coolers and air conditioning condenser (if equipped). Keep cooling system free from debris. (See Cooling System on Page 188) Clean debris from radiator, air cooler, hydraulic fluid cooler, air conditioning condenser (if equipped), and grid.	VC-O							
	Coolant (See Cooling System on Page 188) • EG Coolant, concentrate (6987803) • EG Coolant, premixed (6987804)							R	
	Check coolant concentration (with a refractometer). Replace as needed.						O		
	Coolant level (check cold). (See Cooling System on Page 188) • EG Coolant, concentrate (6987803) • EG Coolant, premixed (6987804)	V							







Service Schedule



 
O	Check condition / proper operation. Adjust or replace as needed.	V	Refill as needed						
D	Check the display. Service only when required.	C	Clean						
W	Drain water	R	Replace						
F	First time only.	G	Grease						
Item	Service Required	Service Interval (hours)							
		10	50	100	250	500	1000	2000	3000
Heater Coil and Air Conditioning Evaporator 	Contact your Bobcat dealer.						C		
Grease Fittings 	Tilt cylinder rod end. (See Lubricating the Machine on Page 214)	G							
	Articulation pins, axle oscillation (front / rear), boom pivot, boom cylinder, self levelling (compensation) cylinder. (See Lubricating the Machine on Page 214)		G						
	Auto greasing canister (if equipped). (See Lubricating the Machine on Page 214)	V							
	Boom head distributor (if equipped). (See Lubricating the Machine on Page 214)	G							
Telescopic Boom Wear Pads 	(See Lubricating the Machine on Page 214)		G				O		
Attachment Carrier Pins	(See Attachment Carrier on Page 219)	G							
LLMC System	Test the LLMC calibration. (See LLMC Calibration Test on Page 173)			FO	O				

Service Schedule

O	Check condition / proper operation. Adjust or replace as needed.	V	Refill as needed						
D	Check the display. Service only when required.	C	Clean						
W	Drain water	R	Replace						
F	First time only.	G	Grease						
Item	Service Required	Service Interval (hours)							
		10	50	100	250	500	1000	2000	3000
 Engine Air System and Air Filters	Service when [AIR FILTER PLUGGED] is shown on display screen. Check for leaks and damaged components. (See Air Cleaner Service on Page 178) Empty dust extractor. (See Cleaning The Dust Extractor on Page 179) <ul style="list-style-type: none"> • Outer Air Filter (7286652) • Inner Air Filter (7010031) 	D				O			
	Replace the outer filter element. (See Replacing The Outer Filter on Page 178) <ul style="list-style-type: none"> • Outer Air Filter (7286652) 						R		
	Replace the inner filter element. (See Replacing The Inner Filter on Page 179) <ul style="list-style-type: none"> • Inner Air Filter (7010031) 							R	
Fuel Filter  	(See Fuel Filter on Page 184) <ul style="list-style-type: none"> • Main Fuel Filter (7336334) 	DW				R			
	(See Fuel System on Page 182) <ul style="list-style-type: none"> • Fuel Pre-Filter (7348032) • Fuel Tank Breather (7373582) 						R		
Back-up Alarm and Horn 	Check for proper function. (See Multi-function Lever on Page 53) and (See Back-up Alarm System on Page 83)	O							
Seat Belt 	Check condition. Clean or replace seat belt retractors as needed. Clean dirt and debris from moving parts. (See Seat Belt on Page 172)	OC							

Service Schedule

O	Check condition / proper operation. Adjust or replace as needed.	V	Refill as needed						
D	Check the display. Service only when required.	C	Clean						
W	Drain water	R	Replace						
F	First time only.	G	Grease						
Item	Service Required	Service Interval (hours)							
		10	50	100	250	500	1000	2000	3000
Hydraulic / Hydrostatic Fluid and Filter 	(See Removing And Replacing The Return / Suction Hydraulic Fluid Filter on Page 202) • Hydraulic Main Filter (7225338) • Hydraulic Charge Filter (7012478)			FR		R			
	(See Hydraulic / Hydrostatic System on Page 200) • Hydraulic Fluid (6987791)	V					R		
	(See Removing And Installing The Fill / Breather Cap on Page 205) • Hydraulic Fill / Breather Cap (6727475)						R		
Hydraulic Hoses and Tubelines 	Contact your Bobcat dealer to replace any damaged hoses or tubelines.		O						
Parking Brake / Service Brake 	Check For Proper Function. (See Parking Brake on Page 82) and (See Service Brake Pedal And Inching Control on Page 67)	O							
Safety Signs, Treads And Mirrors 	Check for damaged signs (decals), safety treads and mirrors. Replace any signs, safety treads or mirrors that are damaged or worn.	O							
Articulated Steering Links	Rubber protection. Contact your Bobcat dealer if damaged.		O						
Wheel Nut Torque 	(See Wheel Nuts on Page 212)	FO		O					
Alternator 	Belt. (See Alternator Belt on Page 210)				O				R

Service Schedule									
O	Check condition / proper operation. Adjust or replace as needed.	V	Refill as needed						
D	Check the display. Service only when required.	C	Clean						
W	Drain water	R	Replace						
F	First time only.	G	Grease						
Item	Service Required	Service Interval (hours)							
		10	50	100	250	500	1000	2000	3000
Air-Conditioning (if equipped)	Belt. (See Air Conditioning Belt on Page 211)					O			R
Axle Central Housing and Differential  Planetary Carriers / Reduction Box	(See Axles (Front and Rear) on Page 206) • Axle Oil (6987794)			FR	V		R [A]		
Cab Air Filter 	(See Heating, Ventilation and Air Conditioning System (HVAC) on Page 177) • Fresh Air Filter(7228497)		C			OC			
Battery 	Cables and electrical connections. (See Battery Maintenance on Page 197) • Battery (7288629)					O			
Engine Mounts							O		
Fastenings, Hose Unions and Clips							O		
DEF / Adblue® Filter	Contact your Bobcat dealer. • DEF / Adblue® Filter, service kit (7433127)								R

[A]

Half fluid change intervals must be applied in at least one of these use cases:

- more than 700H/12 months
- cooperatives of multiple owners
- recycling application
- biogas application
- forestry application