



Auto Speed Control

GETTING STARTED

1. Connect Control and OBD-II harnesses.
2. Press the SET button to enter the menus.
3. Turn the MATERIAL FLOW knob to select a setting. Press the knob to confirm the setting.
4. Press the SET button again to change menus.
5. The meter displays total material output. To reset, press and hold the MATERIAL FLOW knob for 3 seconds.

WARNING

Do not perform any troubleshooting when the vehicle is moving.

Numerous factors affect spreader output. It is the responsibility of the operator to determine actual material output.

See Owner's Manual for complete instructions.

SET Button

AUTO Button



MATERIAL FLOW Knob

Material	Density		
	(lb/ft ³)	(lb/yd ³)	(kg/m ³)
Salt	80	2160	1282
Sand	100	2700	1602
Mix	95	2565	1522

Effective Speed Range (mph)				
Rate	Auger	Auger	Chain	Chain
(lb/acre)	(Salt)	(Sand)	(Salt)	(Sand)
250	7 – 25	9 – 25	15 – 25	19 – 25
500	3 – 24	4 – 24	7 – 25	9 – 25
750	2 – 23	3 – 24	5 – 25	6 – 25
1000	1 – 17	2 – 22	3 – 23	4 – 24
1350	1 – 13	1 – 16	2 – 17	3 – 21

"S" (Slow) or "F" (Fast) will flash when the vehicle moves outside of the effective speed range.