

Heat and Moisture Exchanger (HME)

Instructions for Use

Description

The Tracheal Heat and Moisture Exchanger (HME) captures heat and moisture to return to the patient. It is meant for use by spontaneously breathing patients with a tracheostomy tube.

Instructions for Use

- To be used on spontaneously breathing patients with a tracheal tube
- Should be connected to the 15/22 mm connection of the tracheal tube
- Device should only be used for a maximum of 24 hours
- Patient should be constantly monitored whenever the product is in use



6241

Product Code	Description	Humidity Output	Resistance @ 30 LPM	Dead Space	Tidal Volume Range
6215	Neonatal Tracheal Heat and Moisture Exchanger	32 mg @ VT 25 mL	90 Pa	3 mL	> 10 mL
6240	Tracheal Heat and Moisture Exchanger	23.4 mg @ VT 500 mL	40 Pa	11 mL	> 25 mL
6241	Tracheal Heat and Moisture Exchanger with CRV O2 Port	23.4 mg @ VT 500 mL	40 Pa	11 mL	> 25 mL

Caution: Federal law restricts this device to sale by or on the order of a physician.