

POT HANGING COWLS INSTALLATION INSTRUCTIONS

We have three types of pot hanging cowl.

All have 3 straps with a jubilee band for securing to a chimney pot.

The major difference on the three types is how they fix to the Mi-Flex flexible flue liner.

IMPORTANT!

- 1** When cutting flue liner **SAFETY GLOVES** must be worn at all times.
- 2** Ensure the CHIMNEY POT IS IN GOOD CONDITION and is not cracked and is correctly fixed to the top of the chimney stack.
- 3** Make sure the FLUE LINER is installed with the **DIRECTIONAL ARROWS** FACING UP.



**STANDARD FIT
POT HANGING COWL**



**SUPPORT CLAMP FIT
POT HANGING COWL**



**SCREW-FIT
POT HANGING COWL**



STANDARD FIT POT HANGING COWL

The STANDARD FIT POT HANGING COWL comes with a spigot that slides into the flex, and has three inner legs that allows you to tighten the flex around the spigot using the supplied Internal Jubilee Band.




The STANDARD FIT POT HANGING COWL is made from 316L Stainless Steel and comes in either cream or powder coated Terracotta or Black.

PACK INCLUDES:

- | | |
|---|---|
| 1 | Standard Fit Pot Hanging Cowl with 6 legs (3 internal and 3 external) |
| 1 | External Jubilee Band |
| 1 | Internal Jubilee Band |

INSTRUCTIONS

1. Pass the Internal Jubilee Band through the hoops on the inner legs of the cowl.
2. Slide the spigot into the inside of the flexible liner and push down the cowl fully.
3. Tighten the Internal Jubilee Band so the flex is held in place securely.
4. Push the flue liner down the chimney and fix to the outside of the chimney pot by passing the External Jubilee Band through the hoops of the three outer legs and tighten so its secure against the pot.

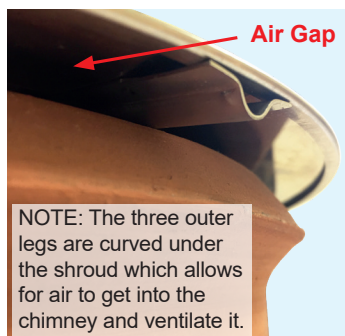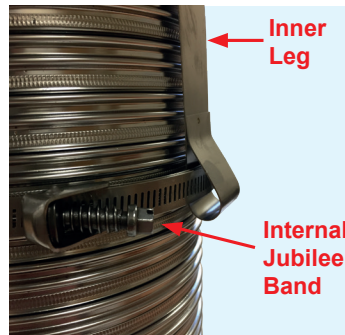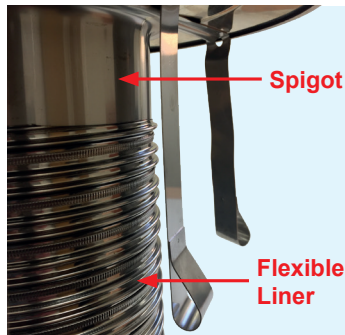

NOTE: The three outer legs are curved under the shroud which allows for air to get into the chimney and ventilate it.





SUPPORT CLAMP POT HANGING COWL


The SUPPORT CLAMP POT HANGING COWL does not have the three inner legs but comes with an additional SUPPORT CLAMP. This allows for easy back filling with the actual cowl being installed last.

Both the clamp and cowl are made from 316L Stainless Steel and the cowl comes in either a raw finish or powder coated Terracotta.

PACK INCLUDES:

1	Support Clamp Pot Hanging Cowl (no inner legs on the insert)
1	Support Clamp
1	External Jubilee Band



INSTRUCTIONS

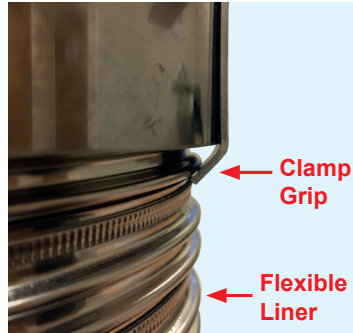

1. Take any slack out of the liner and place the bracket around the outside of the flue liner. Make sure the buckle strap is on the underside allowing the legs of the bracket to rest on top of the chimney pot.

2. Tighten the clamp until the clamp grips the flex securely.
3. Ensure the clamp is taking the entire weight of the flue liner and is not deformed.

The clamp has been designed to grip the corrugation of the flex. Make sure not to over tighten the clamp as this deforms the flex making it difficult to insert the cowl.

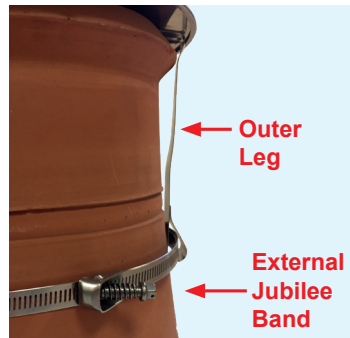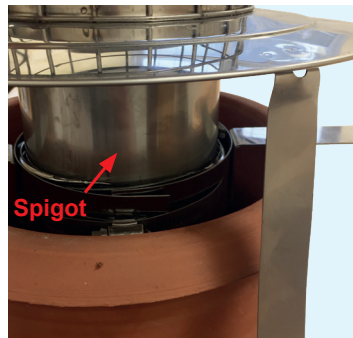

4. The liner is then cut level 3-5mm above the clamp, the neck of the cowl is then slid down the inside of the flue liner until it sits on top of the pot.
5. Secure to the outside of the cowl using the external jubilee band.



SCREW-FIT POT HANGING COWL

The SCREW-FIT POT HANGING COWL has an integrated screw thread on the liner spigot which allows the flue liner to be screwed onto the cowl.

The SCREW-FIT POT HANGING COWL is made from 316L Stainless Steel and comes in either a raw finish or powder coated Terracotta.

PACK INCLUDES:

1	Screw-Fit Pot Hanging Cowl with 3 external legs
1	External Jubilee Band



INSTRUCTIONS - METHOD 1

1. Drop flue liner down the chimney.
2. Take out any slack and cut the liner level 5-10mm above the top of the chimney pot.
IMPORTANT: Make sure you have a clean cut on the liner to allow the cowl to screw onto the flex liner smoothly.
3. Screw the cowl on to the flue liner until full attached.
4. Pull on the cowl to make sure it is full tightened.
5. Secure to the outside of the cowl using the external jubilee band.

INSTRUCTIONS - METHOD 2

1. Screw the pot hanging cowl on to the flex at ground level ensuring the cowl is fully screwed on to the flex.
IMPORTANT: Make sure you have a clean cut on the liner to allow the cowl to screw onto the flex liner smoothly.
2. Drop the flue liner down the chimney.
3. Once the cowl is sitting level on top of the chimney pot, tighten securely using the external jubilee band.
5. Cut the liner inside the chamber to the correct length.

