


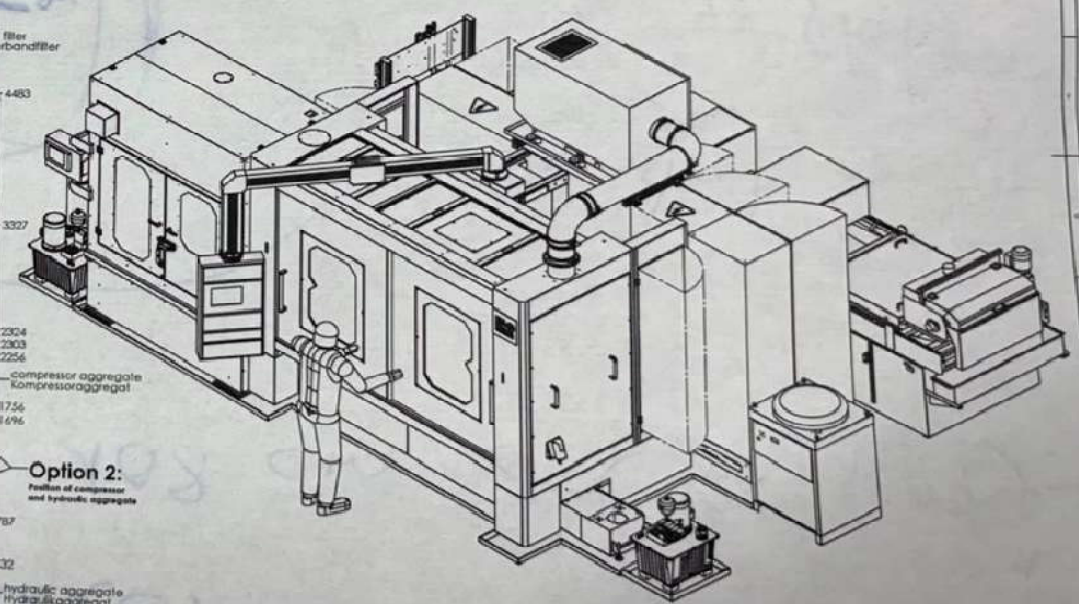
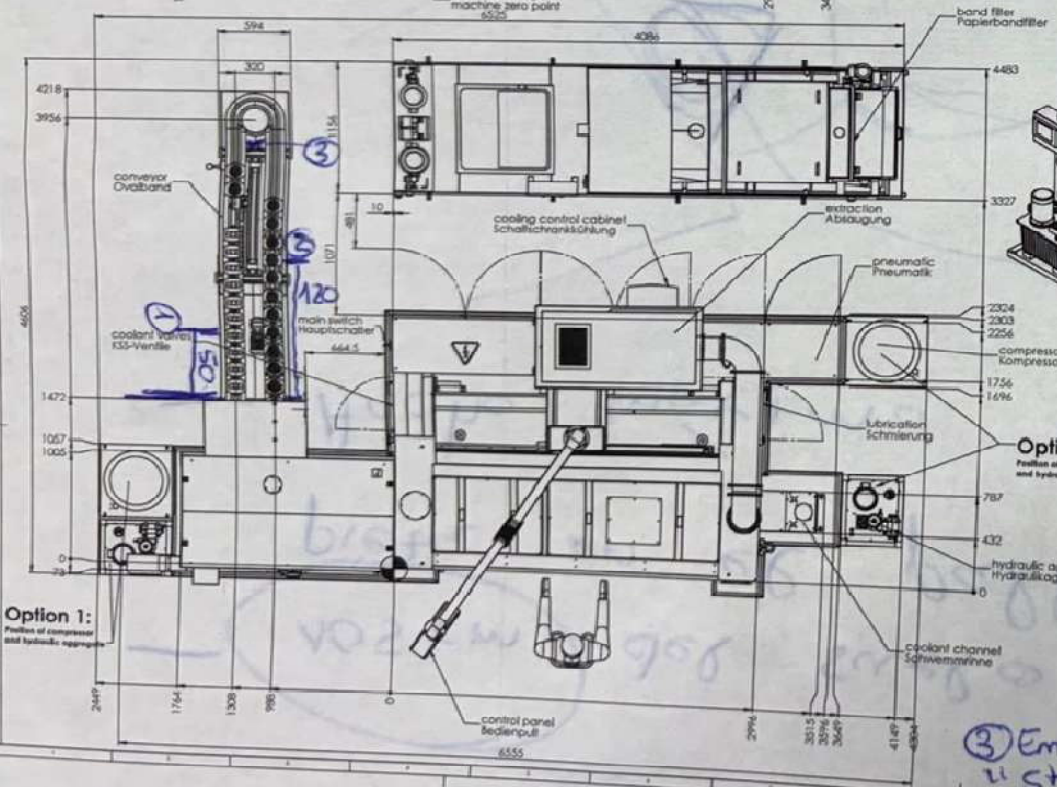
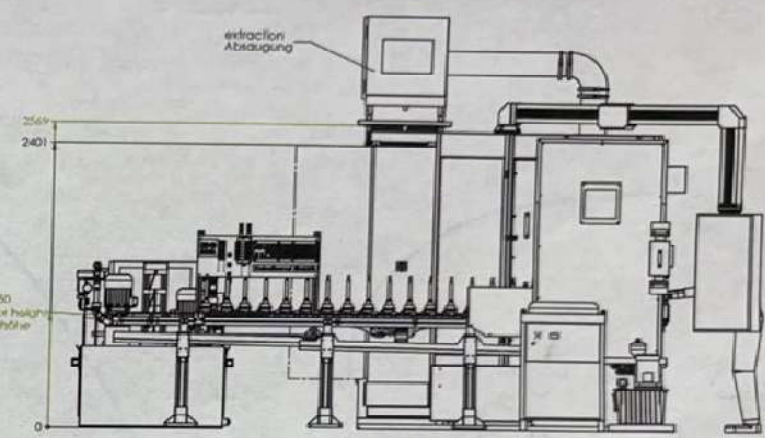



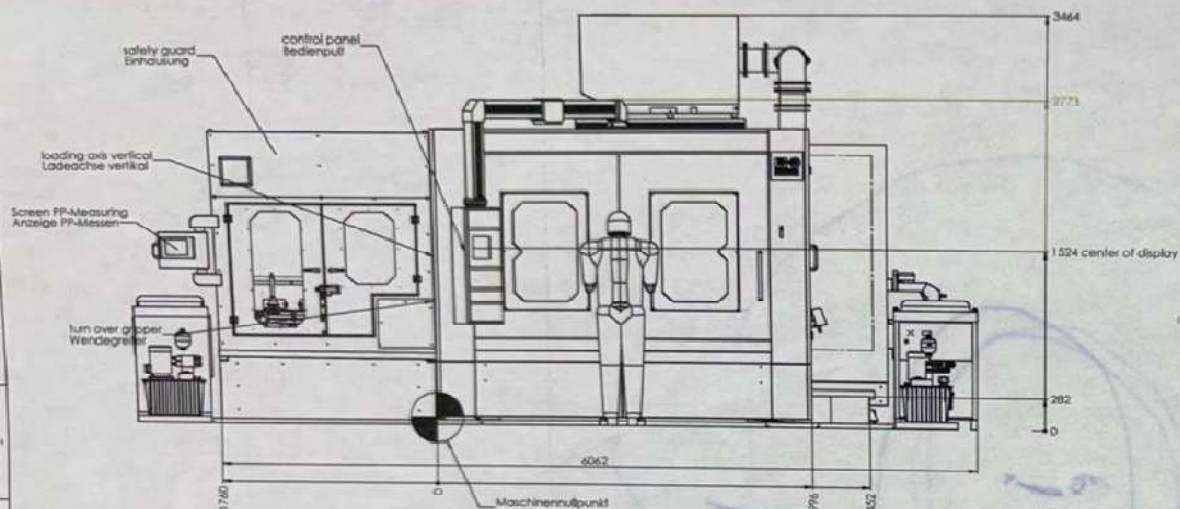


- ① Automatic Stopper
- ② Manual Stopper
- ③ Emergency Red button "stop conveyor"

Buderus Schleiftechnik 72600 Bielefeld Tel. 051 31 101-1 Fax 051 31 101-2 Telex 726001 BUDERUS		Maschinenbau Schleiftechnik 72600 Bielefeld Tel. 051 31 101-1 Fax 051 31 101-2 Telex 726001 BUDERUS		Gesamtmaschine Machine layout CNC 235-1-A-LP AN-439-A
---	--	---	--	--

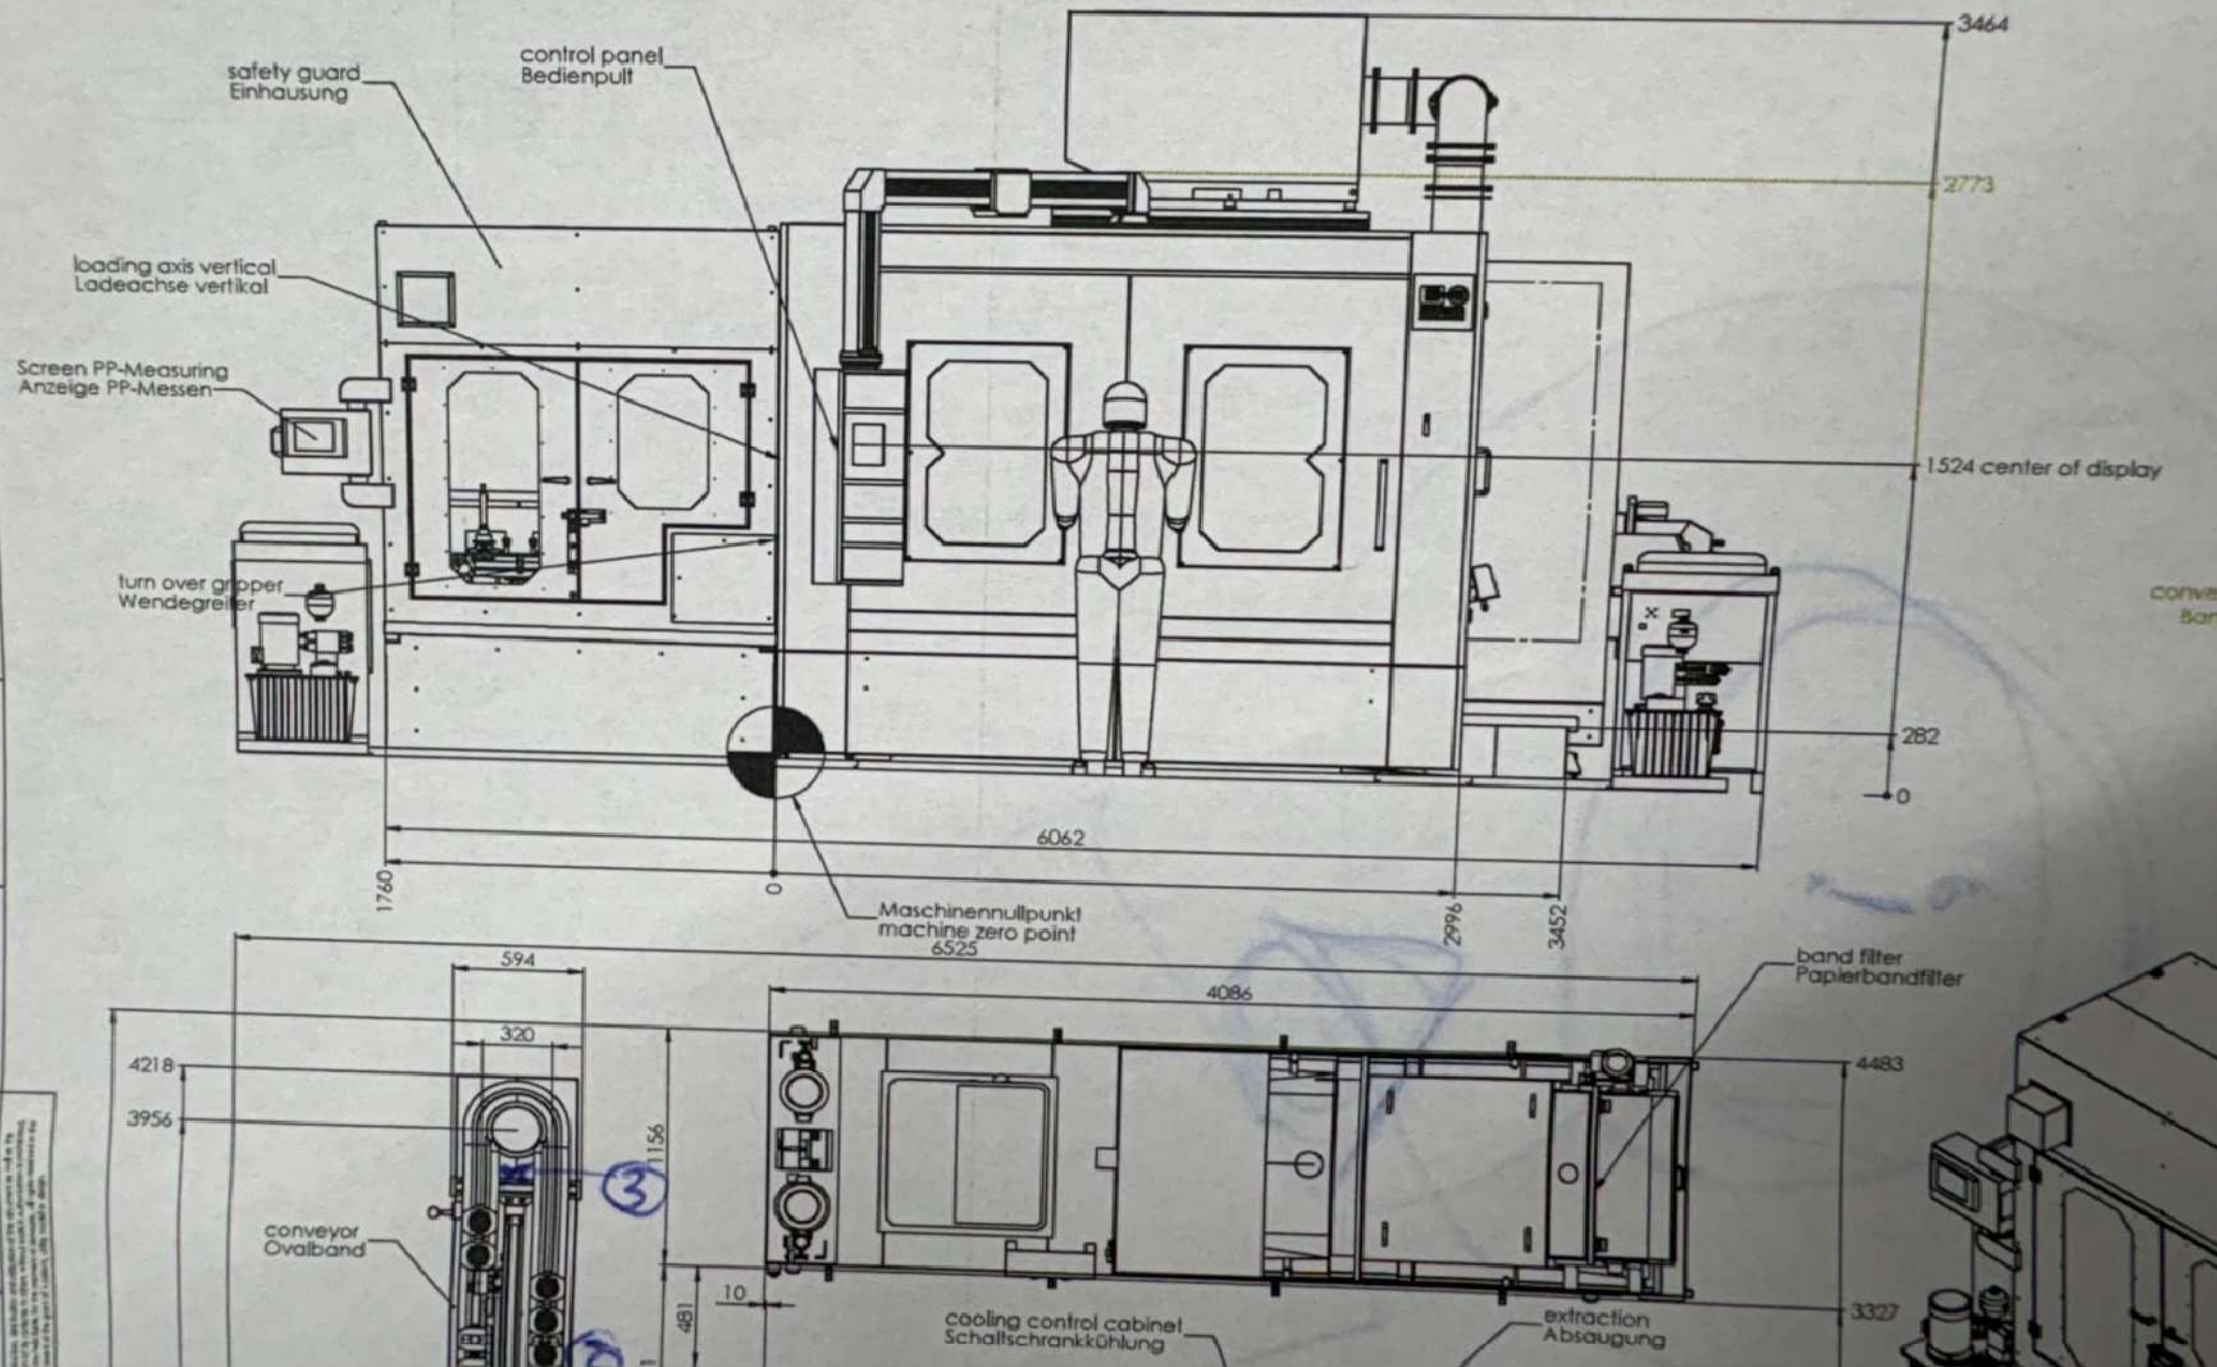

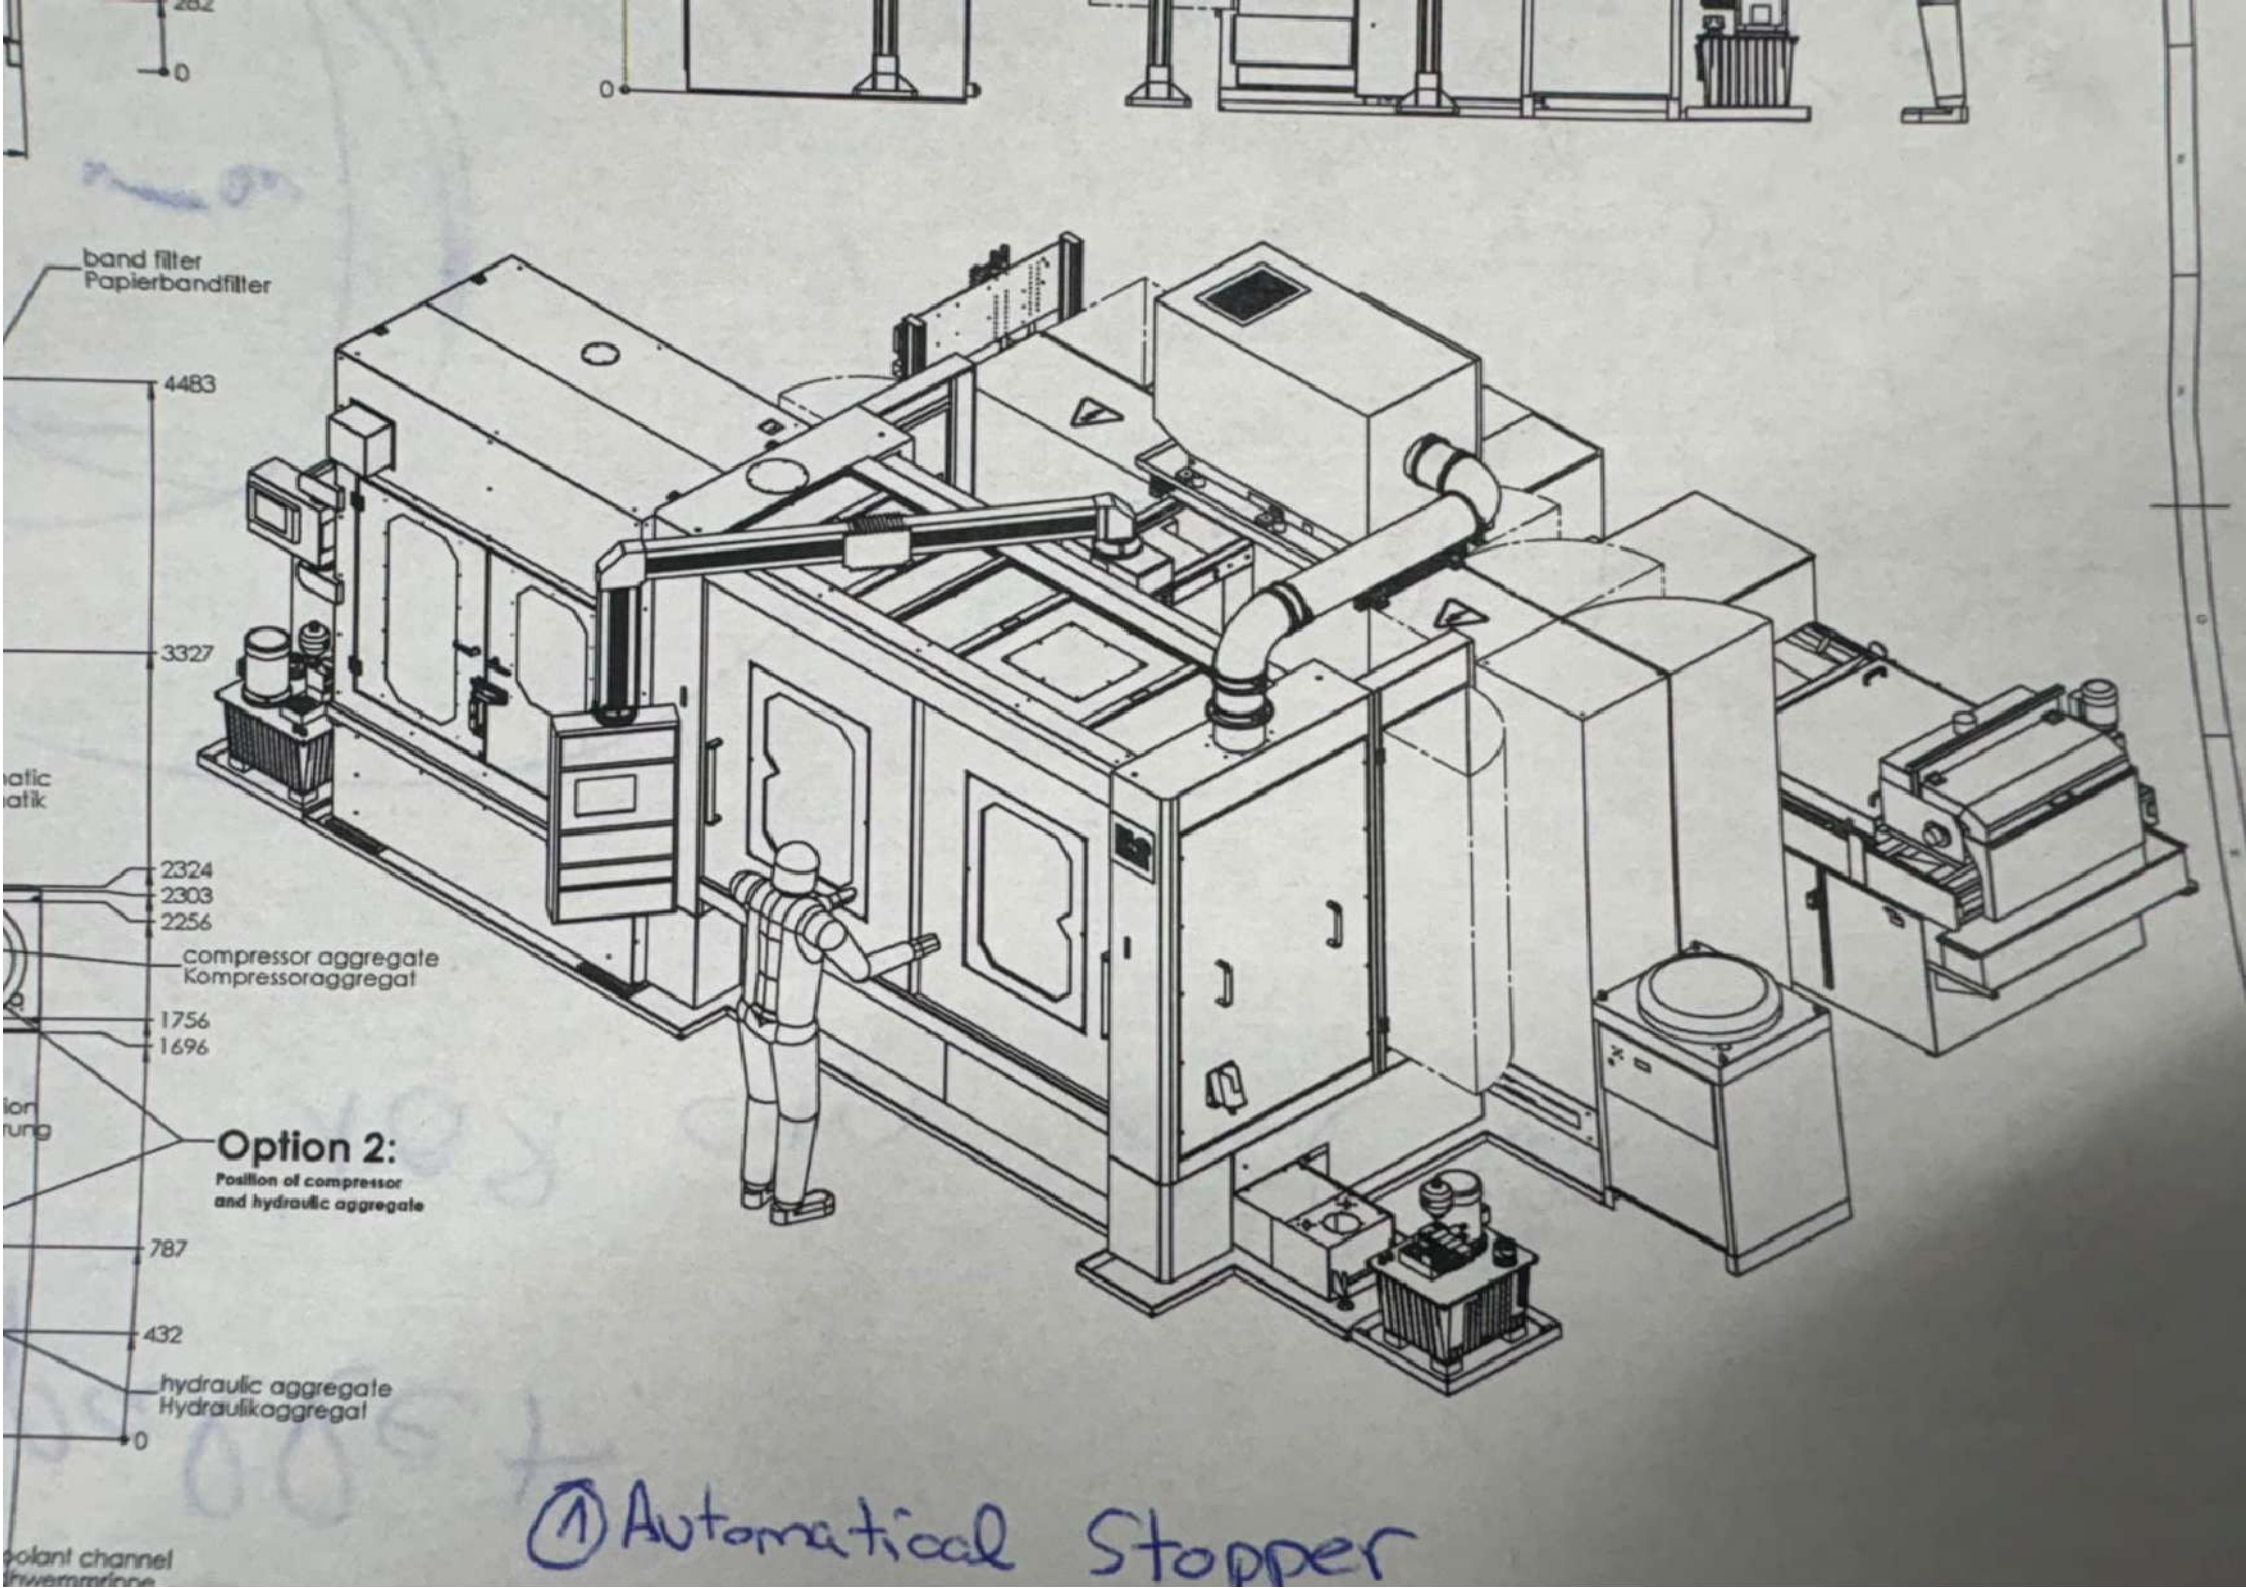

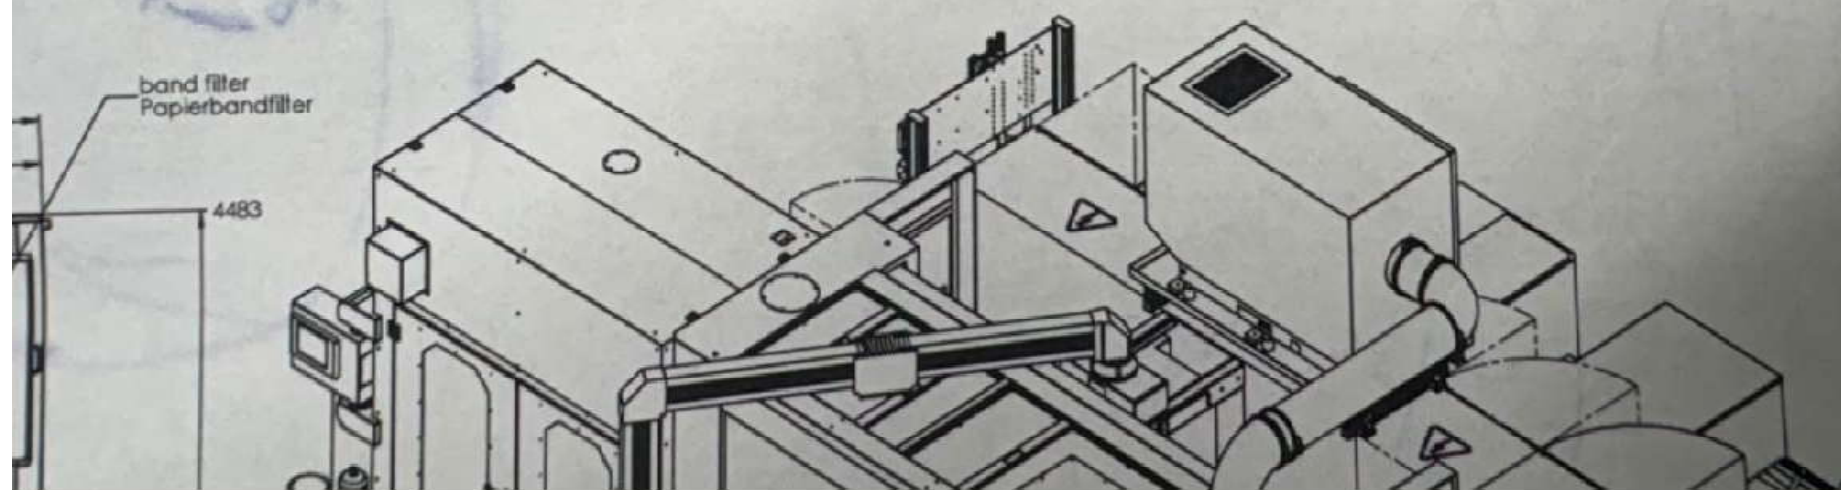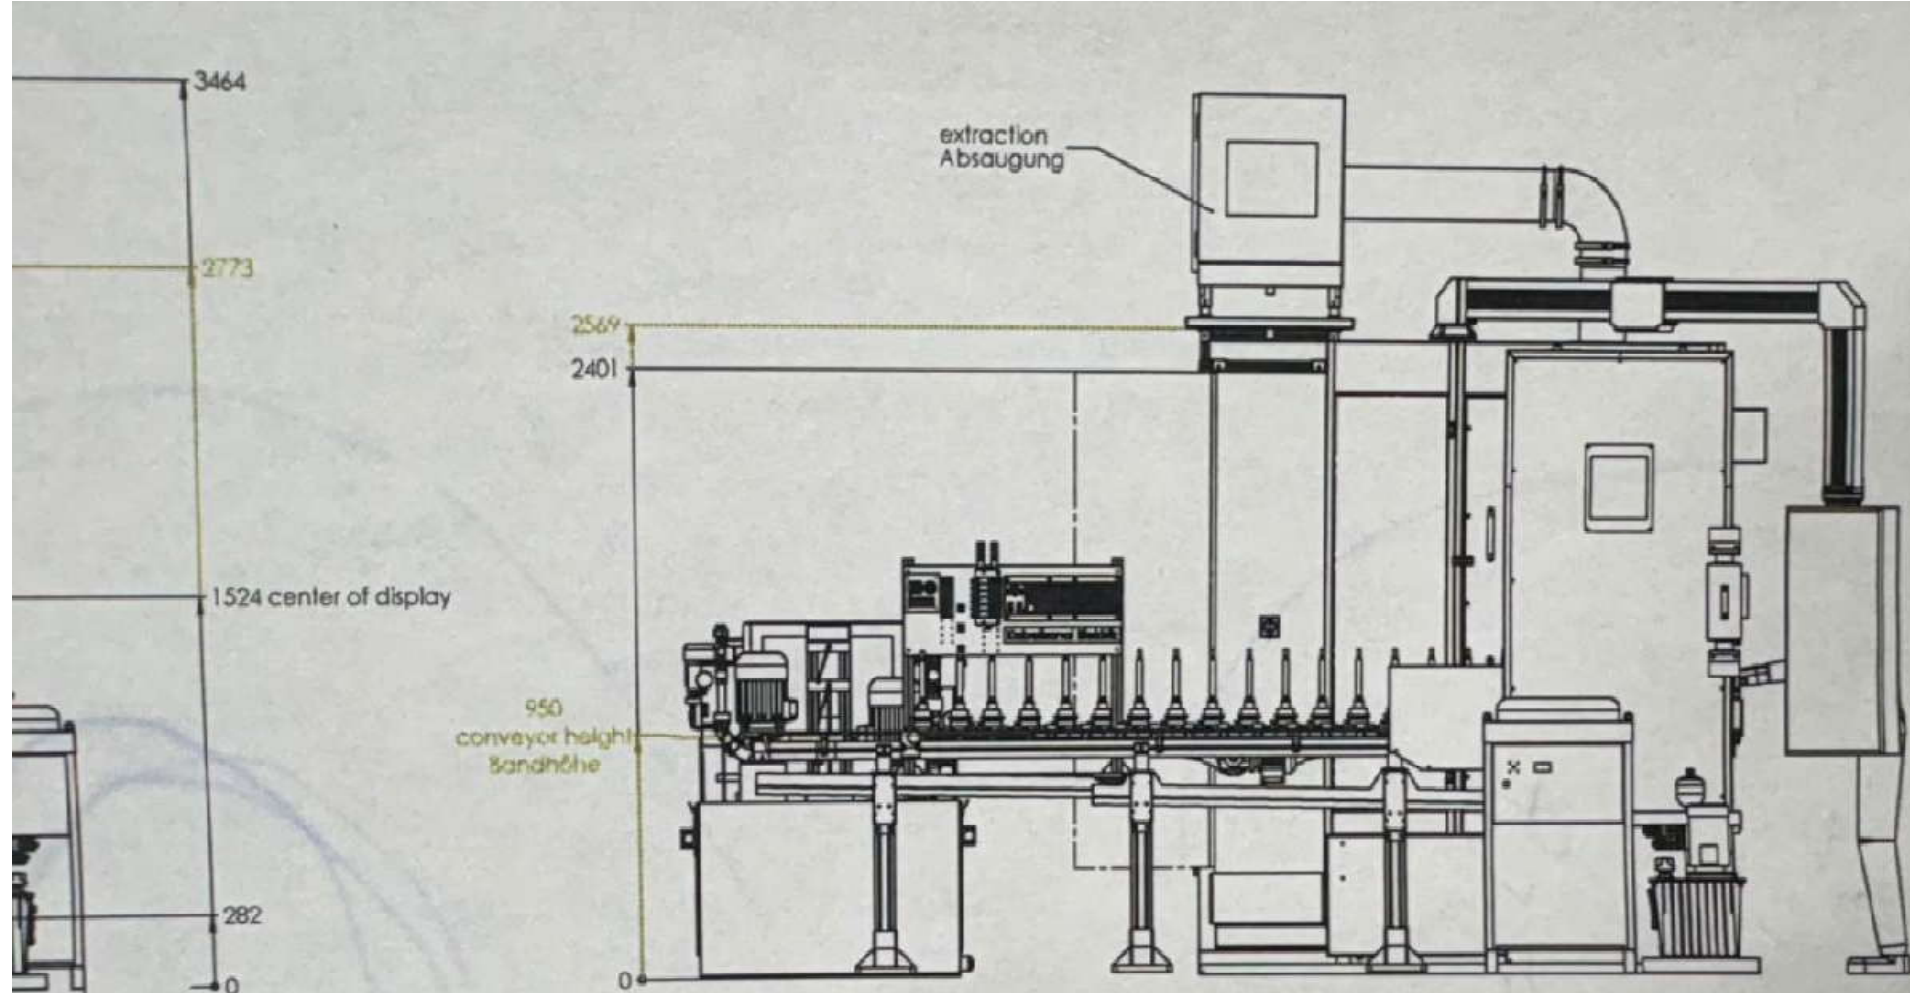

6062
1760
Maschinennullpunkt
machine zero point
6525
2996
3452

band filter
Papierbandfilter

conveyor
Ovalband

cooling control cabinet
Schaltschrankkühlung

extraction
Absaugung

pneumatic
Pneumatik

coolant valves
KSS-Ventile

main switch
Hauptschalter

compressor aggregate
Kompressoraggregat

lubrication
Schmierung

Option 2:
Position of compressor
and hydraulic aggregate

hydraulic aggregate
Hydraulikaggregat

coolant channel
Schwemmrinne

control panel
Bedienpult

Option 1:
Position of compressor
and hydraulic aggregate

③ Emergency
"stop"

The specifications, dimensions and dimensions of the machine are subject to change without notice. The manufacturer is not responsible for any damage caused by the use of the machine. The user must read the operating instructions carefully before using the machine. The user must also read the safety instructions carefully before using the machine. The user must also read the safety instructions carefully before using the machine.

The specifications, dimensions and dimensions of the machine are subject to change without notice. The manufacturer is not responsible for any damage caused by the use of the machine. The user must read the operating instructions carefully before using the machine. The user must also read the safety instructions carefully before using the machine. The user must also read the safety instructions carefully before using the machine.