

iCombi® Pro

Original instructions for use



WARNING

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death

Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

NOTE

How to respond if you smell gas:

- Do not switch any lights or equipment on or off. Do not unplug anything. Do not use any landlines or mobile phones. They could create sparks and increase the risk of explosion.
- Open the doors and windows to ventilate the room with fresh air. Do not switch on recirculation hoods or ventilators in order to ventilate the room. They could create sparks and increase the risk of explosion.
- Close the locking mechanism on the gas line.
- Leave the building and contact the fire department or your gas company.

Contents

- 1 Introduction 12**
 - 1.1 Unit help function 12
 - 1.2 Product liability 12
 - 1.3 Target audience..... 12
 - 1.4 Intended use..... 12
 - 1.5 Using these instructions for use..... 13
 - 1.5.1 Explanation of symbols..... 13
 - 1.5.2 Explanation of pictograms..... 13
 - 1.5.3 Explanation of warnings..... 13
 - 1.5.4 Illustrations..... 14
 - 1.5.5 Technical changes..... 14
- 2 The iCombi Pro..... 15**
- 3 General safety information 16**
 - 3.1 Safety information for units with gas line connections..... 18
 - 3.2 Personal protective equipment 19
- 4 Working with the unit 20**
 - 4.1 Initial start-up 20
 - 4.2 Switching the unit on and off 20
 - 4.3 Home screen 22
 - 4.3.1 Date, time, status..... 23
 - 4.3.2 Help function 24
 - 4.4 Interacting with the unit 24
 - 4.4.1 Gestures 24
 - 4.4.2 Central selection knob 25
 - 4.5 Maximum load capacities 25
 - 4.6 Opening and shutting the cooking cabinet door 25
 - 4.7 Load unit..... 26
 - 4.8 Inserting core temperature probes 27
 - 4.9 Using the hand shower 31
 - 4.10 Removing hinging racks 33
 - 4.11 Integrated fat drain 33

5	Intelligent cooking - iCookingSuite.....	35
5.1	Modes and cooking methods.....	35
5.2	Intelligent cooking paths.....	36
5.2.1	Information on special intelligent cooking paths.....	36
5.3	Cooking food intelligently	37
5.3.1	Accessing intelligent cooking paths.....	37
5.3.2	Starting an intelligent cooking path.....	38
5.3.3	Pre-select start time.....	39
5.4	Fine-tuning your results	40
5.4.1	cooking parameter.....	40
5.4.2	Additional functions	43
5.4.3	Prompts.....	44
5.4.4	Information	44
5.4.5	Options.....	45
5.5	Monitoring an intelligent cooking path.....	47
5.6	Canceling an intelligent cooking path.....	47
5.7	Sorting intelligent cooking paths.....	48
6	Manual cooking	49
6.1	Fine-tuning your results	49
6.1.1	cooking parameter.....	49
6.1.2	Additional functions	50
6.1.3	Prompts and information.....	52
6.2	Steam	52
6.2.1	Cooking cabinet climate and temperature range.....	52
6.2.2	Cooking with steam	52
6.3	combi-steam.....	53
6.3.1	Cooking cabinet climate and temperature range.....	53
6.3.2	Cooking in Combi Steam mode.....	54
6.4	convection	55
6.4.1	Cooking cabinet climate and temperature range.....	55
6.4.2	Cooking with hot air.....	55
6.5	Cancel manual cooking	56

7	Sous-vide cooking.....	57
7.1	Sous-vide cooking paths.....	57
8	Pasteurizing	59
8.1	Pasteurization cooking paths.....	59
9	Smoking	60
9.1	Smoking cooking paths	60
10	Low temperature cooking	61
11	Finishing.....	62
11.1	Set à la carte plate weight	62
11.2	Setting the banqueting plate weight	63
12	iProductionManager	64
12.1	Creating manual tickets	64
12.2	Ticket board	65
12.2.1	Adding intelligent cooking paths.....	65
12.2.2	Adding programs and shopping carts	66
12.2.3	Ticket board editor	66
12.3	Timer	67
12.4	Placing tickets.....	68
12.4.1	Combination check	69
12.4.2	Positioning logic.....	69
12.4.3	Close planning gaps.....	70
12.4.4	Time optimization	71
12.4.5	Energy optimization	72
12.5	Editing and deleting tickets	73
12.6	Copy tickets.....	73
12.7	Target time cooking.....	74
12.8	Planning.....	75
12.8.1	Creating plans.....	75
12.8.2	Starting plans	76
13	Programming mode.....	78
13.1	Creating programs manually	78

13.2	Creating an intelligent program	81
13.3	Programming shopping carts	83
13.4	Editing and deleting programs	84
13.5		85
13.6	Starting programs and shopping carts	85
14	Programming mode – iCareSystem AutoDose	87
14.1	Create cleaning program (chemical reserves)	87
14.2	Editing and deleting programs (chemical reserves).....	89
15	Switching between operating modes	90
16	Settings	92
16.1	Favorites.....	92
16.2	Display	92
16.2.1	Language.....	93
16.2.2	Date and time	93
16.2.3	Setting the temperature format.....	94
16.2.4	Program view	94
16.3	Light.....	94
16.3.1	Display brightness.....	94
16.4	Sound	95
16.4.1	Master volume	95
16.4.2	Loading / action requests	96
16.4.3	Program step end.....	96
16.4.4	End of cooking time	97
16.4.5	Process canceled / error detected.....	97
16.5	Cooking system	98
16.5.1	Information on the unit type.....	98
16.5.2	Power usage	98
16.5.3	iProductionManager energy-saving mode.....	99
16.5.4	E/2	99
16.5.5	Screen lock	99
16.5.6	Demo mode	99
16.5.7	Power steam.....	99

16.5.8	Control nozzle	100
16.5.9	Watchdog	100
16.5.10	Danger	101
16.5.11	Empty steam generator	101
16.5.12	VarioSmoker	101
16.6	Cook	101
16.6.1	Primary national cuisine	101
16.6.2	Secondary national cuisine	102
16.6.3	Run-on time	102
16.6.4	Core temperature probe reading	102
16.6.5	Cooking time format	102
16.6.6	A la carte plate weight	102
16.6.7	Banqueting plate weight	102
16.6.8	Number of racks	103
16.6.9	Order of racks	103
16.6.10	Load calculation for manual programs in iProductionManager	103
16.6.11	Hold time climate	103
16.6.12	iProductionManager 3D	104
16.7	Cleaning with iCareSystem AutoDose (solid cleaner storage)	104
16.7.1	Forced cleaning after operating hours (solid cleaner storage)	105
16.7.2	Cleaning schedule (chemical storage)	105
16.7.3	Hand shower cleaning	106
16.7.4	Cartridge fill level limit (solid cleaner storage)	107
16.7.5	Switch-off after cleaning (solid cleaner storage)	107
16.7.6	Notes on upcoming cleaning (solid cleaner storage)	107
16.7.7	Idle time without interaction before ending (solid cleaner storage)	107
16.7.8	Sodium hydroxide-free cleaning agent	107
16.8	Cleaning	107
16.8.1	Forced cleaning after operating hours	107
16.8.2	Cleaning schedule	108
16.8.3	Hand shower cleaning	108
16.8.4	Notes on upcoming cleaning (solid cleaner storage)	108
16.8.5	Idle time without interaction before ending (solid cleaner storage)	108

16.8.6	Sodium hydroxide-free cleaning agent	108
16.9	Data management	108
16.9.1	Export all data	109
16.9.2	Cooking programs	109
16.9.3	User profiles	110
16.9.4	User images	110
16.9.5	Basic cooking system settings	111
16.9.6	HACCP data	111
16.9.7	Service	112
16.9.8	MyDisplay	112
16.10	Network settings	113
16.11	User profile	115
16.11.1	Activate profile	116
16.11.2	Edit profile	116
16.11.3	Add profile	119
16.11.4	Edit display	119
16.11.5	Create new screen	120
16.12	Service	120
16.12.1	Software update info	121
16.12.2	Installed software version	121
16.13	ConnectedCooking	121
17	Kitchen management	124
17.1	Hygiene management	124
17.1.1	Recorded HACCP data	124
17.1.2	Exporting HACCP data	124
17.1.3	Transmitting HACCP data to ConnectedCooking automatically	124
17.2	Connecting units to a network	125
17.2.1	Establish WLAN connection	126
17.2.2	Connecting the network cable	126
17.2.3	Establish network connection	127
17.3	ConnectedCooking	128
17.3.1	Connect the unit with ConnectedCooking	128
17.4	Run software update	130

18 Automatic cleaning - iCareSystem.....	131
18.1 General safety information.....	131
18.2 Cleaning modes.....	132
18.3 Cleaning programs.....	132
18.4 Cleaning and care status.....	133
18.5 Starting automatic cleaning.....	134
18.6 Canceling automatic cleaning.....	135
18.7 Forced cleaning after operating hours.....	136
18.8 Cleaning schedule.....	136
19 Automatic cleaning - iCareSystem AutoDose.....	138
19.1 General safety information.....	138
19.2 Cleaning modes.....	139
19.3 Cleaning programs.....	139
19.4 Cleaning, care and cleaner cartridge status.....	140
19.5 Replace cleaner cartridge.....	142
19.6 Starting automatic cleaning.....	143
19.7 Canceling automatic cleaning.....	144
19.8 Forced cleaning after operating hours.....	144
20 Care.....	146
20.1 General safety information.....	146
20.2 Care intervals.....	146
20.3 Care products.....	147
20.4 Cleaning the cooking cabinet door.....	148
20.5 Descaling the steam nozzle.....	149
20.6 Cleaning the air filter.....	150
20.7 Cleaning the hand shower.....	151
20.8 Cleaning the control panel.....	151
20.9 Cleaning accessories.....	152
20.10 Cleaning the drain ventilation pipe.....	152
21 Care - iCareSystem AutoDose.....	154
21.1 General safety information.....	154
21.2 Care products.....	154

21.3	Maintenance intervals for AutoDose	155
21.4	Cleaning the cooking cabinet door.....	156
21.5	Descaling the steam nozzle.....	157
21.6	Cleaning the air filter	158
21.7	Cleaning the hand shower	159
21.8	Cleaning the control panel	159
21.9	Cleaning accessories.....	160
21.10	Cleaning the drain ventilation pipe.....	160
22	Inspiration and help	162
22.1	search assistant	162
22.2	Unit help function	162
22.3	Telephone help	163
22.4	Service-related help.....	163
22.4.1	Transmitting service data to ConnectedCooking automatically	163
22.4.2	Querying service data	163
22.5	Problem resolution	164
22.5.1	Notification centre	164
22.6	Error messages.....	165
22.6.1	Error messages heating steam generator	165
22.6.2	Error messages for gas units.....	166
22.6.3	Error messages heating hot air	167
22.6.4	Error messages humidity	167
22.6.5	iCareSystem error messages – cleaning	168
22.6.6	iCareSystem error messages – care	169
23	Maintenance.....	170
23.1	Replacing air filters.....	170
23.2	Replacing the cooking cabinet door seal	171
24	Transport	172
24.1	Transporting the unit.....	172
25	Decommissioning and disposal.....	174
25.1	Decommissioning.....	174
25.2	Disposal	174

26 Technical data 175

26.1 Units with electrical connections..... 175

26.2 Units with gas connections..... 175

26.3 Types and model names 175

26.4 176

26.5 Conformity 176

26.5.1 Units with electrical connections..... 176

26.5.2 Units with gas connections 176

27 Regulatory Information 178

Directory of keywords..... 179

1 Introduction

Dear customer,

Congratulations on purchasing your new iCombi Pro. Read the operating instructions carefully prior to using your unit for the first time. The operating instructions are there to ensure that you use the unit safely. Keep these operating instructions in a place that is accessible at all times to anyone who will be using the unit.

The iCombi Pro is the most intelligent combi-steamer. It cooks a multitude of different dishes for 20 or several thousands of guests. Whether these are fish, meat, poultry, side dishes or baked goods, or whether they are fried, steamed, grilled or baked. Thanks to its cooking intelligence and its intelligent climate management, this is all done automatically, to the point, even with a maximum load.

We hope you enjoy using your iCombi Pro.

All the best from

RATIONAL AG

1.1 Unit help function

These instructions for use are loaded to your unit, along with numerous example applications from all over the world. More information on this function is available here: Unit help function [► 162]

1.2 Product liability

RATIONAL assumes no liability for damage occurring in connection with unauthorized technical modifications or improper use.

1.3 Target audience

This document is written for people working in professional kitchens and food-service operations.

The unit must not be used, cleaned, or maintained by:

- Persons with restricted physical, sensory, or mental faculties
- Persons with limited knowledge and experience
- Children

Children in the vicinity of the unit must be supervised at all times. Do not allow children to play with the unit.

1.4 Intended use

The iCombi Pro has been developed for the preparation of hot food.

This unit is only intended for commercial use, such as in restaurant kitchens, hospital food service operations, bakeries, or delis. Do not use this unit outdoors. This unit must not be used for continuous mass industrial food production.

All other usages of this cooking system are considered improper and dangerous. RATIONAL AG assumes no liability for consequences of improper use.

1.5 Using these instructions for use

1.5.1 Explanation of symbols

This document uses the following symbols to provide information and instructions for action:

- ✓ This symbol indicates prerequisites that must be met before you take a specific action.
- 1. This symbol indicates an action you will need to take.
 - > This symbol indicates an intermediate result you can use to evaluate the results of a single action.
 - >> This symbol indicates an end result you can use to evaluate the results of a series of instructions.
 - This symbol is used for bullet points.
 - a. This symbol is used in lists.

1.5.2 Explanation of pictograms

The following pictograms are used in this document:

 Caution! Read the instructions for use before using the unit.

 General warning symbol

 Useful information to help you use your unit.

1.5.3 Explanation of warnings

The following warnings are used to advise you of potentially dangerous situations and how to avoid them.

DANGER

The word DANGER indicates a situation that will result in severe injuries or death.



WARNING

The word WARNING indicates a situation that could result in severe injuries or death.



CAUTION

The word CAUTION indicates a situation that could result in injuries.

NOTE

The word NOTE indicates a situation that could result in damage to the unit.


1.5.4 Illustrations

The illustrations in these instructions for use may deviate from the actual unit.

1.5.5 Technical changes

We reserve the right to make technical changes in the interest of progress.

2 The iCombi Pro

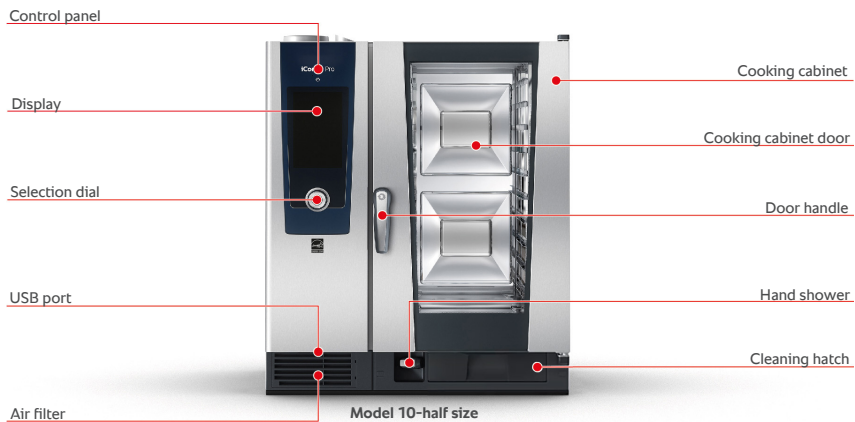


Model 6-half size



Model 6-full size



Model 10-full size

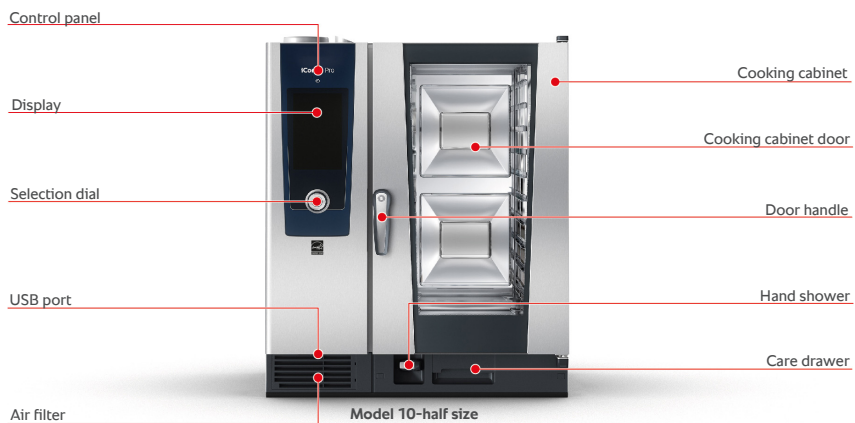

Model 6-half size



Model 6-full size



Model 10-full size

3 General safety information

This unit is constructed securely, and does not pose a danger when used normally and in accordance with specifications. These instructions for use describe proper procedures for using this unit.

- This unit should only be installed by your RATIONAL Service Partner.
- All maintenance on this unit should be performed by your RATIONAL Service Partner.
- To ensure that your cooking system remains in perfect condition, it must be serviced by an authorized RATIONAL Service Partner at least once per year.
- Do not modify the unit or the way your RATIONAL Service Partner has installed it.
- Do not remove the drain sieve.
- Do not use the cooking system if it is damaged in general, or if the connection cable is damaged. Damaged cooking systems are unsafe and could cause burns or other injuries.
- Do not use the unit if the glass on the cooking cabinet door is damaged. Contact your RATIONAL Service Partner and have the cooking cabinet door glass replaced.
- Never place objects on top of the device.
Do not place hot containers or containers of hot liquids on top of the cooking system.
- Never store flammable or combustible materials near the unit.
- Only use the cooking system at ambient temperatures between +41°F and +104°F.
- Avoid placing sources of heat near the unit, such as deep fryers or grills.
- While using the unit, keep the floor around it clean and dry.
- Regular training and safety instructions for operating personnel are essential to preventing accidents or damage to the cooking system.
- This cooking system must not be used by children or persons with reduced physical, sensory or mental capabilities, or by anyone lacking proper experience and/or knowledge, unless that person is made aware of the potential dangers of the cooking system, and remains under the supervision of someone who takes responsibility for safety. When supervising, please keep in mind that surfaces and accessories may be hot. Cleaning and user maintenance must not be performed by children, even when supervised

Safety instructions before use

- Make sure that the temperature of the unit is at least +41°F.

- Make sure that the air baffle in front of the fan is secure at the top and the bottom.
- When using the hinging rack or mobile oven rack, make sure to lock them in place.
- Make sure that the cooking cabinet is free of cleaner tab residue.
- If the unit has been inactive for a longer period of time, rinse out the hand shower with at least 2 1/2 gallons of water before using the unit again.
- When heating food in packaging, always use the settings specified by the packaging distributor.

Safety instructions during use

- To avoid scalding and burn injuries:
 - Exercise caution when opening the cooking cabinet door – Hot steam may escape.
 - Always wear personal protective equipment when removing anything from the hot cooking cabinet.
 - When the unit is in use, only touch the control panel and the cooking cabinet door grip. The external surfaces can heat up to temperatures exceeding 140°F.
 - Only slide containers of food into racks at levels you can see into. Otherwise, hot food can spill out when being unloaded from the unit.
- To avoid the risk of fire or explosion:
 - Do not use the cooking system to cook highly flammable liquids, e.g., wine or other alcoholic beverages. Flammable liquids can catch fire when evaporating.
 - When roasting or grilling, place a drip pan underneath the food to catch grease.
- To prevent equipment damage due to improper use of accessories:
 - Only use original RATIONAL accessories.
 - Only smoke food using the VarioSmoker.
- If there is food in the cooking cabinet that has already been brought up to serving temperature, do not load cold food into the cooking cabinet.
- Always use the manufacturer's cooking climate specifications when heating packaged food to serving temperature.

To avoid injury when working with transport trolleys, mobile racks, or mobile plate racks:

- Exercise caution when pushing transport trolleys, mobile racks, or mobile plate racks across uneven surfaces or thresholds, to prevent them from tipping.
- Activate locking brakes on transport trolleys, mobile racks, or mobile plate racks to keep them from rolling away on uneven floors.
- Before sliding a mobile rack or mobile plate rack into or out of the cooking system, secure the transport trolley to your cooking system.
- When moving the mobile rack, secure the container lock on the mobile rack and cover containers of hot food. Otherwise, hot food could splash out.

Safety instructions after use

- Clean the unit after each use.
- In order to prevent the cooking cabinet from corroding, leave the cooking cabinet door open a crack whenever the unit will not be in use for a longer period, including overnight.
- If the unit will not be in use for a longer period, cut off the building water, electric and gas lines to the unit.
- Empty the steam generator before transporting the unit, or when the unit will not be in use for a longer period.

3.1 Safety information for units with gas line connections

- To prevent fire risk:
 - If your cooking system is connected to a chimney, contact your gas technician regularly to have the cooking system's exhaust line cleaned. Always observe country-specific regulations in this regard.
 - Never place objects atop the exhaust pipes.
- To prevent fatal accidents:
 - If using your cooking system with a recirculating hood, always switch on the recirculating hood while the cooking system is in use. Otherwise, flammable gases could build up.
- How to respond if you smell gas:
 - Do not switch any lights or equipment on or off. Do not unplug anything. Do not use any landlines or mobile phones. They could create sparks and increase the risk of explosion.
 - Open the doors and windows to ventilate the room with fresh air. Do not switch on recirculating hoods or ventilators in order to ventilate the room. They could create sparks and increase the risk of explosion.
 - Close the shut-off mechanism of the gas line.

- Leave the building and contact the fire department or your gas company.

3.2 Personal protective equipment

- Only use the unit when wearing clothing that will protect you against work-related accidents, especially due to heat, splashing hot liquids, or corrosive substances.
- Wear gloves that will provide reliable protection when handling hot or sharp-edged objects.
- When cleaning the unit, wear tight-fitting safety glasses and chemical protective gloves that will allow you to handle cleaning products safely.

4 Working with the unit

4.1 Initial start-up


When you start your unit for the first time, it will have already been properly installed by a RATIONAL Service Partner. The self-test will have been completed, so the unit will be ready for use. Information related to installation is available in the installation manual included in delivery.

Before working with the unit for the first time

1. Clean the unit and all accessories before initial use.

More information is available here: Care [► 146]

4.2 Switching the unit on and off

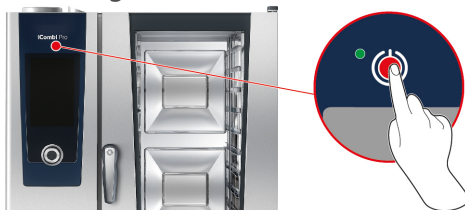

Switching the cooking system on

1. To switch the cooking system on, press and hold this button until the LED lights up green: (ⓘ)
 - > The cooking system will power on. The home screen [► 22] will appear.

Operation without water supply

NOTE

To prevent overheating and cooking system damage, operate the cooking system only with the water connected.

Without a water connection, the cooking system cannot be used in steam or combination mode. Only convection mode (dry heat) is available. The measures described are absolutely necessary to prevent overheating of the cooking system and possible damage.

Continuous operation without water is not possible.


When operating the cooking system without connecting it to a water supply, you will be prompted to pour 3 liters of water into the cooking cabinet. This symbol will appear in the footer: 💧 Temporary operation without a water supply is possible under the following conditions:

1. Pour 3 liters of water into the bottom of the cooking cabinet to prevent the cooking system from overheating.
2. To confirm, press this button: ✓
3. After max. 5 hours of cooking system operation, cool it down to < 100°C.
4. Then pour another 3 liters of water into the cooking cabinet.
5. As soon as water is available again, start cleaning.

Switching the cooking system off

1. To switch the cooking system off, press and hold this button until the LED lights up orange: (L)
- > A prompt will appear, asking if you really want to switch the cooking system off.
2. To switch off the cooking system, swipe the bar to the right.
- >> The cooking system will power off.

4.3 Home screen

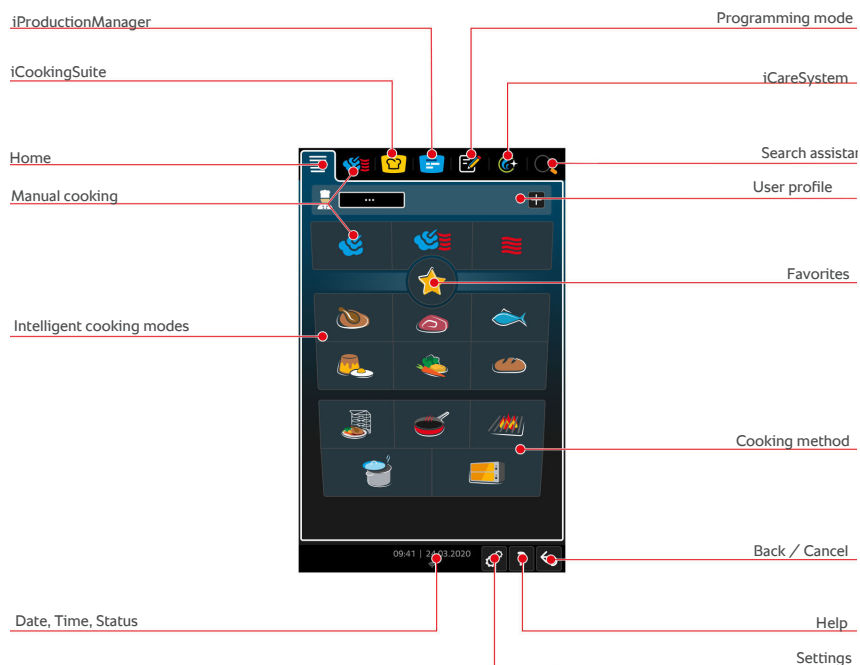

- iProductionManager [► 64]
- Intelligent cooking - iCookingSuite [► 35]
- Home
- Manual operating modes [► 49]
- Favorites
- Intelligent cooking modes [► 35]

Pressing one of these buttons will display all of the intelligent cooking paths assigned to that intelligent cooking mode.

- Cooking method
- Programming mode [► 78]
- Automatic cleaning - iCareSystem [► 131]
- Date, time, status [► 23]
- Settings [► 92]

Pressing this button will display all of the intelligent cooking paths assigned to that cooking method.

- Unit help function [► 162]
- Back / Cancel

Pressing this button will take you back to the previous screen. Press and hold this button in order to cancel the cooking process.

See also

 search assistant [► 162]

4.3.1 Date, time, status

The footer bar always shows the current date and time, as well as the status of the following ports and connections:



USB stick connected

This symbol indicates that there is a USB stick plugged into the cooking system.



Network connection

This symbol indicates that you are connected to the router but not to the Internet:


This symbol indicates that your cooking system is connected to a LAN network. If a network error occurs, this symbol will be shown: 



WLAN connection

This symbol indicates that your cooking system is connected to a WLAN network. The connection quality is very good.

If connection quality decreases, these symbols will be shown:  

This symbol indicates that you are connected to the router but not to the Internet:


If a connection error occurs, this symbol will be shown: 



Error message

This symbol indicates that an error message is being shown on the display.



ConnectedCooking connection

This symbol indicates that your cooking system is connected to ConnectedCooking. If your cooking system is not connected to ConnectedCooking, this symbol will be shown: 



Water connection

This symbol indicates that your cooking system is not connected to a water supply. When you switch the cooking system on, you will be prompted to pour 3 liters of water into the cooking cabinet.

Active energy optimization (optional connection to energy optimization system)



Your RATIONAL cooking system can optionally be equipped with an interface to an energy optimization system. If the energy optimization system restricts the power available to your cooking system, this symbol will appear in the display footer: . If the  symbol is not visible on the display, full mains power is available to the system.

4.3.2 Help function



Selecting help in the cooking system

Selecting the question mark icon will take you to the cooking system's built-in help function. It describes how to operate your cooking system in digital form. The help function is context-sensitive: information for the current screen content is always displayed first. The help function also offers detailed information and useful tips related to the individual cooking paths.


4.4 Interacting with the unit

4.4.1 Gestures


You can operate the display using a few simple gestures.




Pressing

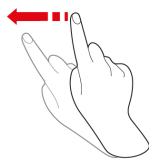

Swiping

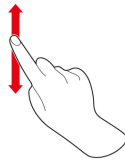

Scrolling

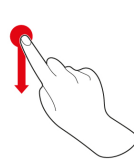

Drag-and-drop

4.4.2 Central selection knob



Instead of Gestures [► 24], you can adjust settings by turning the central selection knob. Press the central selection knob to confirm actions.

4.5 Maximum load capacities

NOTE

Damage to the unit due to overloading
Exceeding the maximum load capacity may damage the unit.
1. Never load the unit past the maximum capacity specified here.

Model	Max. load capacity [lb]	Max. load per tray
6-half size	66 lb	33 lb
6-full size	132 lb	66 lb
10-half size	99 lb	33 lb
10-full size	198 lb	66 lb

4.6 Opening and shutting the cooking cabinet door



Open cooking cabinet door

1. Turn the cooking cabinet door handle to the right.

2. If your unit is equipped with a door safety lock, rotate the handle to the left first, then to the right.
 3. Open the cooking cabinet door slowly. **⚠ CAUTION! Scalding hazard! When the unit is in operation, hot steam may billow out of the cooking cabinet.**
- >> The fan wheel will be stopped.

Close cooking cabinet door

1. Press the cooking cabinet door closed firmly.

4.7 Load unit

WARNING

Risk of injury due to broken glass

Always make sure that accessories are pushed all the way into the cooking system. Otherwise, the inside glass pane may break when the cooking cabinet door is closed, potentially leading to cut injuries.

NOTE

Protruding accessories

Always make sure that accessories are pushed all the way into the cooking system. Otherwise, the internal glass pane may break when the cooking cabinet door is closed.

1. Open the cooking cabinet door.
 - > The fan wheel brake will be activated, stopping the fan wheel.
2. Slide the food into the cooking system.
3. If grilling or roasting food, slide a container underneath the food in order to catch dripping fat. .
4. Close the cooking cabinet door. Make sure to close the cooking cabinet door all the way, and make sure that the handle is in the vertical position. **NOTE! If the cooking system has been turned off or disconnected from power for less than 15 minutes, the current process will resume where it left off.**

Rack levels above 1.60m

If your cooking system is installed such that the top rack level is more than 1.60m off the floor, the warning sign included in delivery must be affixed here.

4.8 Inserting core temperature probes

This section describes how to work with the core temperature probe, as well as how to work with the two optional, externally attachable core temperature probes. With a sous-vide USB core temperature probe, the temperature of sous-vide cooked food can be monitored without destroying the vacuum in the sous-vide bag. An external USB core probe can also be used if, for example, there is an equipment variant without an internal core temperature probe.

CAUTION

Hot core temperature probe

Touching the hot core temperature probe without protective gloves could result in burns.

1. Always wear gloves when working with hot core temperature probes.

⚠ CAUTION**Sharp core temperature probe**

If you are not careful with the core temperature probe, you could injure yourself on the sharp tip. This applies in particular to the sous-vide USB core temperature probe.

1. Always wear gloves when working with hot core temperature probes.
2. After using the core temperature probe, return it to its holder.



NOTE**Core temperature probe hanging out of the cooking cabinet**

Failing to return the core temperature probe to its holder after use could result in damage to the core temperature probe.

1. After using the core temperature probe, return it to its holder.

**TIP**


- If you often prepare very thin or liquid food, we recommend using the optional positioning aid. Insert the core temperature probe into the positioning aid first, and then into the food.
- If the core temperature probe is hotter than the set core temperature, use the hand shower to cool the core temperature probe.

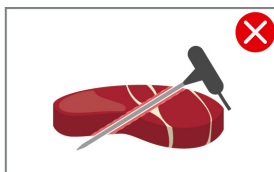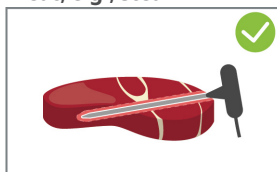Meat, e.g., steak

1. Insert the core temperature probe into the food at an angle, all the way to the handle, so that the core temperature probe is as far down into the food as possible.

Large pieces of meat, e.g., roasts


1. Insert the core temperature probe into the thickest part of the meat, all the way to the handle.

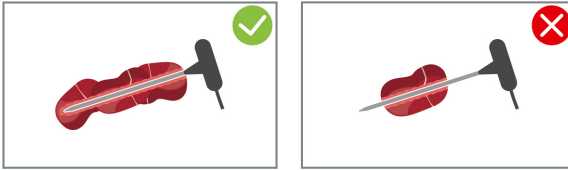Small products, e.g., stew meat

1. Thread the core temperature probe through pieces of the food until the temperature probe is fully covered from tip to edge of handle.


Products of different sizes

1. Start by inserting the core temperature probe into the smallest piece.
2. Once that piece has reached the desired core temperature, remove the small pieces from the core temperature probe, and take them out of the cooking cabinet.
3. After that, insert the core temperature probe into a larger piece of food and use the **Reinsert** option to continue the cooking path .

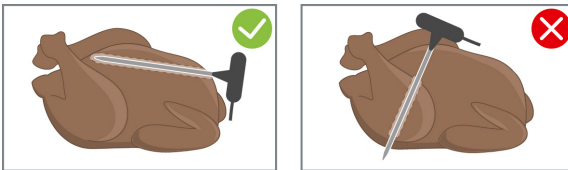Whole chicken


1. Insert the core temperature probe into the thickest part of the breast, all the way to the handle. Avoid positioning it too close to the ribs.

Make sure that the tip of the core temperature probe is not poking through the abdominal cavity of the chicken. Do not insert the core temperature probe into the thigh.

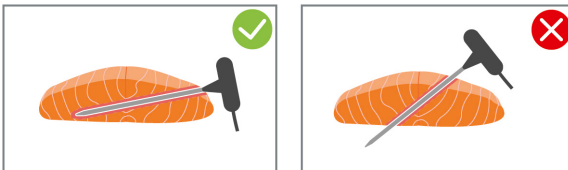Fish fillets

1. Insert the core temperature probe into the food at an angle, all the way to the handle, so that the core temperature probe is as far down into the food as possible.


Whole fish

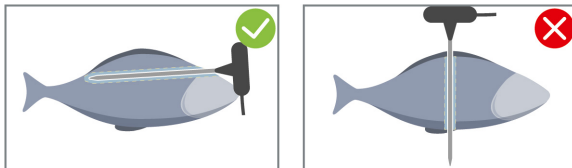

1. Insert the core temperature probe into the thickest part of the meat, all the way to the handle.

Make sure that the tip of the core temperature probe is not poking through the abdominal cavity of the fish.

Vegetables, e.g., potatoes

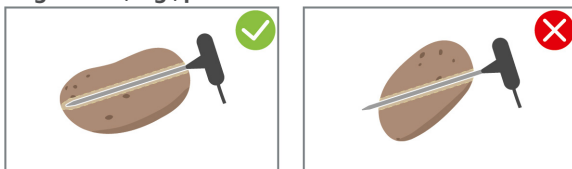

1. Insert the core temperature probe into the thickest part of the meat, all the way to the handle.

Soups, sauces, desserts


1. Place the core temperature probe into the Gastronorm container (hotel pan), so that the core temperature probe is completely immersed in the liquid.
2. When stirring the liquid, make sure that the core temperature probe remains in the Gastronorm container.

Baked goods

1. When preparing baked goods that rise a great deal during baking, insert the core temperature probe vertically into the center of the product.

Use the optionally available positioning aid.

Finishing with the mobile plate rack

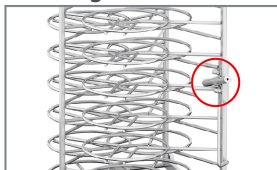

1. Insert the core temperature probe into the white ceramic tube on the mobile plate rack.

Core temperature probe not detected

- ✓ The display will show this symbol: 

1. Place the core temperature probe as described in these instructions for use.
 2. Confirm the correction.
- >> The cooking path will be implemented correctly. If you do not confirm the correction, the cooking path will be canceled and you will need to restart it. A few cooking paths, such as **low-temperature cooking**, will continue running despite the error.


Removing the core temperature probe

1. Once the food has reached your desired degree of doneness, remove the core temperature probe from the food, and then remove the food from the cooking cabinet.
2. Once you have cleaned the core temperature probe, insert it into the holder provided and then remove the food from the cooking cabinet.

4.9 Using the hand shower

Please note that you have the option of ordering a cooking system without a hand shower.

The hand shower has two spray modes: spray  (A) and jet  (B).

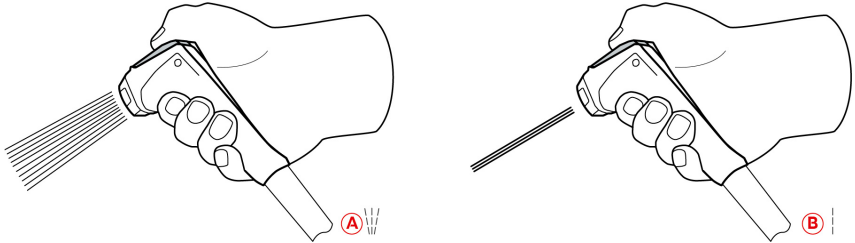

CAUTION

The hand shower water and the hand shower itself may reach temperatures exceeding 140°F.

Grasping heated parts or coming into contact with hot water may cause scalding injuries.

1. Always wear gloves when working with the hand shower.

⚠ CAUTION

Water line bacterial growth

Not using the hand shower every day can result in bacteria building up inside the water line.

1. Flush the hand shower with water for 10 seconds every morning and evening.

NOTE

Improper hand shower operation

Yanking the hand shower hose or extending it past the maximum available hose length can damage the hand shower's automatic return mechanism, after which the hand shower will no longer retract into the housing automatically.

1. Do not pull the hand shower out further than the hose length allows.

NOTE

The hand shower is not suitable for cooling the cooking cabinet.

Cooling the cooking cabinet with the hand shower could damage the cooking cabinet, the air baffle, or the glass on the cooking cabinet door.


1. Only cool the cooking cabinet using the cool-down function.

1. Pull the hand shower at least 8 in out of the park position.
2. Hold the hand shower hose firmly.
3. Turn the front part of the hand shower to select the desired spray mode.
 - Set the hand shower to  to select **jet** mode.
 - Set the hand shower to  to select the **spray** mode.

If you do not turn the front part of the hand shower to one of the two spray modes, water could drip out of the spray head.

1. Press the lever on the hand shower. The harder you press the lever, the stronger the spray will be.
2. After use, let the hand shower slowly retract into the housing.  **CAUTION! Make sure that the hose of the hand shower is clean before letting it retract into the housing.**

4.10 Removing hinging racks

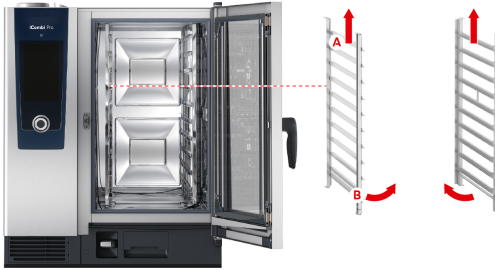

1. Grasp the hinging rack in the middle of the upper level.
2. Press the hinging rack upwards (A).
3. Tilt the left hinging rack in the cooking cabinet (B).
4. Unhook the hinging rack and remove it from the cooking cabinet.

4.11 Integrated fat drain

If your unit is equipped with an optional integrated fat drain, the dripping fat is collected in the cooking cabinet and fed into the grease drip container.



1	Ball valve handle	2	Drain pipe
3	Filler neck with bayonet lock	4	Fat collection container

1. Open the cooking cabinet door.
2. Remove the drain pipe plug.

3. Place the plug on the floor of the cooking cabinet next to the drain. The chain prevents the plug from being lost.
 4. Place the grease drip pan in the cooking cabinet so that the opening of the grease drip pan is in the drain pipe.
 5. Place a fat collection container (e.g. a canister) on the outside of the device under the drain.
 6. Insert the filler neck of the integrated fat drain into the fat collection container.
 7. Connect the bayonet lock of the filler neck onto the drain.
 8. Lock the bayonet lock.
 9. Turn the handle of the ball valve into the horizontal position.
- >> The ball valve is open. Dripping fat can now be collected in the grease drip container.

Replacing the grease drip container

CAUTION

The outside of the device, the drain and the grease drip container can get very hot

You may get burned if you touch hot functional parts. Wear personal protective equipment when replacing the grease drip container.

1. When the grease drip container is full, turn the handle of the ball valve into the vertical position.
 - > The ball valve is closed.
2. Release the bayonet lock.
3. Replace the grease drip container.
4. Dispose of the grease correctly. **NOTE! Grease and other liquid substances collected in the grease drip container must be disposed of in accordance with the local regulations. Never dispose of grease by pouring it down the drain. Never use the fat collected in the fat collection container for cooking food or as a food itself.**

5 Intelligent cooking - iCookingSuite



The iCookingSuite is the cooking intelligence in the iCombi Pro. You specify which type of food you want to prepare using which cooking method, and then you'll be taken to a list of cooking paths to choose from in order to get the results you want. You can also fine-tune those results by adjusting individual cooking parameters, for example to brown the food more intensely or cook steaks well-done instead of medium. A wide selection of application examples is also available under the cooking system's help function. You can select them directly from the Help function.

While the cooking path is in progress, the system will regularly adjust key parameters such as cooking cabinet temperature, climate, air speed and cooking time, to ensure you get the cooking results you desire. If necessary, you can even intervene in the cooking process during cooking and change your target cooking results. For you this means it is easy to use, no checking, no monitoring. You'll save time, reduce your energy and raw product consumption, and enjoy uniformly excellent results every single time.



5.1 Modes and cooking methods

The following operating modes are available to you:

- Poultry

- Meat 
- Fish 
- Egg dishes and desserts 
- Vegetables and side dishes 
- Baked goods 
- Finishing 

The following cooking methods are available to you:

- Boiling 
- Roasting
- Baking 
- Grilling 

Each cooking mode is assigned a specific set of intelligent cooking paths. These cooking paths reflect cultural cooking customs, which you can adjust by setting the Primary national cuisine [► 101] and Secondary national cuisine [► 102].

5.2 Intelligent cooking paths

Press the Help button [?] to find comprehensive information on all intelligent cooking paths. These include tips for getting good cooking results reliably as well as explanations for all settings. Intelligent cooking paths can also be found and selected using the integrated search assistant [► 162].

Some cooking paths are only available in certain national cuisines. See Primary national cuisine [► 101] and Secondary national cuisine [► 102] for information on changing your national cuisine settings.

5.2.1 Information on special intelligent cooking paths

This chapter contains detailed information on the special intelligent cooking paths built into this cooking system. These cooking paths let you control the cooking process precisely so that you'll achieve perfect results on different foods.

Preserves

Select this cooking path if you want to preserve fruit and vegetables. To preserve the food, you need a reference container with a lid.

1. Punch a hole in the lid of the reference container. Do not use the core probe for this.
2. Fill the desired containers with the food and seal the containers with their lids.
3. Start the cooking path and load the cooking system.

4. Insert the core probe through the hole in the lid of the reference container.

The **Preserves** cooking path regulates to an F-value of 0.1. No full-preserves are made.

Semi-preserves

Select this cooking path if you want to make semi-preserves out of meat such as boiled sausages, goulash, or stew. To make semi-preserves safely, you need a reference container with a lid.

1. Punch a hole in the lid of the reference container. Do not use the core probe for this.
2. Fill the desired containers with the food and seal the containers with their lids.
3. Start the cooking path and load the cooking system.
4. Insert the core probe through the hole in the lid of the reference container.

The **Semi-preserves** cooking path regulates to an F-value of 0.3. The semi-preserves produced in this way have a shelf life of up to 6 months with a storage temperature below 10 °C.

5.3 Cooking food intelligently

5.3.1 Accessing intelligent cooking paths

You can access intelligent cooking paths in 2 ways:

- About iCookingSuite
- About programming mode [► 78]

iCookingSuite

1. In the menu bar, press this button: 
 - > With iCookingSuite, you can access intelligent cooking paths in three ways:
 - By choosing an operating mode, e. g., **Vegetables and side dishes**.
 - By choosing a cooking method, e. g., **Grilling**.
 - By choosing an operating mode as well as a cooking method.

After making your selection, any matching intelligent cooking paths will be shown on the display.


Programming mode

1. In the menu bar, press this button: 
2. Press this button: 

- > All saved intelligent cooking paths will be displayed.

5.3.2 Starting an intelligent cooking path

This chapter explains how intelligent cooking paths work, using the **potato gratin** path as an example. Please note that each intelligent cooking path has its own cooking parameters, as well as its own individual sequence of cooking steps to achieve the results you want.

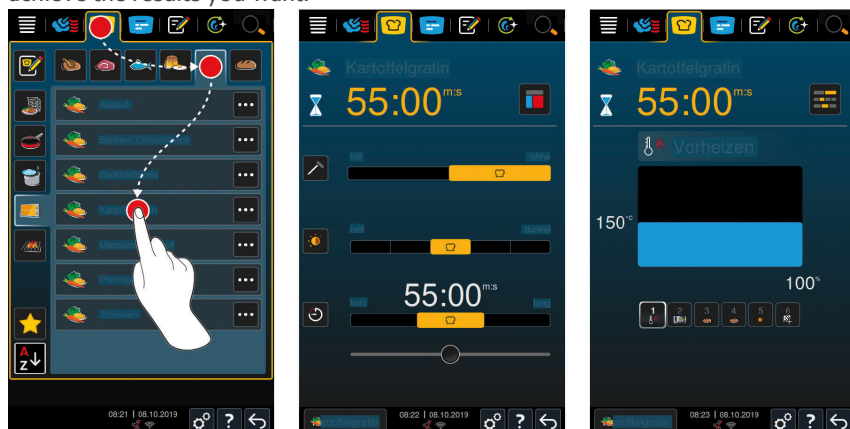

1. In the menu bar, press this button: 
2. Press this button: 
3. Press this button: **Potato gratin**
 - > The intelligent cooking path will start, and the cooking cabinet will be preheated to the set climate.
4. Set the desired cooking result using the cooking parameters [► 40]
 - Examples of cooking parameters can be core temperature, browning level or time.
 - > After a few moments, the display will switch to Cockpit [► 47] view.
 - > Once the cooking system has established the correct climate, you will be prompted to load the food.
5. Load product now.
6. Close the cooking cabinet door.
 - > The cooking path will continue.
7. Follow the instructions on the cooking system.
 - > Once the cooking time has elapsed or the food has reached the set core temperature, a signal tone will sound, prompting you to check whether the food has reached your desired level of doneness.

8. If the results are the way you want them, remove the food from the cooking cabinet.
9. If the food has not yet reached your desired degree of doneness, use one of the suggested options to continue the cooking path.
10. To end the cooking path, press and hold the Back button.

5.3.3 Pre-select start time

The pre-select start time feature allows you to set the cooking path start time, down to the exact minute. This feature can be helpful, for example, by letting you take advantage of variable electricity rates (such as cheaper nighttime rates) while utilizing your cooking system up to 24 hours a day.


WARNING

Leaving food in an unheating cooking cabinet for longer periods of time can result in bacteria building up on the food

This can lead to food poisoning or food-borne infections.

1. Do not leave food in the cooking cabinet for too long.

This chapter uses the **potato gratin** cooking path to show you how to adjust pre-selected start time settings.

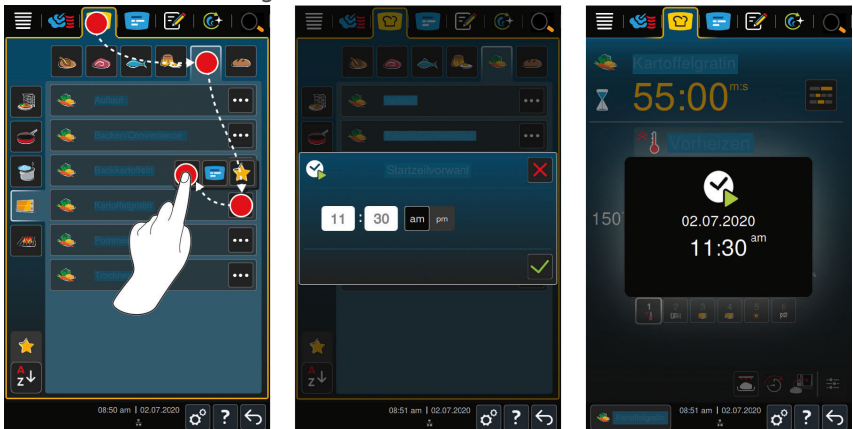

1. In the menu bar, press this button: 
2. Press this button: 
3. Press this button next to the **potato gratin** cooking path: ...
4. Press this button: 
5. Enter the start time.

6. To confirm, press this button: 
- > The cooking parameters for the cooking path will be displayed. You can adjust your target cooking results as desired. After a few moments, the cooking system will indicate that the pre-selected start time has been activated.
7. Load product now.
8. Close the cooking cabinet door.
- >> The cooking path will start at the set time. To cancel a pre-selected start time setting, press and hold this button: 

5.4 Fine-tuning your results

After you have selected an intelligent cooking path, the unit will show you specific cooking parameters and functions for that path. By default, cooking paths use standard settings tailored to your country; these settings are designed to give you ideal cooking results. You can adjust these parameters and select additional functions using simple gestures [► 24] or the central selection knob [► 25]. Changing these settings will change the process used in the cooking path. You can check on the unit's progress at any time via the Cockpit [► 47].

5.4.1 cooking parameter

NOTE

In some cooking paths, such as "Meat - Large Roast", even the lowest level is a searing level. The "without searing" option is not available in those cases.



Degree of searing

This cooking parameter lets you select whether to sear the food or not. Use the settings to specify more or less searing, depending on the results you want. A high searing level and a short cooking time, for example, result in lower cooking losses. Choosing **without** will skip the **searing** step entirely. Choose **without** if you are using smaller, previously seared pieces of meat and want to finish cooking them gently.

If you want to brown the food at the end of the cooking path, choose a lower searing level.

Searing is done at a very high temperature, which reliably kills any bacteria on the outside of the product. This allows you to set a lower core temperature without worrying about hygiene issues.



browning

Use this cooking parameter to indicate how brown you want the outside of the food. Use the settings to increase or decrease browning intensity, depending on the results you want. Seasoning or marinating with herbs, spices, or pastes that brown easily will cause your food to brown more rapidly and more intensely, so we recommend using a lower browning level in those instances.



Food thickness

Use this parameter to specify whether your food is thick or thin. Select **without core temperature probe** for food that is thinner than 3/4". Select **with core temperature probe** for food thicker than 3/4".



Product size

Use this parameter to specify the size of the individual products you are preparing.

- Select **small** for eggs weighing less than 53 g. Select **large** for eggs weighing more than 64 g.



Cooking cabinet humidity

Use this cooking parameter to adjust moisture levels inside the cooking cabinet.

When Finishing or using the sous-vide function, use these settings:

Level	Suitable for
Level 1 – dry	Use this level with food that does not require additional moisture, such as breaded products or French fries.
Level 2	Use this level with food that requires only a little additional moisture, such as stewed vegetables.
Level 3	Use this level when preparing different foods at the same time.
Level 4 – humid	Use this level with food that requires a great deal of additional moisture, e.g., rice or poached fish.



Cooking cabinet temperature

Use this cooking parameter to adjust the cooking cabinet temperature.

- Whenever the heating element is activated in order to achieve the set cooking cabinet temperature, this symbol will be displayed:
- Once the cooking cabinet has reached the target temperature, this symbol will be displayed:

To view the current cooking cabinet temperature and humidity level:

1. Press and hold this button:
 - > After 10 seconds, the current cooking cabinet temperature will be displayed.
2. Release the button to return to the set parameters.



Cooking time

Use this cooking parameter to set a time within which you want your desired results (e.g., a certain degree of doneness). With some intelligent cooking paths, you can choose "Continuous mode" to have your unit run uninterrupted using the settings you have chosen.

1. Adjust this parameter by selecting a **running time**.

If you set a cooking time, the **core temperature** parameter will no longer be available.



Core temperature probe

Use this parameter to set whether you would like to prepare your food with or without the help of a core temperature probe. After that, you can set a target core temperature. For products more than 3/4" thick, it is advisable to use the core temperature probe.



Core temperature

Use this cooking parameter to indicate the target core temperature or degree of doneness you want the food to have.

When choosing core temperature settings, please observe any applicable hygiene regulations for that food in your country.

Degree of doneness

Use this parameter to specify the degree of doneness you would like your food to have. Each degree of doneness is associated with a core temperature, which you can adjust to fit your needs. When cooking using a low-temperature method, you can set a core temperature as much as 10°C lower than with other methods, in combination with a hold time. For hygiene reasons, always set a core temperature of at least 165°F when cooking poultry. Observe all applicable HACCP regulations in your country.



Delta-T cooking

This cooking parameter is used to maintain a constant differential between the cooking cabinet temperature and the core temperature. Raising the temperature of the cooking cabinet gradually, while maintaining a constant differential to the core temperature, helps cook the food slowly and gently, while minimizing cooking losses. You can set the differential anywhere between 50°F and 140°F. After that, you will need to set your target core temperature.

The smaller the difference between the cooking cabinet temperature and the core temperature, the more slowly and gently the food will cook. The greater the difference between the cooking cabinet temperature and the core temperature, the quicker the food will cook.



cooking speed

With this cooking parameter, you can set the temperature control in the cooking cabinet. If you select **gentle**, food will be cooked at lower temperatures for a longer time. If you select **normal**, food will be cooked quicker at higher temperatures. **NOTE! The cooking process can be accelerated by switching from gentle to normal.**

5.4.2 Additional functions



Cooking cabinet humidity

Use this additional function to adjust moisture levels inside the cooking cabinet. Two levels are available to choose from. The higher the level you choose, the more moisture will be in the cooking cabinet - humidity levels will be higher throughout the entire cooking path.

If you are preparing food that does not require any additional moisture, press this button:  No additional moisture will be introduced to the cooking cabinet.



Prove

This additional function allows you to prove inside the cooking cabinet at an optimum temperature. Five levels are available to choose from. The higher the level you choose, the longer the food will prove inside the cooking cabinet. To cook without a proving phase, press this button: 



Flash steam

With this additional function, moisture is added to the cooking cabinet at the beginning of baking. The steam condenses, moistening the surface of the food to optimize oven power and give you crisp crusts. The higher the level you select, the more moisture is added to the cooking cabinet. To cook without flash steam, press this button: 



Fan speed

This additional function is used to set fan speed. Two levels are available to choose from. The higher the level, the higher the fan speed. Choose a low level for small, delicate products.

5.4.3 Prompts



Cancel

All cooking paths in progress will be canceled.



Load

Load the food into the unit.



Confirm

The unit is prompting you to confirm an action.



Brush

Brush something onto the food now (for example, brush egg wash onto baked goods).



Score

Score the surface of the food, e.g., baked goods or back fat.



Reinsert core temperature probe

Insert the core temperature probe into the food again.



Core temperature probe in product

Insert the core temperature probe into the food.



Pierce

Pierce the food (e.g., crispy pork).



Fill

Fill the container with liquid (e.g., on braised dishes).



Blend

Mix the food (e.g., totopos).

5.4.4 Information

During the cooking path, the display will indicate which steps are currently being carried out.



Preheat

The unit is being preheated to a temperature that is either a default temperature for a manual operating mode or specified for an intelligent cooking path.



remaining time

This is how much longer the intelligent cooking path will take to complete.



End of cooking path

The cooking path is finished.

5.4.5 Options

Once you have started a cooking path, all available options are shown. The options **Crisp** and **Hold** can be selected while the cooking path is running. The options **Move core temperature probe**, **New batch**, **Continue with time** or **Brown and crisp** can only be selected if the end of the cooking path is reached.



Hold

Use this option either to hold the cooking cabinet climate for a period of time, or to maintain the food's core temperature. Choosing this option will hold the preset cooking cabinet temperature or core temperature for up to 24 hours in order to keep it from overcooking. We recommend only using the **Hold** option for brief periods, in order to minimize cooking losses.

In some cooking paths, such as overnight cooking, the **Hold** option is the final step of the process, and will be started automatically once your desired results have been obtained. When preparing products of different sizes, plan a longer holding phase so that all pieces of food have time to reach the desired core temperature.

Smaller pieces of meat, wild game, and well-aged meat should not remain in the cooking cabinet on **Hold** for too long. Very young, insufficiently aged beef, on the other hand, will become very tender.

1. To adjust the parameters of the **Hold** option, press this button: 
 2. Adjust the parameters as desired.
- >> Once the cooking path ends, the **Hold** cooking step will be started automatically.



Reinsert

Choose this option when using the core temperature probe to cook products of different sizes, or to different degrees of doneness:

1. When the set core temperature has been reached, open the cooking cabinet door.

2. Reinsert the core temperature probe into a larger piece, or into a piece with a higher target core temperature.
3. Remove the smaller or lower-temperature pieces of food from the cooking cabinet.
4. Close the cooking cabinet door.
5. Press this button: 
 - > A window appears, where you can set the core temperature.
6. Select the desired core temperature.

>> The amount you set will be applied automatically within a few seconds.

Repeat this step as often as necessary until all pieces of food have reached the desired core temperature.



New batch

Use this option to load another batch into the unit and resume the same cooking path with the defined cooking parameters.

You will be prompted to unload the cooking system first and then load it again. Once you have loaded a new batch into the cooking system and closed the cooking cabinet door, the cooking path will resume.



Continue with time

Use this option to continue the cooking path for a specific amount of time. If you select the option at the end of the cooking path, a window appears where you can set the duration with which the cooking path is to be continued.

1. Select the desired time.

>> The amount you set will be applied automatically within a few seconds.

If you switch from the cockpit back to the cooking parameters, the overview is grayed out. That cooking parameter cannot be changed. Once the set time has elapsed, you can either unload the unit or continue the cooking path with an option.



Brown and crisp

Use this option to brown the outside of the food, creating a crisp, delicious crust.

When preparing mixed loads, remove the food you do not want to brown from the cooking cabinet before starting the **Crisp** option.


If melted fat has collected in the cooking container, transfer the food to a different container before starting the **Crisp** option, in order to prevent smoke from developing during browning.

After the browning finishes, if the food is not as brown and crisp as you would like, select **Time Continued** and then set how much longer you would like the food to continue browning.

Medium-rare meat is not well-suited to crisping - the high temperature would turn the edges gray.


1. To adjust the parameters of the option **Crisp**, press the button: 
 2. Adjust the parameters as desired.
- >> Once the cooking path is ended, the cooking step **Crisp** is started automatically.

5.5 Monitoring an intelligent cooking path

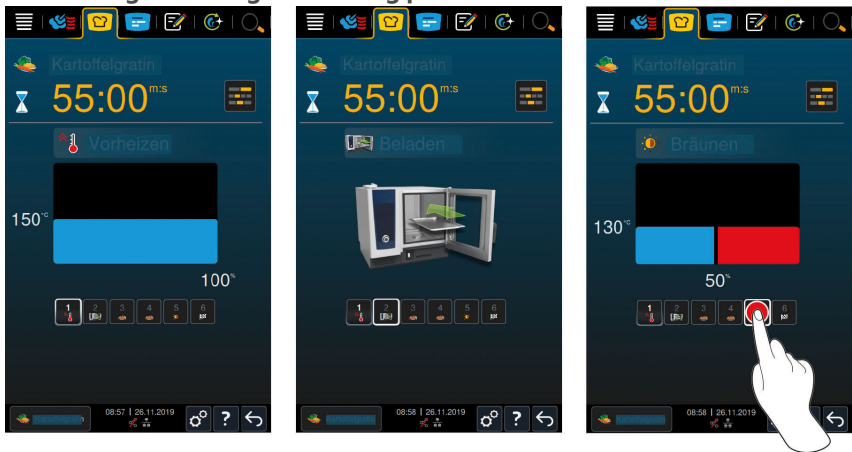

Once you have started an intelligent cooking path, the display switches to the cockpit after a short time. All cooking steps are shown here, which the intelligent cooking path runs through one after the other. The active cooking step is marked. The cooking steps yet to be carried out are grayed out. Once the cooking step is complete, the next cooking step is displayed automatically.

5.6 Canceling an intelligent cooking path

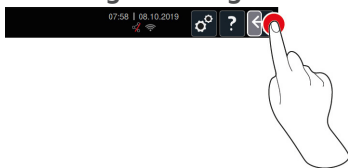

1. Press and hold this button: 
- > The cooking path is canceled. The home screen will appear.

5.7 Sorting intelligent cooking paths

You can either sort the intelligent cooking paths alphabetically or based on frequency of use in the iCookingSuite.


1. To sort intelligent cooking paths alphabetically, press this button: 
2. To sort intelligent cooking paths based on frequency of use, press this button: . This button sorts the cooking paths previously selected as favorites upward.

6 Manual cooking



With the manual modes, the iCombi Pro supports you in your personal craft.

By selecting this mode, you set the climate and select whether you want to cook the food in steam, with convection heat or with a combination of steam and convection. Then you set the cooking cabinet temperature, the air speed and cooking time and make all the necessary decisions yourself. This gives you control to ensure the food is cooked exactly as you want it.

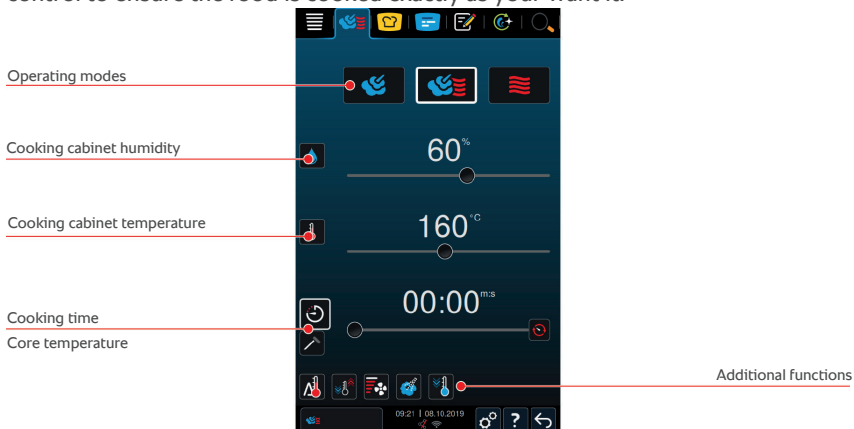

6.1 Fine-tuning your results

6.1.1 cooking parameter



Cooking cabinet temperature

Use this cooking parameter to adjust the cooking cabinet temperature. When you set the temperature to boiling temperature in **Steam** mode, this symbol is displayed:

To view the current cooking cabinet temperature and humidity level:

1. Press and hold this button:
 - > After 10 seconds, the current cooking cabinet temperature will be displayed.
2. Release the button to return to the set parameters.



Cooking cabinet humidity

Use this cooking parameter to adjust moisture levels inside the cooking cabinet.

- In **Steam** mode, the cooking cabinet humidity level is set to 100% and cannot be adjusted.

- In **Combi Steam** mode, the steam generator supplements the food's natural moisture. If the humidity exceeds the set humidity level, the cooking cabinet is dehumidified.
- In **Hot Air** mode, the steam generator does not supply additional moisture - all moisture comes from the food itself. If the humidity exceeds the set humidity level, the cooking cabinet is dehumidified.



Cooking time

Use this cooking parameter to set the cooking time for the food. If you set a cooking time, the **core temperature** parameter will no longer be available.

Alternatively, you can choose continuous mode to have your unit run uninterrupted using the settings you have chosen.

1. If you want to use your cooking system in continuous operation mode, either press  or slide the Cooking time control all the way to the right until the following message is displayed: **Continuous operation**



Core temperature

Use this cooking parameter to specify the core temperature you want the food to reach. Setting a core temperature will disable the **cooking time** option.

6.1.2 Additional functions



Delta-T cooking

NOTE

Please note that, when using Delta-T cooking with a cooking time, the core temperature probe must also be inserted into the product.

This additional function is used to maintain a constant differential between the cooking cabinet temperature and the core temperature. Raising the temperature of the cooking cabinet gradually, while maintaining a constant differential to the core temperature, helps cook the food slowly and gently. This option also minimizes cooking losses. You can set the differential anywhere between 50°F and 104°F. The smaller the difference between the cooking cabinet temperature and the core temperature, the more slowly and gently the food will cook. The greater the difference between the cooking cabinet temperature and the core temperature, the quicker the food will cook.

Either a target temperature or a desired cooking time can be set. If a target core temperature is set for the product, the cooking cabinet temperature will be regulated automatically based on the difference between the set delta

temperature and the set core temperature. If a cooking time is set for the product, the cooking cabinet temperature will be regulated automatically based on the difference between the set delta temperature and the end of the set cooking time.



Create climate

This function adjusts the cooking cabinet temperature to fit the target temperature of a cooking path. For example, when you switch from a grilling application to a baking application, the cooking cabinet is cooled down. When you switch from baking to grilling, the cooking cabinet is heated up.



Fan speed

This additional function is used to set fan speed. The higher the level, the higher the fan speed. Choose a low level for small, delicate products.



Steam injection

With this additional function, water is sprayed from the steam nozzle onto the heating element during cooking. The steam condenses, moistening the surface of the food to optimize oven power and give you crisp crusts. The cooking cabinet temperature must be between 86 - 575°F.

1. Press and hold this button: 
- >> Water will continue to spray out of the steam nozzle onto the fan for as long as you hold the button.



Cool down function

When you finish cooking at a high temperature and want to shift to a lower cooking temperature, you can use the cool down function to cool the cooking cabinet.

- ✓ Make sure the air baffle is secured correctly.
1. Press this button: 
 - > Set the temperature you want the cooking cabinet cooled to.
 2. **⚠ WARNING! Scalding hazard! Hot steam may billow out of the cooking cabinet when you open the cooking cabinet door.** Open the cooking cabinet door.
- >> **⚠ WARNING! Risk of injury! Opening the cooking cabinet door does not stop the fan. Do not touch the fan while it is in motion.** The fan speed will be increased. The cooking cabinet will cool down.

6.1.3 Prompts and information


During the cooking process, you may be shown the same prompts and information [► 44] as you would during an intelligent cooking path.

6.2 Steam

6.2.1 Cooking cabinet climate and temperature range

Cooking cabinet climate	cooking method	Cooking cabinet humidity	Cooking cabinet temperature
moist	▪ Steam ▪ Stew ▪ Blanch ▪ Heat through ▪ Steaming rice ▪ Sous-vide cooking [► 57] ▪ Defrost ▪ Canning / Preserves	100%	86 – 266°F

6.2.2 Cooking with steam

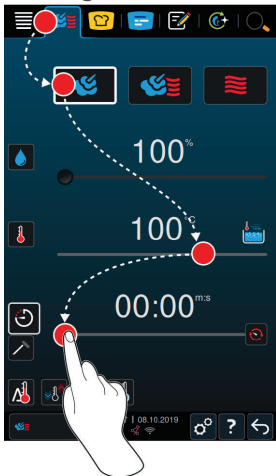

1. In the menu bar, press this button: 
2. Press this button: 

- > The unit is preheating.
- 3. Set the cooking cabinet temperature you want.
- 4. To cook based on cooking time, press this button: 
- 5. Set the cooking time.
- 6. To cook using the core temperature probe, press this button: 
- 7. Set the core temperature.
 - > Once the set cooking cabinet temperature has been reached, you will be prompted to load the food.
- 8. Load product now.
- >> The cooking path will continue. Once the cooking time has elapsed or the food has reached the set core temperature, a signal tone will sound, prompting you to check whether the food has reached your desired level of doneness.


6.3 **combi-steam**

6.3.1 **Cooking cabinet climate and temperature range**

Cooking cabinet climate	Cooking method	Cooking cabinet humidity	Cooking cabinet temperature
moist and hot	▪ Bake ▪ Pan-fry side dishes	0 – 100%	86-572°F

If the cooking cabinet temperature remains above 500°F for 30 minutes, it will automatically be reduced to 500°F if you do not work with the unit during that time. Taking action within those 30 minutes (opening the cooking cabinet door, for example) will reset the timer - the cooking cabinet temperature will be kept above 500°F for another 30 minutes.

6.3.2 Cooking in Combi Steam mode

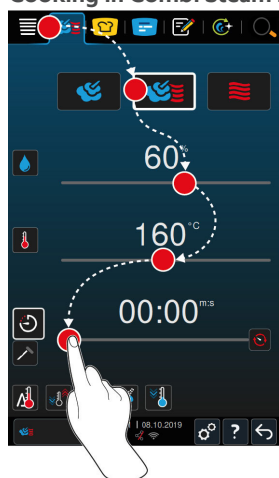

1. In the menu bar, press this button: 
 - > The cooking system will preheat to the set temperature.
2. Set the desired cooking cabinet humidity to the exact percentage.
3. Set the cooking cabinet temperature you want.
4. Set the cooking time. 
 - > The cooking time will begin immediately when you press the dial or after five seconds with no additional input.
5. To cook using the core temperature probe, press this button: 
6. Set the core temperature.
 - > Once the set cooking cabinet temperature has been reached, you will be prompted to load the food.
7. Load product now.
 - >> The cooking path will continue. Once the cooking time has elapsed or the food has reached the set core temperature, a signal tone will sound, prompting you to check whether the food has reached your desired level of doneness.

6.4 convection

6.4.1 Cooking cabinet climate and temperature range

Cooking cabinet climate	cooking method	Cooking cabinet humidity	Cooking cabinet temperature
hot	▪ Baking ▪ Pan-fry ▪ Grilling ▪ Deep-fry ▪ Browning ▪ Glazing	0 – 100%	85 – 575°F

If the cooking cabinet temperature remains above 500°F for 30 minutes, it will automatically be reduced to 500°F if you do not work with the unit during that time. Taking action within those 30 minutes (opening the cooking cabinet door, for example) will reset the timer - the cooking cabinet temperature will be kept above 500°F for another 30 minutes.


6.4.2 Cooking with hot air



1. In the menu bar, press this button:
2. Press this button:
 - > The cooking system will preheat to the set temperature.
3. Press this button: to set the maximum permitted humidity in the cooking cabinet.
4. Set the cooking cabinet temperature you want.

5. To cook based on cooking time, press this button: 
6. Set the cooking time.
 - > The cooking time will begin immediately when you press the dial or after five seconds with no additional input.
7. To cook using the core temperature probe, press this button: 
8. Set the core temperature.
 - > Once the set cooking cabinet temperature has been reached, you will be prompted to load the food.
9. Load product now.
 - >> The cooking path will continue. Once the cooking time has elapsed or the food has reached the set core temperature, a signal tone will sound, prompting you to check whether the food has reached your desired level of doneness.

6.5 Cancel manual cooking

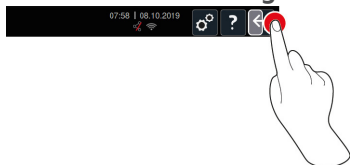

1. Press and hold this button: 
 - > The cooking process is canceled. The home screen will appear.

7 Sous-vide cooking

In sous-vide cooking, food is prepared, seasoned, marinated and/or seared before being placed into a vacuum bag and cooked at a low temperature. The method results in very flavorful food which retains its natural color, vitamins and minerals, and the gentle cooking process minimizes cooking losses. After cooking, the food needs to be cooled down. Before serving, the food is reheated in its plastic bag, then removed from the bag and finished accordingly.

Sous-vide cooking is particularly suitable for the following uses:

- **Cook and Chill**

Produce your food in a central production kitchen and then deliver it to satellite kitchens. This allows you to avoid costly overproduction, because you only Finish food you actually need.

- **Room service**

Produce dishes or individual components in advance, chill them and then Finish individual portions to order. This method allows you to offer 24-hour service whether or not an experienced cook is in the kitchen.

- **Special diets**

This gentle cooking method preserves food's natural flavor, making it ideal for preparing low-fat, low-salt, or other special dietary options.

For detailed information on sous-vide cooking paths, see Sous-vide cooking paths [► 57].



TIP

The sous-vide core temperature probe is an accessory available to help you make sure that your food reaches the correct core temperature when using sous-vide cooking applications. Expanded, automatic HACCP documentation of core temperatures ensures that basic principles of food hygiene are documented appropriately.

Additional details on assembling and using the sous-vide core temperature probe are available in the USB core temperature probe instructions for use, which you can download from our website.

7.1 Sous-vide cooking paths

These cooking paths are only accessible when using the sous-vide USB core temperature probe.

Sous-vide poultry

Select this cooking path if you want to cook pieces of poultry in vacuum pouches using the sous-vide method.

Sous-vide meat

Select this cooking path if you would like to prepare salt-cruste^d fish.

Sous-vide fish

Select this cooking path if you would like to prepare salt-cruste^d fish.

Sous-vide side dishes

Select this cooking path if you would like to prepare salt-cruste^d fish.

8 Pasteurizing

Pasteurization heats food to reduce germs and microorganisms, which extends shelf life. Food is prepared, transferred into suitable containers and heated gently at controlled temperatures. This preserves the food's flavor while ensuring its safety and quality.

8.1 Pasteurization cooking paths

These cooking paths are only accessible when using the sous-vide USB core temperature probe.

Pasteurizing

Select this cooking path if you want to pasteurize.

Pasteurizing poultry

Select this cooking path if you would like to prepare onsen eggs.

Pasteurizing_meat

Select this cooking path if you want to pasteurize meat.

Pasteurizing eggs

Select this cooking path if you would like to prepare onsen eggs.

Convenience pasteurization

Select this cooking path if you want to pasteurize previously cooked products in vacuum packaging for improved shelf life. This cooking path is particularly well-suited to producing your own convenience food.

Container pasteurization

Select this cooking path if you would like to prepare onsen eggs.

9 Smoking

Smoking involves exposing food to aromatic smoke, which gives it a unique and intense flavor. The food is prepared, seasoned or marinated and then loaded into the cooking system set to smoking mode.

9.1 Smoking cooking paths

These cooking paths are only available to users of the new VarioSmoker with USB connection.

Hot smoking Poultry

Select this cooking path to smoke poultry. You can specify a target core temperature as well as a cooking time.

Hot smoking Turkey

Select this cooking path to smoke turkey. You can specify a target core temperature as well as a cooking time.

Hot smoking Fish

Select this cooking path to smoke fish. You can also cook the fish while smoking it. You can specify a target core temperature as well as a cooking time.

Hot smoking Side Dishes

Select this cooking path to smoke side dishes, or to create interesting vegetarian/vegan dishes and components. You can also cook the fish while smoking it. You can set a desired temperature and/or a target cooking time.

Low temperature smoking

Select this cooking path to smoke pieces of meat gently while cooking them at the same time. You can specify a target core temperature as well as a cooking time.

Braise and smoke

Select this cooking path to smoke pieces of meat gently and braise them at the same time. You can specify a target core temperature as well as a cooking time.

10 Low temperature cooking

Cooking large meat and poultry products requires a lot of time-intensive monitoring and many years of experience, plus it renders conventional appliances unavailable for hours on end. With your cooking system, you can face these challenges with less worry: you can roast, boil, or braise food slowly at low temperatures during off-peak hours, such as during the afternoon or outside of service periods, so you can make optimum use of your cooking system, up to 24 hours a day. Cooking overnight also lets you take advantage of lower nighttime electricity prices.



TIP

If the power goes out while low temperature cooking is in process, the cooking path will be interrupted. If the power outage lasts less than 15 minutes, the cooking path will be resumed. If it lasts for more than 15 minutes, the cooking system will switch to standby mode after the power returns. You will need to either restart the cooking path from the point when the power failure occurred or finish cooking the food manually.

11 Finishing

Finishing allows you to separate food production and service, giving you more flexibility to spend time on important things like planning, menu design, or creative plating. Finishing minimizes loss of quality caused by long holding periods, so your food always comes out tasting great.

- You can Finish exactly as much food as you currently need, so you can respond easily to changing guest numbers.
- Shortened production and service times mean there's no more hectic rush to get everything plated.
- Reduce personnel costs by utilizing time efficiently and streamlining the process of getting food out to customers.
- Run multiple events at the same time, maximizing capacity usage without increasing expenses.

Whether you're cooking in a restaurant, a hotel, or a lunchroom, Finishing makes it even easier to serve a wide variety of great-tasting food:

- **Finishing in restaurants**

Use Finishing to get food ready exactly when you need it.

- **Finishing in hotels**

Plate Finishing is perfect when you need to be able to serve a large number of plates at the same time, e.g., conferences, weddings, or catering.

- **Finishing in food service operations**

Container Finishing is especially useful when you need to provide a wide variety of food in large quantities.

11.1 Set à la carte plate weight

Before starting the Finishing step, set how heavy an empty plate is. Based on this information, the cooking system will adjust the cooking steps to ensure ideal Finishing results and prevent moisture from condensing onto the plates.

1. Press this button: 
2. Press this button:  **Cooking**
3. Press this button:  **A la carte plate weight**
4. Select one of the following values:
 - <750 g
 - 750 g – 899 g
 - 900 g – 1099 g
 - >1100 g

11.2 Setting the banqueting plate weight

NOTE

To prevent material damage, insert the core temperature probe into the ceramic tube on the right side of the mobile plate rack after loading.

Before starting the Finishing step, set how heavy an empty plate is. Based on this information, the cooking system will adjust the cooking steps to ensure ideal Finishing results and prevent moisture from condensing onto the plates.


1. Press this button: 
2. Press this button:  **Cooking**
3. Press this button:  **Banquet plate weight**
4. Select one of the following values:
 - <750 g
 - 750 g – 899 g
 - 900 g – 1099 g
 - >1100 g

12 iProductionManager



iProductionManager organizes the entire production process intelligently and flexibly. It identifies which foods can be prepared together, determines the perfect order to prepare the foods, and monitors each cooking path separately.

iProductionManager lets you know when each dish needs to be put in or taken out. You decide whether to optimize cooking speed, maximize your energy efficiency, or have your food ready at a target time, and iProductionManager intelligently arranges the order of preparation accordingly. You'll have everything under control without needing to monitor a thing, making your food production process more efficient than ever.

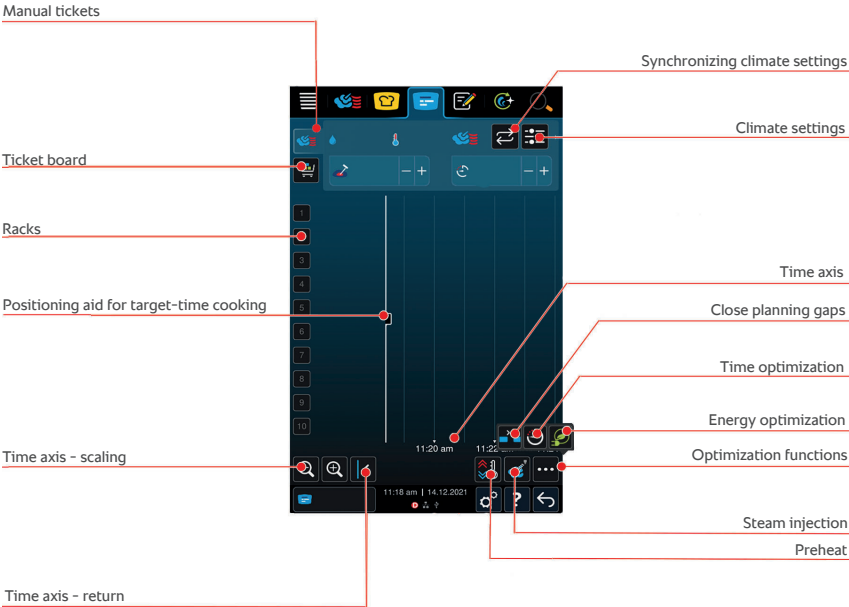

12.1 Creating manual tickets

You can add manual tickets to the iProductionManager. First select the climate and then select whether the ticket should be created based on cooking time or core temperature. Please note: If you are cooking food with the integrated core probe, you can only place one manual core temperature ticket on the time axis at the same time.



1. In the menu bar, press this button: 
 2. Press this button: 
 3. Press this button: 
 4. Select the operating mode: Steam [► 52] , Combi-Steam [► 53]  or Convection [► 55] 
 5. Adjust the cooking parameters as desired. You can also set the speed of the fan wheel. To do so, press this button: 
 6. To save your changes, press this button: 
 7. To increase or decrease the core temperature or the cooking time, either turn the central dial or press the buttons:  or 
 8. Press the button until the desired setting is achieved.
- >> You can now place the tickets [► 68].

12.2 Ticket board

You can add any intelligent cooking paths, programs, or shopping carts to the ticket board. If you do not save the ticket board using Save shopping cart [► 83], it will be overwritten as soon as a new shopping cart is loaded.

12.2.1 Adding intelligent cooking paths

1. To send an intelligent cooking path from the iCookingSuite to the iProductionManager, press this button in the menu bar: 
2. Press this button beside your chosen cooking path: 

3. Press this button: 

>> The intelligent cooking path will be sent to the iProductionManager and displayed on the ticket board.

12.2.2 Adding programs and shopping carts

1. In the menu bar, press this button: 

2. To send a manual or intelligent program to the iProductionManager, press this button beside the program: ...


3. Press this button: 

> The program will be sent to the iProductionManager and displayed on the ticket board.

4. To send a shopping cart to the iProductionManager, tap the shopping cart you want to use.

> The shopping cart will be sent to the iProductionManager. All programs will be displayed on the ticket board.

12.2.3 Ticket board editor

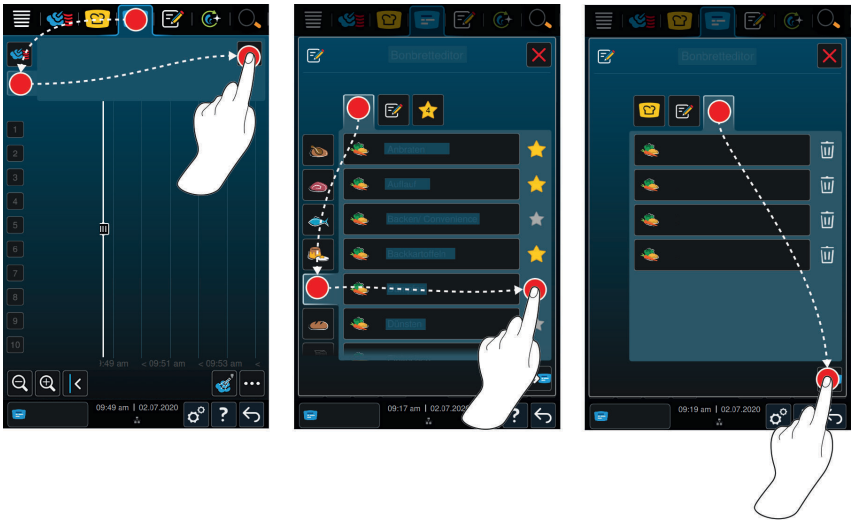

1. In the menu bar, press this button: 

2. Press this button: 

3. Press this button: 

4. To add intelligent cooking paths to the shopping cart, press this button: 

> All intelligent cooking paths will be displayed.