Pro Neon M2 Wired



Install Guide



What's included

Device dimensions $1.5" \times 4.25" \times 0.5"$



Wiring harness




Not included, optional for installation:

- Multimeter
- Fuse taps
- Double-sided 3M tape
- Trim removal tool



When the Neon M2 Wired is powered on, the device will check into the platform. Default ping rate is 5 minutes when in motion and 24 hours when stationary.

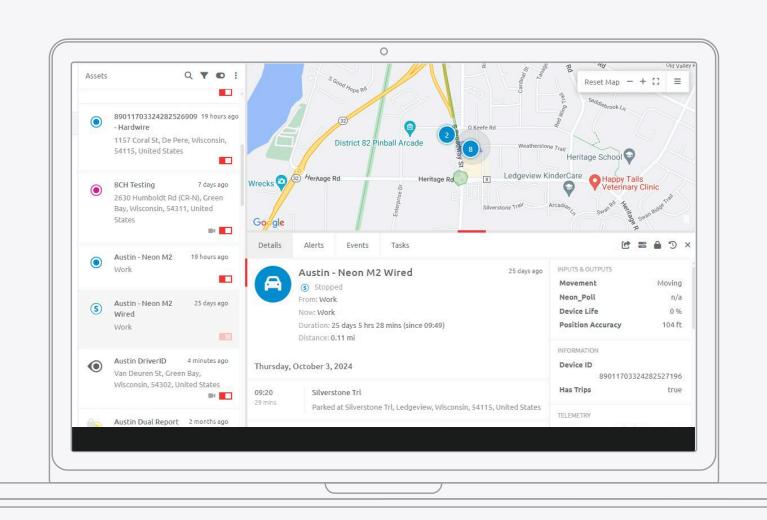

Neon LED light meanings

To turn on the device, press the button for approximately 5-15 seconds until the LED light flashes green. To turn off the device, press the power button again for 5-15 seconds until the LED flashes red. If you are unsure about the device's status, you can check it by pressing the button for 3 seconds and referring to the status table provided on the next page.



How to install


A. Locate a desired mounting location on the asset where the wiring harness will reach the asset's power source.

NOTE: Install the device in an area not exposed to the elements. Keep the device's button side (check mark icon) facing away from any metal structure.

- **B.** Locate a constant power source and ground (mutimeter is recommended) in the asset wiring near the desired mounting location for the device.
- C. Tap the red wire of the wiring harness to the constant power source.
- D. Tap the black wire of the wiring harness to the ground source.
- E. Connect the wiring harness to the mounted device and verify that the device begins to light up.

Check status

A. Press the button for 3 seconds, then use the table below for explanations of the LED color.

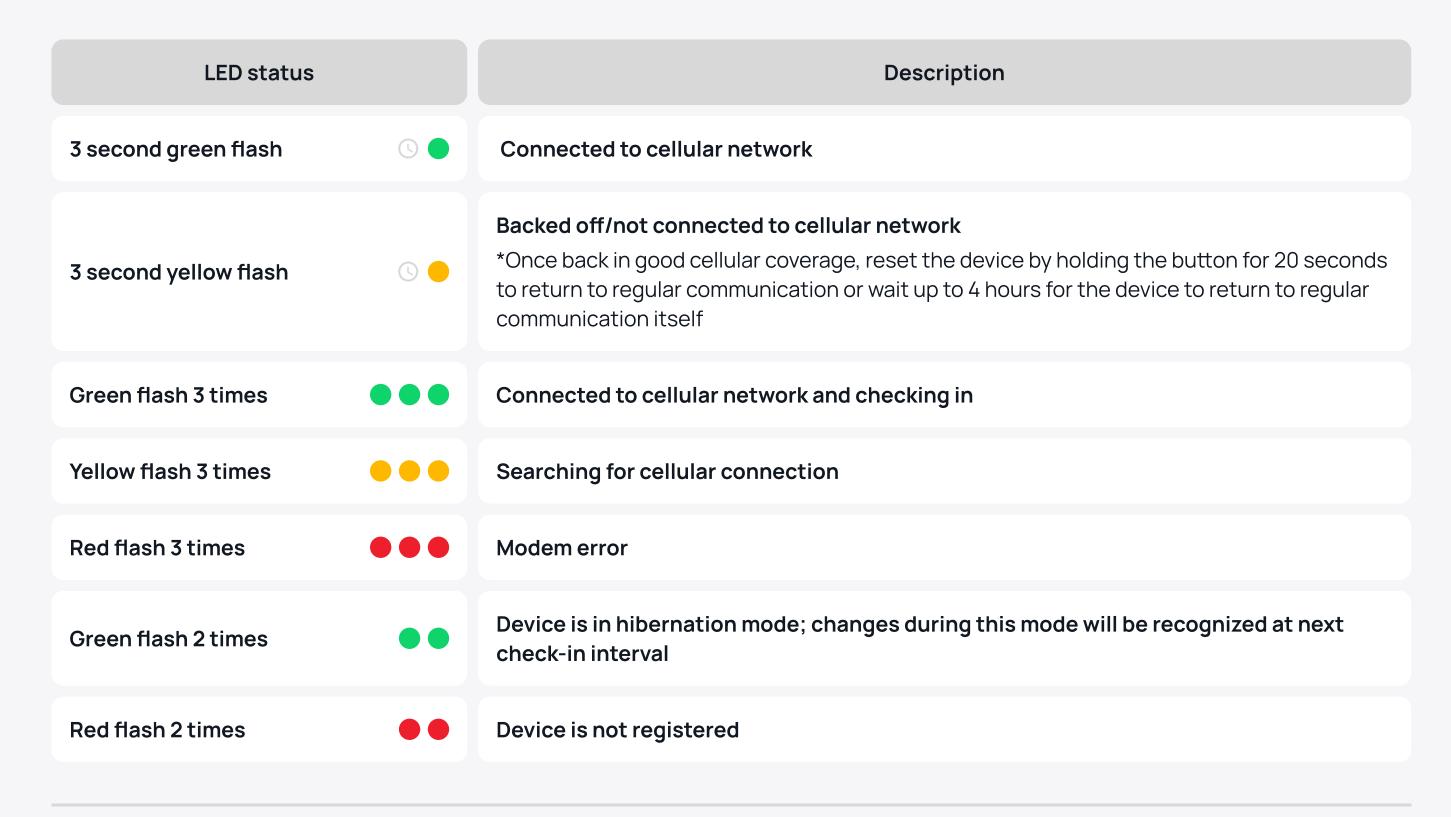

NOTE: To change the status from online to offline, press the button for 5-15 seconds and verify that the lights flash green to yellow to red. To reverse, do the same, but verify that the lights flash red to yellow to green, pause for 10 seconds, then flash from green to red to green.