


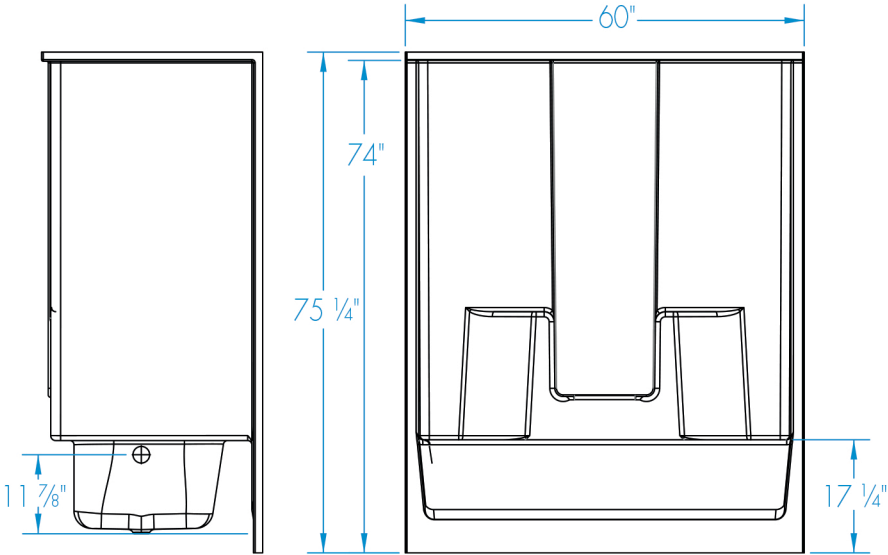

AFR: Allows for above the floor installation of waste, overflow and drainage.