

CODE NUMBER

3720001

DESCRIPTION

1.6/1.1 gpf, Angle Stop Bumper, Polished Chrome Finish, Fixture Connection Top Spud, Single Flush, UPPERCUT® Exposed Manual Water Closet Flushometer.

DETAILS

• Flush Volume: 1.6/1.1 gpf (6.0/4.2 Lpf)

• Finish: Polished Chrome (CP)

· Valve: Diaphragm

Valve Body Material: Semi-red Brass

Fixture Type: Water ClosetFixture Connection: Top Spud

• Rough-In Dimension: 11 ½" (292mm)

Spud Coupling: 1 ½" (38mm)
Supply Pipe: 1" (25mm)
Bumper: Angle Stop (YO)

FEATURES

- Lifting Handle UP initiates reduced flush (1.1 gpf/4.2 Lpf), eliminating liquid and paper waste, saving a 1/2-gallon of water
- Pushing Handle DOWN initiates full flush (1.6 gpf/6.0 Lpf), eliminating all waste
- Reduces water volume by up to 30% when activated UPWARDS
- PERMEX® Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- Metal Non-Hold-Open Handle with Triple Seal Handle Packing
- Sweat Solder Adapter with Cover Tube & Cast Wall Flange with Set Screw
- Non-Hold-Open Handle, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Diaphragm, Handle Packing and Vacuum Breaker to be molded from PERMEX® Rubber Compound for Chloramine Resistance
- Includes two (2) adhesive backed Metal Wall Plates etched with Instructions
- Antimicrobial Coating on Handle Protects Handle Against Germs



COMPLIANCES & CERTIFICATIONS













USA

(ADA Compliant, BAA Compliant, BREEAM Water Credit, cUPC Green Certified, cUPC Certified, Green Globes Water Credit, Made in the USA)

RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi- Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

VALVE OPERATING PRESSURE (FLOWING)

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

DOWNLOADS

- UPPERCUT Installation Instructions
- WES 111/115 (Spanish) Installation Instructions
- Royal Reclaimed Water Flushometer Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Reclaimed Water Flushometers Repair and Maintenance Guide
- Additional Downloads

NOTES

All information contained within this document subject to change without notice.

Looking for other variations of the WES 111 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer. Find a compatible water closet for this flushometer.

WARRANTY

View Warranty Information



ROUGH-IN

