
 
User Manual

WiFi Thermostat 562




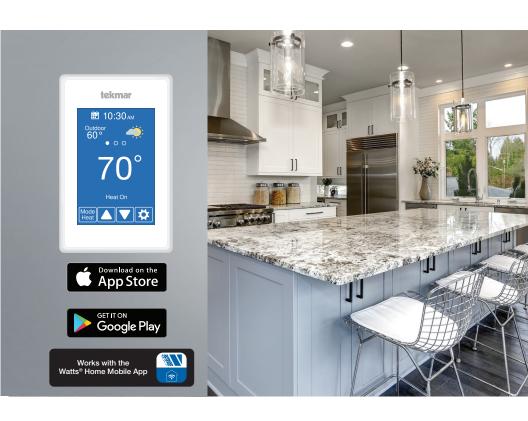



Home Screen


After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

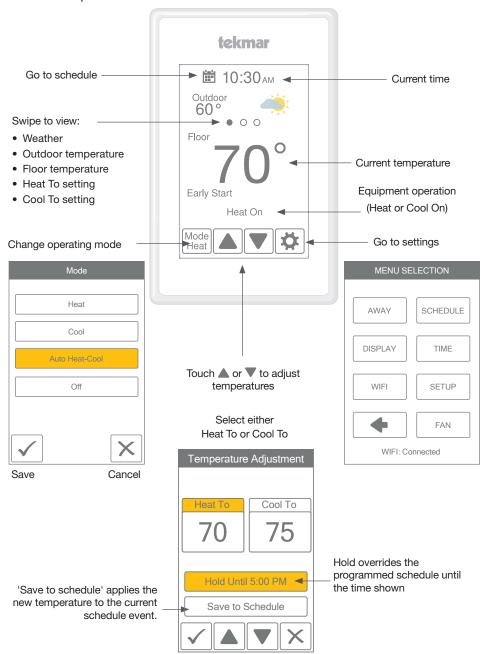


2 U-T-562 2215 © 2022 tekmar

User Settings

Away

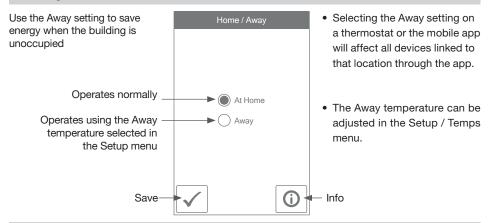


Schedule

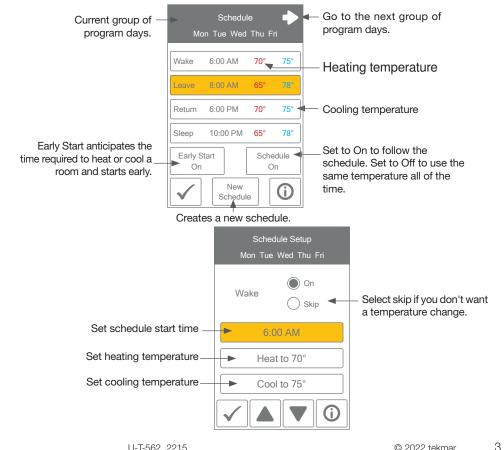


U-T-562 2215 © 2022 tekmar

Display

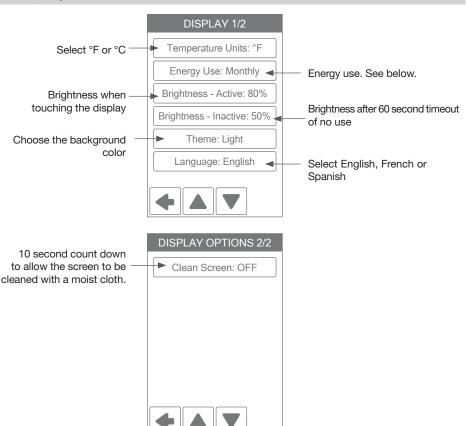

Energy Use

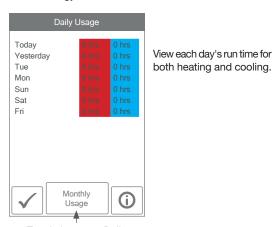


Toggle between Daily and Monthly Usage.

U-T-562 2215 © 2022 tekmar

4

Time

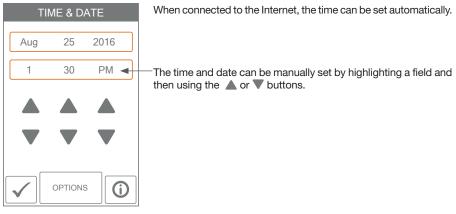


Time options are:

- 12 hour or 24 hour time format
- · Automatic or manual time setting
- Time zone
- · Daylight savings time

NOTICE

Incorrectly setting the time and date manually may prevent the thermostat from communicating to the mobile app. Automatic time source is recommended when using an Internet connection.

Fan

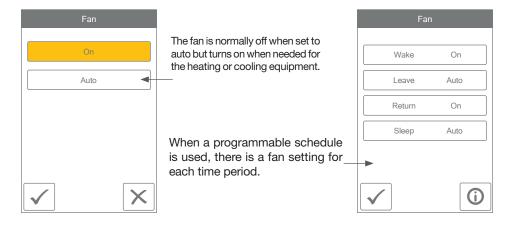

U-T-562 2215 © 2022 tekmar

5


NOTICE

Before using the WiFi features of this product, you must accept the Terms of Use, as amended from time to time and available at Watts.com/terms-of-use. If you do not accept these terms, this product can still be used without WiFi features.

The thermostat includes a step by step tutorial to setup the WiFi connection.



Step 1
Agree to Terms of Use

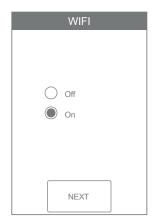

Step 2
Turn on WiFi




Enter wireless network name.
It must support WPA2 security encryption.



Step 4
Enter WiFi password.



Enter ZIP or postal code. This determines your location for weather information.

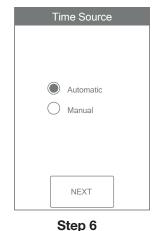

Select if the time is set automatically from the Internet or manually.

Notes	

U-T-562 2215 © 2022 tekmar

7

Need h	nelp?	Go to	our	website	or	contact	us.

tekmarControls.com | tekmar.customerservice@wattswater.com | 1-800-438-3903



All specifications are subject to change without notice.

Tel: 1-800-438-3903 • Fax: (250) 984-0815 tekmarControls.com

U-T-562 2215 ©2022 tekmar