


INSTALLATION, OPERATING AND SERVICE INSTRUCTIONS FOR


K2WT™ CONDENSING HIGH EFFICIENCY DIRECT VENT ***GAS - FIRED HOT WATER BOILER***

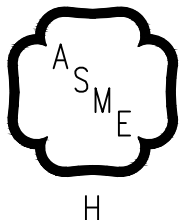

As an ENERGY STAR® Partner, U.S. Boiler Company has determined that the K2WT™ Series meets the ENERGY STAR® guidelines for energy efficiency established by the United States Environmental Protection Agency (EPA).

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or loss of life. For assistance or additional information, consult a qualified installer, service agency or the gas supplier. This boiler requires a special venting system. Read these instructions carefully before installing.

XV. Repair Parts (continued)

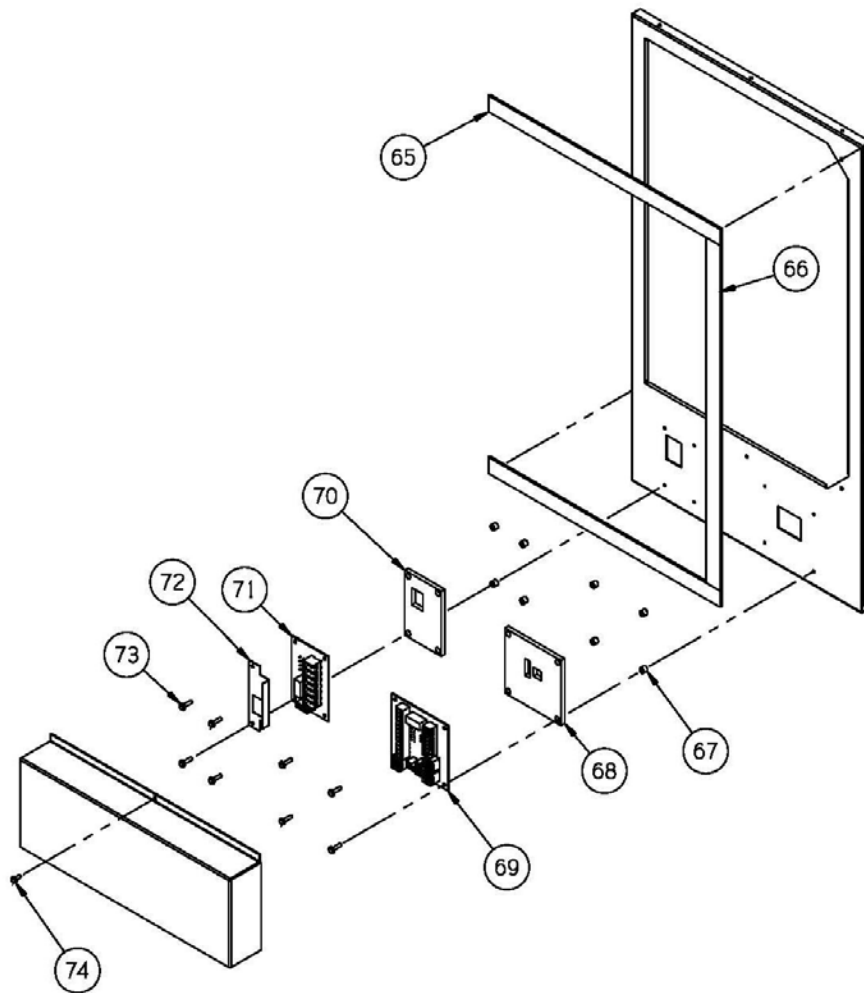

Key No.	Description	Part Number (Qty)				
		K2WT-080	K2WT-100	K2WT-120	K2WT-150	K2WT-180
65	Gasket, Short, Vestibule Frame	Contact U.S. Boiler Company				
66	Gasket, Long, Vestibule Frame / Control Panel					
67, 68, 69, 73	Repair Low Voltage Printed Circuit Board (PCB) Kit (includes Low Voltage PCB and hardware)	105853-01				
67, 70, 71, 72, 73	Repair High Voltage Printed Circuit Board (PCB) Kit (includes Line Voltage PCB, insulator, gasket and hardware)	105852-01				
74	8-18 x 1/2" Screw	105368-01				
not shown	HV & LV Fuse Kit	105856-01				