

INSTALLATION INSTRUCTIONS

FLEX-SEAL® Unshielded Coupling



Flexible sewer couplings that connect similar and dissimilar pipe materials and pipe sizes.

FS

UNSHIELDED REPAIR COUPLING

1



Loosen bolts on stainless steel tightening clamps. Do not remove the tightening clamps from the gasket.

2



Slide the Flex-Seal® Unshielded Coupling over the plain spigot ends of the two pipes to be joined.

3



Tighten clamp bolts alternately and firmly to 60 in/lbs. of torque.



Mission Rubber Company LLC | 1660 Leeson Lane | Corona, CA 92879
USA toll free 800.854.9991 fax 800.637.4601

missionrubber.com

REV. 6/15



MISSION
RUBBER COMPANY
connected, for good™