

AIR CONDITIONER

Cassette type

DESIGN & TECHNICAL MANUAL

INDOOR



ACUH09LUAS1
ACUH12LUAS1
ACUH18LUAS1

OUTDOOR



AOUH09LUAS1



AOUH12LUAS1
AOUH18LUAS1

FUJITSU GENERAL LIMITED

Notices:

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

Trademarks

FGLair™ is trademark of Fujitsu General Limited in the United States, other countries or both.

Google Play™ is trademark of Google LLC.

App Store® is a service mark of Apple Inc., registered in the U.S. and other countries.

CONTENTS

Part 1. INDOOR UNIT	1
1. Specifications	2
2. Dimensions	4
2-1. Models: ACUH09LUAS1, ACUH12LUAS1, and ACUH18LUAS1	4
2-2. Installation space requirement	5
3. Wiring diagram	6
3-1. Models: ACUH09LUAS1, ACUH12LUAS1, and ACUH18LUAS1	6
4. Capacity table	7
4-1. Cooling capacity	7
4-2. Heating capacity	9
5. Fan performance	11
5-1. Air velocity distributions	11
5-2. Airflow	17
6. Operation noise (sound pressure)	20
6-1. Noise level curve	20
6-2. Sound level check point	22
7. Safety devices	23
8. External input and output	24
8-1. External input	24
8-2. External output	26
8-3. Combination of external input and output	28
8-4. Details of function	31
9. Function settings	56
9-1. Function settings on indoor unit	56
9-2. Function settings by using remote controller	57
10. Accessories	66
10-1. Models: ACUH09LUAS1, ACUH12LUAS1, and ACUH18LUAS1	66
11. Optional parts	67
11-1. Controllers	67
11-2. Cassette grille	67
11-3. Others	68

CONTENTS (continued)

Part 2. OUTDOOR UNIT71

1. Specifications	72
2. Dimensions	73
2-1. Models: AOUH09LUAS1.....	73
2-2. Models: AOUH12LUAS1 and AOUH18LUAS1	74
3. Installation space	75
3-1. Models: AOUH09LUAS1, AOUH12LUAS1, and AOUH18LUAS1	75
4. Refrigerant circuit	78
4-1. Models: AOUH09LUAS1.....	78
4-2. Models: AOUH12LUAS1 and AOUH18LUAS1	79
5. Wiring diagrams	80
5-1. Model: AOUH09LUAS1	80
5-2. Models: AOUH12LUAS1 and AOUH18LUAS1	81
6. Capacity compensation rate for pipe length and height difference.....	82
6-1. Model: AOUH09LUAS1	82
6-2. Model: AOUH12LUAS1	83
6-3. Model: AOUH18LUAS1	84
7. Additional charge calculation	85
7-1. Model: AOUH09LUAS1	85
7-2. Model: AOUH12LUAS1	85
7-3. Model: AOUH18LUAS1	85
8. Airflow	86
8-1. Model: AOUH09LUAS1	86
8-2. Model: AOUH12LUAS1	86
8-3. Model: AOUH18LUAS1	87
9. Operation noise (sound pressure).....	88
9-1. Noise level curve.....	88
9-2. Sound level check point	89
10. Electrical characteristics	90
11. Safety devices	91
12. Accessories	92
12-1.Models: AOUH09LUAS1, AOUH12LUAS1, and AOUH18LUAS1	92

Part 1. INDOOR UNIT

CASSETTE TYPE:

ACUH09LUAS1

ACUH12LUAS1

ACUH18LUAS1

1. Specifications

Type					Cassette			
					Inverter, Heat pump			
Model name					ACUH09LUAS1	ACUH12LUAS1	ACUH18LUAS1	
Power supply					208/230 V ~ 60 Hz			
Available voltage range					187—253 V			
Capacity	Cooling	Cooling	Rated	kW	2.64	3.52	5.02	
				Btu/h	9,000	12,000	17,100	
			Min.—Max.	kW	0.91—3.20	0.91—3.99	0.91—5.89	
				Btu/h	3,100—11,000	3,100—13,600	3,100—20,100	
	Heating	47 °FDB (Outdoor temp.)	Rated	kW	3.52	4.69	6.33	
				Btu/h	12,000	16,000	21,600	
			Min.—Max.	kW	0.91—4.69	0.91—5.69	0.91—7.00	
				Btu/h	3,100—16,000	3,100—19,400	3,100—23,900	
			17 °FDB (Outdoor temp.)*1	Rated	kW	2.29	3.14	4.31
					Btu/h	7,800	10,700	14,700
		Max.		kW	3.08	4.98	5.75	
				Btu/h	10,500	17,000	19,600	
		5 °FDB (Outdoor temp.)*2		Rated	kW	2.96	4.54	5.01
					Btu/h	10,100	15,500	17,100
			Max.	kW	2.96	4.69	5.13	
				Btu/h	10,100	16,000	17,500	
Input power	Cooling	Cooling	kW	Rated	0.66	0.94	1.37	
				Max.	1.05	1.79	2.35	
	Heating	47 °FDB (Outdoor temp.)		Rated	0.93	1.44	1.81	
				Max.	1.72	1.79	2.50	
		17 °FDB (Outdoor temp.)*1		Rated	0.72	1.05	1.47	
				Max.	1.42	2.01	2.56	
		5 °FDB (Outdoor temp.)*2		Rated	1.33	2.25	2.28	
				Max.	1.33	2.25	2.28	
Current		Cooling	A	3.3	4.2	6.1		
		Heating		4.6	6.4	8.1		
EER2		Cooling		Btu/hW	13.6	12.8	12.5	
COP2		Heating		kW/kW	3.78	3.26	3.50	
SEER2		Cooling		Btu/hW	23.5	23.0	21.5	
HSPF2		Heating		Btu/hW	11.8	11.3	11.2	
Power factor		Cooling		%	87.0	97.3	97.6	
		Heating		86.0	97.8	97.2		
Moisture removal				pints/h (L/h)	1.3 (0.6)	2.5 (1.2)	4.6 (2.2)	
Maximum operating current*3		Cooling		A	6.8	9.8	11.8	
		Heating		9.3	11.3	14.8		
Fan	Airflow rate	Cooling	HIGH	CFM (m³/h)	318 (540)	359 (610)	436 (740)	
			MED		288 (490)	312 (530)	341 (580)	
			LOW		259 (440)	277 (470)	288 (490)	
			QUIET		230 (390)	241 (410)		
		Heating	HIGH		318 (540)	359 (610)	471 (800)	
			MED		288 (490)	312 (530)	341 (580)	
			LOW		259 (440)	277 (470)	288 (490)	
			QUIET		230 (390)	241 (410)		
	Type × Qty							
	Motor output			W	Turbo × 1			
Sound pressure level*4	Cooling		dB (A)	33	37	42		
				32	33	36		
				29	31	32		
				28				
	Heating			34	37	44		
				32	33	40		
				29	31	36		
				27	28	30		
Heat exchanger type	Dimensions (H × W × D)		in (mm)	Main 1: 8-1/4 × 51-9/16 × 1/2 (210 × 1,310 × 13.3) Main 2: 8-1/4 × 49-3/16 × 1/2 (210 × 1,250 × 13.3)				
	Fin pitch		FPI	Main 1: 21 Main 2: 21				
	Rows × Stages			Main 1: 1 × 10 Main 2: 1 × 10				
	Pipe type			Copper tube				
	Fin type			Aluminum				
Dimensions (H × W × D)	Net		in (mm)	9-5/8 × 22-7/16 × 22-7/16 (245 × 570 × 570)				
	Gross			10-7/16 × 28-3/4 × 24-5/8 (265 × 730 × 625)				
Weight	Net		lb (kg)	33 (15)				
	Gross			40 (18)	42 (19)			
Connection pipe	Size	Liquid	in (mm)	Ø1/4 (Ø6.35)				
		Gas		Ø3/8 (Ø9.52)		Ø1/2 (Ø12.70)		
	Method			Flare				
Operation range		Cooling	°F (°C)	64 to 90 (18 to 32)				
			%RH	80 or less				
		Heating	°F (°C)	60 to 86 (16 to 30)				
Drain hose	Material			HARD PVC				
	Size		in (mm)	Ø1 (Ø25.0) [I.D.] Ø1-1/4 (Ø32.0) [O.D.]	Ø13/16 (Ø20.7) [I.D.] Ø1-1/16 (Ø26.6) [O.D.]			
Cassette grille (Grid type: Option)		Model name			UTG-CCGFGA			
		Material			PS			
		Color			White			
					Approximate color of Munsell 9PB 9.1/0.2			
		Dimensions (H × W × D)	Net	in (mm)	1-15/16 × 24-7/16 × 24-7/16 (49 × 620 × 620)			
			Gross		4-3/4 × 30-1/8 × 29-3/4 (120 × 765 × 755)			
		Weight	Net	lb (kg)	5.0 (2.3)			
Gross	10 (4.5)							


Type	Cassette		
	Inverter, Heat pump		
Model name	ACUH09LUAS1	ACUH12LUAS1	ACUH18LUAS1
NOTES: - Specifications are based on the following conditions: - Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB). - Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB). *1: Heating (17°F): Indoor temperature of 70°FDB (21.11°CDB)/60°FWB (15.56°CWB), and outdoor temperature of 17°FDB (-8.33°CDB)/15°FWB (-9.44°CWB). *2: Heating (5°F): Indoor temperature of 70°FDB (21.11°CDB)/60°FWB (15.56°CWB), and outdoor temperature of 5°FDB (-15.0°CDB)/4°FWB (-15.56°CWB). - Test conditions are based on AHRI 210/240 2023. - Pipe length: 24 ft 6 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.) - Protective function might work when using it outside the operation range. *3: Maximum operating current is the total current of the indoor unit and the outdoor unit. *4: Sound pressure level: - Measured values in manufacturer's anechoic chamber. - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.			

M condition										
Model name				ACUH09LUAS1		ACUH12LUAS1	ACUH18LUAS1			
Power supply				208/230 V ~ 60 Hz						
Available voltage range				187—253 V						
Capacity	Cooling	Cooling	Rated	kW	2.64	3.52	5.02			
				Btu/h	9,000	12,000	17,100			
			Min.—Max.	kW	0.91—3.20	0.91—3.99	0.91—5.89			
				Btu/h	3,100—11,000	3,100—13,600	3,100—20,100			
	Heating	47 °FDB (Outdoor temp.)	Rated	kW	3.52	4.69	6.33			
				Btu/h	12,000	16,000	21,600			
			Min.—Max.	kW	0.91—4.69	0.91—5.69	0.91—7.00			
				Btu/h	3,100—16,000	3,100—19,400	3,100—23,900			
		17 °FDB (Outdoor temp.)*	Rated	kW	2.29	3.14	4.31			
				Btu/h	7,800	10,700	14,700			
			Max.	kW	3.08	4.98	5.75			
				Btu/h	10,500	17,000	19,600			
Input power	Cooling	Cooling	Rated	kW	0.66	0.94	1.37			
					Max.	1.05	2.06	2.35		
	Heating	47 °FDB (Outdoor temp.)	Rated		0.93	1.44	1.81			
			Max.		1.72	1.79	2.50			
		17 °FDB (Outdoor temp.)*	Rated		0.72	1.05	1.47			
			Max.		1.42	2.01	2.56			
		Current			Cooling	Rated	A	3.3	4.2	6.1
					Heating			4.6	6.4	8.1
EER		Cooling	kW/kW	4.00	3.74	3.66				
			Btu/hW	13.6	12.8	12.5				
COP		Heating	kW/kW	3.78	3.26	3.50				
			Btu/hW	12.9	11.1	11.9				
SEER		Cooling	Btu/hW	22.5	22.1	20.8				
HSPF		Heating	Btu/hW	12.5	12.2	11.6				
Power factor		Cooling	%	87.0	97.3	97.6				
		Heating		86.0	97.8	97.2				
NOTES:										
- Specifications are based on the following conditions: - Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB). - Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB). - Pipe length: 24 ft 6 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.) *: Heating (17°F): Indoor temperature of 70°FDB (21.11°CDB) /60°FWB (15.56°CWB), and outdoor temperature of 17°FDB (-8.33°CDB) /15°FWB (-9.44°CWB). - Test conditions are based on AHRI 210/240 2017. - Protective function might work when using it outside the operation range.										

2. Dimensions


2-1. Models: ACUH09LUAS1, ACUH12LUAS1, and ACUH18LUAS1

Unit: in (mm)

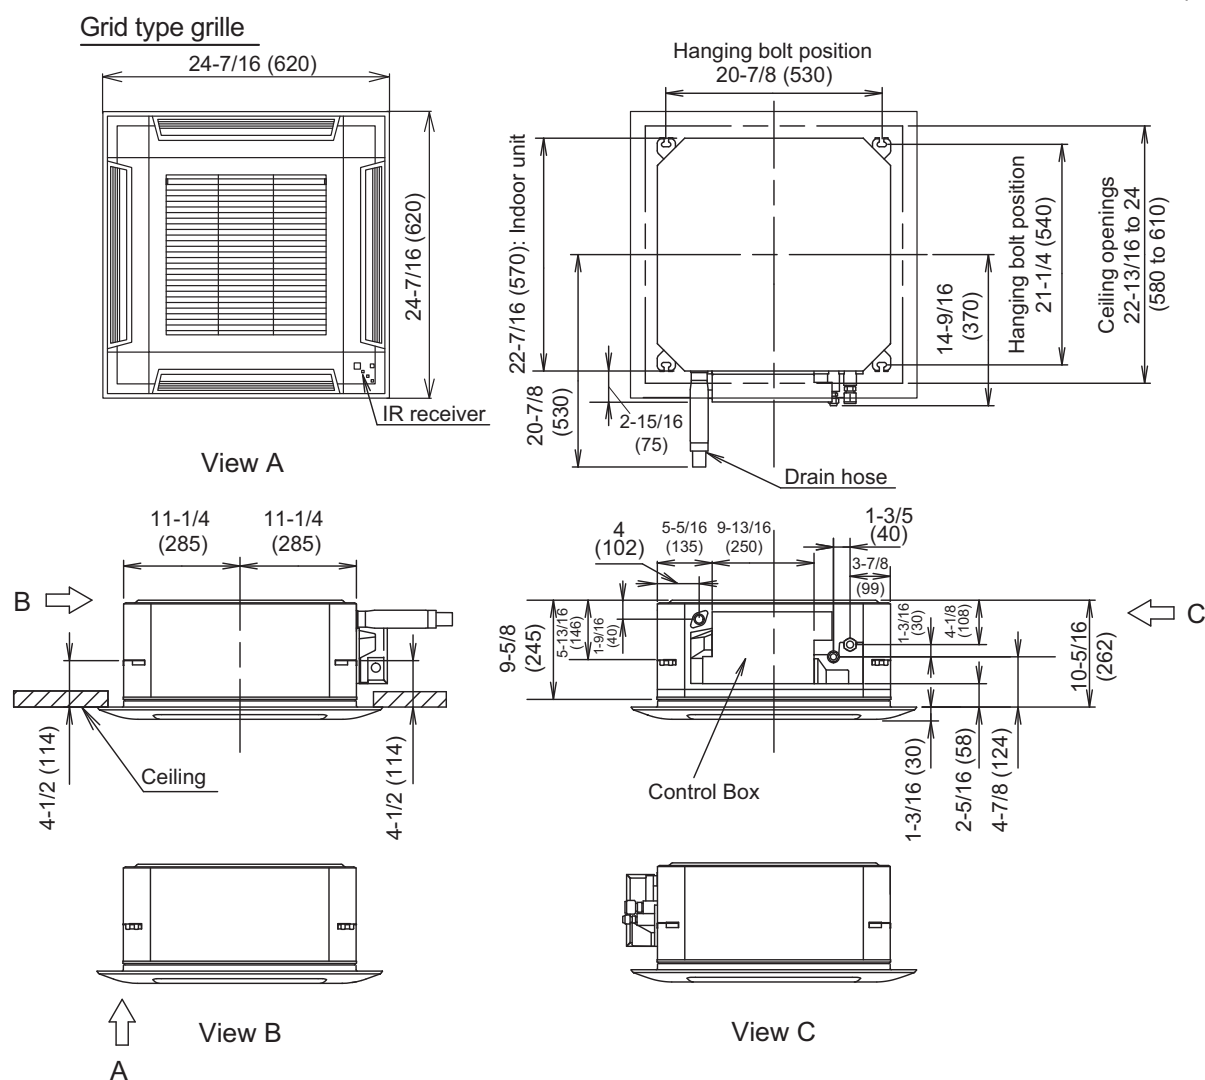

2-2. Installation space requirement


Unit: in (mm)

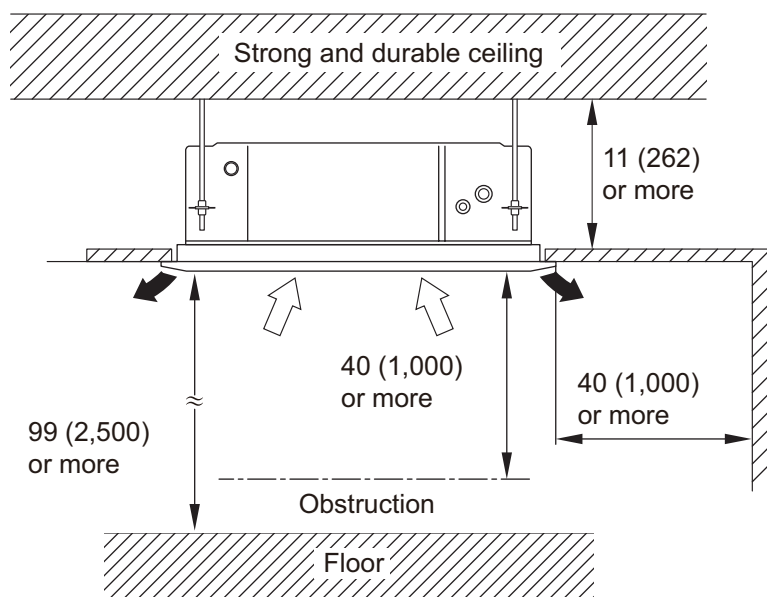

Maximum height from floor to ceiling [Unit: in (mm)]	
Standard	107 (2,700)
High ceiling	119 (3,000)

3-way direction setting:

Unit: in (mm)

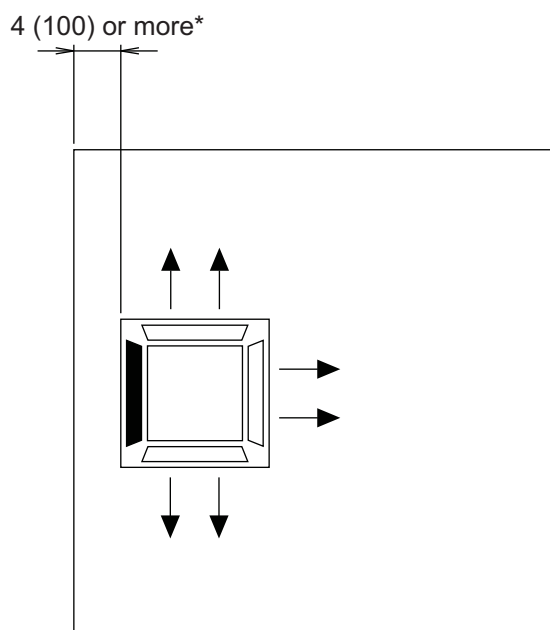


NOTES:

- To set "3-direction", optional Air Outlet Shutter Plate (UTR-YDZB) must be installed, and the "outlet-direction" need to be switched to "3-way" by remote controller.
*When installing the indoor unit, be careful about the maintenance space.
- In 3-way outlet mode, changing of ceiling height setting by function setting 20 is prohibited.
(Ceiling height setting [function setting 20] is allowed to be changed only in 4-way outlet mode.)

3. Wiring diagram

3-1. Models: ACUH09LUAS1, ACUH12LUAS1, and ACUH18LUAS1

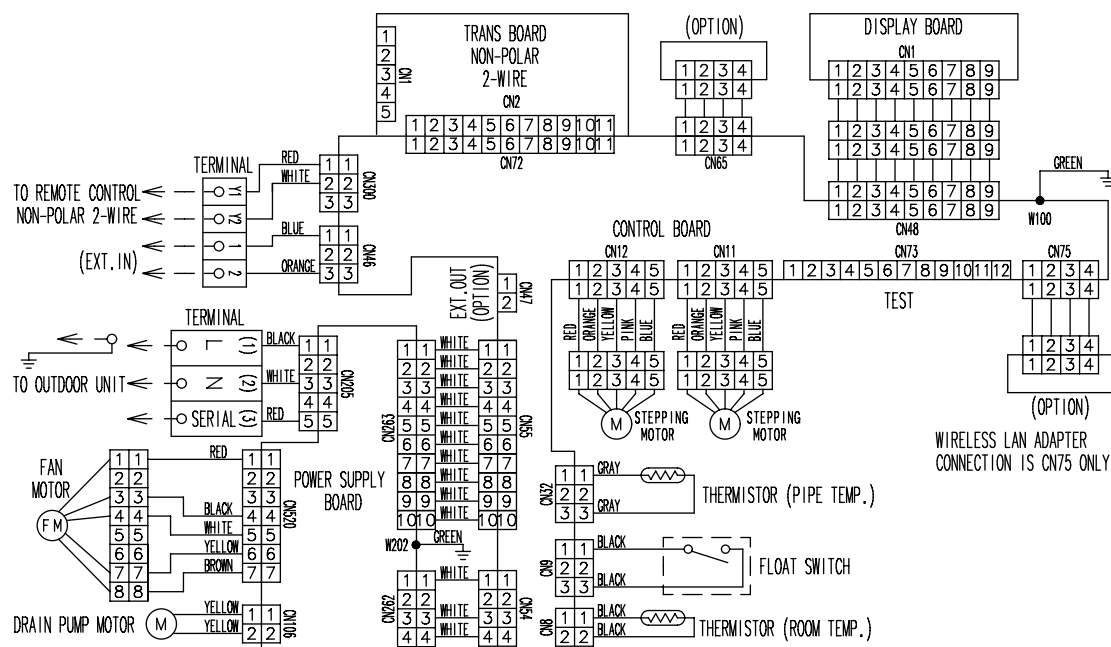

4. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

For cooling capacity: Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)

For heating capacity: Total Capacity (TC) and Input Power (IP)

4-1. Cooling capacity

■ Model: ACUH09LUAS1

AFR				CFM								318											
				Indoor temperature																			
				64			70			75			80			85			90				
				54			60			63			67			71			73				
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP				
		kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW				
	14	8.43	5.99	0.23	9.39	6.02	0.23	9.71	6.55	0.23	10.67	7.09	0.23	11.31	7.06	0.24	11.95	7.52	0.24				
	23	7.99	5.67	0.26	8.90	5.71	0.26	9.21	6.21	0.26	10.12	6.72	0.27	10.72	6.70	0.27	11.33	7.13	0.27				
	32	7.55	5.36	0.27	8.41	5.39	0.28	8.70	5.86	0.28	9.56	6.35	0.28	10.13	6.32	0.28	10.70	6.74	0.29				
	41	7.47	5.05	0.27	8.32	5.08	0.28	8.60	5.52	0.28	9.45	5.98	0.28	10.02	5.96	0.28	10.58	6.34	0.29				
	50	7.33	4.74	0.27	8.17	4.76	0.27	8.45	5.18	0.27	9.28	5.61	0.28	9.84	5.59	0.28	10.40	5.95	0.28				
	59	7.16	4.58	0.28	7.98	4.60	0.28	8.25	5.01	0.28	9.06	5.42	0.29	9.61	5.40	0.29	10.15	5.75	0.29				
	67	8.57	5.39	0.45	9.55	5.42	0.46	9.88	5.89	0.46	10.85	6.38	0.47	11.50	6.36	0.47	12.15	6.77	0.48				
	77	8.11	5.16	0.51	9.03	5.19	0.52	9.34	5.64	0.52	10.26	6.11	0.53	10.88	6.09	0.53	11.49	6.48	0.54				
	87	7.58	5.05	0.58	8.45	5.08	0.59	8.74	5.53	0.60	9.60	5.99	0.61	10.18	5.96	0.61	10.75	6.35	0.62				
	95	7.11	4.83	0.64	7.92	4.86	0.65	8.19	5.28	0.65	9.00	5.72	0.66	9.54	5.70	0.67	10.08	6.07	0.67				
104	6.04	4.58	0.60	6.73	4.60	0.61	6.96	5.01	0.62	7.65	5.42	0.63	8.11	5.40	0.63	8.57	5.75	0.64					
115	5.55	5.24	0.51	6.19	5.27	0.52	6.40	5.73	0.52	7.03	6.21	0.53	7.45	6.19	0.54	7.87	6.59	0.54					

AFR		m³/h									540								
		Indoor temperature																	
°CDB		17.8			21.1			23.9			26.7			29.4			32.2		
°CWB		12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW		
	-10.0	2.47	1.75	0.23	2.75	1.77	0.23	2.85	1.92	0.23	3.13	2.08	0.23	3.32	2.07	0.24	3.50	2.21	0.24
	-5.0	2.34	1.66	0.26	2.61	1.67	0.26	2.70	1.82	0.26	2.97	1.97	0.27	3.14	1.96	0.27	3.32	2.09	0.27
	0.0	2.21	1.57	0.27	2.47	1.58	0.28	2.55	1.72	0.28	2.80	1.86	0.28	2.97	1.85	0.28	3.14	1.97	0.29
	5.0	2.19	1.48	0.27	2.44	1.49	0.28	2.52	1.62	0.28	2.77	1.75	0.28	2.94	1.75	0.28	3.10	1.86	0.29
	10.0	2.15	1.39	0.27	2.39	1.40	0.27	2.48	1.52	0.27	2.72	1.65	0.28	2.88	1.64	0.28	3.05	1.75	0.28
	15.0	2.10	1.34	0.28	2.34	1.35	0.28	2.42	1.47	0.28	2.66	1.59	0.29	2.82	1.58	0.29	2.98	1.69	0.29
	19.4	2.51	1.58	0.45	2.80	1.59	0.46	2.90	1.73	0.46	3.18	1.87	0.47	3.37	1.86	0.47	3.56	1.99	0.48
	25.0	2.38	1.51	0.51	2.65	1.52	0.52	2.74	1.65	0.52	3.01	1.79	0.53	3.19	1.78	0.53	3.37	1.90	0.54
	30.6	2.22	1.48	0.58	2.48	1.49	0.59	2.56	1.62	0.60	2.81	1.76	0.61	2.98	1.75	0.61	3.15	1.86	0.62
35.0	2.08	1.42	0.64	2.32	1.42	0.65	2.40	1.55	0.65	2.64	1.68	0.66	2.80	1.67	0.67	2.96	1.78	0.67	
40.0	1.77	1.34	0.60	1.97	1.35	0.61	2.04	1.47	0.62	2.24	1.59	0.63	2.38	1.58	0.63	2.51	1.69	0.64	
46.0	1.63	1.54	0.47	1.81	1.55	0.48	1.88	1.68	0.48	2.06	1.82	0.49	2.18	1.81	0.49	2.31	1.93	0.50	

Model: ACUH12LUAS1

AFR		CFM						359											
		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW
	14	10.36	8.83	0.33	11.54	8.88	0.33	11.93	9.66	0.33	13.11	10.46	0.34	13.90	10.42	0.34	14.68	11.10	0.34
	23	10.28	8.74	0.38	11.45	8.80	0.38	11.84	9.56	0.39	13.01	10.36	0.39	13.79	10.32	0.40	14.57	10.99	0.40
	32	10.20	8.67	0.41	11.36	8.72	0.41	11.75	9.48	0.42	12.91	10.27	0.42	13.68	10.23	0.43	14.46	10.89	0.43
	41	10.12	8.61	0.44	11.27	8.66	0.44	11.66	9.42	0.45	12.81	10.20	0.45	13.58	10.16	0.46	14.35	10.83	0.46
	50	10.04	8.53	0.45	11.18	8.58	0.45	11.57	9.33	0.46	12.71	10.11	0.46	13.47	10.07	0.47	14.24	10.73	0.47
	59	9.96	8.48	0.46	11.10	8.53	0.47	11.48	9.27	0.47	12.61	10.05	0.47	13.37	10.01	0.48	14.12	10.66	0.48
	67	11.23	9.57	0.64	12.51	9.63	0.65	12.94	10.47	0.66	14.22	11.34	0.67	15.07	11.30	0.67	15.93	12.03	0.68
	77	10.69	9.09	0.73	11.91	9.14	0.75	12.31	9.94	0.75	13.53	10.77	0.76	14.34	10.73	0.77	15.15	11.43	0.78
	87	10.10	8.58	0.82	11.25	8.63	0.83	11.63	9.38	0.83	12.78	10.17	0.84	13.55	10.13	0.85	14.31	10.79	0.86
	95	9.48	8.06	0.91	10.56	8.11	0.92	10.92	8.82	0.93	12.00	9.56	0.94	12.72	9.52	0.95	13.44	10.14	0.96
	104	8.00	7.19	0.77	8.91	7.23	0.78	9.22	7.86	0.79	10.13	8.52	0.80	10.74	8.48	0.81	11.35	9.04	0.82
115	7.38	6.67	0.77	8.22	6.71	0.78	8.50	7.30	0.79	9.34	7.91	0.80	9.90	7.88	0.81	10.46	8.39	0.82	

AFR		m³/h						610											
Outdoor temperature		Indoor temperature																	
	°CDB	17.8			21.1			23.9			26.7			29.4			32.2		
	°CWB	12.2			15.6			17.2			19.4			21.7			22.8		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW		
	-10.0	3.04	2.59	0.23	3.38	2.60	0.23	3.50	2.83	0.23	3.84	3.07	0.23	4.07	3.06	0.24	4.30	3.25	0.24
	-5.0	3.01	2.56	0.26	3.36	2.58	0.26	3.47	2.80	0.26	3.81	3.04	0.27	4.04	3.03	0.27	4.27	3.22	0.27
	0.0	2.99	2.54	0.27	3.33	2.56	0.28	3.44	2.78	0.28	3.78	3.01	0.28	4.01	3.00	0.28	4.24	3.19	0.29
	5.0	2.97	2.52	0.27	3.30	2.54	0.28	3.42	2.76	0.28	3.76	2.99	0.28	3.98	2.98	0.28	4.21	3.17	0.29
	10.0	2.94	2.50	0.27	3.28	2.52	0.27	3.39	2.74	0.27	3.73	2.96	0.28	3.95	2.95	0.28	4.17	3.15	0.28
	15.0	2.92	2.49	0.28	3.25	2.50	0.28	3.36	2.72	0.28	3.70	2.95	0.29	3.92	2.93	0.29	4.14	3.12	0.29
	19.4	3.29	2.81	0.45	3.67	2.82	0.46	3.79	3.07	0.46	4.17	3.33	0.47	4.42	3.31	0.47	4.67	3.53	0.48
	25.0	3.13	2.66	0.51	3.49	2.68	0.52	3.61	2.91	0.52	3.97	3.16	0.53	4.20	3.14	0.53	4.44	3.35	0.54
30.6	2.96	2.52	0.58	3.30	2.53	0.59	3.41	2.75	0.60	3.75	2.98	0.61	3.97	2.97	0.61	4.20	3.16	0.62	
35.0	2.78	2.36	0.64	3.10	2.38	0.65	3.20	2.59	0.65	3.52	2.80	0.66	3.73	2.79	0.67	3.94	2.97	0.67	
40.0	2.35	2.11	0.60	2.61	2.12	0.61	2.70	2.31	0.62	2.97	2.50	0.63	3.15	2.49	0.63	3.33	2.65	0.64	
46.0	2.16	1.96	0.47	2.41	1.97	0.48	2.49	2.14	0.48	2.74	2.32	0.49	2.90	2.31	0.49	3.07	2.46	0.50	

Model: ACUH18LUAS1

AFR		CFM						435											
		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW
	14	15.00	11.36	0.47	16.71	11.43	0.48	17.28	12.43	0.48	18.99	13.46	0.49	20.13	13.41	0.49	21.27	14.28	0.50
	23	14.77	11.16	0.51	16.45	11.23	0.52	17.01	12.20	0.52	18.69	13.22	0.53	19.81	13.17	0.53	20.94	14.03	0.54
	32	14.53	11.00	0.53	16.19	11.07	0.54	16.74	12.03	0.54	18.40	13.04	0.55	19.50	12.99	0.56	20.60	13.83	0.56
	41	14.30	10.83	0.53	15.93	10.89	0.54	16.47	11.84	0.54	18.10	12.83	0.55	19.19	12.78	0.56	20.27	13.61	0.56
	50	14.07	10.65	0.55	15.67	10.71	0.56	16.20	11.64	0.56	17.81	12.61	0.57	18.88	12.56	0.57	19.94	13.38	0.58
	59	13.84	10.45	0.58	15.41	10.52	0.59	15.94	11.43	0.60	17.51	12.39	0.61	18.56	12.34	0.61	19.61	13.14	0.62
	67	15.89	12.04	0.95	17.70	12.11	0.97	18.31	13.17	0.97	20.12	14.27	0.99	21.33	14.21	1.00	22.53	15.14	1.01
	77	15.16	11.45	1.07	16.88	11.52	1.08	17.46	12.53	1.09	19.19	13.57	1.11	20.34	13.52	1.12	21.49	14.40	1.13
	87	14.37	10.88	1.21	16.00	10.94	1.23	16.55	11.89	1.23	18.18	12.89	1.25	19.28	12.83	1.26	20.37	13.67	1.28
	95	13.51	10.23	1.32	15.05	10.30	1.34	15.56	11.19	1.35	17.10	12.13	1.37	18.13	12.08	1.38	19.15	12.87	1.40
	104	11.86	8.97	1.30	13.21	9.02	1.32	13.66	9.81	1.32	15.01	10.63	1.34	15.91	10.59	1.36	16.81	11.28	1.37
115	9.95	8.16	1.28	11.09	8.21	1.30	11.47	8.93	1.31	12.60	9.67	1.33	13.36	9.63	1.34	14.11	10.26	1.36	

AFR		m³/h									740									
Outdoor temperature		Indoor temperature																		
	°CDB	17.8			21.1			23.9			26.7			29.4			32.2			
	°CWB	12.2			15.6			17.2			19.4			21.7			22.8			
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	
		kW			kW			kW			kW			kW			kW			
	-10.0	4.40	3.33	0.23	4.90	3.35	0.23	5.07	3.64	0.23	5.57	3.95	0.23	5.90	3.93	0.24	6.23	4.19	0.24	
	-5.0	4.33	3.27	0.26	4.82	3.29	0.26	4.99	3.58	0.26	5.48	3.88	0.27	5.81	3.86	0.27	6.14	4.11	0.27	
	0.0	4.26	3.23	0.27	4.75	3.25	0.28	4.91	3.53	0.28	5.39	3.82	0.28	5.72	3.81	0.28	6.04	4.06	0.29	
	5.0	4.19	3.18	0.27	4.67	3.19	0.28	4.83	3.47	0.28	5.31	3.76	0.28	5.63	3.75	0.28	5.94	3.99	0.29	
	10.0	4.12	3.12	0.27	4.59	3.14	0.27	4.75	3.41	0.27	5.22	3.70	0.28	5.53	3.68	0.28	5.85	3.92	0.28	
15.0	4.06	3.06	0.28	4.52	3.08	0.28	4.67	3.35	0.28	5.13	3.63	0.29	5.44	3.62	0.29	5.75	3.85	0.29		
19.4	4.66	3.53	0.45	5.19	3.55	0.46	5.37	3.86	0.46	5.90	4.18	0.47	6.25	4.17	0.47	6.61	4.44	0.48		
25.0	4.44	3.36	0.51	4.95	3.38	0.52	5.12	3.67	0.52	5.63	3.98	0.53	5.96	3.96	0.53	6.30	4.22	0.54		
30.6	4.21	3.19	0.58	4.69	3.21	0.59	4.85	3.49	0.60	5.33	3.78	0.61	5.65	3.76	0.61	5.97	4.01	0.62		
35.0	3.96	3.00	0.64	4.41	3.02	0.65	4.56	3.28	0.65	5.01	3.56	0.66	5.31	3.54	0.67	5.61	3.77	0.67		
40.0	3.48	2.63	0.60	3.87	2.65	0.61	4.01	2.88	0.62	4.40	3.12	0.63	4.67	3.10	0.63	4.93	3.31	0.64		
46.0	2.92	2.39	0.47	3.25	2.41	0.48	3.36	2.62	0.48	3.69	2.84	0.49	3.92	2.82	0.49	4.14	3.01	0.50		

4-2. Heating capacity

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

■ Model: ACUH09LUAS1

AFR	CFM	318
-----	-----	-----

Indoor temperature										
Outdoor temperature	°FDB		60		65		70		75	
	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	8.96	1.18	8.74	1.21	8.53	1.23	8.10	1.28
	5	3	10.63	1.28	10.37	1.30	10.12	1.33	9.61	1.38
	14	12	10.47	1.31	10.22	1.33	9.97	1.36	9.47	1.41
	23	19	12.32	1.38	12.02	1.41	11.73	1.44	11.14	1.50
	32	28	13.99	1.49	13.65	1.52	13.32	1.55	12.65	1.61
	41	37	15.49	1.58	15.12	1.62	14.75	1.65	14.01	1.72
	47	43	16.80	1.65	16.40	1.69	16.00	1.72	15.20	1.79
	50	47	16.89	1.67	16.49	1.71	16.09	1.74	15.29	1.80
	59	50	17.06	1.57	16.66	1.60	16.25	1.64	15.44	1.69
	68	59	16.10	1.19	15.79	1.22	15.33	1.24	14.56	1.29
	75	64	16.62	1.25	16.30	1.27	15.83	1.30	15.04	1.35

AFR	m ³ /h	540
-----	-------------------	-----

Indoor temperature										
Outdoor temperature	°CDB		15.6		18.3		21.1		23.9	
	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW	
	-20.6	-21.7	2.63	1.20	2.56	1.23	2.50	1.25	2.38	1.30
	-15.0	-16.1	3.11	1.23	3.04	1.25	2.97	1.28	2.82	1.33
	-10.0	-11.1	3.07	1.31	3.00	1.33	2.92	1.36	2.78	1.41
	-5.0	-7.2	3.61	1.38	3.52	1.41	3.44	1.44	3.27	1.50
	0.0	-2.2	4.10	1.49	4.00	1.52	3.90	1.55	3.71	1.61
	5.0	2.8	4.54	1.58	4.43	1.62	4.32	1.65	4.11	1.72
	8.3	6.1	4.92	1.60	4.81	1.64	4.69	1.67	4.45	1.74
	10.0	8.3	4.95	1.62	4.83	1.66	4.72	1.69	4.48	1.75
	15.0	10.0	5.00	1.53	4.88	1.56	4.76	1.59	4.52	1.65
	20.0	15.0	4.72	1.19	4.63	1.22	4.49	1.24	4.27	1.29
	24.0	18.0	4.87	1.25	4.78	1.27	4.64	1.30	4.41	1.35

■ Model: ACUH12LUAS1

AFR	CFM	359
-----	-----	-----

Indoor temperature										
Outdoor temperature	°FDB		60		65		70		75	
	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	15.75	2.11	15.38	2.16	15.00	2.20	14.25	2.29
	5	3	16.80	2.16	16.40	2.21	16.00	2.25	15.20	2.34
	14	12	18.27	2.04	17.84	2.08	17.40	2.12	16.53	2.20
	23	19	19.11	1.87	18.66	1.91	18.20	1.95	17.29	2.03
	32	28	19.43	1.82	18.96	1.86	18.50	1.90	17.58	1.98
	41	37	19.74	1.77	19.27	1.81	18.80	1.84	17.86	1.92
	47	43	20.37	1.72	19.89	1.75	19.40	1.79	18.43	1.86
	50	47	22.47	1.71	21.94	1.75	21.40	1.78	20.33	1.84
	59	50	23.31	1.51	22.76	1.55	22.20	1.58	21.09	1.63
	68	59	22.14	1.21	21.72	1.24	21.09	1.26	20.04	1.31
	75	64	22.61	1.24	22.18	1.27	21.53	1.29	20.46	1.35

AFR	m ³ /h	610
-----	-------------------	-----

Indoor temperature										
Outdoor temperature	°CDB		15.6		18.3		21.1		23.9	
	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW	
	-20.6	-21.7	4.62	1.20	4.51	1.23	4.40	1.25	4.18	1.30
	-15.0	-16.1	4.92	1.23	4.81	1.25	4.69	1.28	4.45	1.33
	-10.0	-11.1	5.35	1.31	5.23	1.33	5.10	1.36	4.84	1.41
	-5.0	-7.2	5.60	1.38	5.47	1.41	5.33	1.44	5.07	1.50
	0.0	-2.2	5.69	1.49	5.56	1.52	5.42	1.55	5.15	1.61
	5.0	2.8	5.79	1.58	5.65	1.62	5.51	1.65	5.23	1.72
	8.3	6.1	5.97	1.60	5.83	1.64	5.69	1.67	5.40	1.74
	10.0	8.3	6.59	1.62	6.43	1.66	6.27	1.69	5.96	1.75
	15.0	10.0	6.83	1.53	6.67	1.56	6.51	1.59	6.18	1.65
	20.0	15.0	6.49	1.19	6.37	1.22	6.18	1.24	5.87	1.29
	24.0	18.0	6.63	1.25	6.50	1.27	6.31	1.30	6.00	1.35

Model: ACUH18LUAS1

AFR	CFM	435
-----	-----	-----

Indoor temperature										
Outdoor temperature	°FDB	°FDB	60		65		70		75	
	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	15.75	2.02	15.38	2.06	15.00	2.10	14.25	2.18
	5	3	18.38	2.11	17.94	2.16	17.50	2.20	16.63	2.29
	14	12	19.95	2.36	19.48	2.41	19.00	2.46	18.05	2.56
	23	19	21.68	2.60	21.16	2.66	20.10	2.71	19.61	2.82
	32	28	22.84	2.92	22.30	2.98	21.76	3.04	20.67	3.16
	41	37	23.44	2.51	22.88	2.56	22.33	2.61	21.21	2.71
	47	43	25.10	2.40	24.50	2.45	23.90	2.50	22.71	2.60
	50	47	26.15	2.25	25.52	2.29	24.90	2.34	23.66	2.42
	59	50	27.20	1.99	26.55	2.04	25.90	2.08	24.61	2.15
	68	59	25.84	1.60	25.34	1.63	24.61	1.66	23.37	1.73
	75	64	26.38	1.64	25.88	1.67	25.12	1.70	23.87	1.77

AFR	m³/h	740
-----	------	-----

Indoor temperature										
Outdoor temperature	°CDB	°CDB	15.6		18.3		21.1		23.9	
	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW	
	-20.6	-21.7	4.62	1.20	4.51	1.23	4.40	1.25	4.18	1.30
	-15.0	-16.1	5.39	1.23	5.26	1.25	5.13	1.28	4.87	1.33
	-10.0	-11.1	5.85	1.31	5.71	1.33	5.57	1.36	5.29	1.41
	-5.0	-7.2	6.35	1.38	6.20	1.41	5.89	1.44	5.75	1.50
	0.0	-2.2	6.69	1.49	6.54	1.52	6.38	1.55	6.06	1.61
	5.0	2.8	6.87	1.58	6.71	1.62	6.54	1.65	6.22	1.72
	8.3	6.1	7.35	1.60	7.18	1.64	7.00	1.67	6.65	1.74
	10.0	8.3	7.66	1.62	7.48	1.66	7.30	1.69	6.93	1.75
	15.0	10.0	7.97	1.53	7.78	1.56	7.59	1.59	7.21	1.65
	20.0	15.0	7.57	1.19	7.43	1.22	7.21	1.24	6.85	1.29
	24.0	18.0	7.73	1.25	7.58	1.27	7.36	1.30	6.99	1.35


5. Fan performance

5-1. Air velocity distributions


■ Model: ACUH09LUAS1 (4-way air outlet)

Measuring conditions	Fan speed	Operation mode	Ceiling mode
	HIGH	FAN	STANDARD


Top view
Horizontal louver: Upward

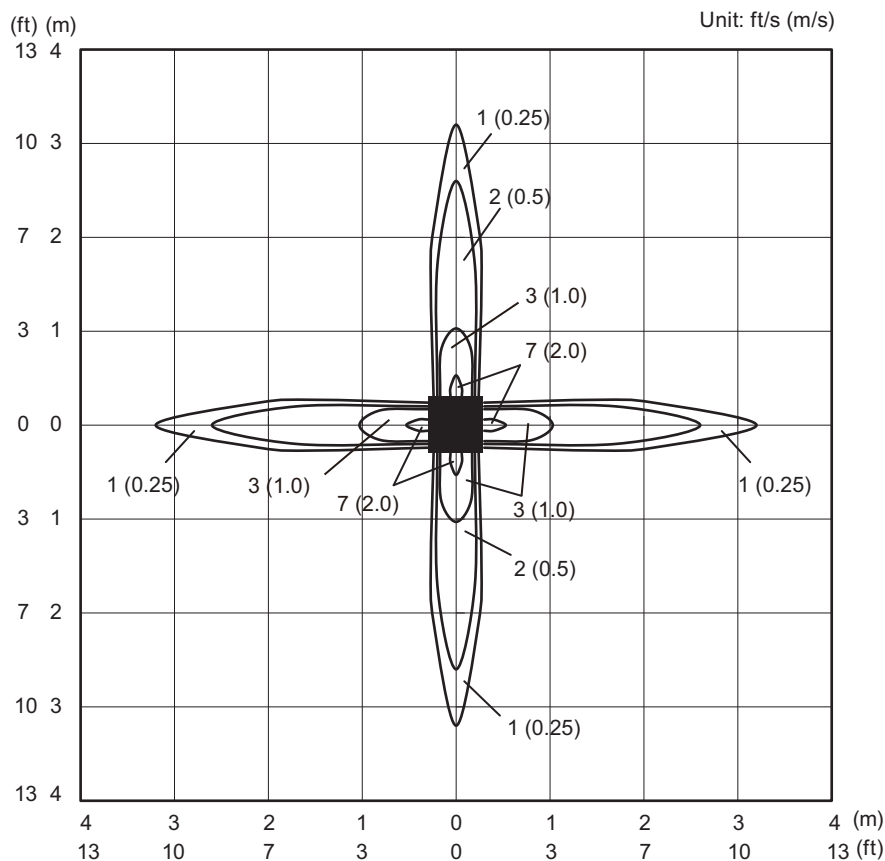

Side view
Horizontal louver: Upward

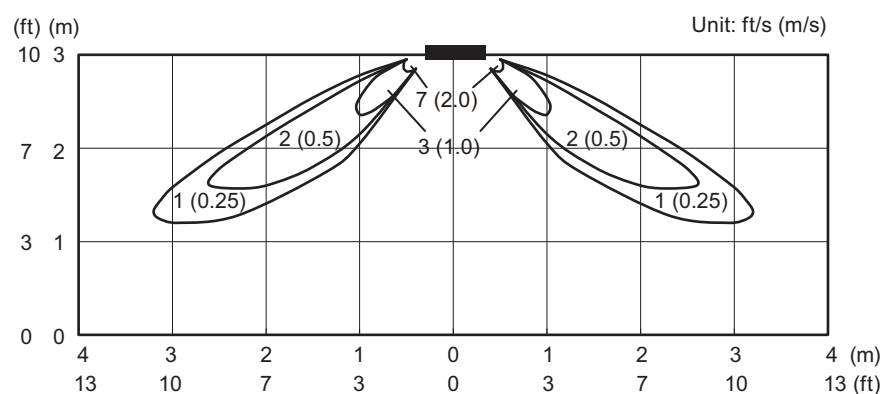


Side view
Horizontal louver: Downward

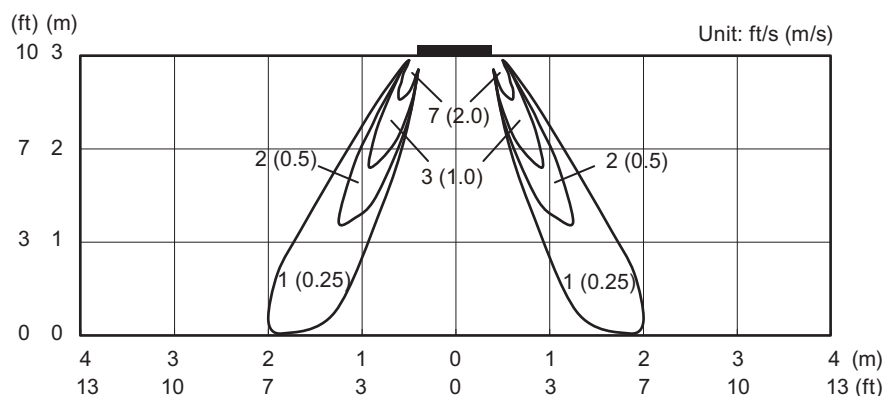


Model: ACUH09LUAS1 (3-way air outlet)

Measuring conditions	Fan speed	Operation mode	Ceiling mode
	HIGH	FAN	STANDARD


Top view
Horizontal louver: Upward

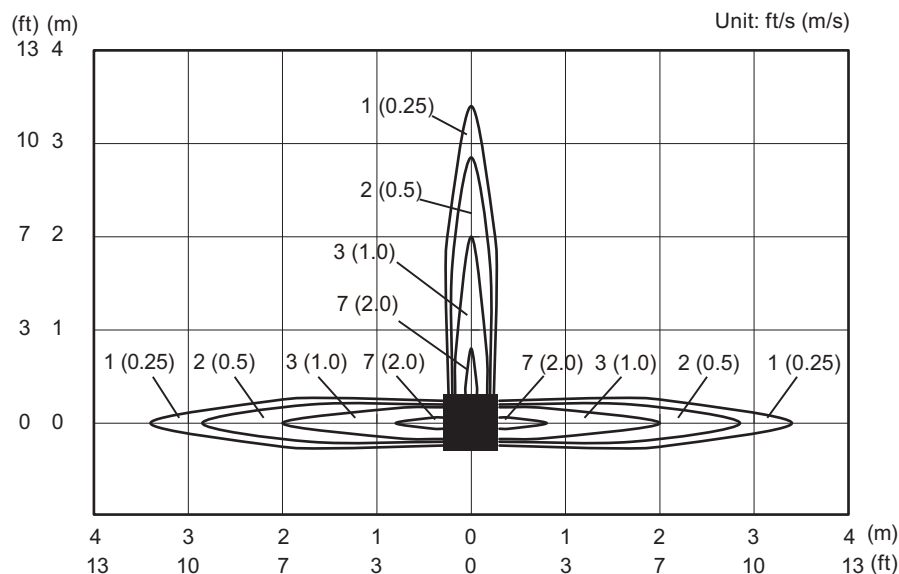

Side view
Horizontal louver: Upward

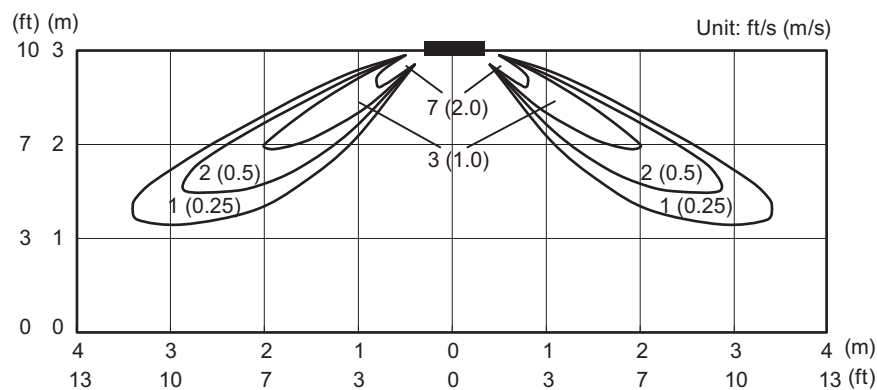


Side view
Horizontal louver: Downward

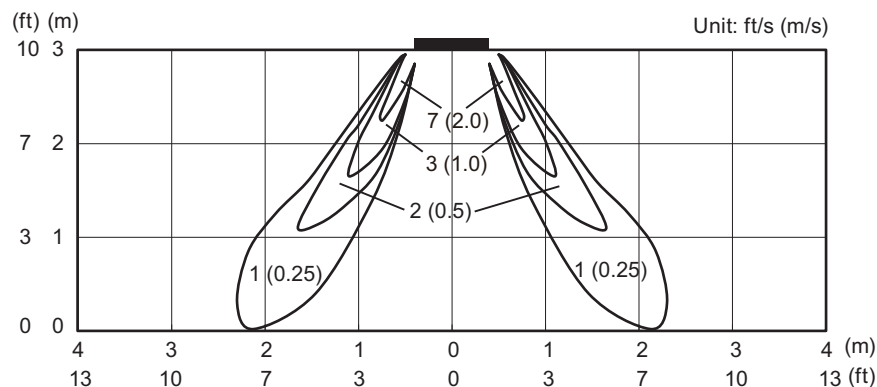


Model: ACUH12LUAS1 (4-way air outlet)

Measuring conditions	Fan speed	Operation mode	Ceiling mode
	HIGH	FAN	STANDARD


Top view
Horizontal louver: Upward

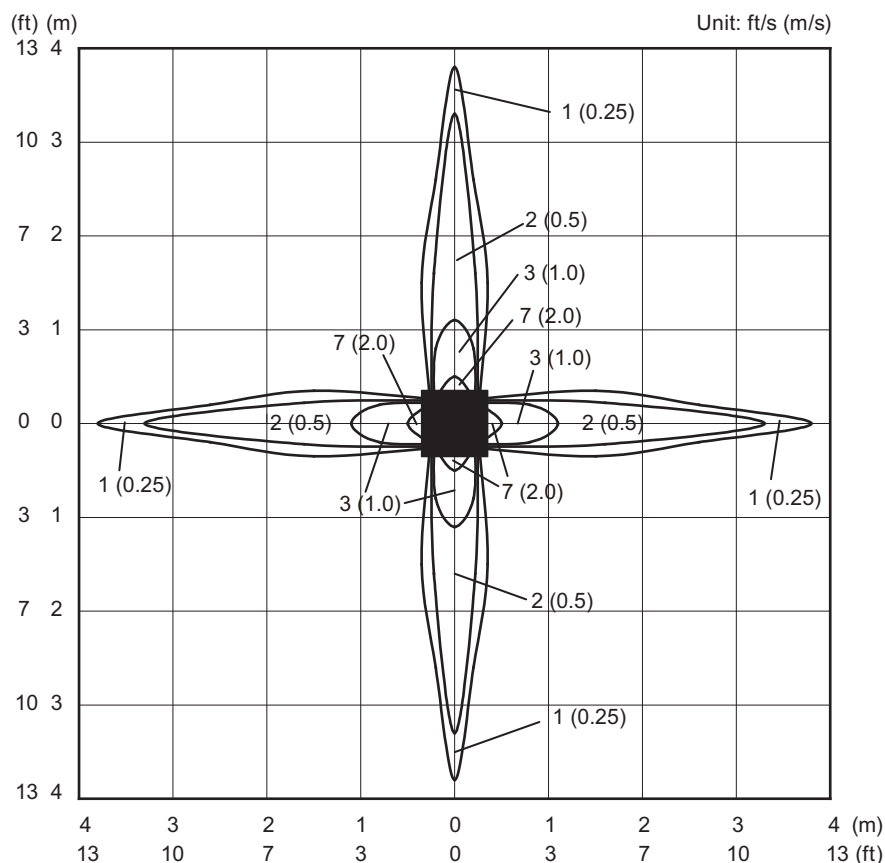

Side view
Horizontal louver: Upward

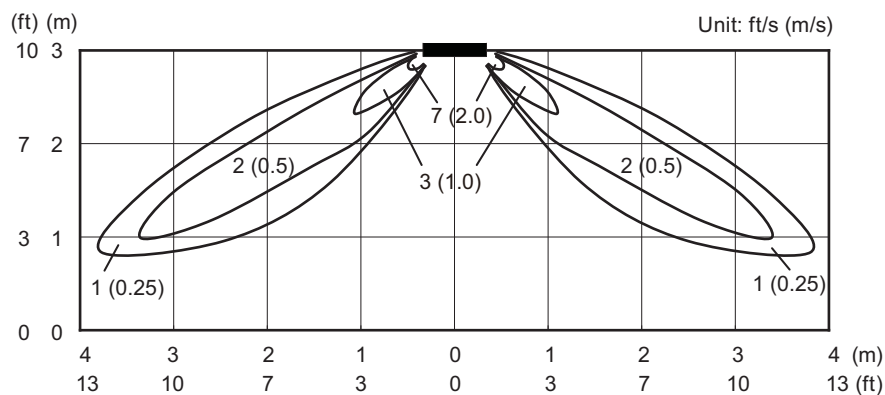


Side view
Horizontal louver: Downward

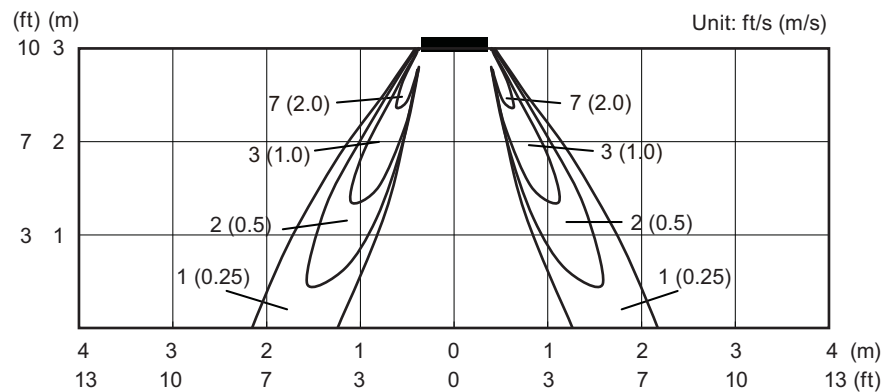


Model: ACUH12LUAS1 (3-way air outlet)

Measuring conditions	Fan speed	Operation mode	Ceiling mode
	HIGH	FAN	STANDARD


Top view
Horizontal louver: Upward

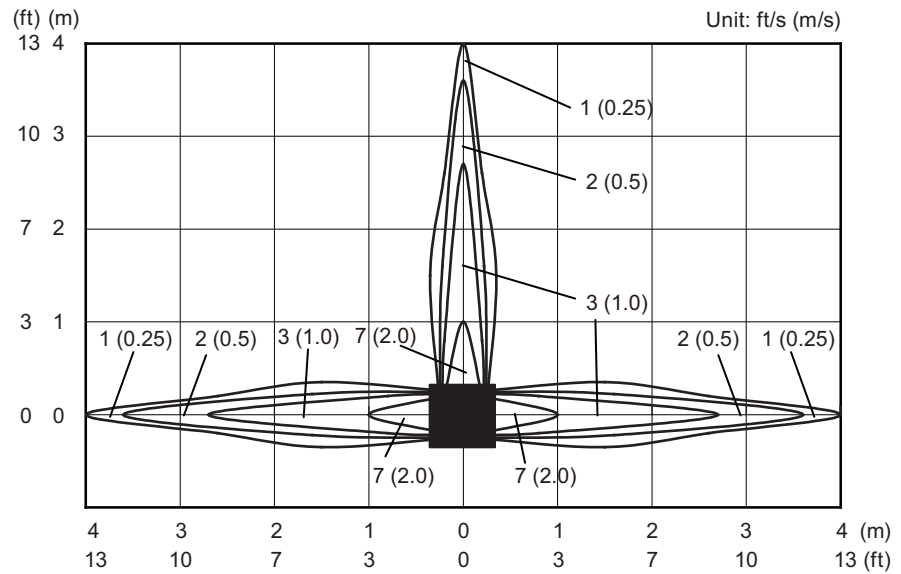

Side view
Horizontal louver: Upward

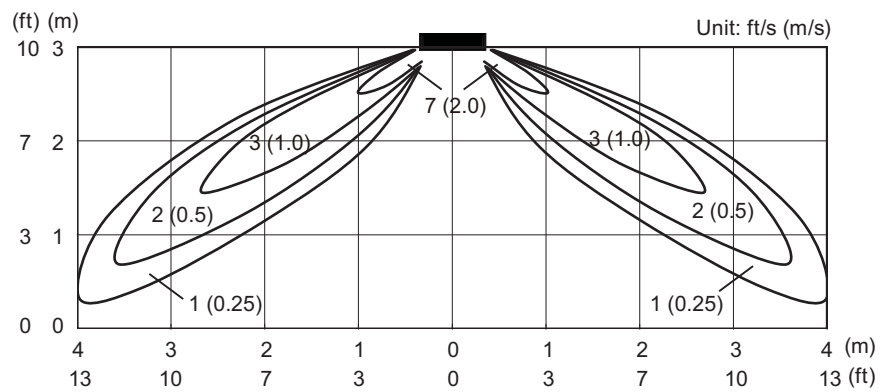


Side view
Horizontal louver: Downward

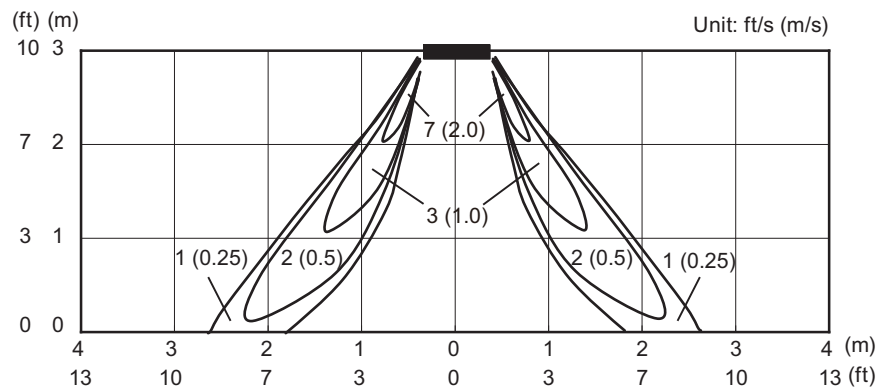


Model: ACUH18LUAS1 (4-way air outlet)

Measuring conditions	Fan speed HIGH	Operation mode FAN	Ceiling mode STANDARD
----------------------	-------------------	-----------------------	--------------------------


Top view
Horizontal louver: Upward

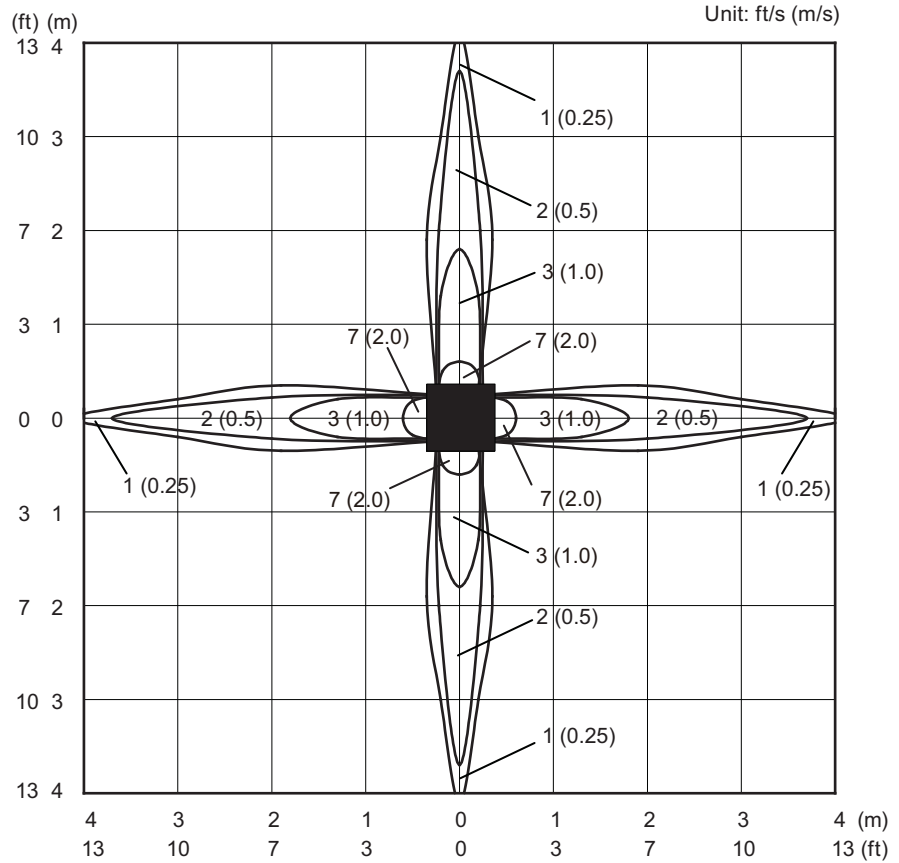

Side view
Horizontal louver: Upward

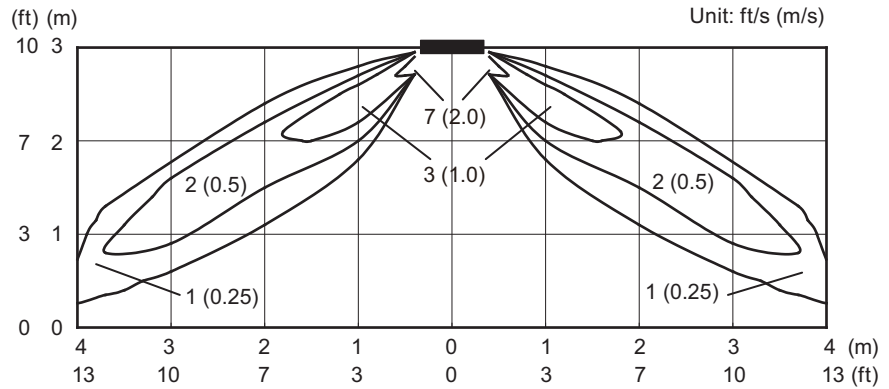


Side view
Horizontal louver: Downward

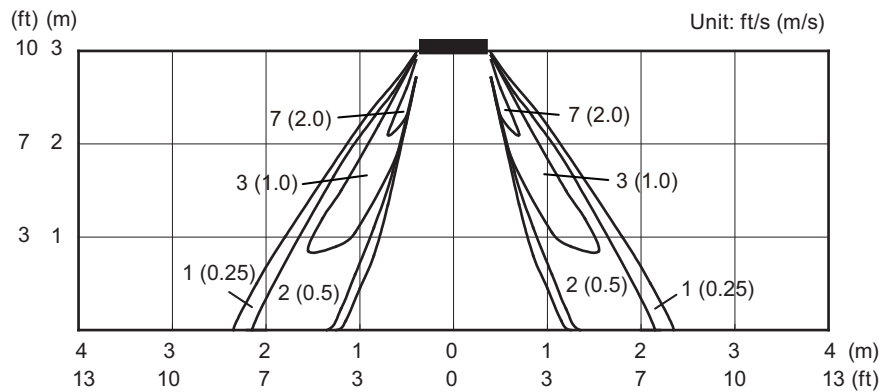


Model: ACUH18LUAS1 (3-way air outlet)

Measuring conditions	Fan speed HIGH	Operation mode FAN	Ceiling mode STANDARD
----------------------	-------------------	-----------------------	--------------------------


Top view
Horizontal louver: Upward

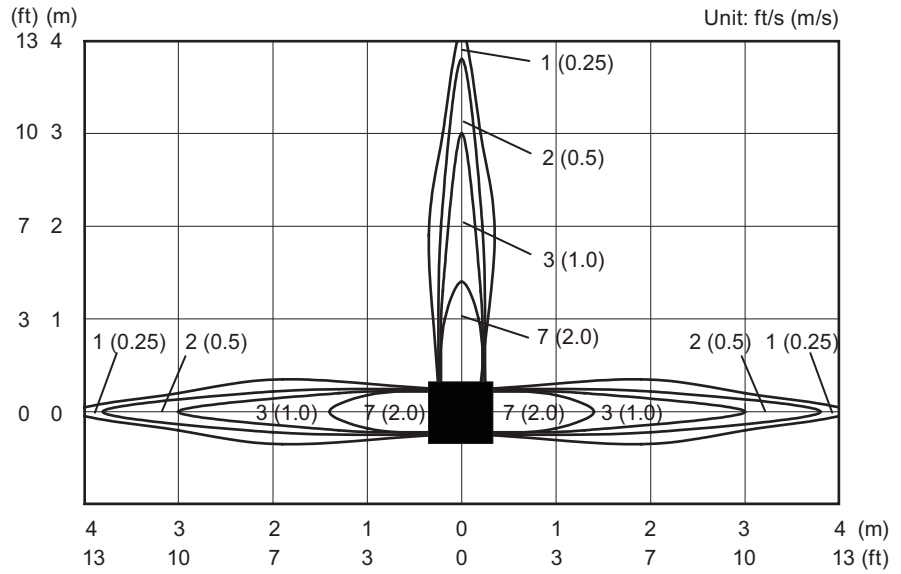

Side view
Horizontal louver: Upward

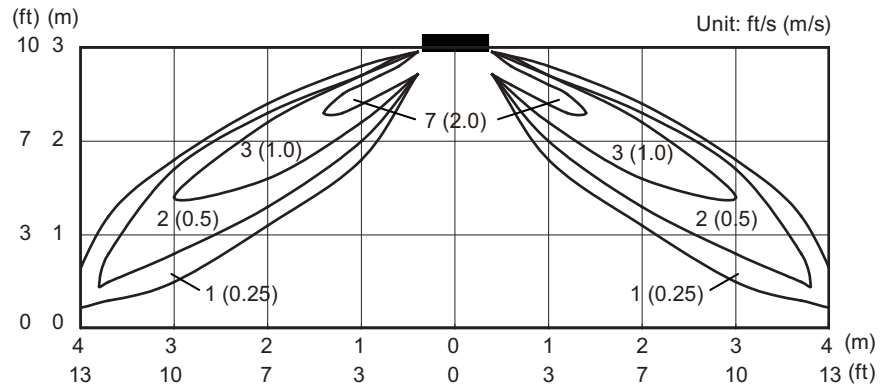

Side view
Horizontal louver: Downward

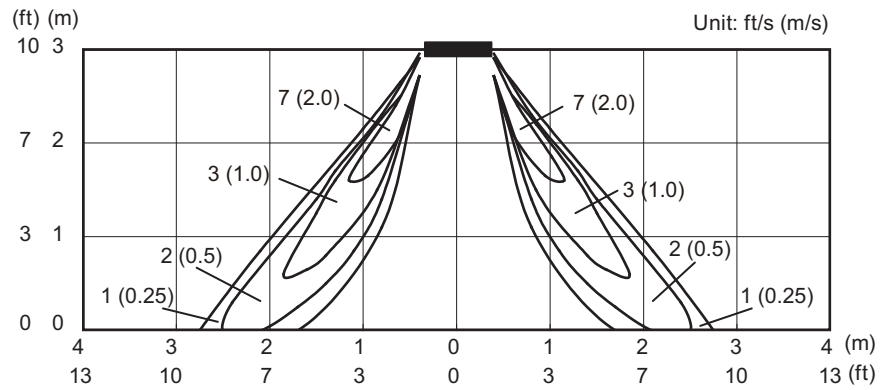

5-2. Airflow

Conversion factor:

- $1 \text{ m}^3/\text{h} = 0.2778 \text{ l/s} = 0.5886 \text{ CFM}$
- $3.6 \text{ m}^3/\text{h} = 1 \text{ l/s}$
- $1.699 \text{ m}^3/\text{h} = 1 \text{ CFM}$

■ Model: ACUH09LUAS1

● Cooling

Fan speed	Airflow	
HIGH	m^3/h	540
	l/s	150
	CFM	318
MED	m^3/h	490
	l/s	136
	CFM	288
LOW	m^3/h	440
	l/s	122
	CFM	259
QUIET	m^3/h	390
	l/s	108
	CFM	229

● Heating

Fan speed	Airflow	
HIGH	m^3/h	540
	l/s	150
	CFM	318
MED	m^3/h	490
	l/s	136
	CFM	288
LOW	m^3/h	440
	l/s	122
	CFM	259
QUIET	m^3/h	390
	l/s	108
	CFM	229

■ Model: ACUH12LUAS1

● Cooling

Fan speed	Airflow	
HIGH	m ³ /h	610
	l/s	169
	CFM	359
MED	m ³ /h	530
	l/s	147
	CFM	312
LOW	m ³ /h	470
	l/s	131
	CFM	276
QUIET	m ³ /h	410
	l/s	114
	CFM	241

● Heating

Fan speed	Airflow	
HIGH	m ³ /h	610
	l/s	169
	CFM	359
MED	m ³ /h	530
	l/s	147
	CFM	312
LOW	m ³ /h	470
	l/s	131
	CFM	276
QUIET	m ³ /h	410
	l/s	114
	CFM	241

■ Model: ACUH18LUAS1

● Cooling

Fan speed	Airflow	
HIGH	m ³ /h	740
	l/s	206
	CFM	436
MED	m ³ /h	580
	l/s	161
	CFM	341
LOW	m ³ /h	490
	l/s	136
	CFM	288
QUIET	m ³ /h	410
	l/s	114
	CFM	241

● Heating


Fan speed	Airflow	
HIGH	m ³ /h	740
	l/s	206
	CFM	436
MED	m ³ /h	580
	l/s	161
	CFM	341
LOW	m ³ /h	490
	l/s	136
	CFM	288
QUIET	m ³ /h	410
	l/s	114
	CFM	241

6. Operation noise (sound pressure)


6-1. Noise level curve

■ Model: ACUH09LUAS1

● Cooling

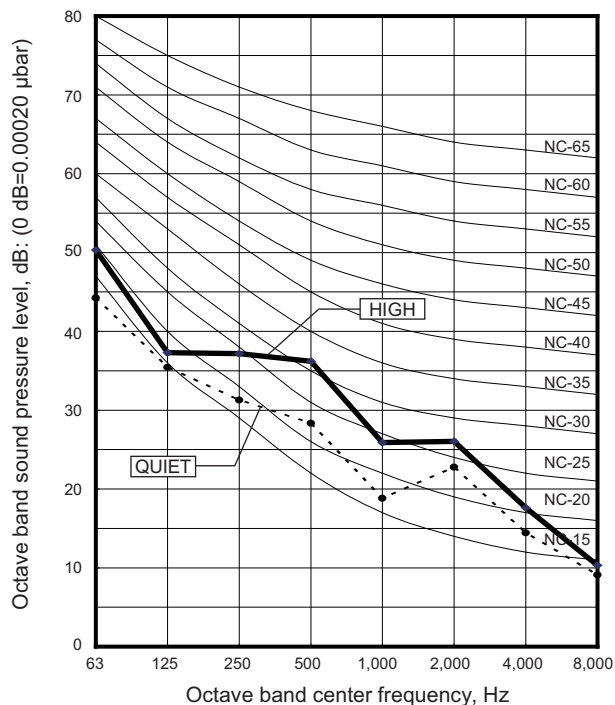


● Heating

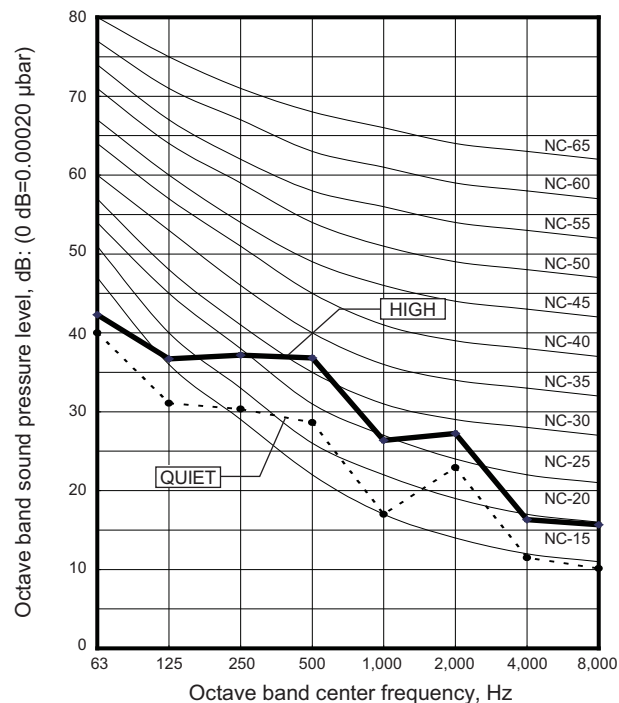


■ Model: ACUH12LUAS1

● Cooling

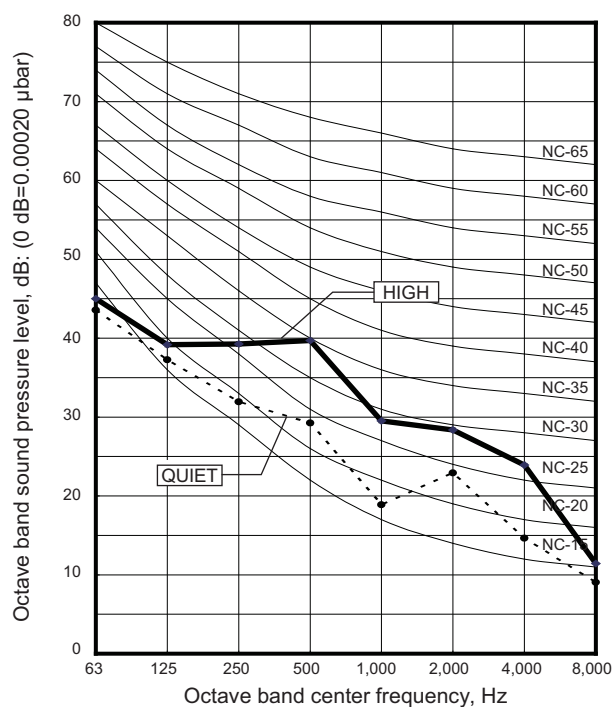


● Heating

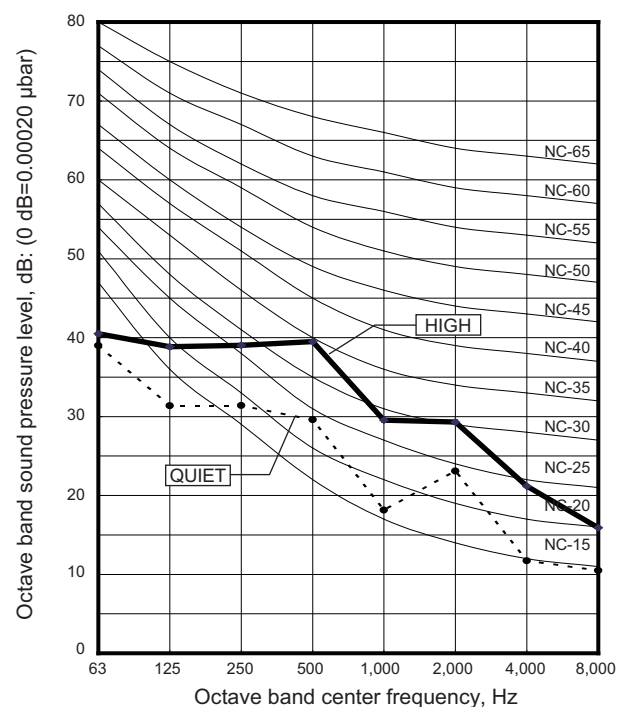


Model: ACUH18LUAS1



Cooling

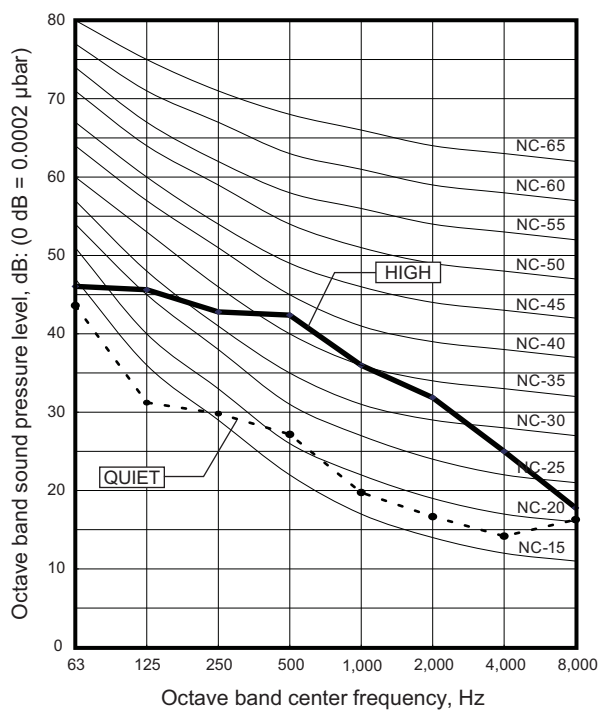

Heating

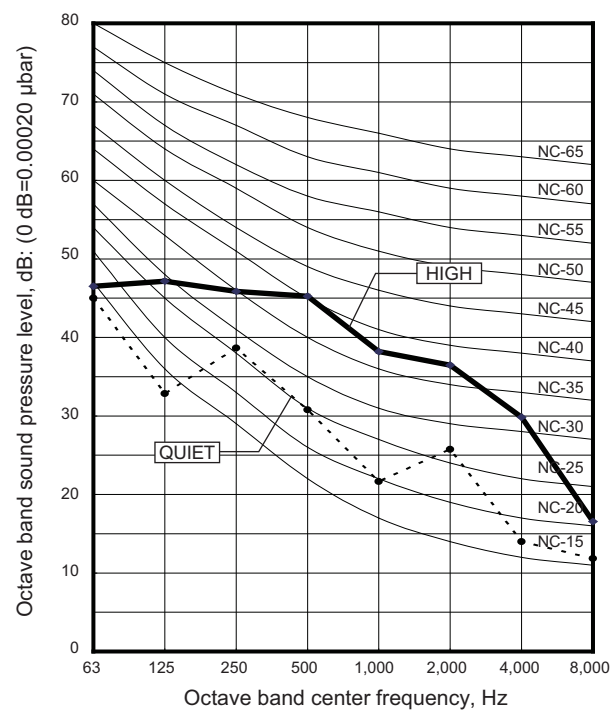

6-2. Sound level check point

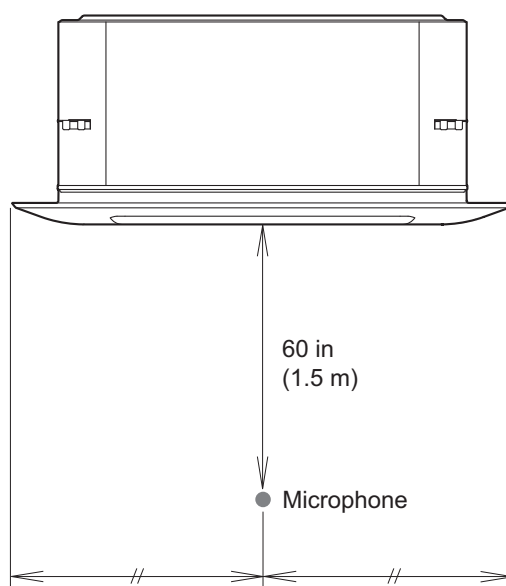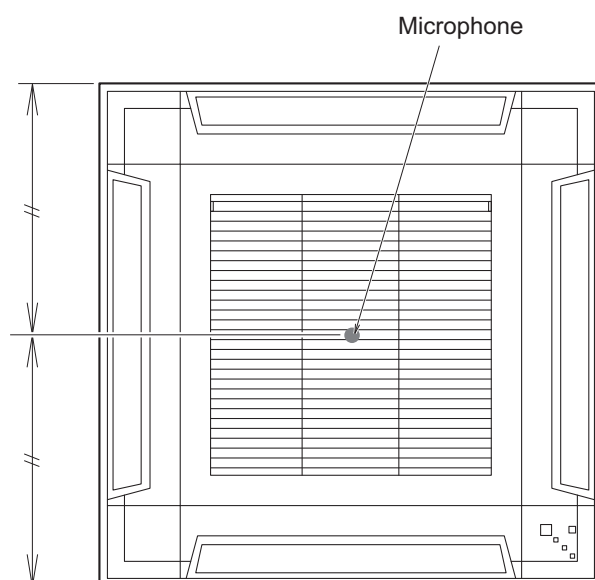


7. Safety devices

Type of protection	Protection form		Model
			ACUH09-18LUAS1
Circuit protection	Current fuse (PCB*)		250 V, 5 A
Fan motor protection	Thermal protection program	Activate	Activate: 212 ± 27 °F (100 ± 15 °C) Fan motor stop
		Reset	Reset: 203 ± 18 °F (95 ± 10 °C) Fan motor restart

*PCB: Printed Circuit Board

8. External input and output

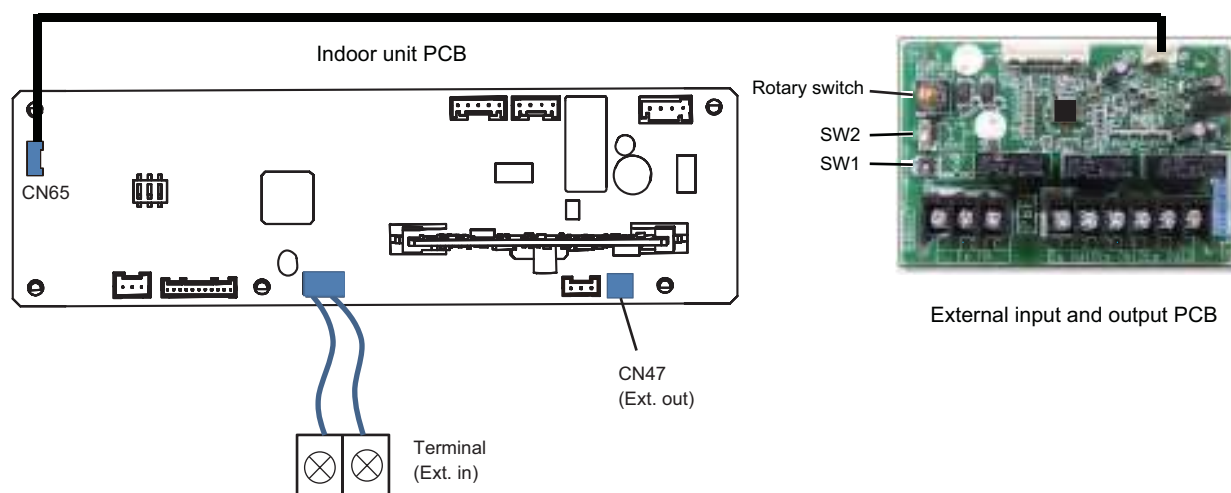


PCB	External input	External output	Connector	Input select	Input signal	External connect kit (Optional parts)
Indoor unit	Operation/Stop Forced stop	—	Terminal	Dry contact	Edge	—
	—	Operation status	CN47	—	—	UTY-XWZXZG
		Error status				
		Indoor unit fan operation status	CN47			
		External heater output				
External input and output (UTY-XCSX)	Operation/Stop	—	Input 1/ Input 2	Dry contact/ Apply voltage	Edge/ Pulse	—
	Forced thermostat off		Input 1		Edge	
	—	Operation status	Output 1 Output 2 Output 3	—	—	—
		Error status				
		Indoor unit fan operation status				
		External heater output				

8-1. External input

- “Operation/Stop” mode or “Forced stop” mode can be selected with function setting of indoor unit.
- A twisted pair cable (22AWG) should be used. Maximum length of cable is 492 ft (150 m).
- The wire connection should be separate from the power cable line.

Indoor unit functions such as Operation/Stop can be done by using indoor unit terminals.

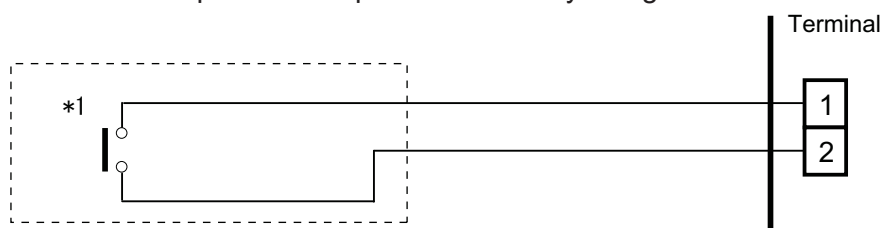

*1: The switch can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

External input and output PCB


The indoor unit Operation/Stop can be set by using the input terminal on the PCB.

Input select

Use either one of these types of terminals according to the application. (Both types of terminals cannot be used simultaneously.)

- Dry contact


In case of internal power supply, set the slide switch of SW1 to "NON VOL" side.

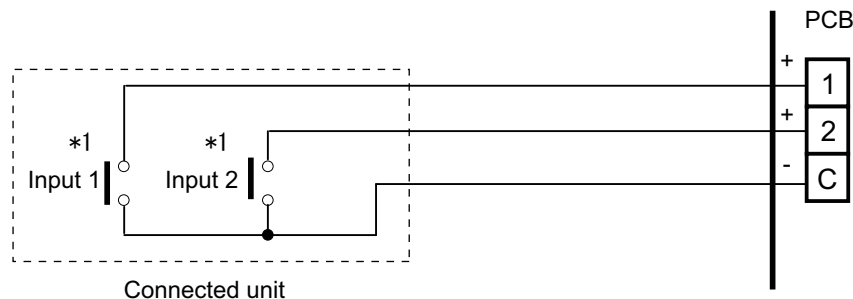

*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

- Apply voltage

In case of external power supply, set the slide switch of SW1 to "VOL" side.

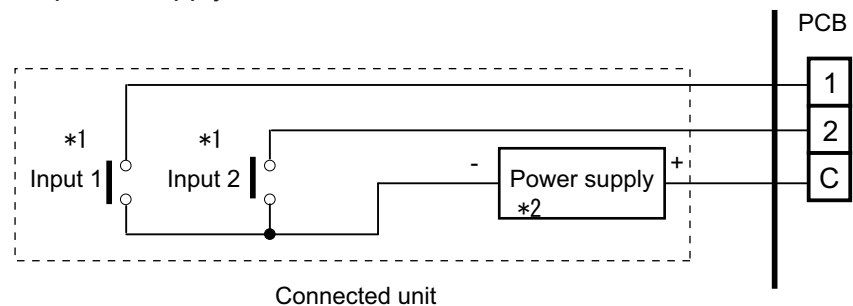

*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

*2: Make the power supply DC 12 V to 24 V 10 mA or more.


8-2. External output

Use an external output cable with appropriate external dimension, depending on the number of cables to be installed.

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 82 ft (25 m).
- Output voltage: High DC 12 V $\pm$ 2 V, Low 0 V.
- Permissible current: 50 mA
- For details, refer to ["Combination of external input and output"](#) on page 28.


● When indicator, etc. are connected directly

Example: Function setting 60 is set to "00"

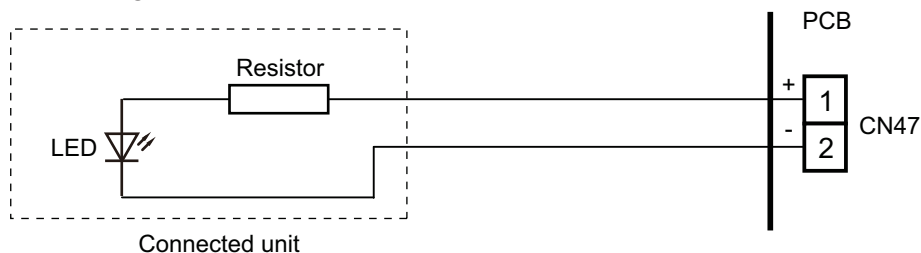


● When connecting with a device equipped with a power supply

Example: Function setting 60 is set to "00"

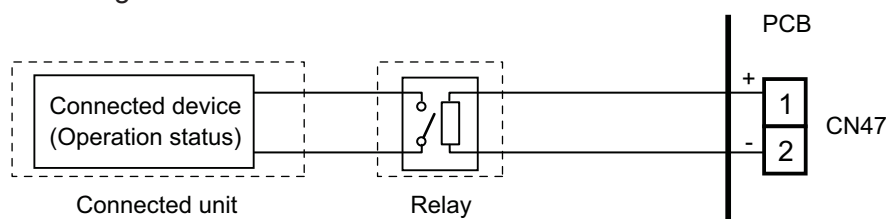

■ External input and output PCB

- A twisted pair cable (22AWG) should be used.
- Permissible voltage and current: DC 5 V to 30 V / 3 A, AC 30 V to 250 V / 3 A
- For details, refer to Chapter 8-3. "[Combination of external input and output](#)" on page 28.

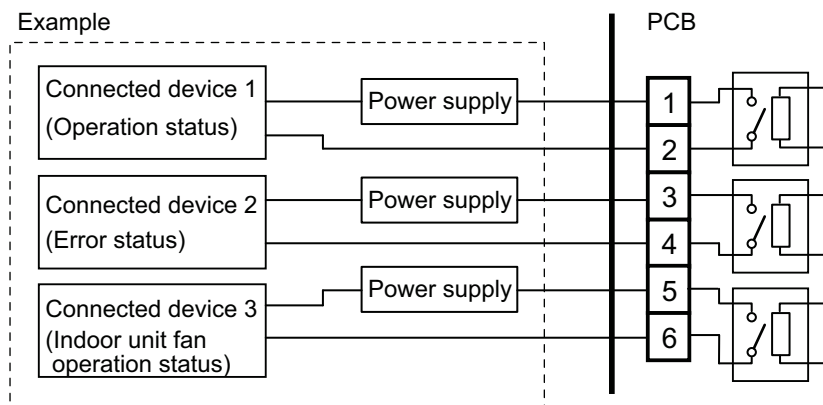

8-3. Combination of external input and output

By combining the function setting of the indoor unit and rotary switch setting of the External input and output PCB, you can select various combinations of functions.

Combination examples of external input and output are as follows:

Mode	Function setting	External input and output PCB (Rotary SW)	External input			
			Indoor unit Input	External input and output PCB		
				Input 1	Input 2	Signal type
0-1	60-00	1	Operation/Stop (Function setting 46-00) or Forced stop (Function setting 46-02)	Operation/Stop	Not available	Edge
				Operation	Stop	Pulse
0-2	60-00	2		Forced Thermostat OFF	Not available	Edge
1	60-01	3		Mechanical cooling Off		
2	60-02	4		Forced thermostat Off		
3	60-03	5		Mechanical cooling On		
4	60-04	6		Mechanical cooling On		
5	60-05	7		Forced thermostat Off		
6	60-06	8		Forced thermostat Off		
7	60-07	9		Mechanical cooling Off		
8	60-08	A		Forced thermostat Off		
9	60-09	B		Forced Thermostat OFF		
10	60-10	C		Forced Thermostat OFF		
11	60-11	D		Forced Thermostat OFF		
12	60-12	D		Forced Thermostat OFF		

Mode	Function setting	External input and output PCB (Rotary SW)	External output			
			Indoor unit Output	External input and output PCB		
				Output 1	Output 2	Output 3
0-1	60-00	1	Operation/Stop	Operation/Stop	Error status	Indoor unit fan operation status
0-2	60-00	2	Operation/Stop	Error status	Indoor unit fan operation status	External heater output
1	60-01	3	Cooling thermostat On	Error status	Indoor unit fan operation status	External heater output
2	60-02	4	Cooling thermostat On	Error status	Remote controller output	External heater output
3	60-03	5	Cooling thermostat On	Cooling high/low output	Remote controller output	External heater output
4	60-04	6	Cooling thermostat On	Error status	Remote controller output	Cooling high/low output
5	60-05	7	Heating thermostat On	Error status	Indoor unit fan operation status	External heater output
6	60-06	8	Operation/Stop	Error status	Indoor unit fan operation status	Heating thermostat On
7	60-07	9	Cooling thermostat On	Error status	Heating thermostat On	External heater output
8	60-08	A	Cooling thermostat On	Heating thermostat On	Remote controller output	External heater output
9	60-09	B	Error status	Operation/Stop	Indoor unit fan operation status	External heater output
10	60-10	C	Indoor unit fan operation status	Operation/Stop	Error status	External heater output
11	60-11	D	External heater output	Operation/Stop	Indoor unit fan operation status	Error status
12	60-12	D	Setpoint Attainment status	Operation/Stop	Indoor unit fan operation status	Error status

NOTE: Input of Operation/Stop depends on the setting of function setting 46.

00: Operation/Stop mode 1 (Remote controller enabled)

 
01: (Setting prohibited)

02: Forced stop

03: Operation/Stop mode 2 (Remote controller disabled)


■ Input signal type

- Indoor unit
Input signal type is only "Edge".



- External input and output PCB
The input signal type can be selected.

Signal type (edge or pulse) can be switched by the DIP switch 2 (SW2) on the External input and output PCB.

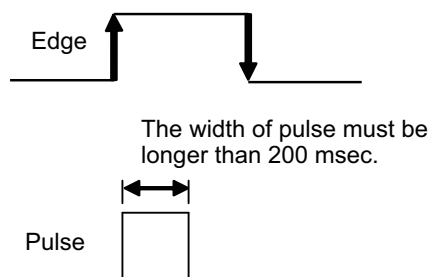


8-4. Details of function

■ Control input function

● When function setting is "Operation/Stop" mode 1


- In the case of "Edge" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-00	-	Input of indoor unit	Terminal	Off → On	Operation
				On → Off	Stop
	60-00 / 1	External input and output PCB	Input 1	Off → On	Operation
				On → Off	Stop

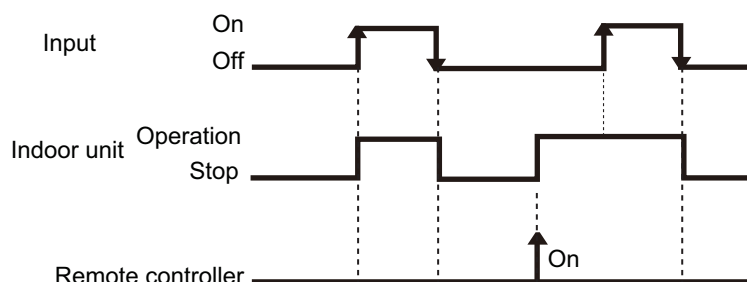

- In the case of "Pulse" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-00	60-00 / 1	External input and output PCB	Input 1	Pulse	Operation
			Input 2	Pulse	Stop

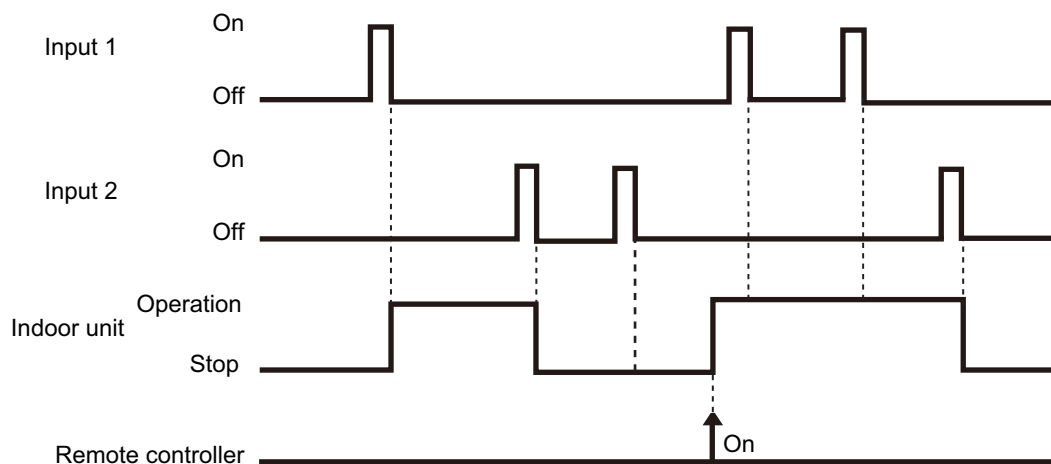


NOTES:

- The last command has priority.
- The indoor units within the same remote controller group operates in the same mode.

● When function setting is "Forced stop" mode


- In the case of "Edge" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-02	-	Input of indoor unit	Terminal	Off → On	Forced stop
				On → Off	Normal
	60-00 / 1	External input and output PCB	Input 1	Off → On	Forced stop
				On → Off	Normal

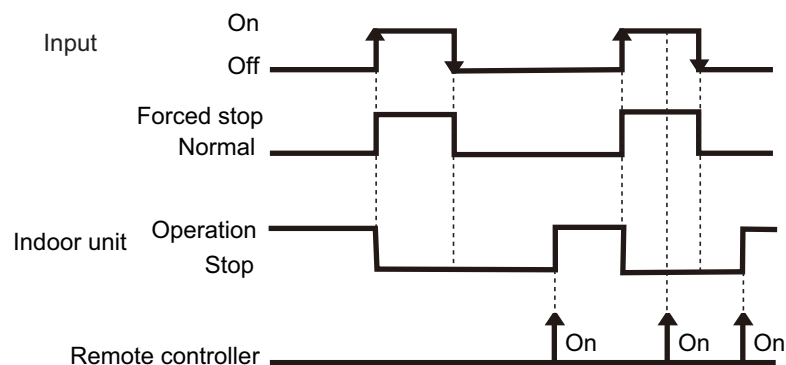

- In the case of "Pulse" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-02	60-00 / 1	External input and output PCB	Input 1	Pulse	Forced stop
			Input 2	Pulse	Normal

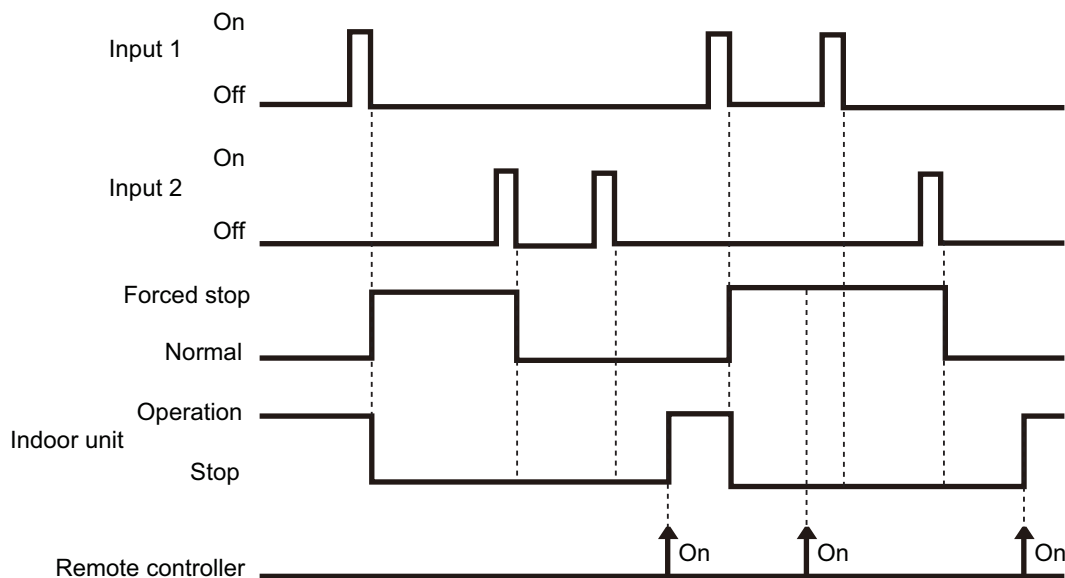


NOTES:

- When the forced stop is triggered, indoor unit stops and Operation/Stop operation by the remote controller is restricted.
- When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

● When function setting is "Operation/Stop" mode 2


- In the case of "Edge" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-03	-	Input of indoor unit	Terminal	Off → On	Operation
				On → Off	Stop (Remote controller disabled)
	60-00 / 1	External input and output PCB	Input 1	Off → On	Operation
				On → Off	Stop (Remote controller disabled)

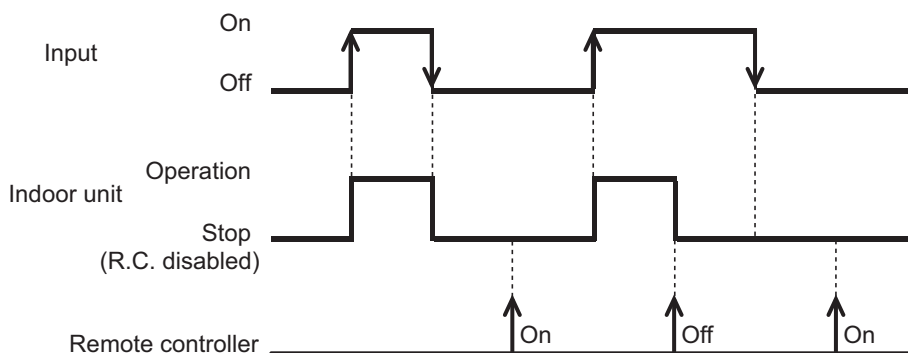

- In the case of "Pulse" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-03	60-00 / 1	External input and output PCB	Input 1	Pulse	Operation
			Input 2	Pulse	Stop (Remote controller disabled)

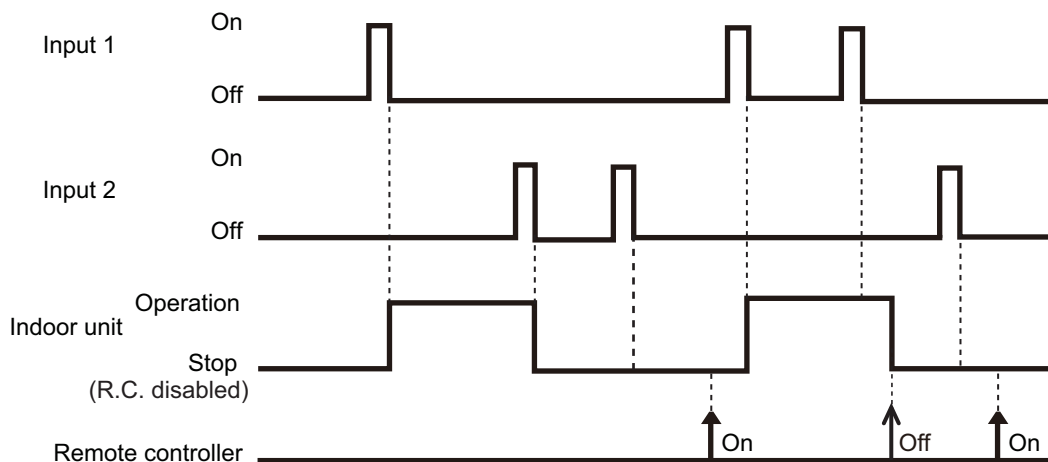


NOTES:

- When "Operation/Stop" mode 2 function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

■ Forced thermostat off function


Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
60-00 / 2 60-02 / 4 60-05 / 7 60-06 / 8 60-08 / A 60-09 / B 60-10 / C 60-11 / D		External input and output PCB	Input 1	Off → On	Thermostat off
				On → Off	Normal operation

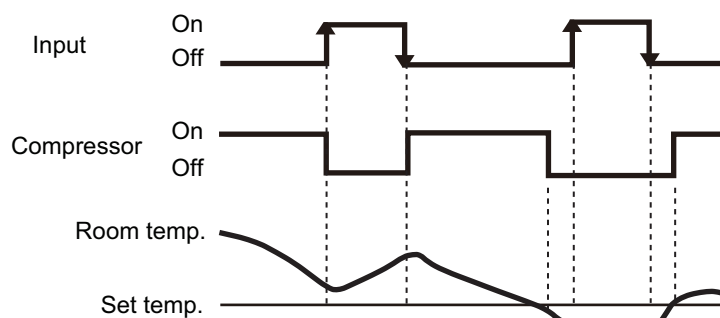

■ Control output function

Function setting /	Rotary SW of External input and output PCB	External output		Output signal	Command
60-00 / 1, 2 60-06 / 8		Output of indoor unit	CN47	Low → High	Operation
				High → Low	Stop
60-00 / 1 60-09 / B 60-10 / C 60-11 / D		External input and output PCB	Output 1	Off → On	Operation
				On → Off	Stop


The output is low when the unit is stopped.

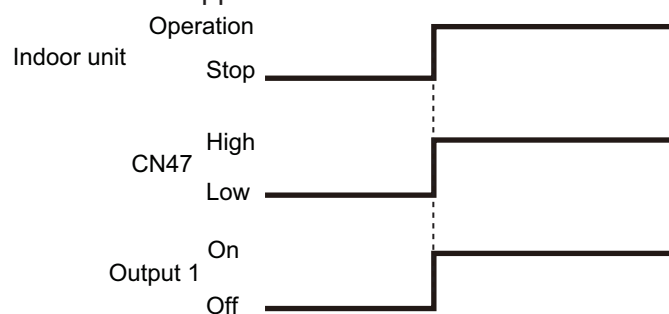

■ Error status

Function setting /	Rotary SW of External input and output PCB	External output		Output signal	Command
60-09 / B		Output of indoor unit	CN47	Low → High	Error
				High → Low	Normal
60-00 / 2 60-01 / 3 60-02 / 4 60-04 / 6 60-05 / 7 60-06 / 8 60-07 / 9	External input and output PCB	Output 1	Off → On	Error	
			On → Off	Normal	
60-00 / 1 60-10 / C		Output 2	Off → On	Error	
			On → Off	Normal	
60-11 / D		Output 3	Off → On	Error	
			On → Off	Normal	


The output is ON when an error is generated for the indoor unit.

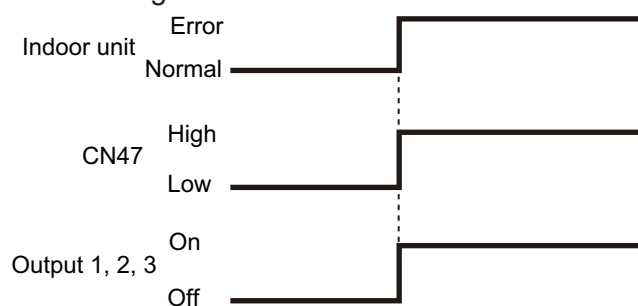

Indoor unit fan operation status

Function setting /	Rotary SW of External input and output PCB	External output		Output signal	Command
60-10 / C		Output of indoor unit	CN47	Low → High	Fan run
				High → Low	Fan stop
60-00 / 2 60-01 / 3 60-05 / 7 60-06 / 8 60-09 / B 60-11 / D	External input and output PCB	Output 2		Off → On	Fan run
				On → Off	Fan stop
60-00 / 1		Output 3		Off → On	Fan run
				On → Off	Fan stop

Output signal	Condition
On Low → High	The indoor unit fan is operating.
Off High → Low	The fan is stopped or during cold air prevention. During thermostat off when in dry mode operation.

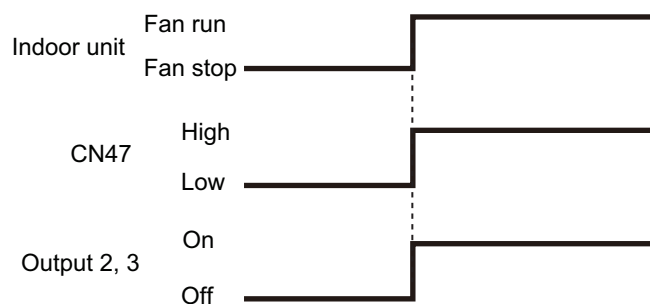

■ External heater output


Control	Primary heater	Auxiliary heater	Function setting
			Indoor unit
			Control switching external heaters No. 61
Auxiliary heater control 1	Heat pump	External device* ¹	61-00
Auxiliary heater control 2	Heat pump	External device	61-01
Heat pump prohibition control	External device	None	61-02
Auxiliary heater control by outdoor temperature 1	Heat pump	External device	61-03
Auxiliary heater control by outdoor temperature 2	Heat Pump	External device	61-04
Auxiliary heater control by outdoor temperature 3	Heat Pump	External device	61-05
Auxiliary heat pump control	External device	Heat pump	61-06
Auxiliary heat pump control by outdoor temperature 1	External device	Heat pump	61-07
Auxiliary heat pump control by outdoor temperature 2	External device	Heat pump	61-08
Auxiliary heat pump control by outdoor temperature 3	External device	Heat pump	61-09

NOTES:

- After turning off the heater, 3 minutes of standby time is required by next power-on of the heater.
- For items marked “—” in the table, any of validate or invalidate of the setting are acceptable.
- *1: External device means Hot water, Electrical heater, etc.

● Installation configuration of individual connection


External heating device is installed individually. (No use of indoor unit fan)

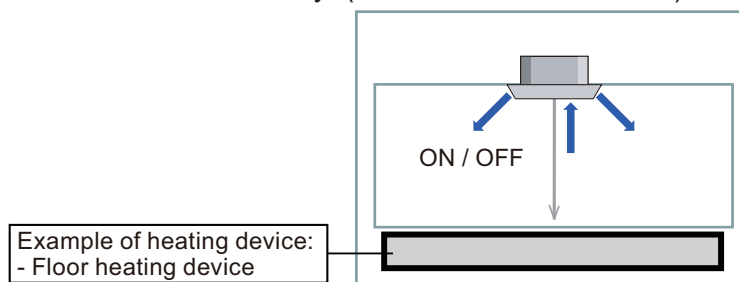

⚠ WARNING

Operation	Condition
Heater off	• Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off


- Design and install external heater appropriately with considering its protection.

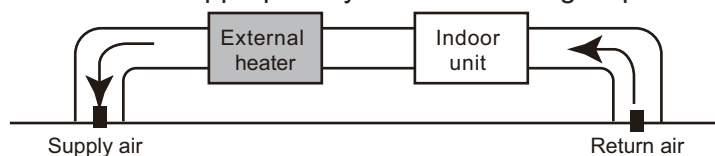

- Inappropriate designing and installation of external heater may cause a fire by emitted heat from the external heater.
- Fujitsu General Ltd. is not responsible for inappropriate designing or installation of external heating device.

● Auxiliary equipment control by room temperature

Auxiliary equipment control is switchable by room temperature. Auxiliary equipment switching is performed for each room temperature divided to following 3 zones.

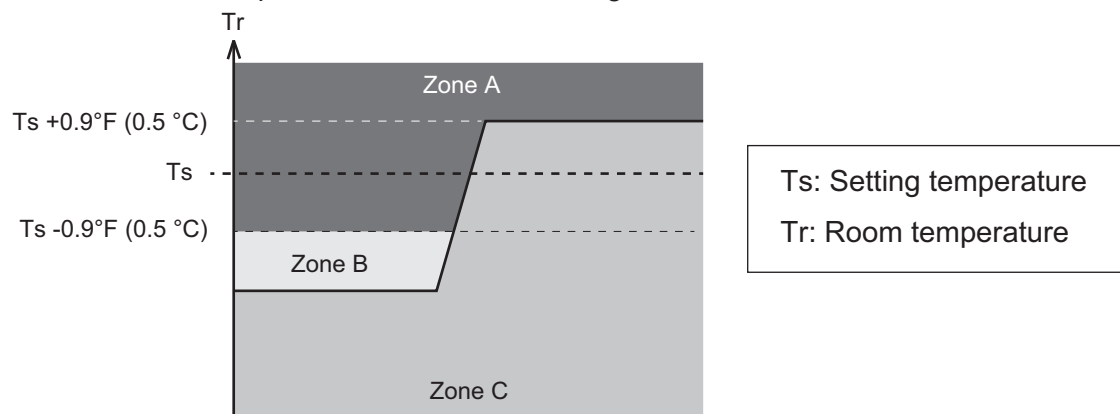

Zone	Application	When temperature dropping		When temperature rising	
		Primary	Auxiliary	Primary	Auxiliary
A	Both of primary and auxiliary equipment is unnecessary.	Off	Off	Off	Off
B	Primary heater only. When room temperature stays in zone B for a long time, auxiliary equipment also operates.	On	Off*1	—	—
C	Auxiliary equipment also operates.	On	On*2	On	On*2

*1: For standby time for auxiliary equipment operation, refer to indoor unit function number 71 "[Contents of function setting](#)" on page 57.


*2: When indoor unit function number 61 is set to "00", auxiliary equipment operates according to the following conditions.

- Ts - Tr > 21.6 °F (-12.0 °C): Auxiliary equipment turn off.
- Ts - Tr > 18.0 °F (-10.0 °C): Auxiliary equipment turn on.

● Auxiliary heater control 1

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off - Fan stop protection

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

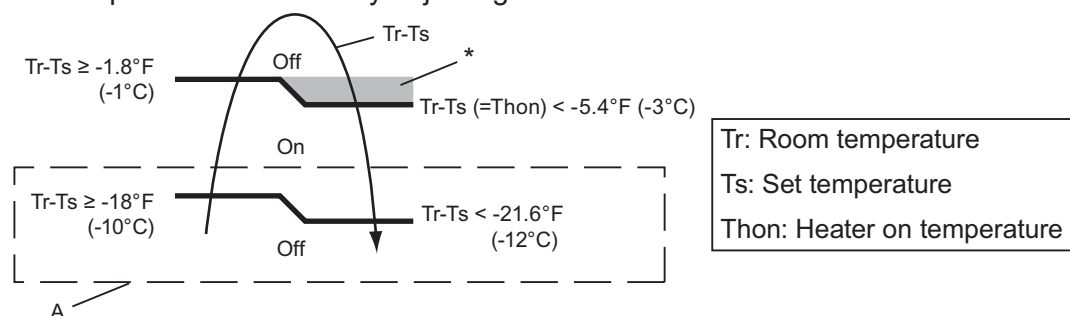

*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

Example: When set temperature (Ts) is 72°F (22°C) (Factory setting),


- and room temperature (Tr) increases above 53.6°F (12°C), signal output is on.
- and room temperature (Tr) increases above 69.8°F (21°C), signal output is off.
- and room temperature (Tr) decreases below 66.2°F (19°C), signal output is on.
- and room temperature (Tr) decreases below 50°F (10°C), signal output is off.

● Auxiliary heater control 2

Control that excludes "A" from ["Auxiliary heater control 1"](#) on page 40.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off - Fan stop protection

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

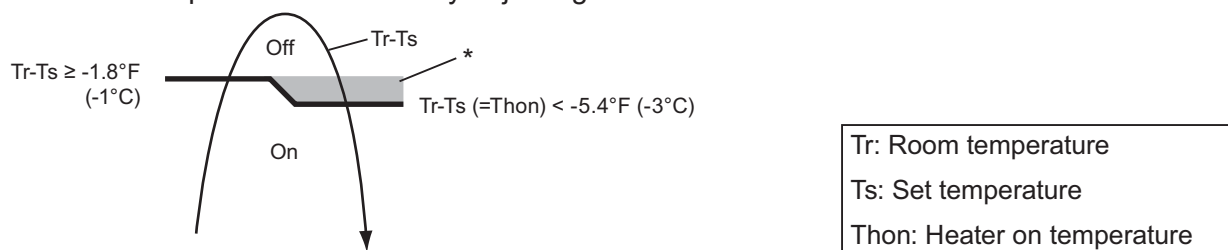


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

● Heat pump prohibition control


Perform heating by external heater only. Indoor unit is continuous thermostat off.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

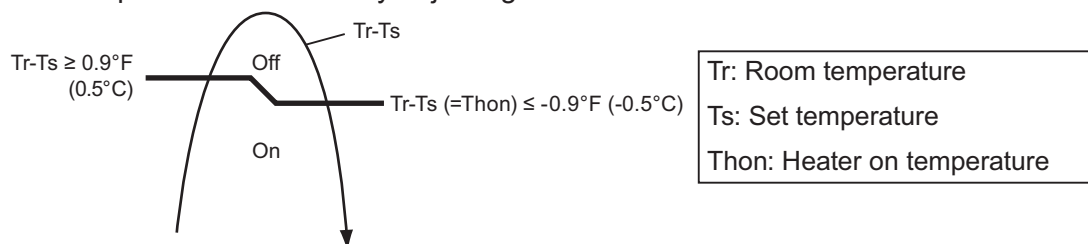

• Operation status

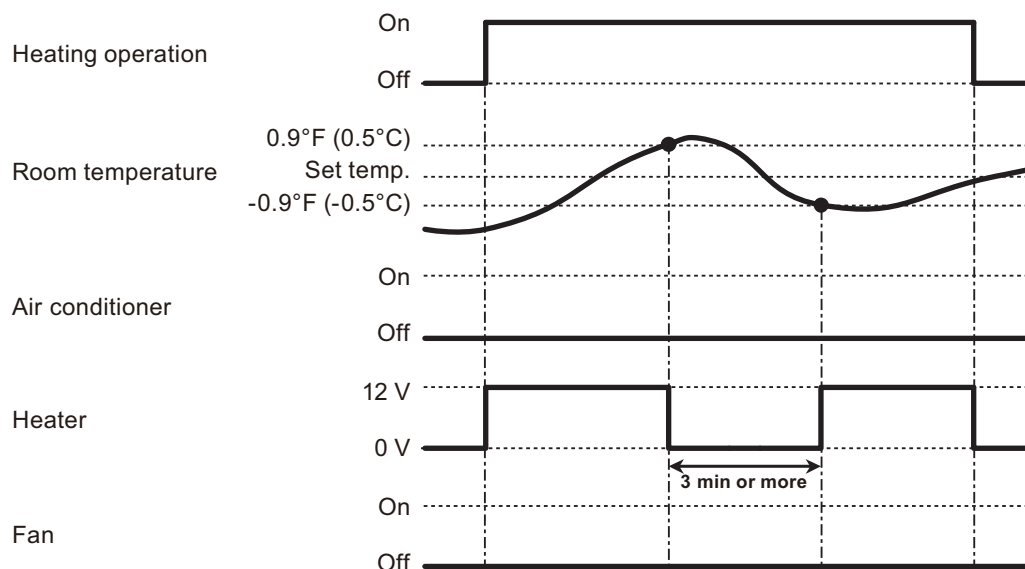

NOTE: In following operations, compressor will be on.

- Other than heating
- Test run


● Auxiliary heater control by outdoor temperature 1

This control selects heat pump or external heater according to the outdoor temperature. When outdoor temperature is high, the heating is performed by using heat pump only.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off - Heat pump only zone


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A and B: Adjustable individually by function setting number 66 and 67.

• External heater output

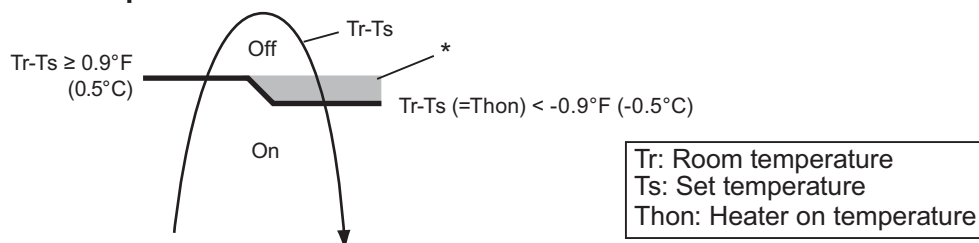


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

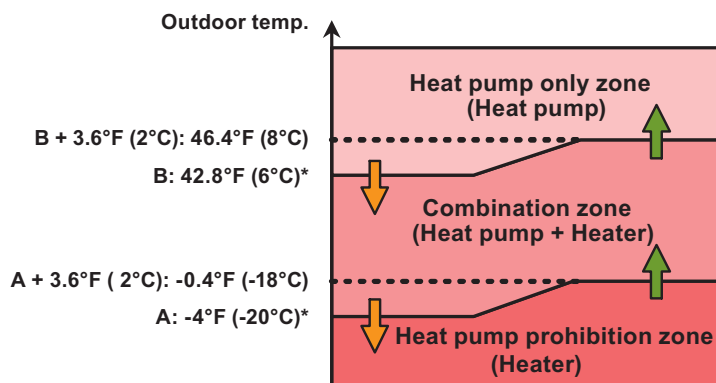

*: Adjustable by function setting 66 and 67

- Operation status

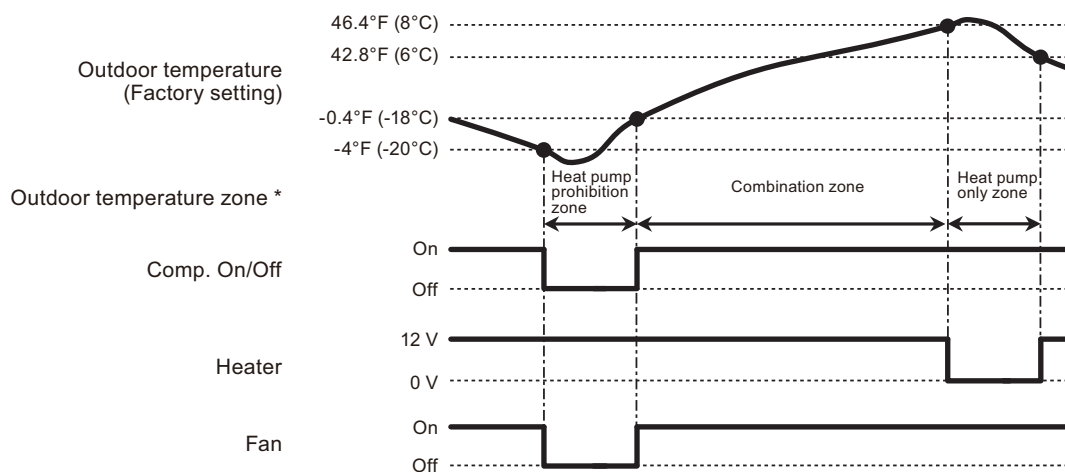

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


● Auxiliary heater control by outdoor temperature 2

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A: Adjustable by function setting number 66.

• External heater output

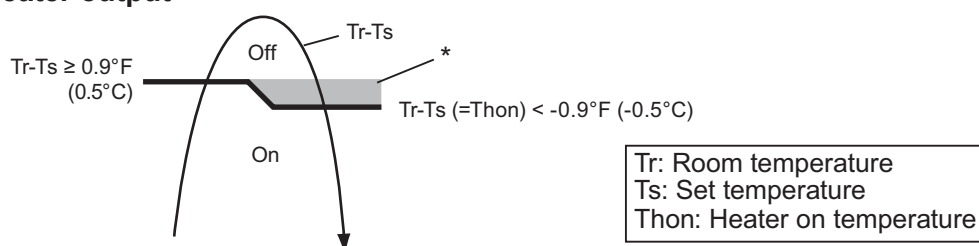


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

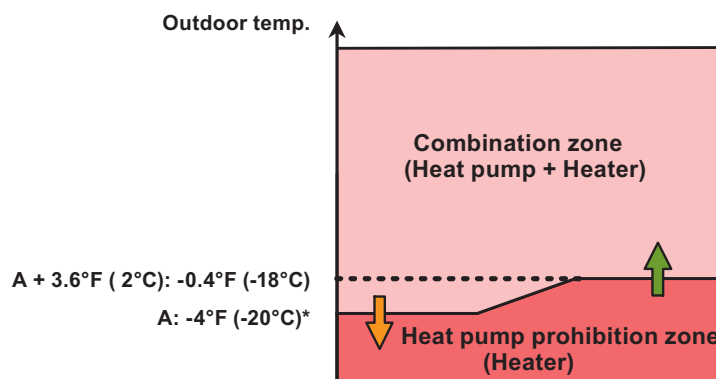

*: Adjustable by function setting 66

- Operation status

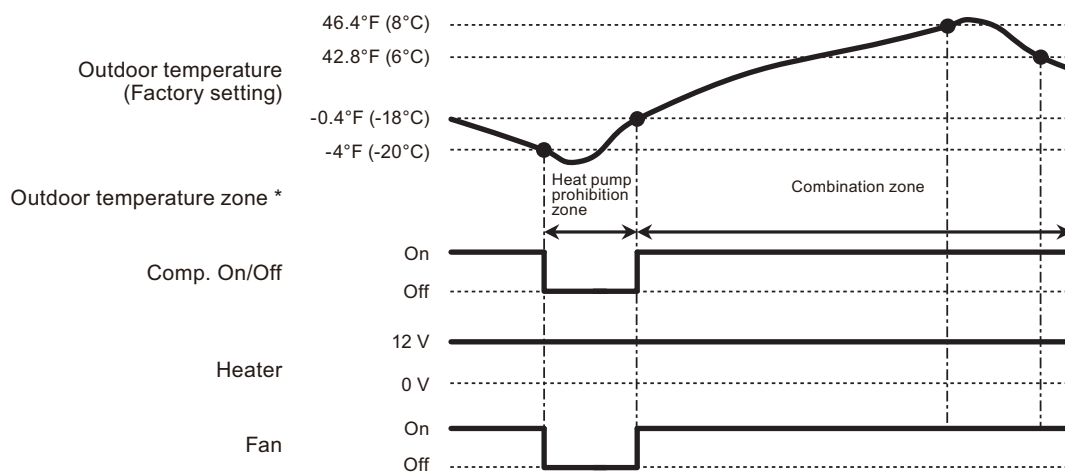

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


● Auxiliary heater control by outdoor temperature 3

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary B: Adjustable by function setting number 67.

• External heater output

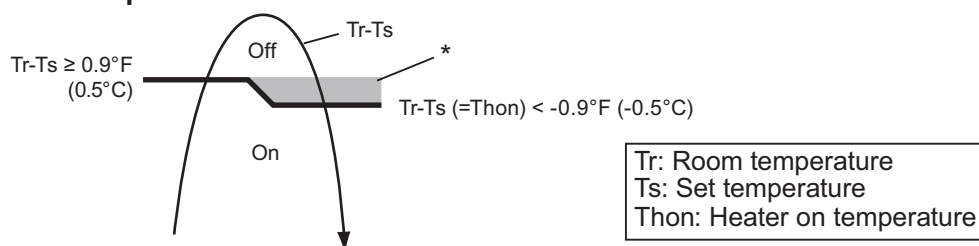


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

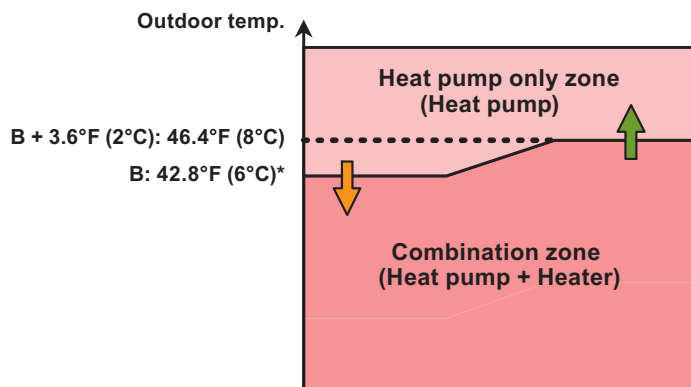

*: Adjustable by function setting 67

- Operation status

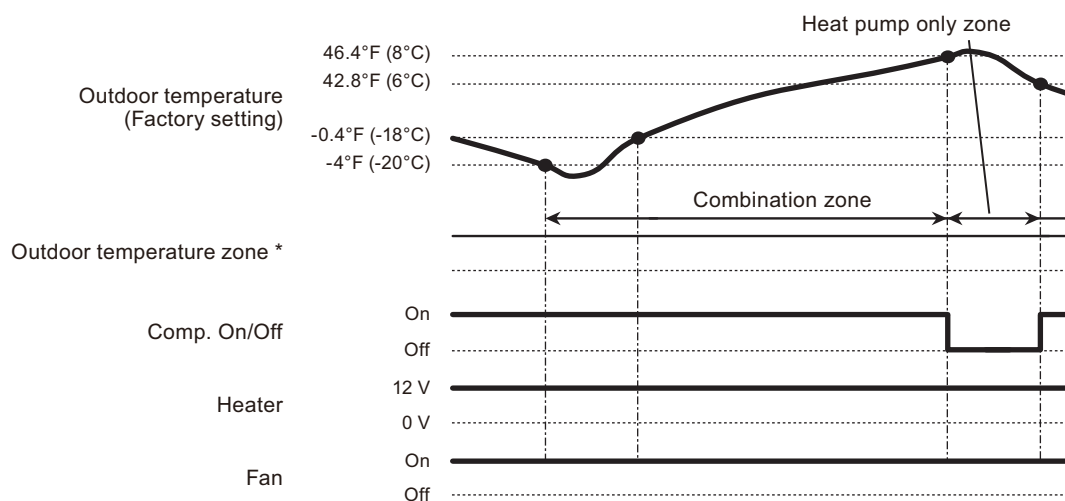

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

● Auxiliary heat pump control

• External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

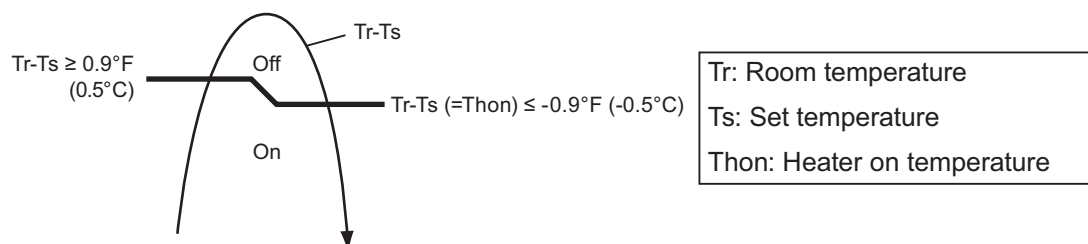

• Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

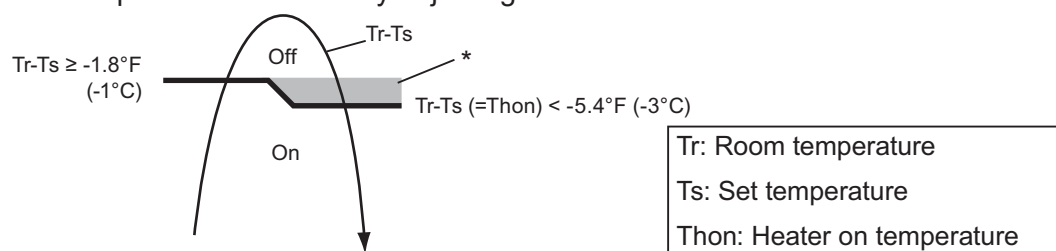

*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.


● Auxiliary heat pump control by outdoor temperature 1

• External heater output

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off

– Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)


– Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

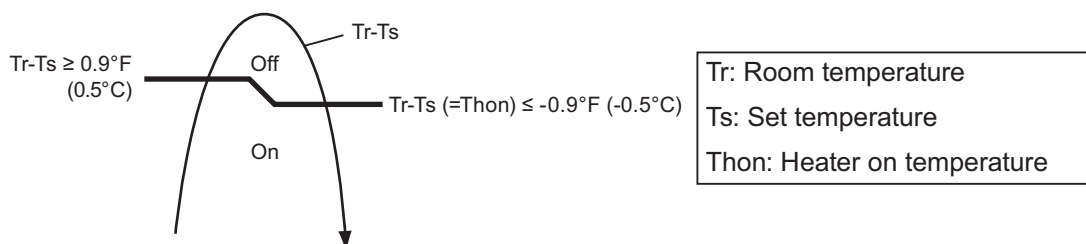

• Auxiliary heat pump On/Off


– Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).

– All control temperatures will shift by adjusting “Thon”.

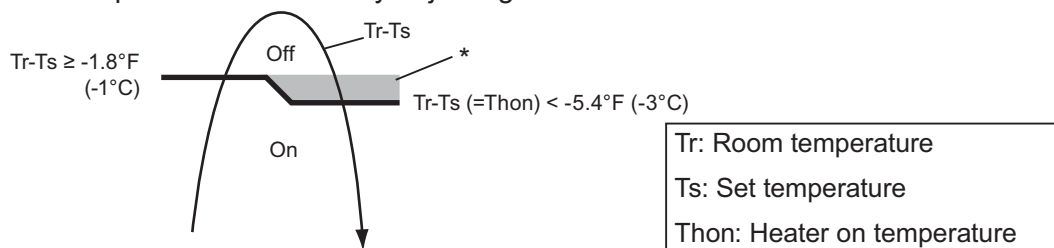


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

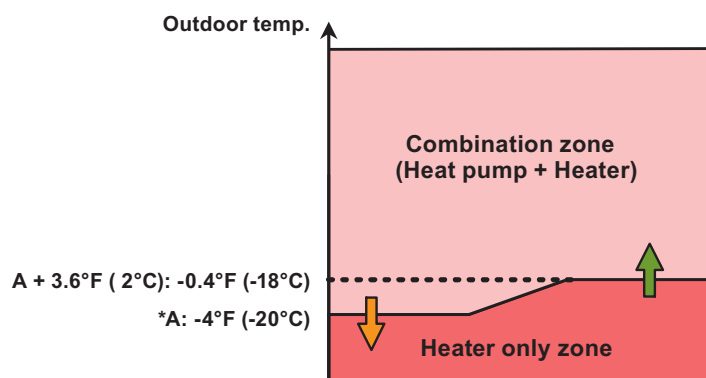

*: Adjustable by function setting 67

- **Operation status**

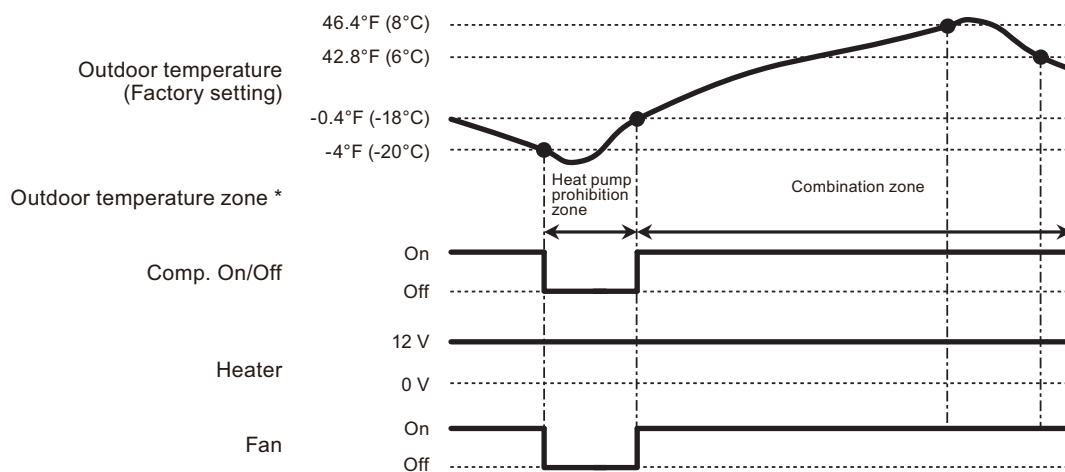

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


● Auxiliary heat pump control by outdoor temperature 2

• External heater output

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off

– Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)


– Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

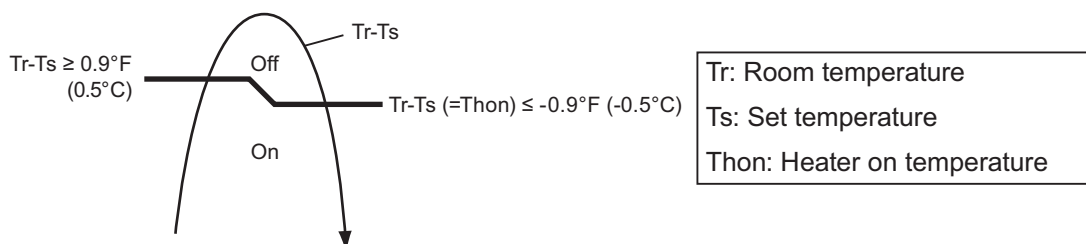

• Auxiliary heat pump On/Off


– Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).

– All control temperatures will shift by adjusting “Thon”.

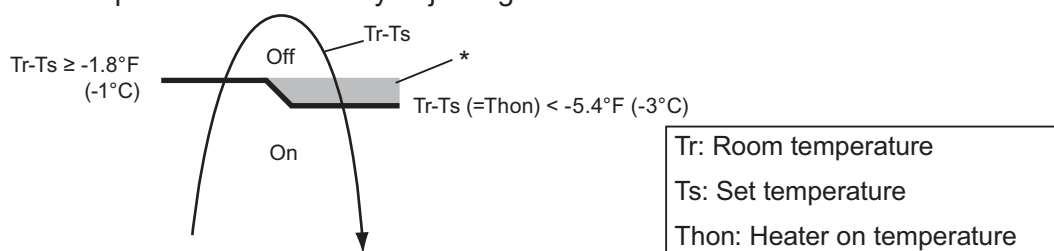


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

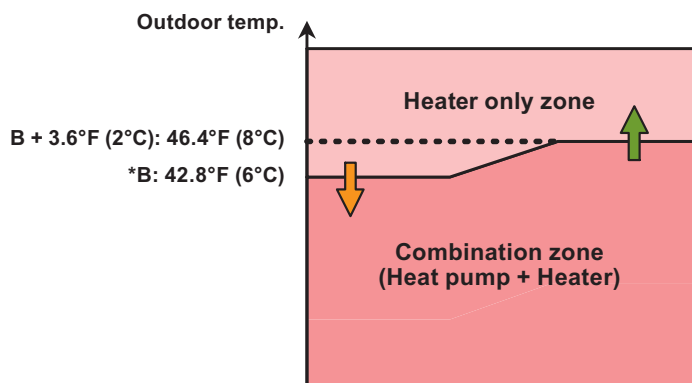

*: Adjustable by function setting 67

- Operation status

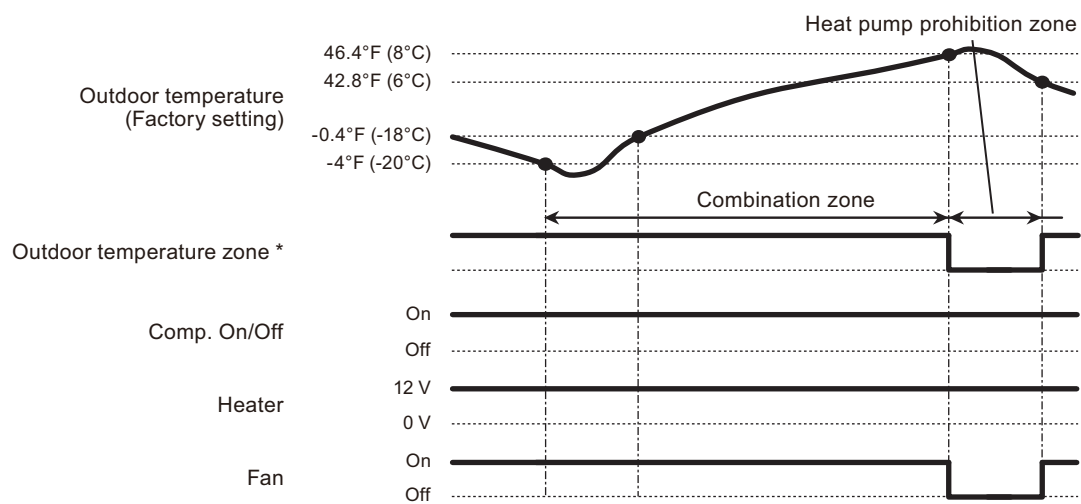

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


● Auxiliary heat pump control by outdoor temperature 3

• External heater output

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	- Heater is off as shown in following diagram of heating temperature. - Other than heating mode - Error occurred - Forced thermostat off

– Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)


– Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

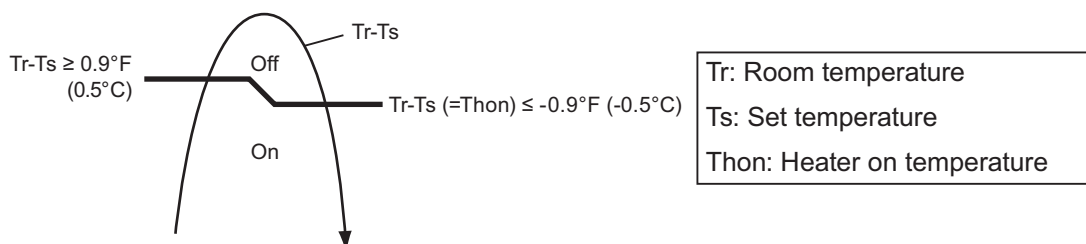

• Auxiliary heat pump On/Off


– Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).

– All control temperatures will shift by adjusting “Thon”.

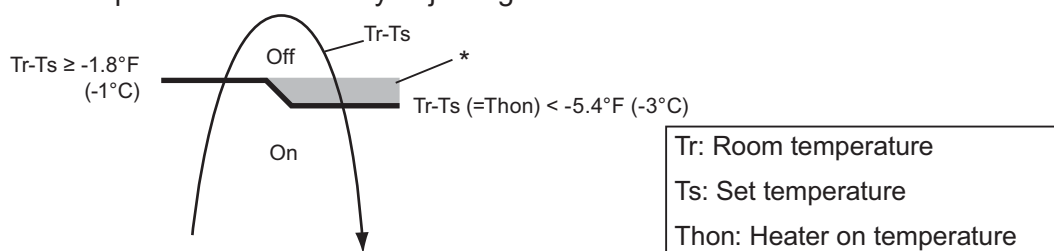


*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

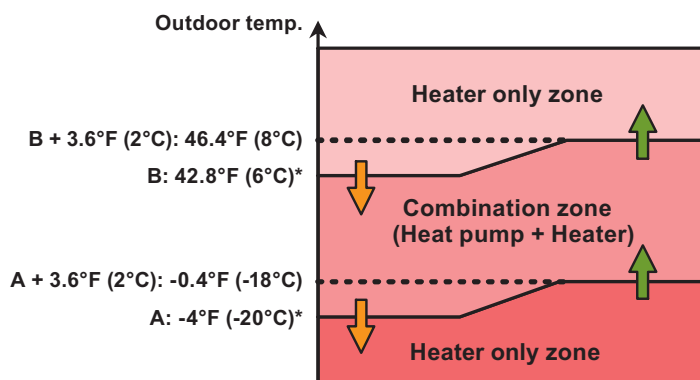

*: Adjustable by function setting 66 and 67

- Operation status

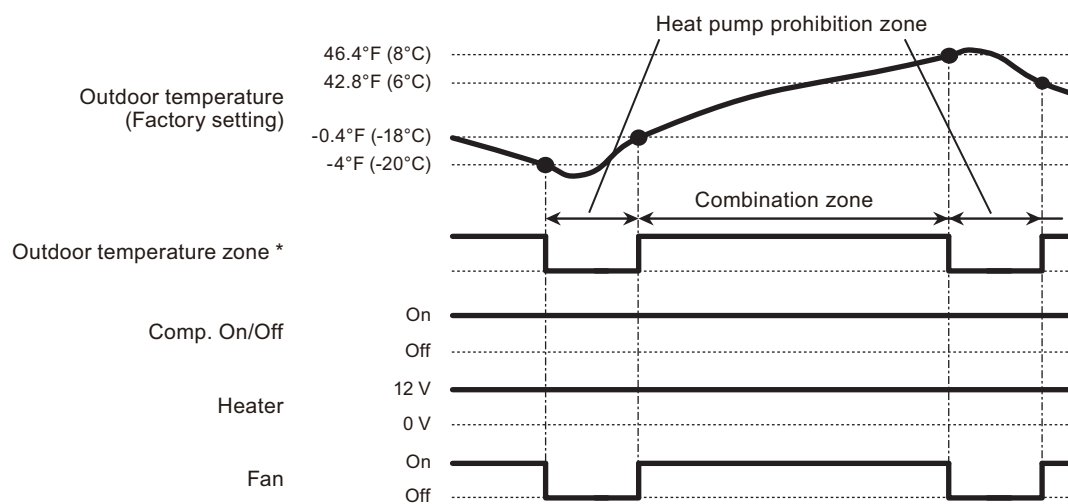

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.


NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run

■ Heating thermostat on for humidifier

Situation	Indoor unit				
	Mode	Function setting	Rotary SW	External output	
		Heating thermostat on no. 60		Heating thermostat on	Indoor unit fan operation status
Example of individual connection	5	60-05	7	CN47	Not used
	6	60-06	8	Output3	
	7	60-07	9	Output2	
	8	60-08	A	Output1	


- **Example of individual connection**

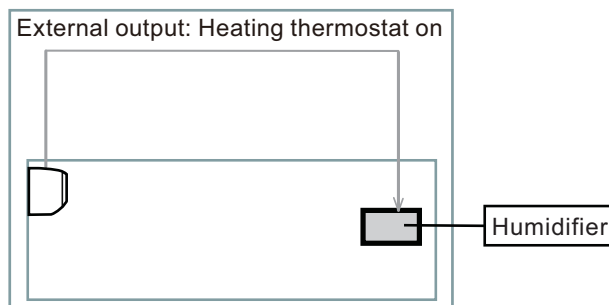

- **Operation status**

The heating thermostat output for CN47, Output1, Output2, and Output3 will be on when comp on or external heater on.

The heating thermostat output will be off when comp off and external heater off.

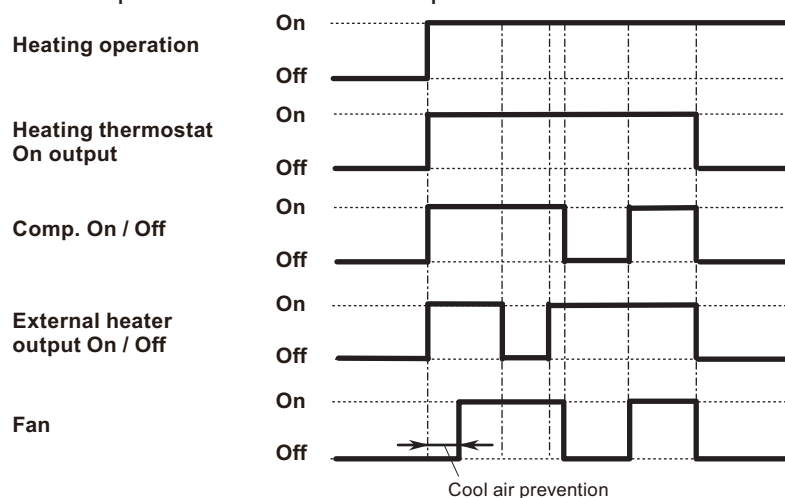

9. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.


NOTE: Incorrect settings can cause a product malfunction.

9-1. Function settings on indoor unit

By using some components on the PCB, you can change the function settings.

■ Component location

Components on the indoor unit main PCB used for the function settings are located as shown in the following figure.

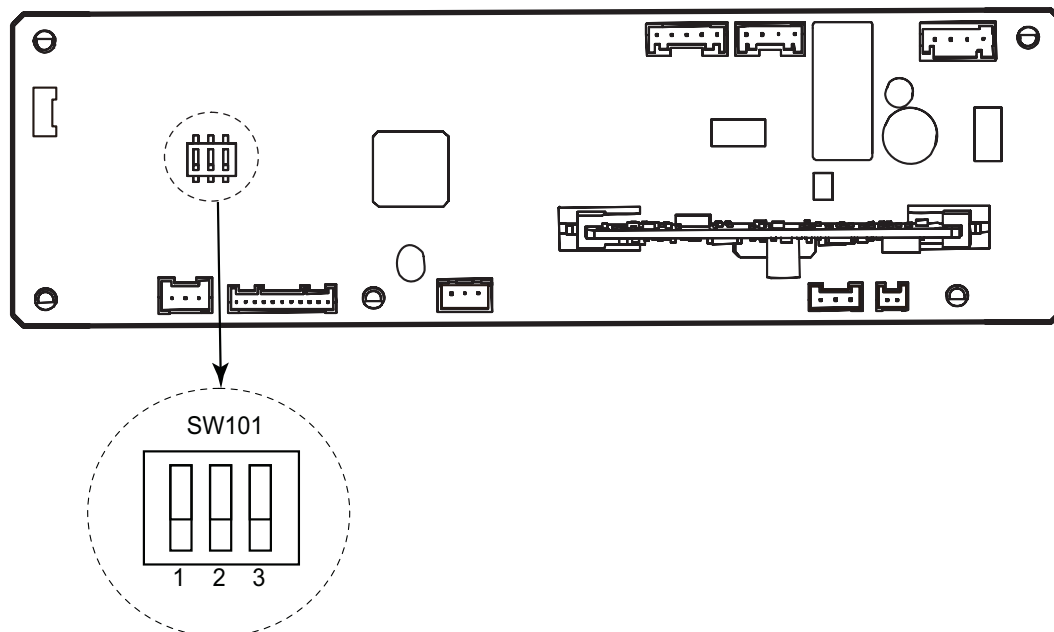

■ DIP switch setting

- SW101: Setting change prohibited

9-2. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

■ Setting procedure by using remote controller

Remote controller is not attached for this product. For details of the installing remote controller, refer to following information.

- Overview information: Operating manual of the remote controller
- Setting procedure: Installation manual of the remote controller

■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

NOTE: Setting will not be changed if invalid numbers or setting values are selected.

● Function setting list

	Function no.	Functions
1)	11	Filter sign
2)	20	Ceiling height
3)	22	Outlet directions
4)	30/31	Room temperature control for indoor unit sensor
5)	35/36	Room temperature control for wired remote controller sensor
6)	40	Auto restart
7)	42	Room temperature sensor switching
8)	44	Remote controller custom code
9)	46	External input control
10)	48	Room temperature sensor switching (Aux.)
11)	49	Indoor unit fan control for energy saving for cooling
12)	60	Switching functions for external output terminal
13)	61	Control switching of external heaters
14)	62	Operating temperature switching of external heaters
15)	66	Outdoor temperature zone boundary temperature A
16)	67	Outdoor temperature zone boundary temperature B
17)	71	Standby time for auxiliary equipment operation
18)	72	Heat pump backup setting
19)	73	Emergency heat for external output terminal
20)	75	External heater use in defrosting

1) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (2,500 hours)	
	01	Long interval (4,400 hours)	
	02	Short interval (1,250 hours)	
	03	No indication	◆

2) Ceiling height (For Compact cassette type only)

Select the appropriate ceiling height according to the place of installation.

Function number	Setting value	Setting description	Factory setting
20	00	Standard	◆
	01	High ceiling	

For the specific height for each setting value, refer to “Installation space” in Chapter 2. ["Dimensions"](#) on page 4.

In case of cassette type models:

The ceiling height values are for the 4-way outlet. Do not change this setting in the 3-way outlet mode.

9,000 Btu/h model cannot be installed in high ceiling. Do not change this setting.

3) Outlet directions (For Compact cassette type only)

Select the appropriate number of outlet directions according to the installation conditions.

Function number	Setting value	Setting description	Factory setting
22	00	4-way	◆
	01	3-way	

4) Room temperature control for indoor unit sensor

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is 78°F and the setting value is "03" (-2°F), the corrected temp. will be 80°F (78°F - [-2°F]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

Function number		Setting value	Setting description	Factory setting
30 (For cooling)	31 (For heating)	00	Standard setting	◆
		01	No correction 0.0 °F (0.0 °C)	
		02	-1 °F (-0.5 °C)	More cooling Less heating
		03	-2 °F (-1.0 °C)	
		04	-3 °F (-1.5 °C)	
		05	-4 °F (-2.0 °C)	
		06	-5 °F (-2.5 °C)	
		07	-6 °F (-3.0 °C)	
		08	-7 °F (-3.5 °C)	
		09	-8 °F (-4.0 °C)	
		10	+1 °F (+0.5 °C)	Less cooling More heating
		11	+2 °F (+1.0 °C)	
		12	+3 °F (+1.5 °C)	
		13	+4 °F (+2.0 °C)	
		14	+5 °F (+2.5 °C)	
		15	+6 °F (+3.0 °C)	
		16	+7 °F (+3.5 °C)	
		17	+8 °F (+4.0 °C)	

5) Room temperature control for wired remote controller sensor

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to "Both" (01).

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

Function number		Setting value	Setting description	Factory setting
35 (For cooling)	36 (For heating)	00	Standard setting	◆
		01	No correction 0.0 °F (0.0 °C)	
		02	-1 °F (-0.5 °C)	More cooling Less heating
		03	-2 °F (-1.0 °C)	
		04	-3 °F (-1.5 °C)	
		05	-4 °F (-2.0 °C)	
		06	-5 °F (-2.5 °C)	
		07	-6 °F (-3.0 °C)	
		08	-7 °F (-3.5 °C)	
		09	-8 °F (-4.0 °C)	
		10	+1 °F (+0.5 °C)	Less cooling More heating
		11	+2 °F (+1.0 °C)	
		12	+3 °F (+1.5 °C)	
		13	+4 °F (+2.0 °C)	
		14	+5 °F (+2.5 °C)	
		15	+6 °F (+3.0 °C)	
		16	+7 °F (+3.5 °C)	
		17	+8 °F (+4.0 °C)	

6) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

NOTE: Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

7) Room temperature sensor switching

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

NOTE: Remote controller sensor must be turned on by using the remote controller.

8) Remote controller custom code

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

9) External input control

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1	◆
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2	

10) Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

When the setting value is set to "Both" (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

11) Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

NOTES:

- As the factory setting, this setting is initially invalidated.
- Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter.
To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

12) Switching functions for external output terminal

Functions of the external output terminal can be switched. For details, refer to “External input and output”.

Function number	Setting value	Setting description	Factory setting
60	00	Operation status	◆
	01—04	Cooling thermostat On	
	05	Heating operation	
	06	Operation/Stop	
	07—08	Cooling thermostat On	
	09	Error status	
	10	Indoor unit fan operation status	
	11	External heater	

13) Control switching of external heaters

Sets the control method for external heater to be used.

For details, refer to “External heater output” in Chapter 8-4. ["Details of function"](#) on page 31.

Function number	Setting value	Setting description	Factory setting
61	00	Auxiliary heater control 1	◆
	01	Auxiliary heater control 2	
	02	Heat pump prohibition control	
	03	Auxiliary heater control by outdoor temperature 1	
	04	Auxiliary heater control by outdoor temperature 2	
	05	Auxiliary heater control by outdoor temperature 3	
	06	Auxiliary heat pump control	
	07	Auxiliary heat pump control by outdoor temperature 1	
	08	Auxiliary heat pump control by outdoor temperature 2	
	09	Auxiliary heat pump control by outdoor temperature 3	

14) Operating temperature switching of external heaters

Sets the temperature conditions when the external heater is ON.

For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 31.

Function number	Setting value	Setting description				Factory setting
		Setting value of function 61:				
		00		01 to 09		
		Heater: On	Heater: Off	Heater: On	Heater: Off	
62	00	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	-0.9 °F (-0.5 °C)	0.9 °F (0.5 °C)	◆
	01	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	-1.8 °F (-1 °C)	0.9 °F (0.5 °C)	
	02	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	-3.6 °F (-2 °C)	0.9 °F (0.5 °C)	
	03	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	-5.4 °F (-3 °C)	0.9 °F (0.5 °C)	
	04	-7.2 °F (-4 °C)	-1.8 °F (-1 °C)	-7.2 °F (-4 °C)	0.9 °F (0.5 °C)	
	05	-9.0 °F (-5 °C)	-1.8 °F (-1 °C)	-9.0 °F (-5 °C)	0.9 °F (0.5 °C)	
	06	-5.4 °F (-3 °C)	-0.9 °F (-0.5 °C)	-0.9 °F (-0.5 °C)	0 °F (0 °C)	
	07	-3.6 °F (-2 °C)	-0.9 °F (-0.5 °C)	-1.8 °F (-1 °C)	0 °F (0 °C)	
	08	-3.6 °F (-2 °C)	-0.9 °F (-0.5 °C)	-3.6 °F (-2 °C)	0 °F (0 °C)	
	09	-5.4 °F (-3 °C)	-0.9 °F (-0.5 °C)	-5.4 °F (-3 °C)	0 °F (0 °C)	
	10	-7.2 °F (-4 °C)	-0.9 °F (-0.5 °C)	-7.2 °F (-4 °C)	0 °F (0 °C)	
	11	-9.0 °F (-5 °C)	-0.9 °F (-0.5 °C)	-9.0 °F (-5 °C)	0 °F (0 °C)	
	12	-5.4 °F (-3 °C)	0 °F (0 °C)	-0.9 °F (-0.5 °C)	-0.9 °F (-0.5 °C)	
	13	-3.6 °F (-2 °C)	0 °F (0 °C)	-1.8 °F (-1 °C)	-0.9 °F (-0.5 °C)	
	14	-3.6 °F (-2 °C)	0 °F (0 °C)	-3.6 °F (-2 °C)	-0.9 °F (-0.5 °C)	
	15	-5.4 °F (-3 °C)	0 °F (0 °C)	-5.4 °F (-3 °C)	-0.9 °F (-0.5 °C)	
	16	-7.2 °F (-4 °C)	0 °F (0 °C)	-7.2 °F (-4 °C)	-0.9 °F (-0.5 °C)	
	17	-9.0 °F (-5 °C)	0 °F (0 °C)	-9.0 °F (-5 °C)	-0.9 °F (-0.5 °C)	

15) Outdoor temperature zone boundary temperature A

Setting required if changing of the outdoor temperature setting for heat pump prohibition zone is required when auxiliary heater control by outdoor temperature 1 and 2 are performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 31.

Function number	Setting value	Setting description	Factory setting
66	00	-4.0 °F (-20 °C)	◆
	01	-0.4 °F (-18 °C)	
	02	3.2 °F (-16 °C)	
	03	6.8 °F (-14 °C)	
	04	10.4 °F (-12 °C)	
	05	14.0 °F (-10 °C)	
	06	17.6 °F (-8 °C)	
	07	21.2 °F (-6 °C)	
	08	24.8 °F (-4 °C)	

16) Outdoor temperature zone boundary temperature B

Setting required if changing of the outdoor temperature setting for heat pump only zone is required when auxiliary heater control by outdoor temperature 1 is performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 31.

Function number	Setting value	Setting description	Factory setting
67	00	42.8 °F (6 °C)	◆
	01	14.0 °F (-10 °C)	
	02	17.6 °F (-8 °C)	
	03	21.2 °F (-6 °C)	
	04	24.8 °F (-4 °C)	
	05	28.4 °F (-2 °C)	
	06	32.0 °F (0 °C)	
	07	35.6 °F (2 °C)	
	08	39.2 °F (4 °C)	
	09	42.8 °F (6 °C)	
	10	46.4 °F (8 °C)	
	11	50.0 °F (10 °C)	
	12	53.6 °F (12 °C)	
	13	57.2 °F (14 °C)	
	14	60.8 °F (16 °C)	
	15	64.4 °F (18 °C)	

17) Standby time for auxiliary equipment operation

Sets the standby time until the auxiliary equipment operation starts during primary equipment operation.

For details, refer to Chapter 8-4. ["Details of function"](#) on page 31.

Function number	Setting value	Setting description	Factory setting
71	00	Disable	◆
	01	1 minute	
	02	2 minutes	
	•	•	
	•	•	
	•	•	
	98	98 minutes	
	99	99 minutes	

18) Heat pump backup setting

Enables or disables the heat pump backup instruction from the outdoor unit.

This function will be usable provided that the corresponding outdoor unit is connected.

Function number	Setting value	Setting description	Factory setting
72	00	Disable	◆
	01	Enable	

19) Emergency heat for external output terminal

Enables or disables emergency heat input.

Function number	Setting value	Setting description	Factory setting
73	00	Disable	◆
	01	Enable	

NOTE: When this function is used, IR Receiver Unit is necessary.

20) External heater use in defrosting





Enables or disables external heater use in defrosting.

NOTE: Inappropriate heater selection may cause cold air in defrosting.

Function number	Setting value	Setting description	Factory setting
75	00	Disable	◆
	01	Enable	



10. Accessories

    10-1. Models: ACUH09LUAS1, ACUH12LUAS1, and ACUH18LUAS1

Part name	Exterior	Q'ty	Part name	Exterior	Q'ty
Operating manual		1	Drain hose insulation		1
Installation manual		1	Hose band		1
Template (Carton top)		1	Coupler heat insulation (large)		1
Special nut A (large flange)		4	Coupler heat insulation (small)		1
Special nut B (small flange)		4	Cable tie (for electrical wiring)		2
Drain hose (Ø3/4 in [I.D.], Ø1-1/16 in [O.D.])		1			


11. Optional parts

11-1. Controllers


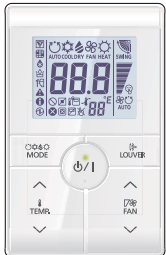
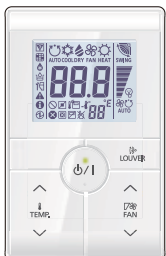
Exterior	Part name	Model name	Summary
	Wired Remote Controller	UTY-RNRUZ*	Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room. Wire type: Non-polar 2-wire
	Simple Remote Controller	UTY-RSRY	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Non-polar 2-wire (For Slim duct type only)
	Simple Remote Controller	UTY-RHRY	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, and temperature setting. Wire type: Non-polar 2-wire
	Wireless Remote Controller	UTY-LNTU	Unit control is performed by Wireless Remote Controller.



NOTE: Available functions may differ by the remote controller. For details, refer to the operation manual.

11-2. Cassette grille

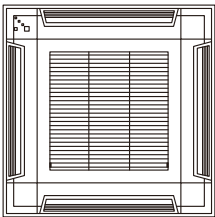Exterior	Part name	Model name	Summary
	Cassette Grille	UTG-CCGFGA	This cassette grille can be installed appropriately on the grid type ceiling common in the office.

 11-3. Others

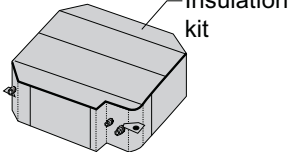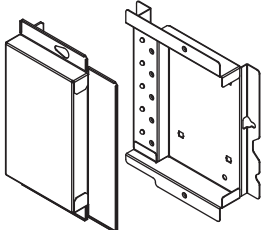Exterior	Part name	Model name	Summary
	External Connect Kit	UTY-XWZXZG	Use to connect with various peripheral devices and air conditioner PCB. For control output port.
	Air Outlet Shutter Plate	UTR-YDZB	Installed at the air outlet when 3-directions mode is performed.
	Fresh Air Intake Kit	UTZ-VXAA	By attaching Fresh Air Intake Kit to the indoor unit, it can be taken in fresh air of up to 10% of "high" air volume of the indoor unit. Do not branch the connecting duct into multiple rooms.
	Insulation for High Humidity	UTZ-KXGC	Install when the under-roof condition is expected to be the humidity of over 80% and the temperature of over 86 °F(30 °C).
	External Input and Output PCB	UTY-XCSX	Use to connect with external devices and air conditioner PCB.
	External Input and Output PCB Box	UTZ-GXEA	For installing the External input and output PCB.
	WLAN Adapter	UTY-TFSXZ2	Remotely manage an air conditioning system using mobile devices such as smartphones and tablets. For connection indoor unit with UART interface. Appropriate application for each region is required to use this option. For details, contact FGL sales company.
	Modbus Converter	UTY-VMSX	For connection between indoor unit with UART interface and a Modbus open network.
	KNX Converter	UTY-VKSX	For connection between indoor unit with UART interface and a KNX open network.

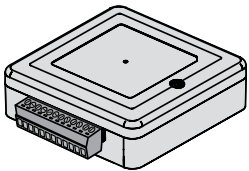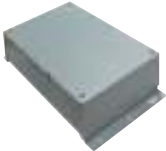Exterior	Part name	Model name	Summary
	Thermostat Converter	UTY-TTRX	This converter can control Fujitsu General products using a third-party thermostat controller.
	Network Converter	UTY-VTGX	This converter is required when connecting single split system to VRF network system.
	Network Converter (AC power supply)	UTY-VTGXV	This converter is required when connecting single split system to VRF network system.
	External Switch Controller	UTY-TERX	Air conditioner switching can be controlled by connecting other external sensor switches.

Part 2. OUTDOOR UNIT

SINGLE TYPE:

AOUH09LUAS1

AOUH12LUAS1

AOUH18LUAS1

1. Specifications

Type				Inverter, Heat pump			
Model name				AOUH09LUAS1	AOUH12LUAS1	AOUH18LUAS1	
Power supply				208/230 V ~ 60 Hz			
Power supply intake				Outdoor unit			
Available voltage range				187—253 V			
Starting current			A	4.6	6.4	8.1	
Fan	Airflow rate	Cooling	CFM (m³/h)	906 (1,540)	1,171 (1,990)	1,395 (2,370)	
		Heating			1,089 (1,850)	1,460 (2,480)	
	Type × Qty				Propeller fan × 1		
Motor output		W		23	49		
Sound pressure level*		Cooling	dB (A)	44	48	52	
		Heating		48	49	55	
Heat exchanger type		Dimensions (H × W × D)	in (mm)	Main1: 19-13/16 × 34-11/16 × 11/16 (504 × 881 × 18.19) Main2: 19-13/16 × 33-1/2 × 11/16 (504 × 851 × 18.19)	Main1: 23-1/8 × 34-11/16 × 11/16 (588 × 881 × 18.19) Main2: 23-1/8 × 33-1/2 × 11/16 (588 × 851 × 18.19)		
		Fin pitch	FPI	20			
		Rows × Stages		Main1: 1 × 24 Main2: 1 × 24	Main1: 1 × 28 Main2: 1 × 28		
		Pipe type		Copper			
		Fin type	Type (Material)	Aluminum			
		Surface treatment	PC fin				
Compressor	Type	W			DC rotary		
	Motor output				900	1,030	
Refrigerant		Type	R410A				
		Charge	lb oz	2lbs.3oz.	2lbs.10oz.	2lbs.12oz.	
			g	1,000	1,200	1,250	
Refrigerant oil		Type	RB68A	RB68	RB68A		
		Amount	in³ (cm³)	20.7 (340)	24.4 (400)		
Enclosure		Material	Steel sheet				
		Color	Beige				
		Approximate color of Munsell 10YR 7.5/1.0					
Dimensions (H × W × D)	Net	in (mm)	21-5/16 × 31-7/16 × 11-7/16 (542 × 799 × 290)	24-7/8 × 31-7/16 × 11-7/16 (632 × 799 × 290)			
	Gross		23-11/16 × 37 × 14-3/4 (602 × 940 × 375)	27-1/4 × 37 × 14-3/4 (692 × 940 × 375)			
Weight	Net	lb (kg)	71 (32)	84 (38)	86 (39)		
	Gross		77 (35)	95 (43)			
Connection pipe	Size	Liquid	in (mm)	Ø 1/4 (Ø 6.35)			
		Gas		Ø 3/8 (Ø 9.52)		Ø 1/2 (Ø 12.7)	
	Method		Flare				
	Pre-charge length		ft (m)	49 (15)	66 (20)		
	Max. length			66 (20)	98 (30)		
	Max. height difference		49 (15)				
Operation range		Cooling	°F (°C)	14 to 115 (-10 to 46)			
		Heating		-5 to 75 (-21 to 24)			
Drain hose		Material	LDPE				
		Tip diameter	in (mm)	Ø 1/2 (Ø 13.0) (I. D.), Ø 5/8 to 11/16 (Ø 16.0 to 16.7) (O. D.)			


NOTES:

- Specifications are based on the following conditions:
 - Cooling: Indoor temperature of 80°FDB (26.67°CDB) / 67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB) / 75°FWB (23.9°CWB).
 - Heating: Indoor temperature of 70°FDB (21.11°CDB) / 59°FWB (15°CWB), and outdoor temperature of 47°FDB (8.33°CDB) / 43°FWB (6.11°CWB).
 - Pipe length: 24 ft 6 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)
- Protective function might work when using it outside the operation range.
- *: Sound pressure level
 - Measured values in manufacturer's anechoic chamber.
 - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.


2. Dimensions

2-1. Models: AOUH09LUAS1


Unit: in (mm)

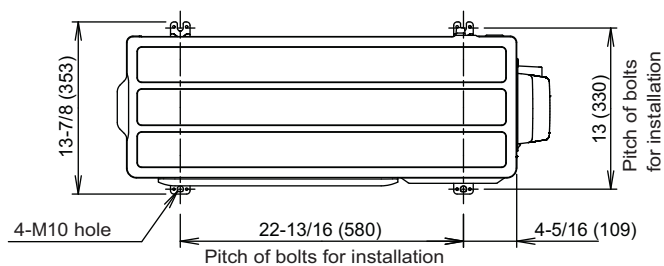


Top view

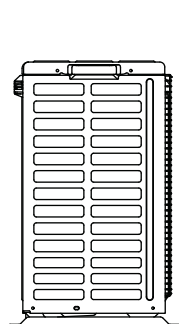


Side view

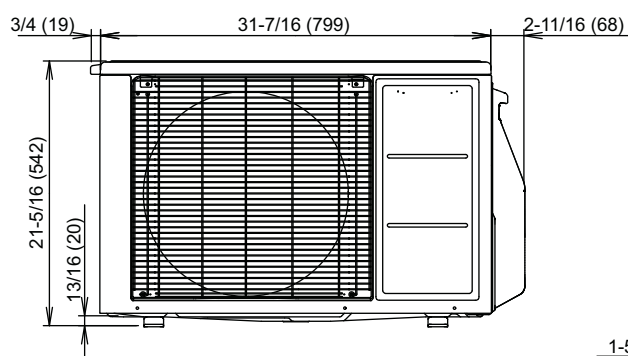


Front view

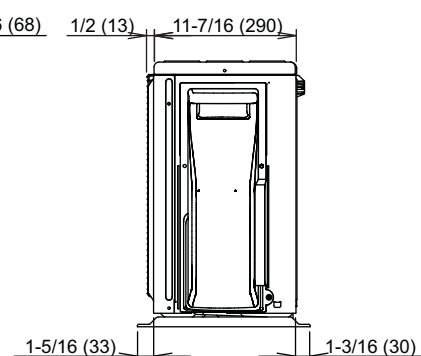

Side view

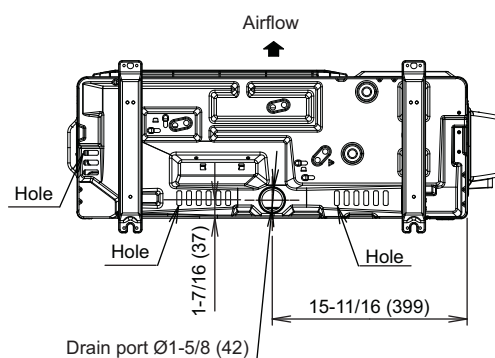

Bottom view

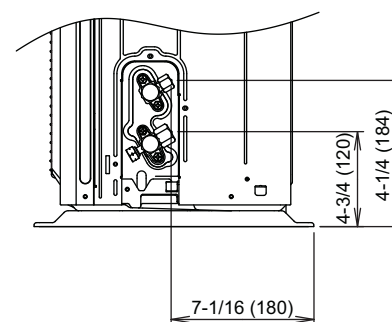


Side view (Valve part)

2-2. Models: AOUH12LUAS1 and AOUH18LUAS1


Unit: in (mm)

OUTDOOR UNIT
AOUH09-18LUAS1

OUTDOOR UNIT
AOUH09-18LUAS1

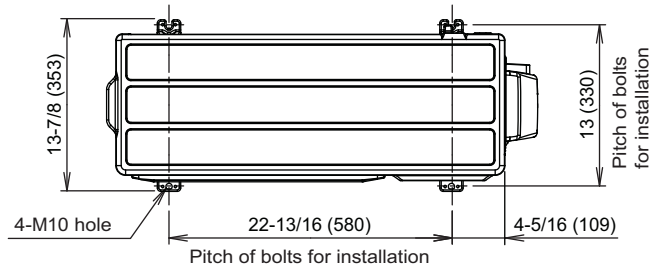


Top view

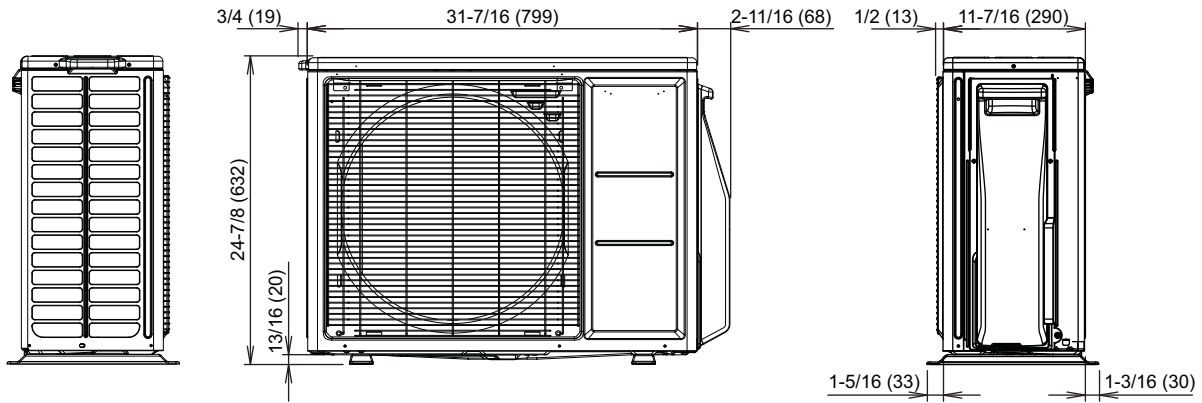


Side view

Front view

Side view

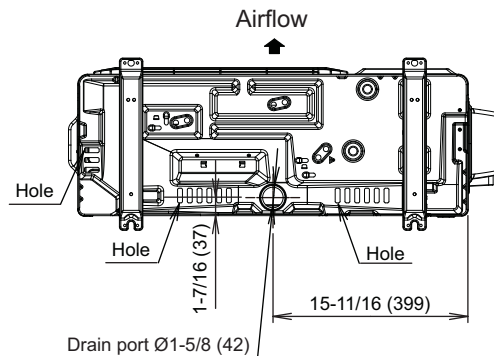

Bottom view

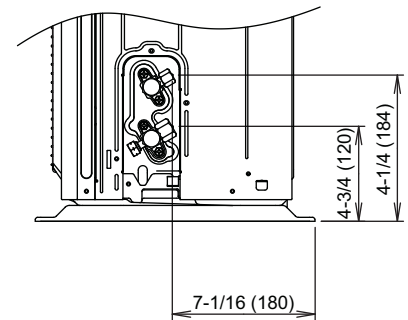

Side view (Valve part)

3. Installation space

3-1. Models: AOUH09LUAS1, AOUH12LUAS1, and AOUH18LUAS1

■ Space requirement

Provide sufficient installation space for product safety.

⚠ CAUTION

Keep the space shown in the installation examples.


If the installation is not performed accordingly, it could cause a short circuit and result in a lack of operating performance.

● Single outdoor unit installation


- When the upper space is open:

Unit: in (mm)


Obstacles at rear only

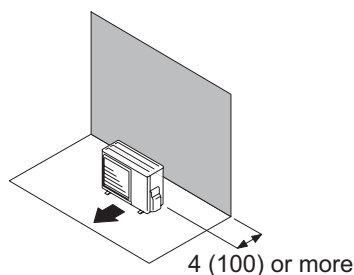


Obstacles at rear and sides

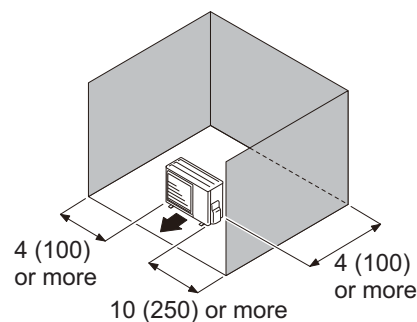

Obstacles at front

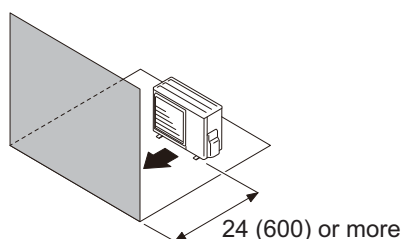


Obstacles at front and rear

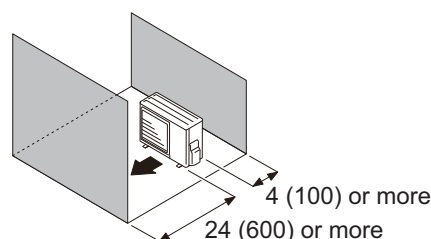


- When an obstruction in the upper space:

Unit: in (mm)

Obstacles at rear and above

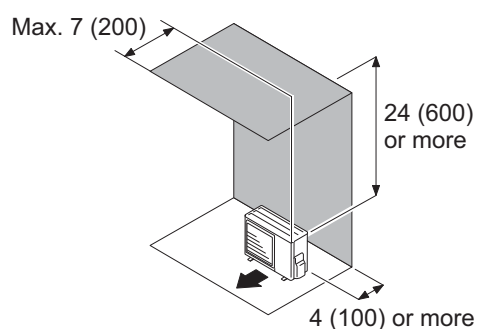

Obstacles at rear, sides, and above

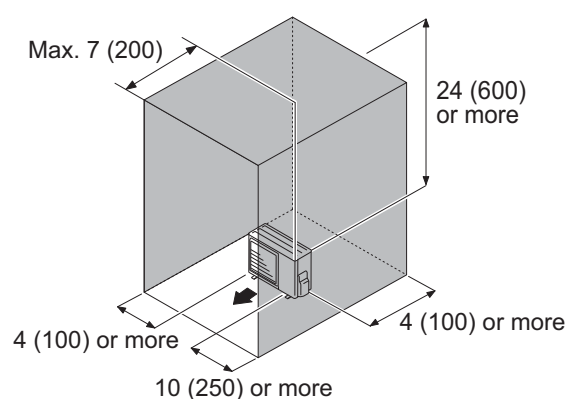


● Multiple outdoor unit installation


- Provide at least 10 in (250 mm) of space between the outdoor units if multiple units are installed.
- When routing the piping from the side of an outdoor unit, provide space for piping.
- No more than 3 units must be installed side by side.
When 4 units or more are arranged in a line, provide the space as shown in the following example **“When an obstruction in the upper space:”**.
- **When the upper space is open:**

Unit: in (mm)


Obstacles at rear only

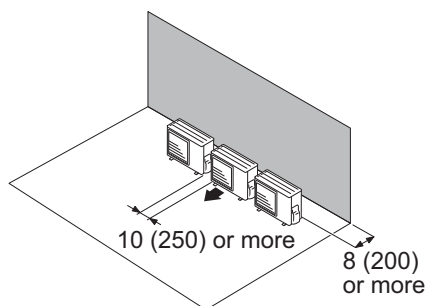

Obstacles at front only

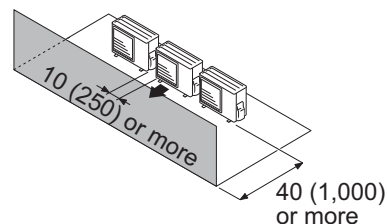


Obstacles at front and rear

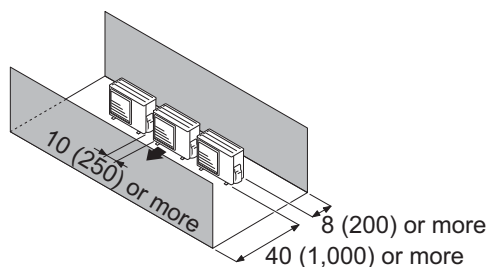

- **When an obstruction in the upper space:**

Unit: in (mm)


Obstacles at rear and above.

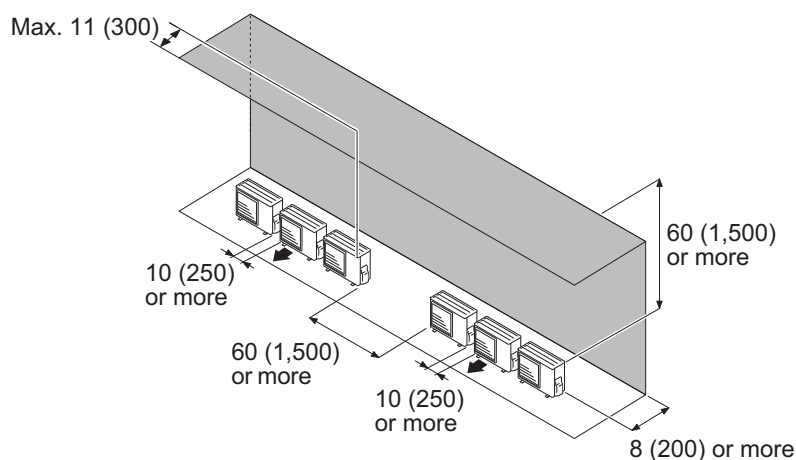



● Outdoor units installation in multi-row

Unit: in (mm)

Single parallel unit arrangement

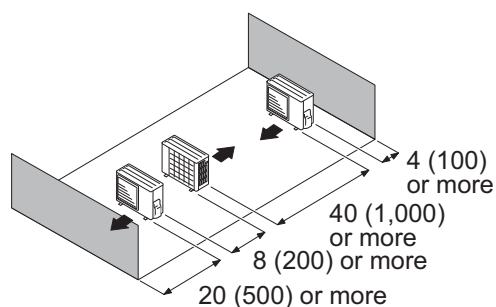

Multiple parallel unit arrangement

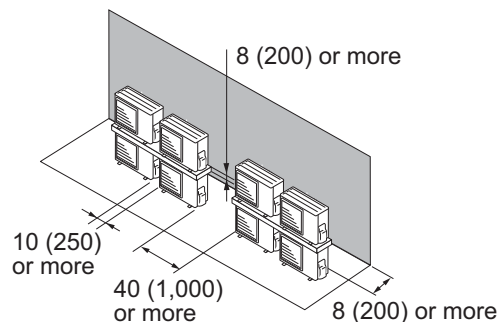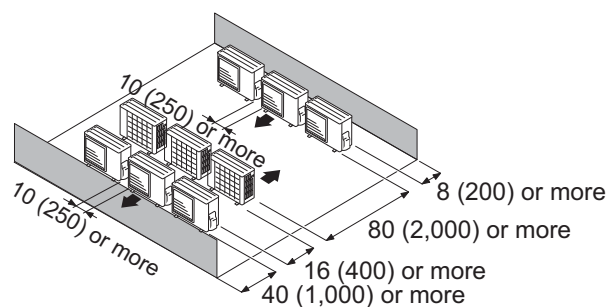


NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.


⚠ CAUTION

- Do not install the outdoor unit in two-stage where the drain water could freeze. Otherwise the drainage from the upper unit may form ice and cause a malfunction of the lower unit.
- When the outdoor temperature is 32 °F (0 °C) or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold climate. (For reverse cycle model only.)
- In area with heavy snowfall, if the inlet and outlet of the outdoor unit is blocked with snow, it might become difficult to get warm, and it is likely to cause product malfunction. Construct a canopy and a pedestal, or place the unit on a high stand that is locally installed.

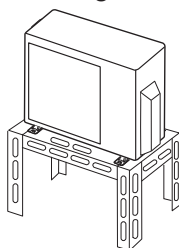


4. Refrigerant circuit

4-1. Models: AOUH09LUAS1

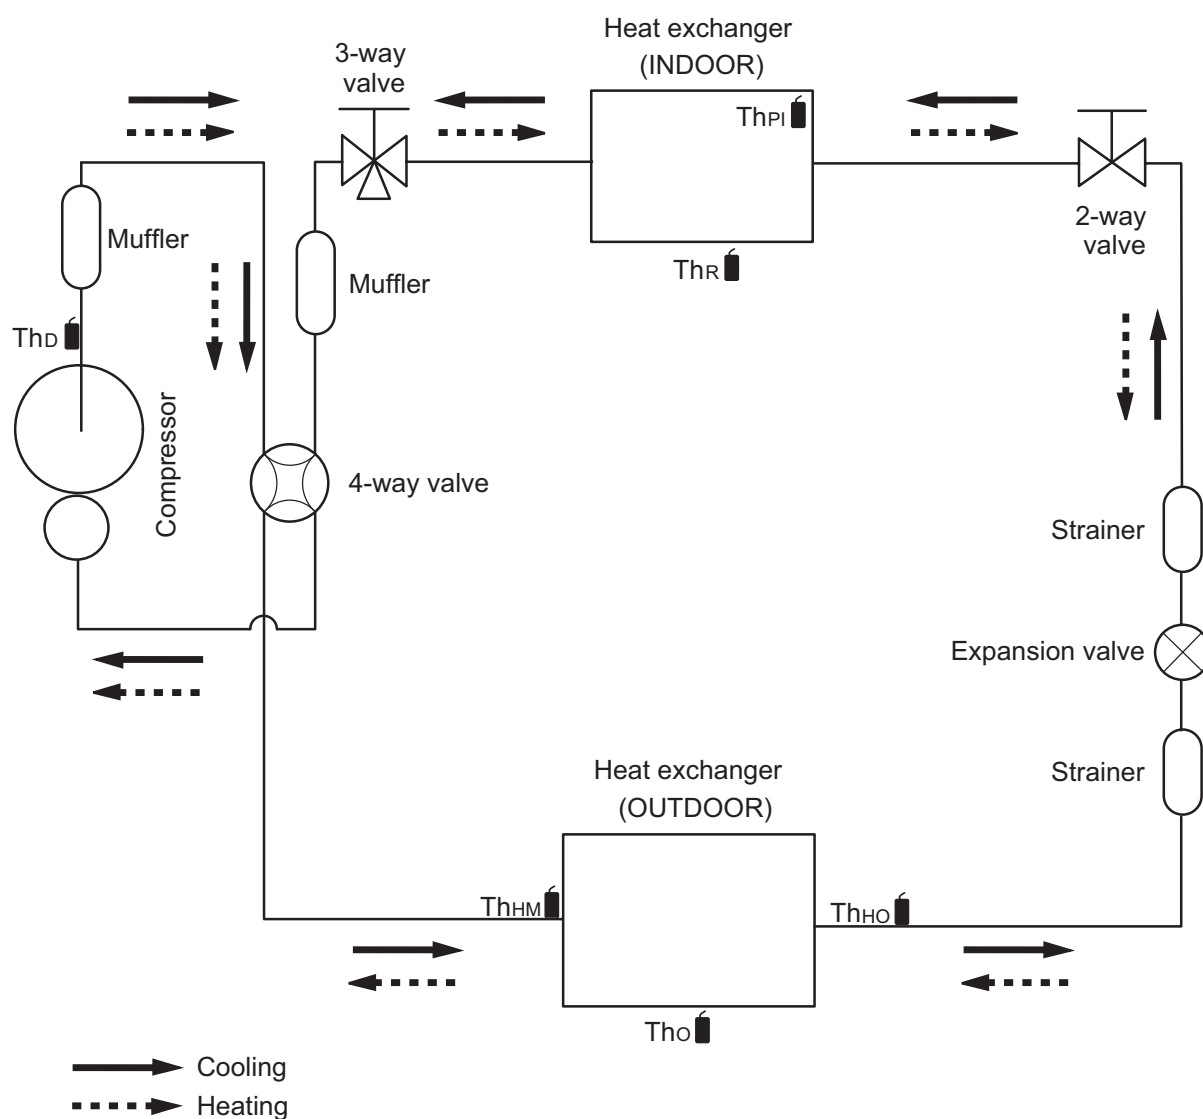

- Th_D : Thermistor (Discharge temperature)
 Th_{HM} : Thermistor (Heat exchanger middle temperature)
 Th_O : Thermistor (Outdoor temperature)
 Th_{HO} : Thermistor (Heat exchanger out temperature)
 Th_{PI} : Thermistor (Pipe temperature)
 Th_R : Thermistor (Room temperature)

4-2. Models: AOUH12LUAS1 and AOUH18LUAS1

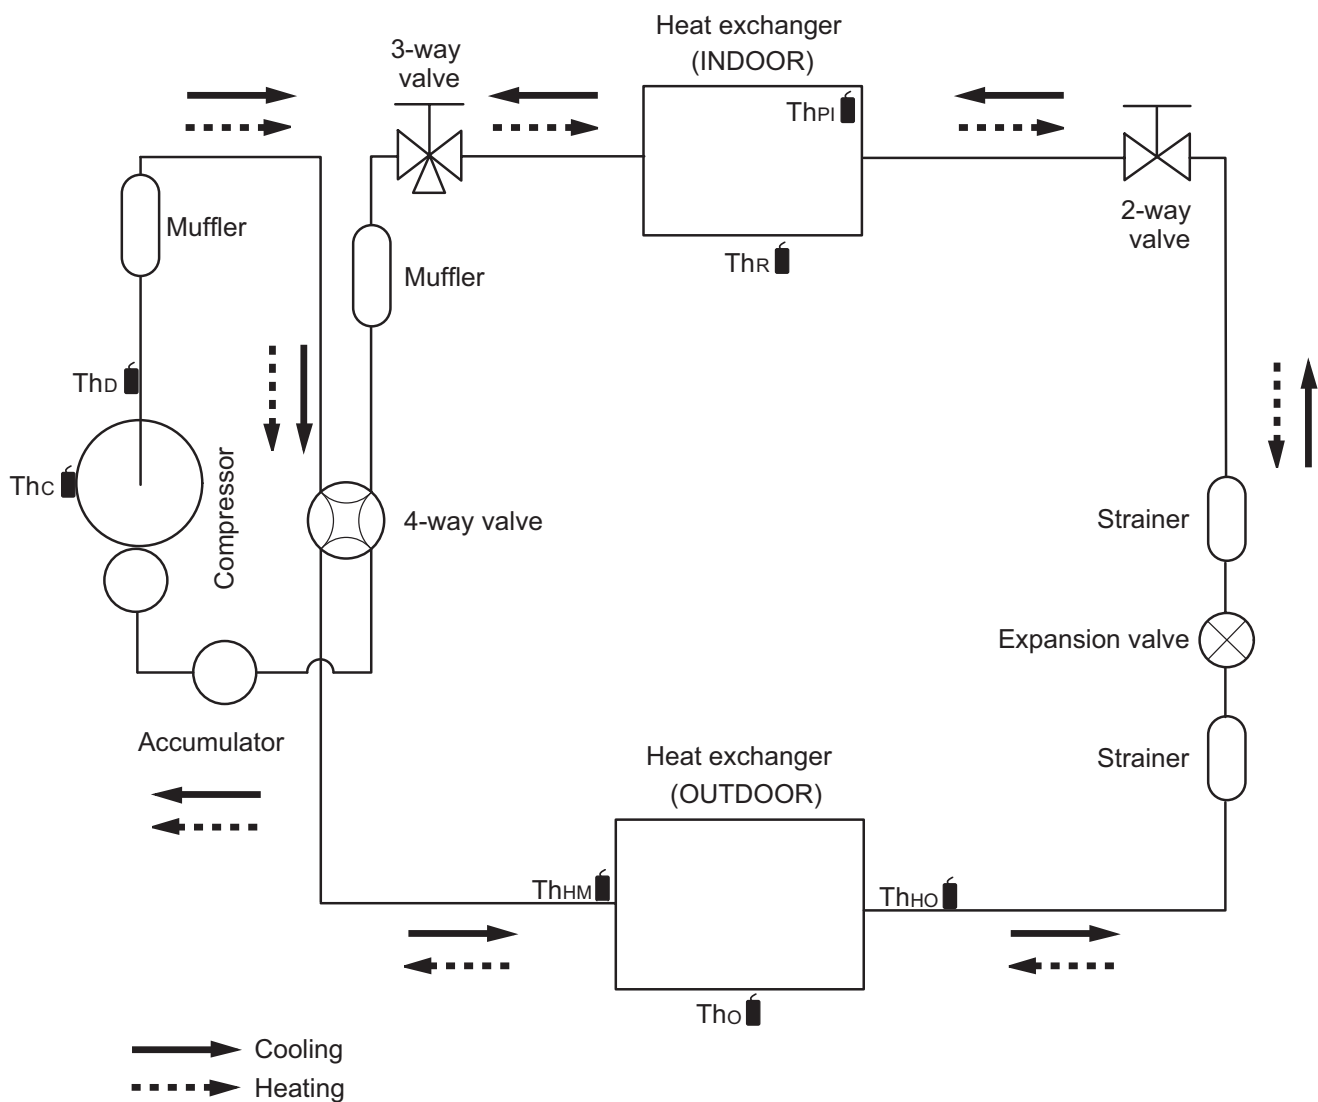

Thc : Thermistor (Compressor temperature)

ThD : Thermistor (Discharge temperature)

ThHM : Thermistor (Heat exchanger middle temperature)

Tho : Thermistor (Outdoor temperature)


ThHO : Thermistor (Heat exchanger out temperature)

ThPI : Thermistor (Pipe temperature)


ThR : Thermistor (Room temperature)

5. Wiring diagrams

5-1. Model: AOUH09LUAS1

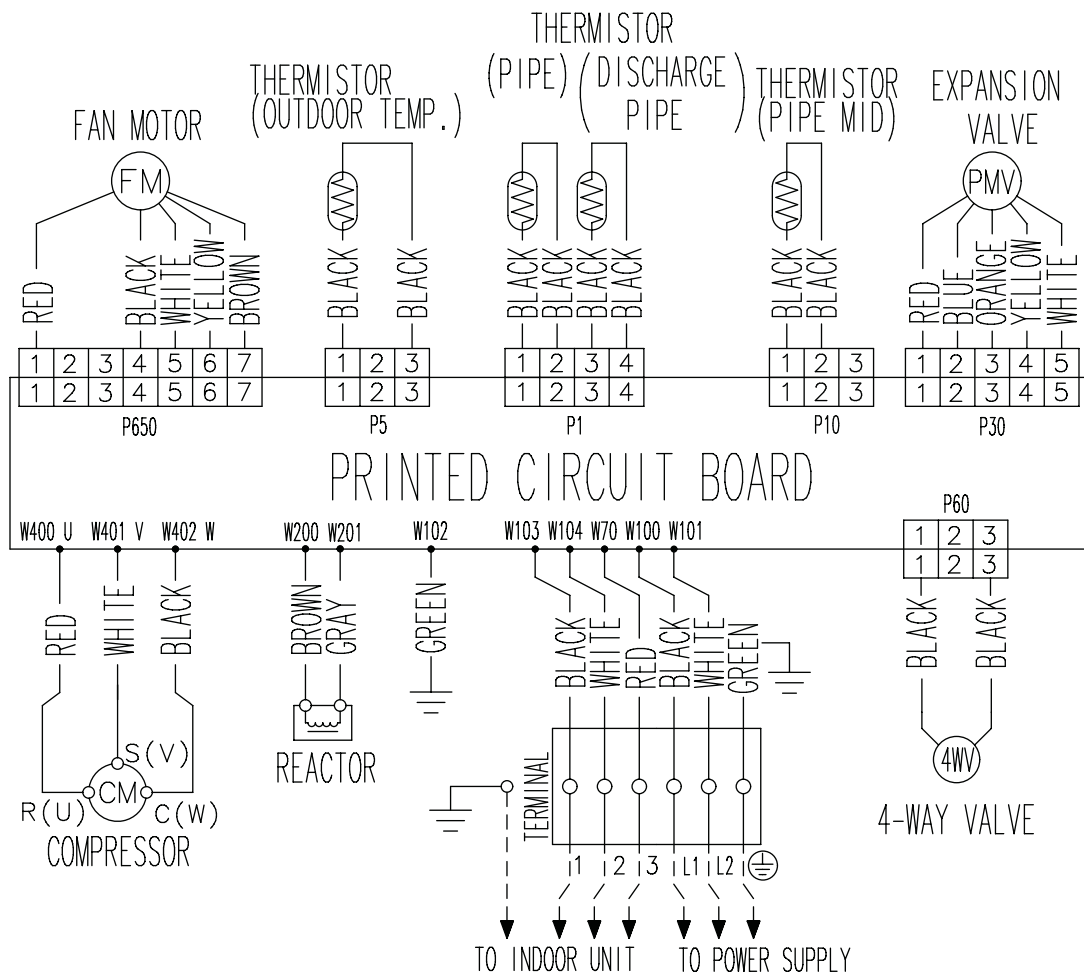


5-2. Models: AOUH12LUAS1 and AOUH18LUAS1

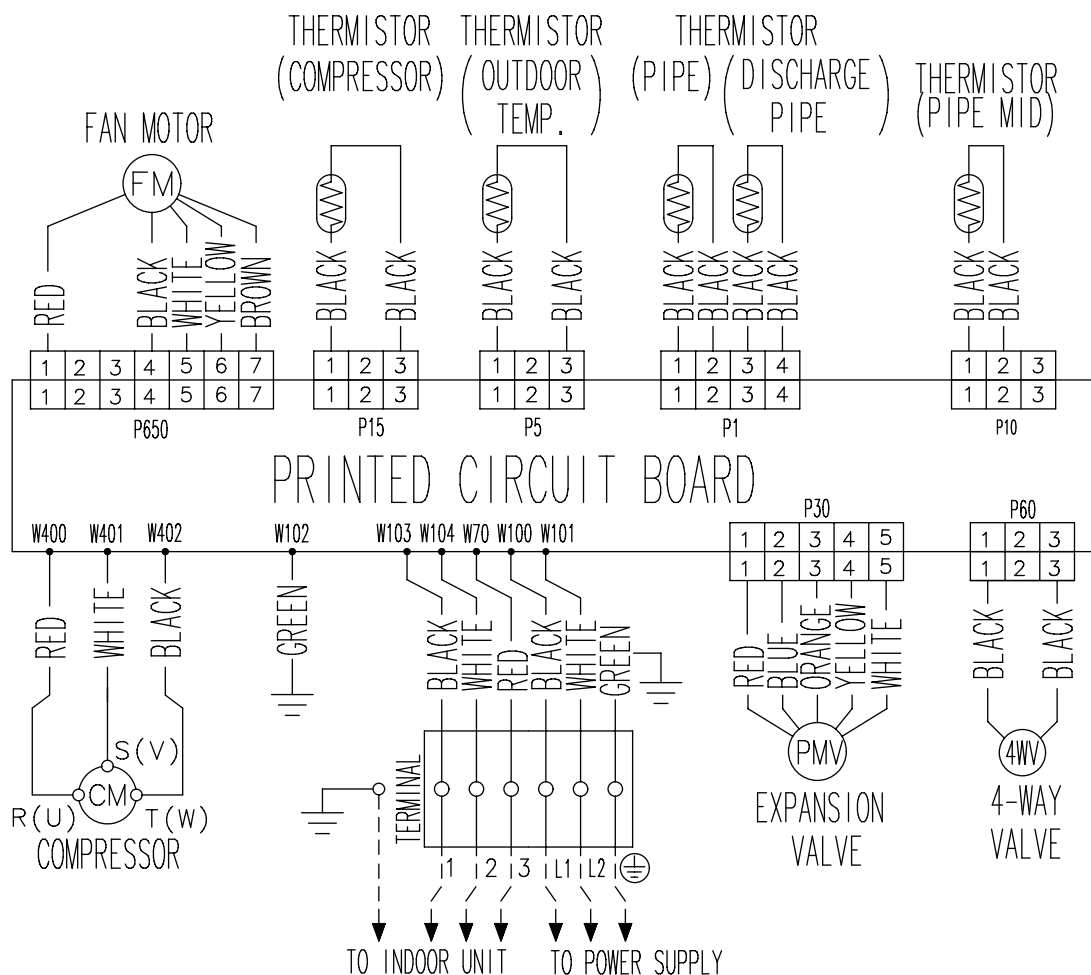

OUTDOOR UNIT
AOUH09-18LUAS1

OUTDOOR UNIT
AOUH09-18LUAS1

6. Capacity compensation rate for pipe length and height difference

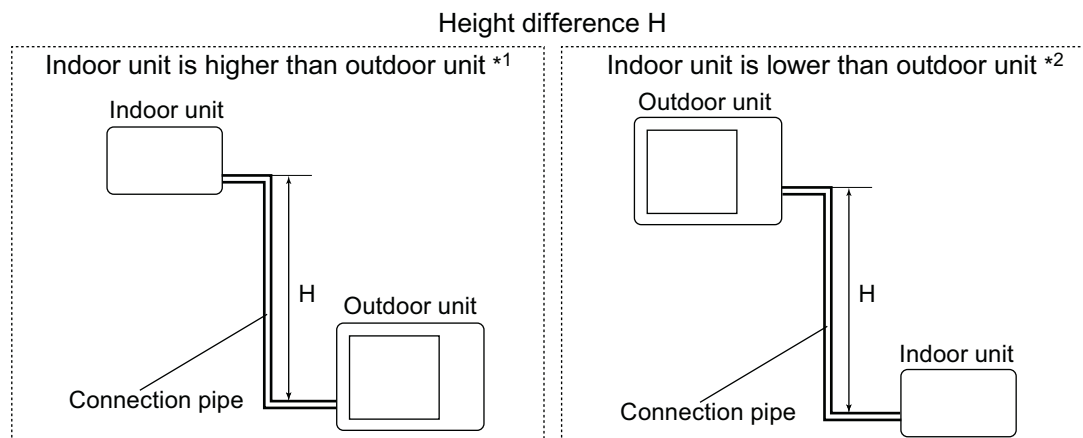

6-1. Model: AOUH09LUAS1

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.883	0.893
		10	33	—	—	0.956	0.897	0.907
		7.5	25	—	0.988	0.960	0.901	0.910
		5	16	1.021	0.992	0.964	0.904	0.915
		0	0	1.029	1.000	0.971	0.913	0.922
	Indoor unit is lower than outdoor unit *2	-5	-16	1.029	1.000	0.971	0.913	0.922
		-7.5	-25	—	1.000	0.971	0.913	0.922
		-10	-33	—	—	0.971	0.913	0.922
		-15	-49	—	—	—	0.913	0.922

HEATING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.901	0.884
		10	33	—	—	0.974	0.901	0.884
		7.5	25	—	1.000	0.974	0.901	0.884
		5	16	1.006	1.000	0.974	0.901	0.884
		0	0	1.006	1.000	0.974	0.901	0.884
	Indoor unit is lower than outdoor unit *2	-5	-16	1.001	0.995	0.969	0.896	0.880
		-7.5	-25	—	0.993	0.967	0.894	0.878
		-10	-33	—	—	0.965	0.892	0.876
		-15	-49	—	—	—	0.883	0.867

6-2. Model: AOUH12LUAS1

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.877	0.874
		10	33	—	—	0.956	0.891	0.888
		7.5	25	—	0.988	0.960	0.895	0.892
		5	16	1.017	0.992	0.964	0.899	0.895
		0	0	1.025	1.000	0.971	0.906	0.902
	Indoor unit is lower than outdoor unit *2	-5	-16	1.025	1.000	0.971	0.906	0.902
		-7.5	-25	—	1.000	0.971	0.906	0.902
		-10	-33	—	—	0.971	0.906	0.902
		-15	-49	—	—	—	0.906	0.902

HEATING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.933	0.925
		10	33	—	—	0.981	0.933	0.925
		7.5	25	—	1.000	0.981	0.933	0.925
		5	16	1.017	1.000	0.981	0.933	0.925
		0	0	1.017	1.000	0.981	0.933	0.925
	Indoor unit is lower than outdoor unit *2	-5	-16	1.012	0.995	0.976	0.928	0.920
		-7.5	-25	—	0.993	0.974	0.926	0.918
		-10	-33	—	—	0.971	0.923	0.916
		-15	-49	—	—	—	0.914	0.906

6-3. Model: AOUH18LUAS1

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length								
		m		5	7.5	10	15	20	25	30
			ft	16	25	33	49	66	82	98
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	-	-	-	0.951	0.950	0.947	0.941
		10	33	-	-	0.979	0.967	0.966	0.962	0.956
		7.5	25	-	0.988	0.983	0.971	0.970	0.966	0.960
		5	16	0.994	0.992	0.987	0.975	0.974	0.970	0.964
		0	0	1.002	1.000	0.995	0.983	0.982	0.978	0.972
	Indoor unit is lower than outdoor unit *2	-5	-16	1.002	1.000	0.995	0.983	0.982	0.978	0.972
		-7.5	-25	-	1.000	0.995	0.983	0.982	0.978	0.972
		-10	-33	-	-	0.995	0.983	0.982	0.978	0.972
		-15	-49	-	-	-	0.983	0.982	0.978	0.972

HEATING		Pipe length								
		m		5	7.5	10	15	20	25	30
			ft	16	25	33	49	66	82	98
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	-	-	-	0.994	0.979	0.949	0.919
		10	33	-	-	1.012	0.994	0.979	0.949	0.919
		7.5	25	-	1.000	1.012	0.994	0.979	0.949	0.919
		5	16	0.969	1.000	1.012	0.994	0.979	0.949	0.919
		0	0	0.969	1.000	1.012	0.994	0.979	0.949	0.919
	Indoor unit is lower than outdoor unit *2	-5	-16	0.964	0.995	1.007	0.989	0.974	0.944	0.915
		-7.5	-25	-	0.993	1.004	0.986	0.972	0.942	0.911
		-10	-33	-	-	1.002	0.984	0.969	0.940	0.909
		-15	-49	-	-	-	0.974	0.959	0.930	0.899

7. Additional charge calculation

7-1. Model: AOUH09LUAS1

Refrigerant type		R410A
Refrigerant amount	lb oz	2lbs.3oz.
	g	1,000

■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.2 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge	oz	0	4.0	
	g	0	100	

7-2. Model: AOUH12LUAS1

Refrigerant type		R410A
Refrigerant amount	lb oz	2lbs.10oz.
	g	1,200

■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.2 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge	oz	0	4.0	
	g	0	100	

7-3. Model: AOUH18LUAS1

Refrigerant type		R410A
Refrigerant amount	lb oz	2lbs.12oz.
	g	1,250

■ Refrigerant charge

Total pipe length	ft	66 or less	82 or less	98 (Max.)	0.2 oz/ft (20 g/m)
	m	20 or less	25 or less	30 (Max.)	
Additional charge	oz	0	4.0	7.0	
	g	0	100	200	

8. Airflow

8-1. Model: AOUH09LUAS1

● Cooling

Airflow	
m ³ /h	1,540
l/s	428
CFM	906

● Heating

Airflow	
m ³ /h	1,540
l/s	428
CFM	906

8-2. Model: AOUH12LUAS1

● Cooling

Airflow	
m ³ /h	1,990
l/s	553
CFM	1,171

● Heating

Airflow	
m ³ /h	1,850
l/s	514
CFM	1,089

8-3. Model: AOUH18LUAS1

● Cooling

Airflow	
m ³ /h	2,370
l/s	658
CFM	1,395

● Heating


Airflow	
m ³ /h	2,480
l/s	689
CFM	1,460

9. Operation noise (sound pressure)


9-1. Noise level curve

Model: AOUH09LUAS1

Cooling

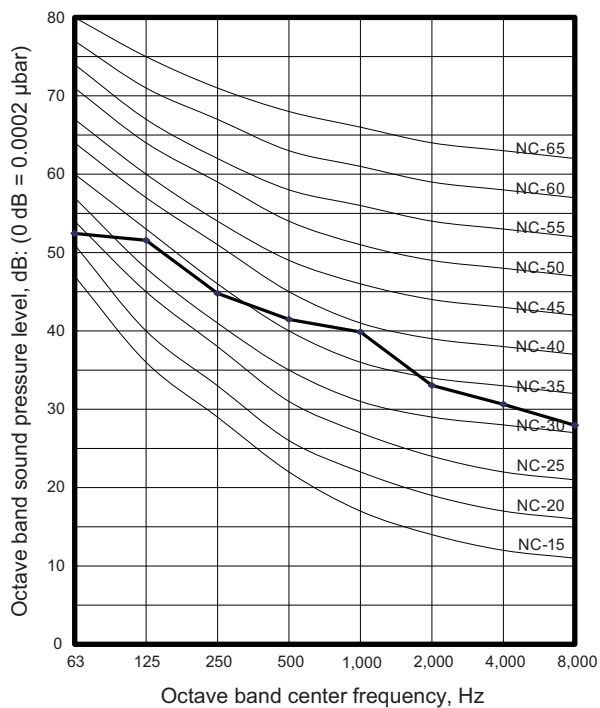


Heating

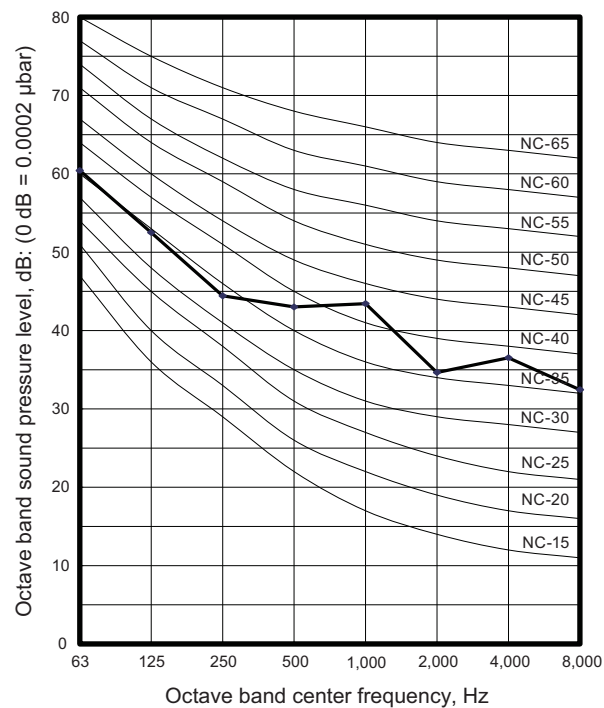


Model: AOUH12LUAS1

Cooling

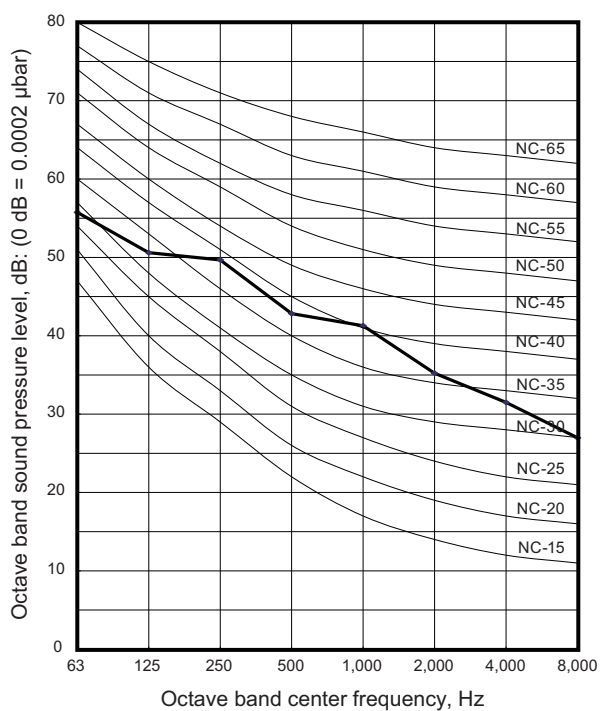


Heating

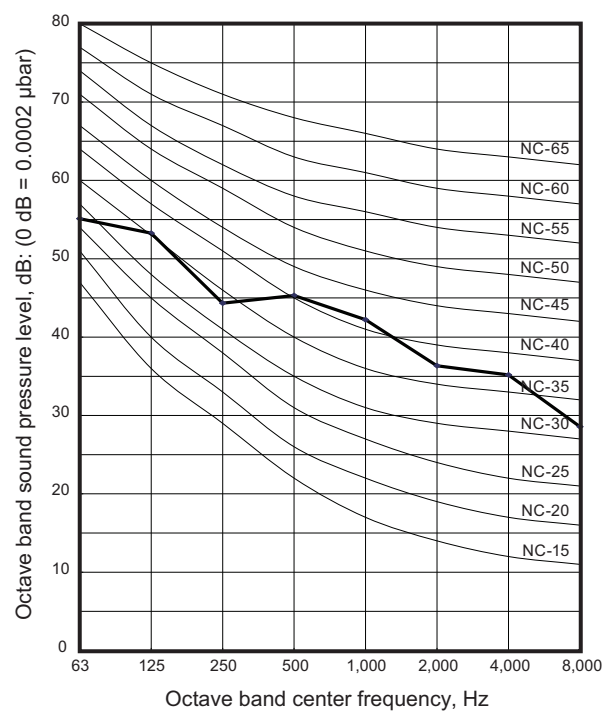


Model: AOUH18LUAS1



Cooling

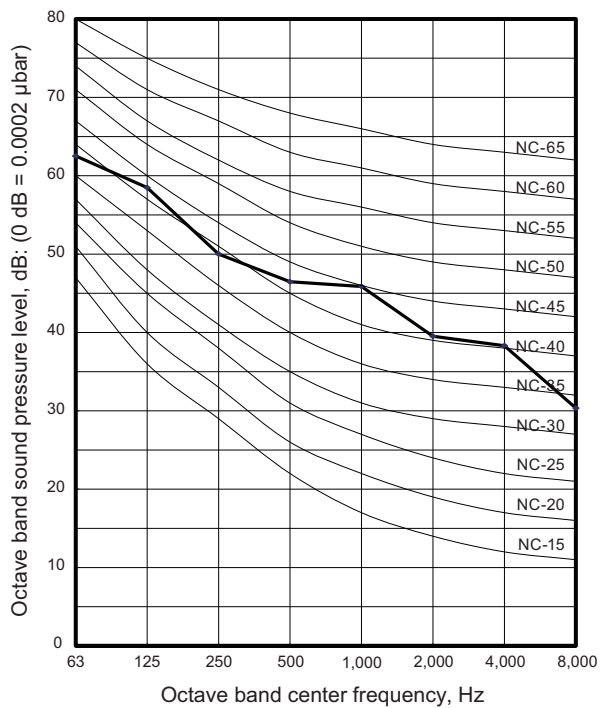

Heating

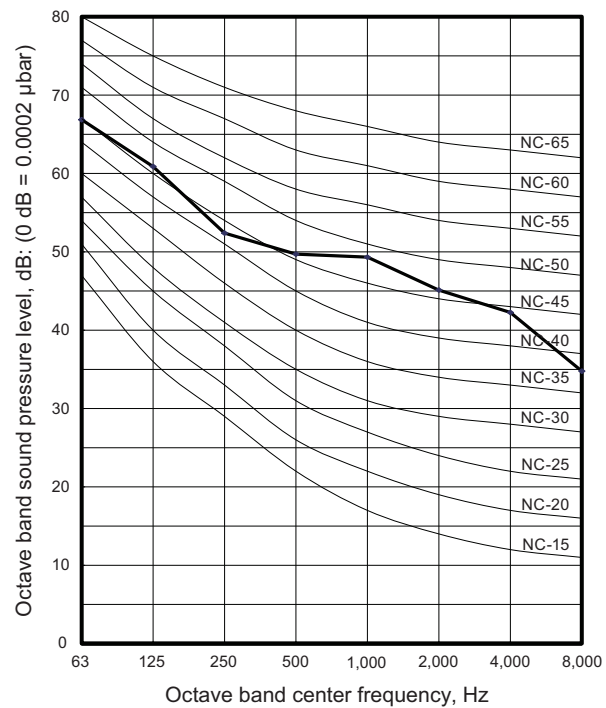

9-2. Sound level check point

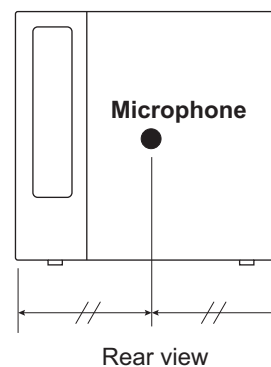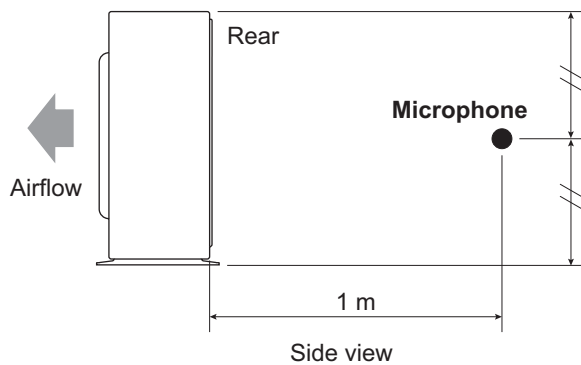

NOTE: Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

10. Electrical characteristics

Model name				AOUH09LUAS1	AOUH12LUAS1	AOUH18LUAS1
Power supply	Voltage		V	208/230~		
	Frequency		Hz	60		
MCA *1			A	9.3	11.3	14.8
Starting current			A	4.6	6.4	8.1
Wiring spec. *2	MAX. CKT. BKR *3		A	15		20
	Power cable		AWG	14		
	Connection cable *4	Size	AWG	14		
		Limited wiring length	ft (m)	69 (21)		

*1: Minimum Circuit Ampacity (Calculation based on UL60335-2-40)

*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.

*3: Maximum Circuit Breaker

*4: Limit voltage drop to less than 2%. If voltage drop is 2% or more, increase cable conductor size.


11. Safety devices

Type of protection	Protection form		Model
			AOUH09LUAS1
Circuit protection	Current fuse (Main PCB)		250 V, 15 A
			250 V, 5 A
			250 V, 3.15 A
Fan motor protection	Thermal protection program	Activate	217.4±32.4 °F (103±18°C) Fan motor stop
		Reset	203±32.4 °F or less (95±18 °C or less) Fan motor restart
Compressor protection	Thermal protection program (Discharge temp.)	Activate	230 °F (110 °C) Compressor stop
		Reset	After 7 minutes Compressor restart
	Thermal protection program (Outdoor temp.) (Only in COOL or DRY mode)	Activate	5 °F (-15°C) Compressor stop
		Reset	14 °F (-10°C) Compressor restart

Type of protection	Protection form		Model	
			AOUH12LUAS1	AOUH18LUAS1
Circuit protection	Current fuse (Main PCB)		250 V, 15 A	250 V, 20 A
			250 V, 5 A	
			250 V, 3.15 A	
Fan motor protection	Thermal protection program	Activate	257±18 °F (125±10 °C) Fan motor stop	
		Reset	248±18 °F (120±10 °C) Fan motor restart	
Compressor protection	Thermal protection program (Compressor temp.)	Activate	226 °F (108 °C) Compressor stop	
		Reset	After 3 minutes, and 176 °F (80 °C) or less Compressor restart	
	Thermal protection program (Discharge temp.)	Activate	230 °F (110 °C) Compressor stop	
		Reset	After 7 minutes Compressor restart	
	Thermal protection program (Outdoor temp.) (Only in COOL and DRY mode)	Activate	5 °F (-15 °C) Compressor stop	
		Reset	14 °F (-10 °C) Compressor restart	

12. Accessories

 12-1. Models: AOUH09LUAS1, AOUH12LUAS1, and AOUH18LUAS1

Part name	Exterior	Qty	Part name	Exterior	Qty
Installation manual		1	Cable tie		2
Drain pipe		1	Drain cap		5