

Priority Zoning Circulator

SUPERSEDES: NEW

EFFECTIVE: February 1, 1995

Plant I.D. Number 001-995

Replacement of PC Board

Application:

1. The Priority Zoning Circulator is a standard “00” with built-in relay and transformer.
2. Each unit is equipped with a priority switch. The switch allows the installer to choose the zone that requires the most priority and when activated, only that circulator will run.

Installation:

1. Refer to instruction sheet number 102-054 for any questions regarding the basic installation of the “00” circulator.
2. Refer to instruction sheet number 102-070 for any application information regarding a Priority Zoning Circulator.

Replacing the PC Board of a Priority Zoning Circulator:

1. Disconnect the electrical supply.
2. Open capacitor box cover.
3. Unplug and remove old PC Board.
4. Snap in new PC Board.
5. Reconnect PC Board plug.
6. Disconnect terminal strip wiring from the old board and reconnect to the new board, one wire at a time.
7. Close capacitor box cover.
8. Restore electrical power—Observe all applicable codes when connecting to the power supply.
9. Test zone and circulator operation.

