

INSTALLATION INSTRUCTIONS

SERVICE-SINK FAUCET WITH INTEGRAL VACUUM BREAKER Model: 830AA000

FIAT PRODUCTS

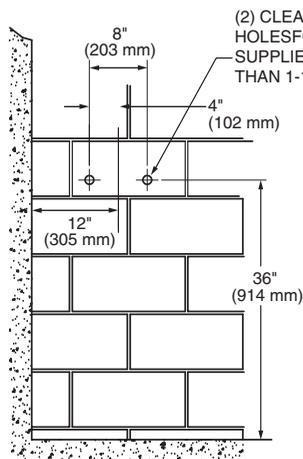
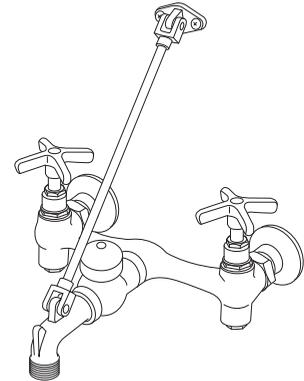


FIGURE 1

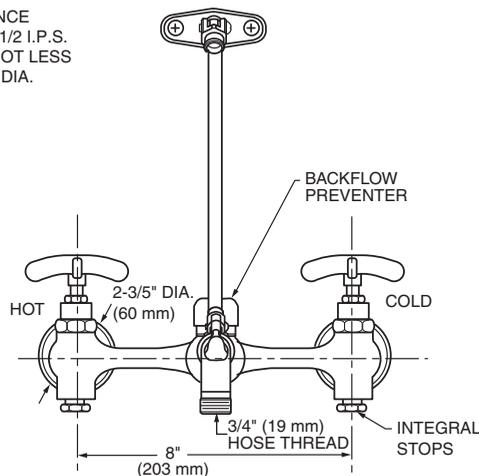


FIGURE 2

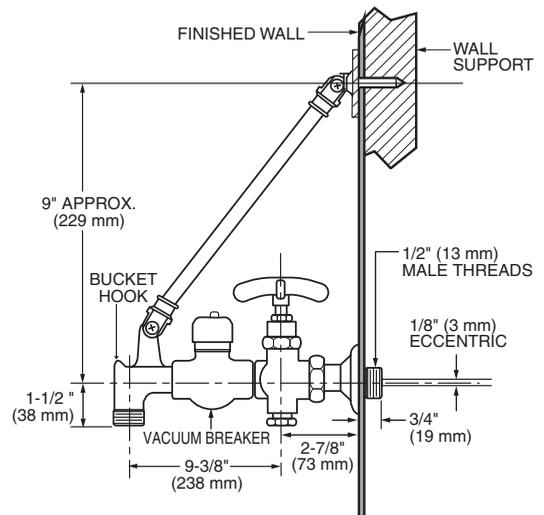


FIGURE 3


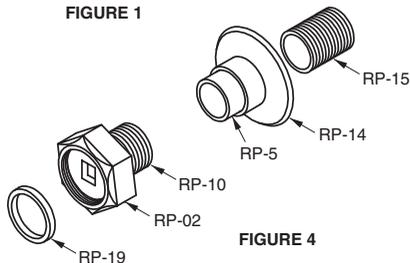


FIGURE 4

1. Unpack the valve and check for any damages that may have occurred during shipment..
2. Drill the supply holes for the HOT and COLD sides of the valve as per **Figure 1**.
3. Remove RP-02, RP-10 and RP-19 from the HOT and COLD sides of the valve and assemble as shown in **Figure 4** and place onto supply pipe for the hot and cold water.
4. Once Step 3 is complete attach the valve to RP-02..
NOTE: If RP-19 is not placed as shown in Figure 4 the connection will leak.
5. Attach BRACE ROD to nozzle with S.S. roll pin. Once this is completed, attached the BRACE FLANGE to BRACE ROD with S.S. roll pin. Position the BRACE FLANGE against the wall and mark two hole locations for the BRACE FLANGE holes and secure the BRACE FLANGE to the wall.

Customer Service
833-549-2887
www.fiatproducts.com

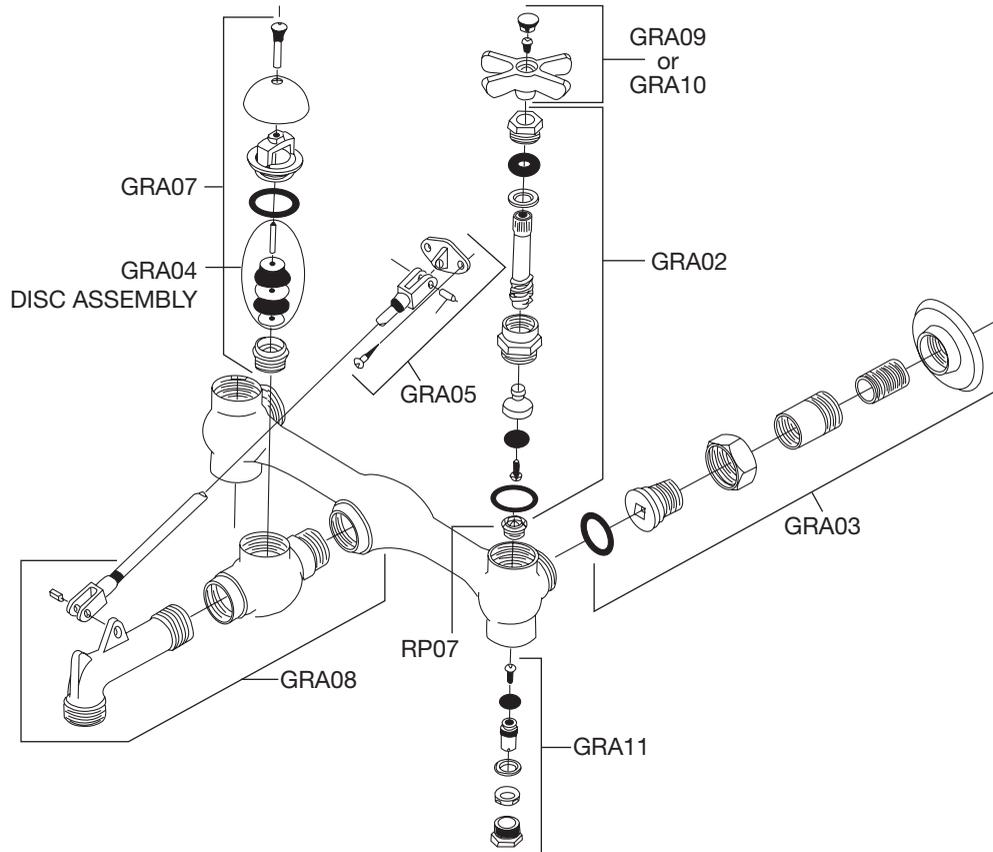

GROUP ASSEMBLY PART#	DESCRIPTION
GRA02	Handle mounting group assembly — includes: spindle, seat washer, seat washer screw, packing nut, brass washer, packing, handle hub, hub washer
GRA03	Coupling assembly — includes: coupling nut, bushing (socket), swivel, wall flange, washer, nipple
GRA05	Brace assembly - includes: wood screw (2), brace flange, S.S. roller pin, wall brace rod
GRA07	Vacuum breaker and disc assembly — includes: seat, V.B. hub, cap, V.B. hub washer, V.B. cap screw, GRA-04 assembly
GRA08	Complete body assembly — includes: nozzle, center body, V.B. body
GRA09	Handle assembly (cold) — includes: handle, handle screw, cold index
GRA10	Handle assembly (hot) — includes: handle, handle screw, hot index
GRA11	Integral stop assembly — includes: spindle, brass washer, washer, packing nut, seat washer screw, packing
RP07	Seat — one (1) per package.