

classic

by

TANNING
essentials



MANUAL

WELCOME

Thank you for choosing a Tanning Essentials Spray Tan System. Please read the following to enjoy your new system for many happy tanning applications

QUICK SET UP GUIDE

Unpack System from packaging, the System contains the following:

Classic Spray Unit	Qty 1
Classic Spray Applicator	Qty 1
Classic Spray Hose	Qty 1
Power Cord	Qty 1
Manual	Qty 1

*Additional solution cups with lids can be purchased through your dealer to conveniently change solutions and keep solution air tight.

Spray Applicator

Step 1

Unscrew solution cup and Fill Solution Cup no more than $\frac{1}{2}$ - $\frac{3}{4}$ full. Over filling the solution cup may cause the cup to leak.

Step 2

Insert Cup into applicator and screw tightly. Being careful not to cross thread the solution cup

Step 3

Set the spray pattern by turning the silver nozzle, aligning the nozzle in a vertical position for up/down spraying and horizontal position for left to right spraying.

Step 4

Adjust Solution Dial behind the trigger to desired level. Start with the dial hard against the trigger resulting in maximum solution spraying from the applicator, then wind out until the desired result is obtained.

Step 5

Attach Hose

Insert the hose into the back of the spray applicator until firmly in place.

Spray Unit

Step 1

Attach Hose to Unit.

Insert hose into the unit with the bayonet style fitting and turn anticlockwise until firmly in place.

Avoid over tightening as this may result in broken components.

Step 2

Attach power cord and turn power on at the wall switch.

Step 3

Turn the unit on and start spraying.

The unit is controlled via three buttons on the front of the Spray Unit see below

1. On/Off
2. Speed (Low, Medium & High) this controls the air flow
3. Heat (on/off) the unit will heat the air to warm

*The most common setting medium air with heat on.

MAINTENANCE GUIDE

Spray Applicator

Step 1

Remove Hose.

Step 2

Empty excess solution from the solution cup.

It is recommended that this be done over a sink or a wet area.

Step 3

Rinse the empty solution cup with warm water.

Step 4

With warm water in the solution cup, spray the water through the applicator.


Use the highest setting for maximum water spraying when cleaning.

Step 5

Empty Solution cup and re-set your Solution Dial on the back of the gun to the regular spray setting.

Step 6

Wipe any excess water from the applicator with a cloth and warm water.

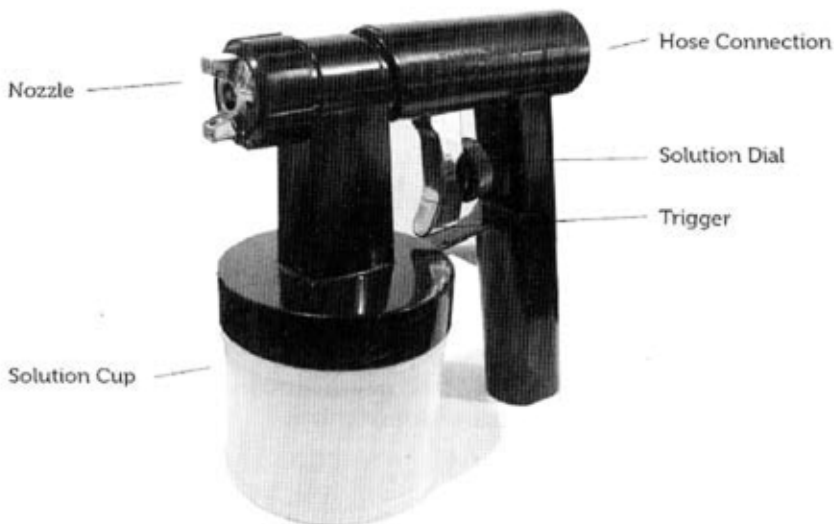

Spray Unit

Step 1

Clean the Spray Unit with a cloth.

Avoid using anything abrasive.

Windex and Mr. Sheen are useful products for maintaining the gloss finish on your Spray Unit.

Step 2

Clean the filter.

Remove the filter from the base of the unit and rinse in warm water.

Wait until filter is completely dry before re-fitting.

Positioning the spray unit behind the spray technician when in use will ensure the unit stays cleaner for longer.

TROUBLE SHOOTING

If you experience problems with this unit, in the first instance please read carefully the relevant sections of this User Manual and this Trouble Shooting

section. If you can not solve your problem please contact your supplier via phone for guidance.

Problem	Cause	What to do
The Spray Unit will not turn on	Power cord not attached	Ensure that the power cord is pushed in firmly to the base of the unit and wall socket
	Electricity not turned on	Ensure that the power point is on
	The unit is not turned on	Press the On/Off Button on the control panel and watch for the LED light to indicate ON.
The spray applicator is leaking	Spray Cup is not tight enough	Tighten the solution cup
	Solution cup seal missing	Insert the black rubber seal
	Too much solution	Empty some solution from the spray cup
	Nozzle may be blocked	Spray warm water through the applicator
The spray is spluttering	Solution cup low of solution	Add solution to the cup
	Air speed is set too low	Increase air speed on controls
	Angled applicator too sharply while spraying	Keep the applicator on a lesser angle while spraying
	Nozzle may be blocked	Spray warm water through the applicator
	Filter could be blocked	Ensure the filter underneath the Spray Unit is clean
	Spray applicator solution dial set too low	Wind in the Solution Dial behind the trigger of the gun
No solution is coming out of the spray applicator	Nozzle may be blocked	Spray warm water through the applicator
	Solution in cup too low	Add solution to the cup
	Trigger is jamming	Spray warm water through the applicator repeatedly ensuring the Solution Dial is allowing maximum water through the applicator
	Solution Dial on applicator set too low	Wind in the solution dial on applicator
The applicator is continuing to spray	Trigger or Nozzle is jamming	Spray warm water through the applicator repeatedly ensuring the Solution Dial is allowing maximum water through the applicator
Hose coming out of unit	Hose not correctly fitted to unit	Ensure the fitting is inserted and turned to lock
	Hose fitting broken from over tightening	Contact your supplier or service agent

<p>The spray tan has not developed as dark as desired</p>	<p>The spray tan solution used may be old or heat affected reducing the reaction in the skin Sometimes a green hue will appear to indicate this</p> <p>A different solution was sprayed or the spray application dial was set lighter</p> <p>The client may have showered or perspired before the tan could develop</p> <p>Other factors may affect the tan's development, including diet, hormones and medication. Please refer to the client</p>	<p>Be sure to keep the solution in a cool dry place and ensure the solution is fresh.</p> <p>Ensure the client has followed the correct recommendations for preparation and post spray tan care. The client can be resprayed if required after their minimum 8 hours and after a shower has been taken</p>
---	--	--

WARRANTY INFORMATION

Important

Please keep your proof of Purchase and User Manual in a safe place as you will require these to make a warranty claim. Prior to making a claim you should read through the trouble shooting section in the manual and contact your supplier via phone. Any warranty claims should be made directly to your supplier.

If within one (1) year from the date of purchase, if the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit which may be new or refurbished. This warranty applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost.

Warranties shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under these warranties:

- to repair damage resulting from attempts by personnel other than authorised representatives to install, repair or service the product,
- to repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution,
- to perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed,
- to repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications,

To activate your warranty, please complete the information below and post to your supplier within 14 days of purchase.

SAFETY INFORMATION

The TE Classic Spray System is designed and built to the highest standards. However, this system must not be operated by children, only sprayed with professional spray tan solution, kept away from water and must be connected to the correct power supply at all time.



WARRANTY INFORMATION

Important

Please keep your proof of Purchase and User Manual in a safe place as you will require these to make a warranty claim. Prior to making a claim you should read through the trouble shooting section in the manual and contact your supplier via phone. Any warranty claims should be made directly to your supplier.

If within one (1) year from the date of purchase, if the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit which may be new or refurbished. This warranty applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost.

Warranties shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under these warranties:

- a) to repair damage resulting from attempts by personnel other than authorised representatives to install, repair or service the product,
- b) to repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution,
- c) to perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed,
- d) to repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications,

To activate your warranty, please complete the information below and post to your supplier within 14 days of purchase.

WARRANTY CARD

Model Type:	Serial Number:	
Supplier Name:	Date purchased:	
Name:		
Address:	Suburb:	
Post Code:	State:	Country:
Email:		
Phone:		
Business Type: Beauty / Tanning / Hair / Mobile / Home		

 Cut to remove