

Warranty Information

IMPORTANT: Please keep your Proof of Purchase and User Manual in a safe place as these items will be required for warranty claim. Prior to making a warranty claim please read Trouble Shooting section.

If within 1 year of date of purchase the product fails due to defect, we will repair or replace free of charge. The warranty only applies to the original purchaser and is not transferable. The product must be returned to the seller with Proof of Purchase to be assessed at the purchasers expense.

Warranties do not apply to normal wear and tear, damage, improper use, improper care, use of improper voltage or current, use contrary to operating instructions, improper disassembly, repair or alteration by any person other than our service personnel. USING THIS SYSTEM TO SPRAY ANYTHING BESIDES SPRAY TANNING SOLUTION VOIDS WARRANTY!

**For all warranty claims please contact Naked Sun
sales@nakedsun.com (866)446-1919**

Safety Information

DO NOT

- Use spray guns to spray flammable substances.
- Clean with flammable solvents.
- Operate unit if fatigued or under the influence of drugs or alcohol.
- Allow children to play with unit.
- Use a 3 to 2 adapter or extension cord.
- Immerse unit in water or any other liquids.
- Expose unit to rain or inclement weather conditions.

NEVER

- Drop or insert any object into any opening on machine or hose.
- Block air ways of the unit
- Hold the power cord at plug connections to support power cord.
- Operate unit if cord or plug is damaged.


Failure to observe proper electrical connections
may result in electrical shock.

ion tan

Handheld Spray Tan Machine



Machine Set-Up

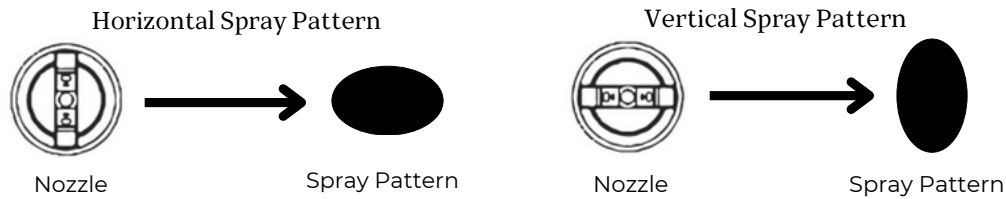

Charging Time- Approximately 75 minutes.

Battery Life

Low Setting - Approximate run time 20 minutes.

High Setting - Approximate run time 13 minutes .

Operation Instructions

1. Fully charge machine before operation.
2. Fill solution cup with 2 ounces of spray tanning solution.
3. To power on, press and hold power button located on the bottom of the machine for 3-5 seconds. Machine will power on, with low air flow set.
4. To change low to high air flow press the power button one time.
5. Indicator light will flash red when battery is depleted.
6. To turn off the machine, press and hold the power button for approximately 3-5 seconds.

Cleaning & Maintenance

- We recommend cleaning the air filter every 2-4 weeks depending on frequency of use.
- To clean the air filter, unscrew the filter cover on the back of the machine.
- Remove filters, rinse with cool water to remove spray tanning solution.
- Allow 24 hours for filter to completely air dry before reinstalling back into the machine.

Cleaning & Maintenance

- Unscrew solution cup and empty excess solution. Rinse empty cup with warm water.
- Add clean, cool water to solution cup and spray water through.
- Do not spray hot water through your spray gun. Only use cool or room temperature water.

TIP: Turn solution dial located on spray gun trigger, clockwise several turns to allow more water to pass through for thorough cleaning. Be sure to adjust back to your desired atomization setting before next use.

- Unscrew solution cup and pull trigger lightly to release any solution in straw.
- With the solution cup detached, turn machine on and pull the trigger allowing air to blow any excess water out of the solution straw and nozzle.
- Thoroughly dry the solution cup before attaching back to the machine. Store in upright position.

Troubleshooting

PROBLEM	WHAT TO DO
Spray is freckled or speckled	<ul style="list-style-type: none">• Nozzle may be blocked. To check, try spraying cool water through applicator. If no water comes through check under your nozzle for blockage.• Solution Dial is incorrectly adjusted.• Spraying too close to skin. Should be spraying 12-14 inches away from body.
Solution is spraying intermittently	<ul style="list-style-type: none">• Cup straw is too loose.• There is not enough solution in the cup.• Solution dial is incorrectly adjusted.• Nozzle may be blocked. To check, try spraying cool water through applicator. If no water comes through check under your nozzle for blockage.
Spray Applicator is leaking	<ul style="list-style-type: none">• Spray gun cup is not tight enough. Make sure that the cup is finger tight.• Solution cup seal is missing or damaged.• There is too much solution in cup. We recommend 2 oz.• Gun is being turned on its side during use. Keep spray gun in upright position while spraying.