# **Spare Parts List**



Portable Monitor RB 6; RB 6 oscillating; Power Stream

Release: 01, 01/2018 (Art. Nr. 35185A-003)





# General

Technical Information	The information, illustrations and data contained in this spare parts list are in accordance with the position as per date of publication. Our products are constantly improved in the course of technical development. We reserve the right, to perform appropriate changes and improvements. From data, graphics and description within this manual, no demands on modification to already delivered products could be made.
Imprint	Copyright © Rosenbauer International AG, Paschingerstraße 90, 4060 Leonding, Austria
	This document is for the personal use of the recipient only. No part of this document may be reproduced or transmitted in any form or by any means (electronic or mechanical), including photocopying and recording, or by any information storage or retrieval system, or translation into other languages, except as may be expressly permitted in writing by the publisher.
	All rights to this spare parts list and their attachment are reserved by Rosenbauer International AG.
	Rosenbauer reserves the right to make modifications anytime and without previous announce- ment.



# General

Manufacturer and	Rosenbauer Intern	ational AG		
After Sales Service Address	Paschinger Straße 90			
	4060 Leonding, Au	Istria		
	Telephone number	: +43 732 6794 - 0		
	Telefax number.:	+43 732 6794 - 312		
	E-Mail:	spareparts@rosenbauer.com		
	Internet:	www.rosenbauer.com		
		on, kindly contact the customer service of Rosenbauer or one of our repre- the world who are available whenever they are required.		
Illustrations	The descriptive pic spare part.	stures shown in the spare parts list can differ from the actual version of the		
	All illustrations, din	nensions and data in the spare parts list are non-committal.		



# General

Spare Parts	The use of spare parts and accessories not provided, tested and released as originals by Ro- senbauer can have a negative effect on design-related characteristics and thus impair operati- onal safety.
	For your own safety, use only spare parts and accessories from Rosenbauer. Use of other pro- ducts and resultant injury, Rosenbauer assumes no liability.
Spare Parts of purchased Parts	For spare parts of purchased parts, please refer to the spare parts list issued by the manufac- turer.
Special equipment	The spare parts list also contains descriptions of special equipment and additional equipment not forming part of the normal scope of delivery. The scope of delivery is always determined by your order. The equipment and furnishings for your product may therefore partially deviate from the descriptions or illustrations. If your product should be fitted with furnishings not shown or described in this spare parts list, then please contact the customer service of Rosenbauer or one of our representatives around the world when are queilable whenever they are required.
	the world who are available whenever they are required.

#### Introduction



## How to order spare parts?

### When ordering spare parts, please observe the following points:

- 1 Order number
- 2 Serial number
- 3 Description
- 4 Article number
- 5 Quantity

The correct order- and serial number can be found on the type plate. For any further information due the location of the type plate, please refer to the operation manual.

### Example for a correct spare parts order:

- 1 X2K0011
- 2 KR235L00098
- 3 Pump casing, LM
- 4 085124-001
- 5 Quantity 1 pc.



# **Abbreviations**

A2, A4	Stainless steel
AL	Aluminium
С (А-В)	Complete (consisting of items A - B)
D	Part included in gasket kit
L	Length (mm)
L = (*)	Please indicate length you need (mm)
LM	Light alloy
Ms	Brass
na	not shown
n.B.	optional
R	Part included in repair kit
RG	Gunmetal
S	Thickness of material (mm)
ST	Steel
VC	chromed
VZ	steel galvanized
X	Price on request
(o-)	only used in connection with item
*	References, remarks
ø	Diameter (mm)
RI	clockwise turn
LI	counter clockwise turn

Table of Contents		
RB6	8	
RB6 oscillating	10	
Power Stream	12	





RB6	Release: 01, 01/2018 (Art. Nr. 35185A-003)	Page: 8
-		



Item no.	Description	Remark	Article no.	Qty.	EUR/UNIT
10	Service Kit: Inlet		26550002	1	
20	Service Kit: Body		26550006	1	
30	Service Kit: On / Off Handle + Ball		26550005	1	
40	Service Kit: Handle		26550001	1	
50	Service Kit: Safety Belt		26550003	1	
60	Service Kit: Legs		26550004	1	

RB6 Release: 01,	018 (Art. Nr. 35185A-003) Page: 9
------------------	-----------------------------------





RB6 oscillating	Release: 01, 01/2018 (Art. Nr. 35185A-003)	Page: 10



Item no.	Description	Remark	Article no.	Qty.	EUR/UNIT
10	Service Kit: Pressure Gauge		26551308	1	
20	Service Kit: Body		26551307	1	
30	Service Kit: On / Off Handle + Ball		26551302	1	
40	Service Kit: Safety Belt		26551303	1	
50	Service Kit: Legs back		26551305	1	
60	Service Kit: Legs front		26551306	1	
70	Service Kit: Handle		26551301	1	
80	Service Kit: Gearing mechanism		26551304	1	

RB6 oscillating

Release: 01, 01/2018 (Art. Nr. 35185A-003)

Page: 11





Power Stream	Release: 01, 01/2018 (Art. Nr. 35185A-003)	Page: 12



Item no.	Description	Remark	Article no.	Qty.	EUR/UNIT
10	Service Kit: Handle		26548540	1	
20	Service Kit: Body		26548580	1	
30	Service Kit: Pressure Gauge		26551308	1	
40	Service Kit: Handwheel		26548550	1	
50	Service Kit: Safety Belt		26548560	1	
60	Service Kit: Legs		26548570	1	

Power Stream

Release: 01, 01/2018 (Art. Nr. 35185A-003)

Page: 13