

DC311XX
DC313XX

05 Contents 05 Inhalt 05 Contenu 05 Inhoud 05 Sisältö
 06 Indhold 06 Contenido 06 Contento 06 Conteúdo
 06 Περιεχόμενα 06 Innehåll



 
x1



x1



x1



x1



x2



x2


CR2032



x2



x1

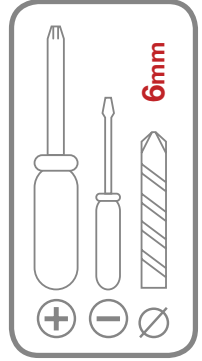


06 Getting started 06 Erste Schritte 06 Démarrage 06 Aan de slag 06 Aloitussopas 06 Kom i gang
 07 Operazioni preliminari 07 Para empezar 07 Para começar 07 Πρώτα βήματα 07 Kom igång




✓




✓

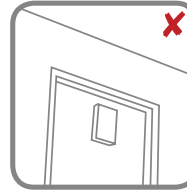

✗

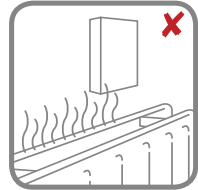


✗

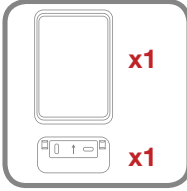


x1




x1

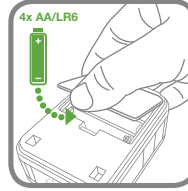



4x AA/LR6

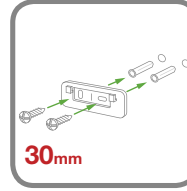


30mm

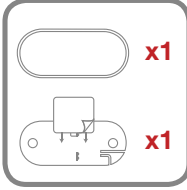




x1

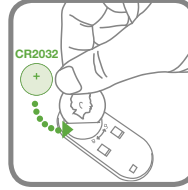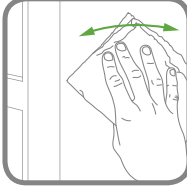


CR2032

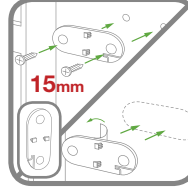


15mm

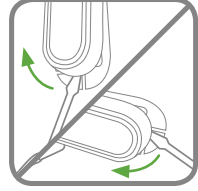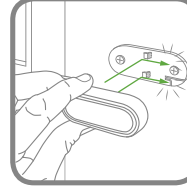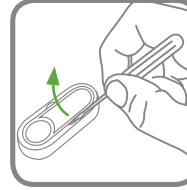




GB Optional features DE Optionale Funktionen
 FR Options disponibles IT Opzioni F Valinnaiset ominaisuudet
 OK Valgírnie funkcioner IT Funzionalità opzionali
 ES Opciones disponibles PT Funções opcionais
 GR Προαιρετικές λειτουργίες πρόσθετων SE Möjliga funktioner

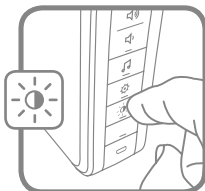

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

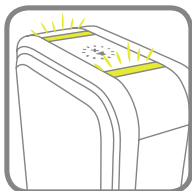

GB Linking DE Einlernen GR Προγραμματισμός
 FR Verknüpfung IT Linkittäminen OK Forbinde
 PT Coligamento ES Enlace
 GR Προγραμματισμός SE Länkning

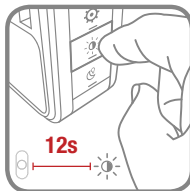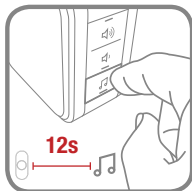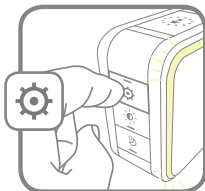

GB Trouble shooting DE Fehlerbehebung FR Dépannage IT Probleemoplossing
 FI Vianmääritys OK Problemløsning IT Risoluzione die problemi ES Solución de
 problemas PT Resolução de problemas GR Αντιμετώπιση προβλημάτων SE Felsökning

livewell.honeywell.com

