



Monteringsvejledning/ Monteringsanvisning/ Montasjeanvisning/ Installation instructions/ Installationsanleitung/ Asennusohje


Wireless switch Zigbee

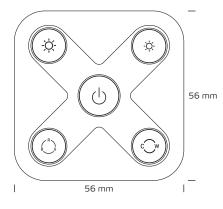

ON/OFF button, click to turn ON/OFF all, press and hold down to search and pair to Zigbee network or factory reset the switch

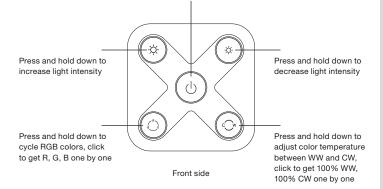

Note: This remote supports 1 group for binding max. 30 lighting devices.

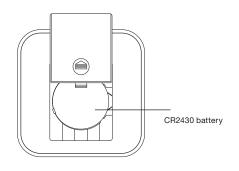



Back side

X



- 1. This Zigbee RGB+CCT remote is a wireless transmitter that communicates with a variety of Zigbee compatible systems. This transmitter sends wireless radio signals that are used to remotely control a compatible system.
- 2. This Zigbee remote supports 1 group for binding max. 30 lighting devices and enables to control both RGB and CCT Zigbee lighting devices.
- 3. Touchlink to a Zigbee lighting device.

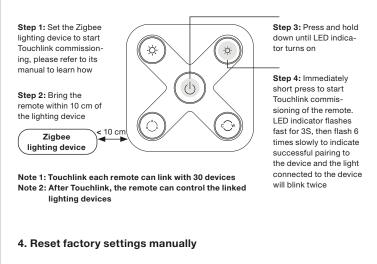

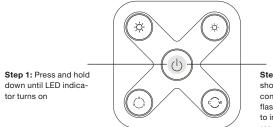

Step 2: Immediately short press 5 times continuously, indicator flashes 3 times quickly to indicate successful reset

Note: All configuration parameters will be reset after the remote is reset or removed from the network.



Nordtronic A/S Flade Engvej 4 |

DK - 9900 Frederikshavn | Denmark | CVR: 29808708 | Tel: +45 70209531 |

www.nordtronic.com

RoHS

E




Wireless switch Zigbee

5. Remove a Touchlink paired Zigbee lighting device

Step 1: Set the Touchlink paired Zigbee device to start Touchlink commissioning, please refer to its manual to learn how

Step 2: Bring the remote within 10 cm of the lighting device

Zigbee lighting device

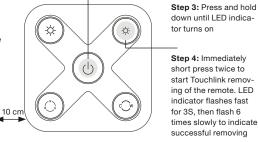


6. Factory reset a lighting device (Touch reset)

Step 1: Set the Zigbee device to start Touchlink commissioning, refer to its manual

Step 2: Bring the remote within 10 cm of the lighting device

Zigbee lighting device

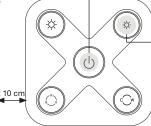

7. Find and bind a Zigbee lighting device

Step 1: Start find and bind mode on the Zigbee lighting device (initiator node) and enable it to find and bind target, refer to its manual

Step 2: Press and hold down until LED indicator turns on

Note: Each remote can bind max. 30 lighting devices.


8. Find and unbind a Zigbee lighting device

-Ò́-

R

Step 1: Start find and bind mode on the Zigbee lighting device (initiator node) and enable it to find and bind target, refer to its manual

Step 2: Press and hold down until LED indicator turns on

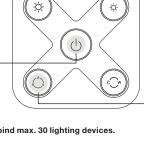

 \bigcirc

Ziabee lighting device

Step 3: Press and hold

down until LED indica-

Step 4: Immediately

short press 5 times to

remote. LED indicator

flash 3 times slowly

reset

flashes fast for 3S, then

to indicate successful

start Touch Reset of the

tor turns on


Step 3: Short press to enable the remote (target node) to find and bind initiator. LED indicator flashes 4 times for successful binding or twice if binding fails

Step 3: Short press twice to enable the remote (target node) to find and unbind initiator. LED indicator flashes 4 times for successful unbinding or twice if unbinding fails

Zigbee


lighting device

9. Clear all find and bind mode paired lighting devices

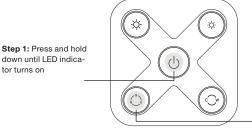

Step 2: Short press 5 times continuously to clear all bound lighting devices . LED indicator flashes 4 times for successful unbinding

10. Setup a network and add devices to the network (No coordinator or Hub Required)

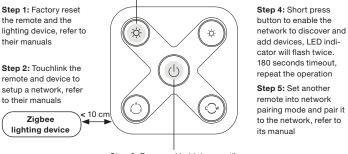

Step 3: Press and hold down until LED indicator turns on

Step 6: Add more remotes to the network as you would like.

Step 7: Factory reset the lighting devices that you would like to add to the network, refer to their manuals.

Step 8: Touchlink to pair the added remotes and lighting devices you would like to add, the devices will be added to the network through Touchlink, refer to their manuals.

11. How to check whether the remote belongs to a network or not

Short press any button, indicator blinking means the remote has already been added to a network. No blinking of indicator means the remote does not belong to any network.

12. Battery power monitor function

The remote will report battery power value to the coordinator under following situations:

- · When powered on.
- When short pressing down both brightness button and RGB button simultaneously.
- When operating the switch to send data packets (over 4 hours since last operation).
- When added to the network by a coordinator.



Nordtronic A/S

÷.

 \odot

 Flade Engvej 4
 DK - 9900 Frederikshavn
 Denmark
 CVR: 29808708
 Tel: +45 70209531
 I

www.nordtronic.com