



MANUAL

XB402 TITAN PRO

Gebruiksaanwijzing
Gebrauchsanweisung
Mode d'emploi
Bruksanvisning
Brugsvejledning

Käyttöopas
Uživatelská příručka
Používateľská príručka
Εγχειρίδιο χρήσης
دەستەبەندی بەکارهێنەر



1 SPECIFICATIONS



24.000 mAh Li-ion / 88.8Wh



1x USB-C Power Delivery 3.1 140W
1x USB-C Power Delivery 100W
2x USB-C Power Delivery 30W



185x90x25 mm



675 grams



1x Built-in USB-C Power Delivery 140W cable
1x Manual

When using multiple outputs

When using 2 outputs

① 60W ② 90W

① 90W ③ 30W

② 90W ③ 30W

③ ④ Share 40W

When using 3 outputs

 
① 60W ② 60W ③ 30W

① 60W ② 60W ④ 30W

When using all outputs


① 100W ② 30W ③ Share 40W

PRODUCT OVERVIEW 2

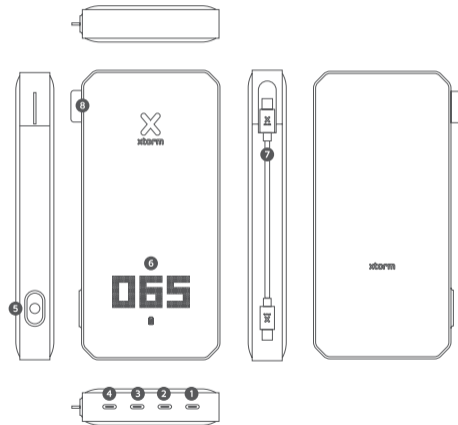

- In/Output USB-C PD 100W ①
- USB-C PD 3.1 140W ②
- USB-C PD 30W ③
- USB-C PD 30W ④
- Power Button ⑤
- LED Power Indicator ⑥
- Built-in USB-C PD Cable ⑦
- Official Xtorm Label ⑧

 3 CHARGING YOUR DEVICE

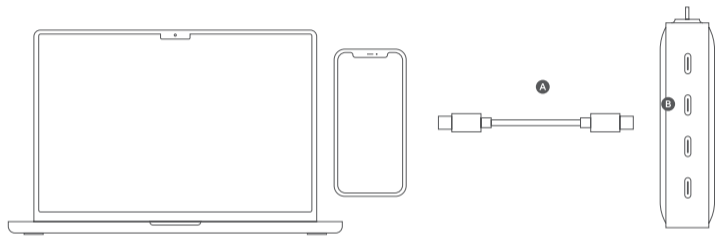


COMPATIBLE DEVICES



- 3A** Connect one end of the charging cable to one of the outputs of the Power Bank and the other end to the input of your device.
- 3B** For Charging USB-C Laptops use output 1 (USB-C PD 140W).

 
RECHARGING THE POWER BANK 4

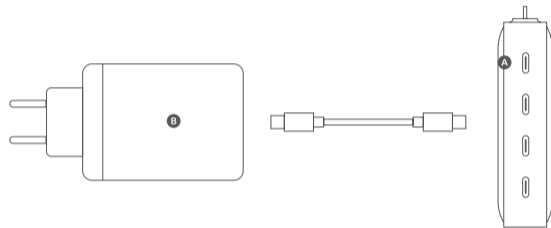

- 4A** Connect one end of the built-in charging cable to output 1 of the Power Bank and the other end to a wall charger.
- 4B** For the fastest charging possible use a 100W USB-C PD charger. This will fully recharge the Power Bank within 1.5 hours.

5 LED POWER INDICATOR

 IN THE BOX 6

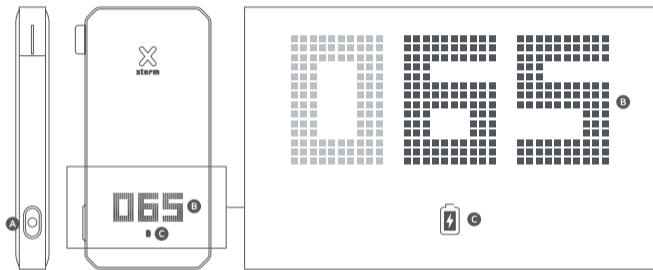

- 5A** Press the Power Button once to display the battery level remaining in the Power Bank via the LED display.
- 5B** The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).
- 5C** The charging icon will flash when the Power Bank itself is being recharged.



 
1



2



3

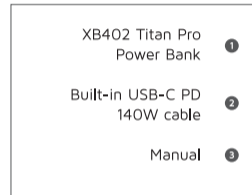

EN - ENGLISH

1 SPECIFICATIONS

2 PRODUCT OVERVIEW

3 CHARGING YOUR DEVICE

3.A Connect one end of the charging cable to one of the outputs of the Power Bank and the other end to the input of your device.

3.B For Charging USB-C Laptops use output 1 (USB-C PD 140W).

4 RECHARGING THE POWER BANK

4.A Connect one end of the built-in charging cable to output 1 of the Power Bank and the other end to a wall charger.

4.B For the fastest charging possible use a 100W USB-C PD charger. This will fully recharge the Power Bank within 1.5 hours.

5 LED POWER INDICATOR

5.A Press the Power Button once to display the battery level remaining in the Power Bank via the LED display.

5.B The display shows the remaining battery percentage between 0% (empty) and 100% (fully charged).

5.C The charging icon will flash when the Power Bank itself is being recharged.

6 IN THE BOX

DK - DANSK

1 SPECIFIKATIONER

2 PRODUKTOVERSIGT

3 OPLADNING AF DIN ENHED

3.A Tilslut den ene ende af opladningskablet til en af Power Banks udgange og den anden ende til indgangen på din enhed.

3.B Til opladning af USB-C-bærbare computere skal du bruge udgang 1 (USB-C PD 140W).

4 GENOPLADNING AF POWERBANKEN

4.A Tilslut den ene ende af det indbyggede opladningskabel til udgang 1 på Power Bank og den anden ende til en vægoplader.

4.B For at opnå den hurtigst mulige opladning skal du bruge en 100W USB-C PD-oplader. Dette vil oplade Power Bank fuldt ud inden for 1,5 time.

5 LED STRØMINDIKATOR

5.A Tryk på Power-knappen én gang for at få vist det resterende batteriniveau i Power Bank'en via LED-displayet.

5.B Displayet viser den resterende batteriprocent mellem 0 % (tomt) og 100 % (fuldt opladet).

5.C Opladningsikonet blinker, når selve Power Bank'en er ved at blive genopladet.

6 I KASSEN