 


## Ultra thin Touch Slide RF Remote Controller

Model No.: A/SR/04/01/01

Touch color slide/ RGB+W / Wireless remote 30m distance/ CR2032 battery/ Magnet stuck fix



CE RoHS  LVD RED

### Features

- Apply to RGB+W LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

### Technical Parameters


Input and Output	
Output signal	R F(2.4 GHz)
Working voltage	3 VDC (CR2032)
Working current	< 5 mA
Standby current	< 10 $\mu$ A
Standby time	1 year
Remote distance	30m (Barrier-free space)

Warranty	
Warranty	5 years

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(I/D)	EN 62368-1:2020+A11:2020
Radio Equipment(REDE)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

### Mechanical Structures and Installations

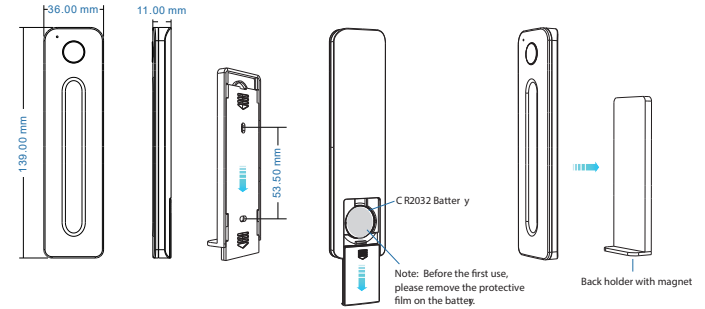

To fix the remote, three options are offered for selection:

Option 1: stuck the remote on any metal surfaces directly.

Option 2: fix the remote' back holder on the wall with two screws.

Option 3: adhere the remote' back holder to the wall with pasteur.

### Match Remote Control (two match ways)

End user can choose the suitable match/ delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:

Short press match key  
Immediately press on/off key on the remote.  
The LED indicator fast flash a few times  
means match is successful.

Delete

Press and hold match key for 5s to delete all match,  
The LED indicator fast flash a few times  
means all matched remotes were deleted.

#### Use Power Restart

Match:

Switch off the power, then switch on power, repeat again.  
Immediately shot press on/off key 3 times on the remote.  
The light blinks 3 times means match is successful.

Delete

Switch off the power, then switch on power, repeat again.  
Immediately shot press on/off key 5 times on the remote.  
The light blinks 5 times means all matched remotes were deleted.