

491 W. Garfield Ave., Coldwater, MI 49036

Phone: 517-279-2135

Web/live chat: www.bds-suspension.com

E-mail: tech-bds@ridefox.com

Part#: 55362 **Dual Stabilizer**

1988-1998 Chevy 4x4


READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS PRIOR TO INSTALLATION OF SYSTEM AND OPERATION OF VEHICLE.


SAFETY WARNING BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.

PARTS LIST			#55410 Steering Stabilizer Kit		
Part #	Qty	Description	Part #	Qty	Description
01541	1	Passenger's side stabilizer bracket	SB58BK	1	5/8" ID Hourglass Bushing Black
01503	1	Driver's side stabilizer bracket	222780	1	2" X 6" BDS 2-color Sticker
561140200R	3	U-bolts	N38FJ	1	3/8-24 UNF GR5 Jam Nut
309	1	Bolt pack	N38FN	1	3/8-24 UNF Nut GR5
322	1	Bolt pack	117300007	2	Shock Stem Washer (Cup)
406	1	Bolt pack	5620	1	17.06 X 10.48 X 1-3/4 S1-EB1
51792-1	2	5/8" x 0.060" x 1.375" sleeve	4805G	2	Small Stem Bushing Black
55410	2	Steering Stabilizer Kit			

INSTALLATION INSTRUCTIONS

- 1. Park vehicle on clean flat surface with wheels centered, block rear wheels for safety.
- 2. Remove OE stabilizer if equipped.
- 3. Install bracket (01503) with 3 u-bolts (5/16" x 1-1/4" x 2"), washers, and nuts. Do not tighten at this time. (Fig. 1)
- 4. Lightly grease and install bushings (SB58BK) into end of both stabilizers. Install sleeve (51792-1) into each stabilizer. Note: The sleeves that come in the stabilizer box are not used.
- 5. Install cup washers and bushings as shown. Attach to center stabilizer bracket. Tighten until bushings begin to swell, lock off with jam nut.
- 6. Attach stabilizer bracket (01541) to differential drop bracket with ½" hardware. Tighten to 65 ft-lbs. (Fig. 2)
- O Note: One leg of the "L" mounting bracket is longer than the other. The longer leg should point toward the center of the vehicle.
- 7. Attach stabilizers to new bracket. Torque hardware to 65 ft-lbs.
- 8. Adjust center bracket such that stabilizers are extended 3-1/4". Torque u-bolt hardware to 17 ft-lbs.
- 9. Cycle steering and check for interference.
- 10. Check hardware after 500 miles and at regularly scheduled maintenance intervals.

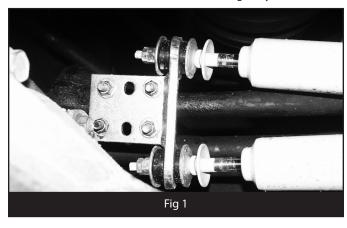

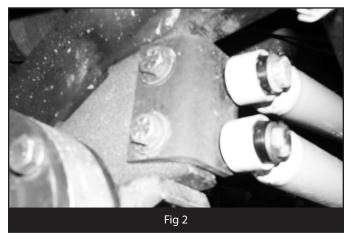

rev. 5/9/2013 55362 Page 1