

AC•THOR / AC•THOR 9s

Photovoltaic-Power-Manager for hot water and space heating

Operation Manual



Firmware a0020303		
Operating modes	AC•THOR	AC•THOR 9s
M1 Hot water	↗	↗
M2 Hot water stratified charging	↗	↗
M3 Hot water 6kW	↗	
M4 Hot water + heat pump	↗	↗
M5 Hot water + space heating	↗	↗
M6 Space heating	↗	↗
M7 Hot water + PWM	↗	↗
M8 Frequency mode	↗	↗

Contents

1. Assembly.....	3
2. Commissioning; putting back into service	3
3. Controls and displays	4
Homescreen	4
Status symbol	5
Data logger.....	6
Status information on the display.....	6
Settings	7
Help.....	7
4. Operating modes.....	8
M1: Hot water	8
Explanation	8
Specific settings for operating mode M1	9
Temperature sensors (only with AC•THOR 9s)	10
M2: Hot water stratified charging	10
Explanation	10
Specific settings for operating mode M2.....	11
M3: Hot water 6 kW	12
Explanation	12
Specific settings for operating mode M3.....	13
M4: Hot water + Heat pump.....	14
Explanation	14
Specific settings for operating mode M4.....	15
M5: Hot water + Space heating.....	16
Explanation	16
Specific settings for operating mode M5.....	17
Temperature sensors	18
M6: Space heating.....	18
Explanation	18
Specific settings for operating mode M6.....	19
Temperature sensors	19
M7: Hot water + PWM	19
Explanation	20
Specific settings for operating mode M7.....	20
M8: Frequency mode.....	21
Explanation	21
Specific settings for operating mode M8.....	22
Temperature sensors (only with AC•THOR 9s)	23
5. General settings	24
6. Web-Interface.....	26
Search for devices in the network.....	26
Systems without Internet access	27
Connect Web-Interface.....	28
Home (homepage).....	28


Data logger.....	29
Status information.....	30
Settings	31
Special setting possibilities in the Web-Interface.....	31
Legionella boost outputs (only with AC•THOR 9s).....	31
Control Settings	32
Measurement Settings	35
E-Car-Function.....	36
Multi units.....	36
Cloud Mode	38
Debug-Mode	40
Help.....	40
7. Potential-free input for external control	40
8. Modbus RTU connection for external control	41
9. Description of the protocols for http and Modbus TCP	42
10. Firmware update.....	42
Update of server	42
Manual Update.....	42
Update with SD card.....	42
11. Status codes.....	42
12. Temperature sensors: Assignment and function (only with AC•THOR 9s).....	43
13. Fault temperature sensors	43
14. Error messages on the Display	43
15. Fault signals by the AC•THOR Logo	44

1. Assembly

Before placing into operation it is essential to read the assembly instructions provided with the device.

2. Commissioning; putting back into service

This takes just a few moves and is performed the first time the AC•THOR is operated or when it has been reset to factory settings.

1. Select language
Use the cursor keys on the left and right to view further possibilities.
From firmware version a0020202 onwards, French or Spanish can be selected in addition to German and English.
2. Select operating mode
See chapter headed "Operating modes".
3. Select control of the signal source for the AC•THOR
 - a. Power meter automatic: Connection to my-PV power meter in the network is set up automatically.
 NOTE: setting up the connection may take up to a minute.
 - b. Power meter manual: Connection to my-PV power meter in the network is set up by entering the IP address manually.
 - c. Power meter direct: Connection to my-PV power meter is set up without network directly by using a crossover network cable.

- d. List of possible compatibility partners:
For certain compatible partners the choice between „Auto“ (automatic IP-search of the device) or „Manual“ (manual entry of the IP address of the source) is possible. „Manual“ is for instance necessary when there are several compatible sources in the network and a special one of them should be chosen as the control system.



TIP: On the Web-Interface the selection of compatible signal sources is much larger than on the display!

- e. Further protocols:
http, Modbus TCP, Adjustable Modbus RTU, Adjustable Modbus TCP
Adjustable Modbus RTU and Adjustable Modbus TCP have to be configured in the Web-Interface.
(see chapter „Special setting possibilities in the web interface“)
4. Temperature sensor assignment and activation
A number is assigned to the sensor in the order in which it is selected. The selection can be deselected by tapping on the key once more.
To assign a sensor to the respective entry in the list, the serial numbers can be identified on a label attached to the sensor wire.



TIP: As the measuring value of the sensor is already shown in the selection list, an assignment can alternatively also be made by simply altering the temperature on the sensor.

5. Save the settings

3. Controls and displays

Homescreen



The "Home" button always returns you to the home screen. The upper bar shows the current date, time, the unit number und the operating mode (mode M1 – Mx). On the right, symbols show the unit's current status.

The contents of the home screen vary according to the operating mode and shows how much power the AC•THOR is currently feeding into the load. Depending on how many, if any, temperature sensors are defined, the measured values are also shown.

Homescreen AC•THOR:

Date, time	Device number	Operating mode	Status
03.05.18 15:14:53	ACTHOR	1 - M1	

Presentation according to operating mode

23.1°C

Heating Power 2075W

Main menu

Single-Boost

Homescreen AC•THOR 9s:

With the AC•THOR 9s, the power display consists of three bars.

Load output Out-3
Load output Out-2
Load output Out-1

If several temperature sensors are used, the sensor number is displayed.

29.07.19 12:35:22	ACTHOR 9s	1-M1	
----------------------	-----------	------	--

59.3°C¹
45.9°C²
23.4°C³

1843 W 1:1843W 2:0W 3:0W

Main menu



The button "Single boost" only appears in hot water operating modes if the function for ensuring a minimum temperature is activated. Actuating the button starts a once-only boost backup mode. This can also be deactivated while it is in operation. If the boost backup is actuated automatically based on the day of the week, time of day or temperature, it cannot be deactivated by using the button.

Status symbol



Lights up = set temperature reached, Flashes = stand-by, waits for excess



Lights up = heats with PV excess. Flashes = boost backup mode



Lights up = no control signal



Lights up = physical connection to the RJ45 network connection is intact



Lights up = no intact physical connection to the RJ45 network connection



Block active

Data logger



Recorded production data, meter values and temperatures can be read off at any time. The respective values can be selected using the "Open" button. These can be presented in the three views of the current year, month or day using the "Calendar" button.



TIP: Type directly in the diagram on the individual bars to present the data in their next level of definition and on the button of the data logger again to return to the previous level.

The following data can be displayed:

Total power: Shows the total power figures for all the connected loads. The yellow bars indicate the PV excess power used, the green bars the proportion of grid energy when the optional temperature boost backup is active.

Meter: indicates the value of the total power drawn from the grid (red) including household loads and grid feed-in (green) at the metering point.

Power 1: shows the power data for load 1.

Power 2: shows the power data for load 2.

Temperature 1-4: shows the data of the temperature probe.

Status information on the display



The data of all variables relevant to the operation are shown in a list.

Output: shows the current output of the AC•THOR power unit.

Meter: shows the current data for the meter at the measuring point. A positive value shows drawing from the grid, a negative value, feeding into the grid.

PV: If a corresponding measuring point has been set in the Web-Interface under Setup, the value of the PV power is available here. See Measurement Settings.

Load: shows the nominal power of the load (at 230 V) which is currently being supplied by the AC•THOR output unit. This value can be determined from an output of 500 W. With AC•THOR 9s, the load status (0 or 1) at the three outputs is displayed at this point.

Temperature 1: Current data probe 1

Temperature 2: Current data probe 2

Temperature 3: Current data probe 3

Temperature 4: Current data probe 4

IP: shows the current IP address of the AC•THOR.

Ctrl IP: shows the current IP address of the signal source. Shown in addition in the line below is the designation of the signal source and the current measured value. A positive value shows drawing from the grid, a negative value, feeding into the grid.

Status: Shows the unit's current status. See chapter "Status codes".

For AC•THOR 9s the number consists of two parts. On the left the status code of power unit AC•THOR 9s, on the right the status code of power unit AC•THOR.

Grid voltage: shows the current input voltage at the AC•THOR (only with AC•THOR)

Grid power: shows the current input power at the am AC•THOR (only with AC•THOR)

Output voltage: shows the current output voltage of the AC•THOR (only with AC•THOR)

Power 1: Power at output Out-1 (only with AC•THOR 9s)

Power 2: Power at output Out-2 (only with AC•THOR 9s)

Power 3: Power at output Out-3 (only with AC•THOR 9s)

Frequency: shows the current grid frequency. This information is of particular interest in operating mode M8.

Temperature output unit: shows the current temperature of the AC•THOR power electronics.

Fan: shows the current speed setting of the internal fan.

Serial number: shows the unit serial number.

MAC address: shows the MAC address of the unit.

Version: shows the current firmware version of the unit.

Version power stage: shows the current firmware version of the AC•THOR output unit.

For AC•THOR 9s the firmware version of the PS consists of two parts.

pXXX: Power stage AC•THOR

sXXX: Power stage AC•THOR 9s

Device number: shows the unit number set. This is also visible on the home screen.

Operating mode: shows the operating mode set (M1 – Mx). This is also visible on the home screen.

Latest firmware: shows the latest firmware version, or "current" is displayed.

Update status: Ok, loading (number of files), or waiting for installation

Output unit update status: Ok, loading, or waiting for installation

Ethernet (E) Firmware: Shows the status of the firmware, last version, update progress.

Power stage (P) Firmware: Shows the status of the firmware, last version, update progress.

Power stage 9s (S) Firmware: Shows the status of the firmware, last version, update progress.

Relay status: shows the current status of the switch output (0 or 1).

For AC•THOR 9s this number has four digits. The first digit shows the status of the switch output (0 or 1), the second digit whether Out-3 is switched (0 or 1), the third digit whether Out-2 is switched (0 or 1) and the fourth digit shows the output that is currently supplied by the power stage (1, 2 or 3).

Settings



See chapter "General settings" for general unit settings, also chapter "Operating modes" for settings specific to the respective operating mode.

Help



After activation, brief information on the current view appears on the display. In the web interface the button leads to the online Operation Manual which corresponds to the firmware version installed.

4. Operating modes



You will find wiring diagrams for the respective operating modes and for wiring three-phase heating elements in the assembly instructions supplied with the AC•THOR, as well as in the latest version at any time on www.my-pv.com.

M1: Hot water

AC•THOR: Hot water with a single-phase immersion heater

AC•THOR 9s: Hot water with a three-phase immersion heater or with 3 single-phase immersion heaters



TIP for AC•THOR:

A single-phase heating element does not necessarily have to have 3kW power. Of course, smaller outputs such as 2kW are also possible!



TIP for AC•THOR 9s:

A three-phase heating element does not necessarily have to have 9kW power. Smaller outputs such as 4.5kW, 6kW or 7.5kW are also possible! Likewise, three single-phase elements can have a power of less than 3kW!

Explanation

In this operating mode, an electric heating element is supplied linearly with excess PV energy. It can be fitted with a bimetal thermostat to switch off when the temperature for which it is set is reached. Otherwise the my-PV temperature sensor is to be used.



With AC•THOR 9s in operation with three single-phase heating elements, bimetal thermostats must be present on all three immersion heaters!

Optionally, the AC•THOR can also take over guaranteeing the hot water temperature. For this, the my-PV temperature sensor is to be used.



The my-PV temperature sensor is in all cases to be installed in the storage tank above the heating element to provide a reliable reading!

The screenshot shows the AC•THOR homescreen with the following elements:

- Top left: Date and time: 03.05.18, 15:14:53
- Top center: Device name and mode: ACTHOR 1 - M1
- Top right: Status icons (three vertical bars and up/down arrows)
- Center: Large temperature display showing 23.1°C (highlighted with a red box).
- Bottom center: Heating power display showing 2075W (highlighted with a red box).
- Bottom right: Single-Boost button (highlighted with a red box).
- Bottom: Navigation bar with icons for data, info, home, settings, and help.

Labels on the left side of the screenshot:

- Data my-PV temperature sensor (pointing to the temperature display)
- Current power output (pointing to the heating power display)

Text on the right side of the screenshot:

Single-Boost
Starts a once-only boost backup mode
(button only appears if boost backup is activated)

Homescreen



TIP: With the hot water boost backup, limit the use of grid power by avoiding the switch-off at maximum temperature. To do this, set the value higher than the cut out temperature on the immersion heating element thermostat and site the temperature sensor between the immersion heating element and the top edge of the storage tank. In this way, in boost backup mode only the volume above the sensor will be heated to the minimum temperature, while when there is excess PV, the entire contents above the immersion heating element will be heated.

Specific settings for operating mode M1

Hot water 1 temperatures

Adjustable is the maximum permitted temperature to be reached at the my-PV temperature sensor (factory setting = 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup is shown "On" in the window on the right (factory setting "Off") or the relay output has been selected, a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Automatic temperature boost backup "On":

The AC•THOR can ensure a minimum temperature at the my-PV temperature sensor through the immersion heating element connected. This is supplied with maximum power.

Relay output:

Alternatively, the minimum temperature can be maintained by enabling an external heat source. Enablement is by means of a potential-free contact. For details of wiring the potential-free contacts, please refer to the assembly instructions in the chapter "Connections".



TIP for AC•THOR (not AC•THOR 9s):

If as an external heat source a second immersion heating element (maximum 3 kW) is used, it can be suitably connected up for 6 kW operation. This differs from the 6 kW operating mode in that here the second immersion heating element is only used for temperature boost backup and not as an extension to the normal control range!

Hot water 1 min switching times

This setting can be selected when the temperature boost backup is "On" under "Hot water 1 temperatures", or when the relay output has been selected.

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the temperature boost backup is "On" under "Hot water 1 temperatures", or when the relay output has been selected.

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Legionella program

For ensuring drinking water hygiene, a period can be specified by the end of which a set minimum temperature must again be reached after the last time it was reached. The number of days in this period can be set between 1 and 14. A time at which the legionella program is to start can also be specified. Factory settings are number of days 7, starting time 8 pm, temperature is 60 °C, the legionella program is "Off".

The immersion heating element is supplied with maximum power.

Load priority (only with AC•THOR 9s)

Defines the sequence in which the three load outputs are controlled.

Out 1-2-3: Standard, for a three-phase immersion heater.

Out 3-2-1: For stratified charging with three single-phase immersion heater.



For Out 3-2-1, it is essential to observe the order of the load outputs according to the wiring diagram!

Boost output (only with AC•THOR 9s)

If boost backup is activated for AC•THOR 9s, it is possible to specify which load outputs are to be used for this purpose. All three outputs are activated at the factory.



TIP: If, for example, 3 single-phase heating elements are used, it may only be necessary to use the boost function on the top heating element. This keeps storage capacities free for excess energy, which can significantly improve the degree of self-sufficiency!

TIP: If not all three outputs of a three-phase heating element are used for boosting, control power is still available in case of excess energy!

Temperature sensors (only with AC•THOR 9s)

Optionally, three temperature sensors can also be used in the operation of three single-phase heating elements. The assignment must be made vice versa to the load outputs.

Note: One temperature sensor is always enclosed with the AC•THOR, other sensors must be purchased separately.

Load output / heater	Sensor number
Out-3 / Top	1
Out-2 / Center	2
Out-1 / Bottom	3

Excess power control and boost backup are then carried out individually for each heating element; the settings in " Hot water 1 temperatures" affect all three elements. If only one sensor is used, this only switches off the upper heating element, the other heating elements must be controlled via thermostats.

M2: Hot water stratified charging

AC•THOR: Hot water with two single-phase immersion heaters

AC•THOR 9s: Hot water with two three-phase immersion heaters

Explanation

In a water tank in this operating mode, two immersion heating elements are supplied successively and linearly with excess PV power. The upper element has priority. The aim is to reach the desired temperature at the tapping point as quickly as possible before further excess power heats up the remaining contents of the tank.

As soon as the upper immersion heating element reaches the target temperature the lower heater will be supplied. If no my-PV temperature sensor is used, the switch-over takes place via the thermostats of the heating elements, the AC•THOR then regularly checks whether the upper heating element is available again. If the my-PV temperature sensor is used, the changeover takes place when the temperature at the sensor reaches the set maximum value.



Both heating elements must be equipped with a bimetal thermostat to switch off when the set temperature is reached!

With AC•THOR, the switchover between the single-phase heating elements takes place directly via the integrated relay (see wiring diagram). With the AC•THOR 9s, the relay operates a three-pole NC contact and a three-pole NO contact (see wiring diagram), which then switch over the three-phase heating elements.



TIP: It is also possible to control two immersion heating elements in separate tanks. The "upper" heater would then for instance be located in a drinking water tank, the "lower" heater in a buffer tank alongside it.

Optionally, the AC•THOR can also take over the boost backup of the hot water temperature at the upper immersion heater. For this, the my-PV temperature sensor is to be used.



The my-PV temperature sensor must in any event be installed in the hot water tank above the upper heater to provide a reliable reading!

The screenshot shows the AC•THOR homescreen with the following elements:

- Top bar:** Date and time (03.05.18, 15:23:02), device name (ACTHOR), mode (1 - M2), and status icons (three wavy lines and up/down arrows).
- Temperature:** A large display showing 21.0°C, highlighted with a red box. To its right is a vertical bar with a red arrow pointing up, also highlighted with a red box.
- Power Output:** A horizontal bar graph showing current power output, highlighted with a red box. Below it, the text "Heating Power 1883W" is displayed. To the right is a button with three wavy lines, highlighted with a red box.
- Bottom bar:** Navigation icons for signal strength, information, home, settings, and help.

Annotations:

- Data my-PV temperature sensor:** Points to the 21.0°C display.
- Current power output:** Points to the power bar and the 1883W text.
- An arrow shows which heater is currently being supplied. (upper or lower):** Points to the vertical bar with the red arrow.
- Single-Boost Starts a once-only boost backup mode (button only appears if boost backup is activated):** Points to the wavy lines button.

Homescreen

Specific settings for operating mode M2

Hot water 1 temperatures

Adjustable is the maximum temperature permitted to be reached at the my-PV temperature sensor (factory setting = 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup is shown "On" in the window on the right (factory setting "Off"), a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Automatic temperature boost backup "On":

The AC•THOR can ensure a minimum temperature at the my-PV temperature sensor with the upper heater. This is supplied with maximum power.

Hot water 1 min switching times

This setting can be selected when the temperature boost backup is "On" under Hot water 1 temperatures".

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the temperature boost backup is "On" under Hot water 1 temperatures".

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Legionella program

For ensuring drinking water hygiene, a period can be specified by the end of which a set minimum temperature must again be reached after the last time it was reached. The number of days in this period can be set between 1 and 14. A time at which the legionella program is to start can also be specified. Factory settings are number of days 7, starting time 8 pm, temperature is 60 °C, the legionella program is "Off".

The upper immersion heating element is here supplied with maximum power.

Boost output (only with AC•THOR 9s)

If boost backup is activated for AC•THOR 9s, it is possible to specify which load outputs are to be used for this purpose. All three outputs are activated at the factory.



TIP: If not all three outputs of a three-phase heating element are used for boosting, control power is still available in case of excess energy!

M3: Hot water 6 kW

AC•THOR: Hot water 6kW

AC•THOR 9s: 6kW control power is possible with operating mode M1

Explanation

In this operating mode, two heating elements each of 3 kW are supplied with excess PV power in a water storage tank. One of them be regulated continuously variable, the other cuts in as soon as more than 3 kW excess PV is available. When this occurs, the first heater starts again from 0 with the power regulation. Thus taken together, a control range from 0 to 6 kW is available.

Both heaters can be fitted with a bimetal thermostat to cut out when the set temperature is reached. Otherwise the my-PV temperature sensor is to be used.

Optionally, the AC•THOR can also take over boost backup of the hot water temperature with both immersion heating element s. For this, the my-PV temperature sensor is to be used.



The my-PV temperature sensor must in any event be installed in the hot water tank above the upper heater to provide a reliable reading!

The screenshot shows the 'Homescreen' of the AC•THOR system. At the top, it displays the date '03.05.18' and time '16:26:31', along with the unit name 'ACTHOR 1 - M3' and a status icon. The main display features a large temperature reading of '23.1°C' in a red-bordered box, labeled 'Data my-PV temperature sensor'. Below this is a 'Current power output' section with a yellow progress bar and a 'Heating Power 1553W' label, also in a red-bordered box. To the right, there is a 'Single-Boost' button with a wavy icon, labeled 'Single-Boost Starts a once-only boost backup mode (button only appears if boost backup is activated)'. The bottom navigation bar includes icons for a bar chart, information, home, settings, and help.

Specific settings for operating mode M3

Hot water 1 temperatures

Adjustable is the maximum permitted temperature to be reached at the my-PV temperature sensor (factory setting = 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup is shown "On" in the window on the right (factory setting "Off"), a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Automatic temperature boost backup "On":

With both immersion heaters, the AC•THOR can assure a minimum temperature at the my-PV temperature sensor. These are supplied with maximum power.

Hot water 1 min switching times

This setting can be selected when the temperature boost backup is "On" under Hot water 1 temperatures".

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the temperature boost backup is "On" under Hot water 1 temperatures".

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Legionella program

For ensuring drinking water hygiene, a period can be specified by the end of which a set minimum temperature must again be reached after the last time it was reached. The number of days in this period can be set between 1 and 14. A time at which the legionella program is to start can also be specified. Factory settings are number of days 7, starting time 8 pm, temperature is 60 °C, the legionella program is "Off".

The immersion heaters are supplied with maximum power.

M4: Hot water + Heat pump

AC•THOR: Hot water with a single-phase immersion heater

AC•THOR 9s: Hot water with a three-phase immersion heater



This mode works in systems where the AC•THOR knows the power in the feed-in point. It does not work if the power output is given by a higher-level energy management system.

Explanation

In this operating mode the electric immersion heating element of a heat pump is linearly supplied with excess PV power. This can be equipped with a bimetal thermostat to switch off when the set temperature is reached. Otherwise the my-PV temperature sensor must be used.



The my-PV temperature sensor must in any event be installed in the hot water tank above the upper heater to provide a reliable reading!

On exceeding a given excess power threshold, operation of the heating pump will be enabled. This threshold can be set. Similarly a minimum time for which this threshold must be exceeded. At the same time as the heat-pump is working, the additional excess power can be passed by the AC•THOR to the immersion heating element. This is activated in the factory settings.

After the defined excess power threshold has been exceeded for a specified time ($t_{P>}$), the heat-pump starts for the minimum operating time (t_{run}). This may also result in power being drawn from the grid!

When the minimum operating time has expired, the heat-pump remains enabled, provided there is still excess PV power available and the target temperature at the my-PV temperature sensor is not yet reached. If this now causes a fall in the excess PV power, the heat-pump will only be disabled after 60 seconds.

Once the heat-pump is disabled, it will not be reactivated for a period which can be set (t_{wait}).

Optionally, the AC•THOR can also take over guaranteeing the hot water temperature. This is carried out by enabling the heat-pump, when the immersion heating element will continue to be linearly supplied with excess.



The target temperature of the heat-pump control is not to be set lower than the AC•THOR minimum temperature, as this could then no longer be guaranteed!

The screenshot shows the AC•THOR 1-M4 homescreen. At the top, it displays the date and time (03.05.18, 17:06:56) and the unit name (ACTHOR 1 - M4). The main display area shows a large temperature reading of 23.0°C, a heating power bar at 1415W, and a 't run 30 min' indicator. A 'Single-Boost' button is visible on the right. The bottom navigation bar includes icons for signal strength, information, home, settings, and help.

Data my-PV temperature sensor

Current power output

Time period and time counter value of the HP control

Single-Boost Starts a once-only boost backup mode (Button appears only when the relay output is activated)

Homescreen

Specific settings for operating mode M4

Hot water 1 temperatures

Adjustable is the maximum permitted temperature to be reached at the my-PV temperature sensor (factory setting = 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup with relay output has been selected, a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Relay output:

The AC•THOR can also maintain the minimum temperature at the my-PV temperature sensor by enabling the heat-pump.

Hot water 1 min switching times

This setting can be selected when the relay output is selected under "Hot water 1 temperatures".

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the relay output is selected under "Hot water 1 temperatures".

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Legionella program

For ensuring drinking water hygiene, a period can be specified by the end of which a set minimum temperature must again be reached after the last time it was reached. The number of days in this period can be set between 1 and 14. A time at which the legionella program is to start can also be

specified. Factory settings are number of days 7, starting time 8 pm, temperature is 60 °C, the legionella program is "Off".

This enables the heat-pump and the immersion heating element remains in "excess" operation.

Relay thresholds

As switching threshold for a heat-pump, any output between 0 and 9,999 W can be set. Factory setting is 500 W. An alteration to this output threshold only becomes effective after the end of the current control cycle or after the AC•THOR is restarted.

Optionally, simultaneous control of the AC•THOR load output can be deactivated on the right of the screen.

Relay delay

A period in minutes is laid down ($t_{P>}$), during which the switching threshold above must at least be exceeded before the heat-pump is enabled. The factory setting suggests 15 minutes. After this, a minimum operating period (t_{run}) and a minimum pause duration (t_{wait}) can be set for the heat-pump. Factory settings suggest 30 minutes for both these values

M5: Hot water + Space heating

AC•THOR: Hot water + one heating zone

AC•THOR 9s: Hot water + two heating zones

Explanation

This operating mode is intended for buildings with hot water and space heating by electricity. Electrical heat sources are supplied with PV surplus one after the other linearly with power. The immersion heating element for the hot water supply takes priority. As soon as the hot water target temperature at the respective my-PV temperature sensor is reached, next the electric space heating is supplied until here too the target value at the my-PV temperature sensor is reached.

Optionally, the AC•THOR can also take over guaranteeing the hot water temperature.

Two my-PV temperature sensors are required for AC•THOR!

Three my-PV temperature sensors are required for AC•THOR 9s!

Note: One temperature sensor is always included with the AC•THOR, other sensors must be purchased separately.



The first my-PV temperature sensor is in any case to be sited over the heater in the hot water tank to provide a reliable reading!



For controlling the space heating, the respective my-PV temperature sensor is to be installed in a suitable place to provide a reliable reading!



TIP: When specifying room temperatures, to avoid using power from the public grid the minimum values for day and night should be set correspondingly low. See explanation "SH 1 temperatures".


Data my-PV
temperature sensors

Water temperature

Room temperature 2

Room temperature 1
(sun = daytime
operation)

Current power
output

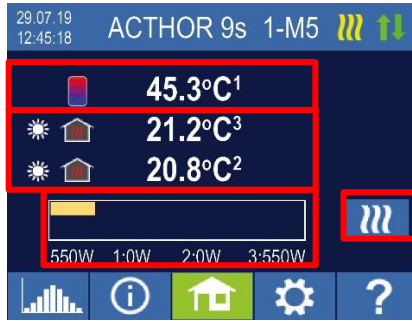

Single-Boost
Starts a once-only hot water
boost backup
(button only appears if boost
backup is activated)

Homescreen

On the display a sun or moon symbol shows which time period is currently controlling the room temperature. Different minimum temperatures can be specified for day and night.

Specific settings for operating mode M5

Hot water 1 temperatures

The maximum temperature permitted to be reached at my-PV temperature sensor 1 can be adjusted (factory setting 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup is shown "On" in the window on the right (factory setting "Off"), a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Automatic temperature boost backup "On":

The AC•THOR can ensure a minimum temperature at the my-PV temperature sensor through the immersion heating element connected. This is supplied with maximum power.

Hot water 1 min switching times

This setting can be selected when the temperature boost backup is "On" under Hot water 1 temperatures".

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the temperature boost backup is "On" under Hot water 1 temperatures".

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Legionella program

For ensuring drinking water hygiene, a period can be specified by the end of which a set minimum temperature must again be reached after the last time it was reached. The number of days in this period can be set between 1 and 14. A time at which the legionella program is to start can also be specified. Factory settings are number of days 7, starting time 8 pm, temperature is 60 °C, the legionella program is "Off".

The immersion heating element is supplied with maximum power.

SH 1 temperatures (with AC•THOR 9s SH 1 und SH 2)

The maximum room temperature permitted to be reached at my-PV temperature sensor 2 or 3 (sensor 1 is for hot water) can be adjusted (factory setting 22 °C), as are the minimum temperatures which should be maintained in the day and night periods (factory setting 20 °C in each case).

SH 1 Switching times (with AC•THOR 9s SH 1 und SH 2)

Start and finish of the night period can both be adjusted with hours and minutes. The factory setting suggests the period between 10 pm and 5 am. This setting can be selected as desired for all days of the week with corresponding selection of the button alongside the time (MON-SUN, MON-FRI, SAT-SUN).

Temperature sensors

Sensor assignment AC•THOR:

Application	Sensor number
Hot water	1
Space heating	2

Sensor assignment AC•THOR 9s:

Excess power control and boost backup are then carried out individually for each load output.

Load output / Application	Sensor numb
Out-3 / Hot water	1
Out-2 / Space heating 2	3
Out-1 / Space heating 1	2

M6: Space heating

AC•THOR: One heating zone

AC•THOR 9s: Three heating zones

Explanation

In this operating mode an electric space heating is supplied linearly with excess PV power.

One my-PV temperature sensors are required for AC•THOR!

Three my-PV temperature sensors are required for AC•THOR 9s!

Note: One temperature sensor is always included with the AC•THOR, other sensors must be purchased separately.




To control the space heating, the respective my-PV temperature sensor is to be installed in a suitable location to provide a reliable reading!

TIP: When specifying room temperatures, to avoid using power from the public grid the minimum values for day and night should be set correspondingly low. See



explanation "SH 1 temperatures".

Data my-PV
temperature sensor

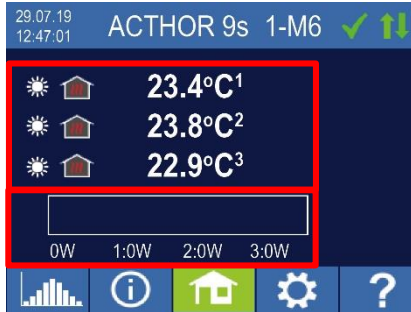

Room temperature
(sun = daytime
operation)

Current power output

Homescreen

On the display a sun or moon symbol shows in which time period the room temperature control is currently operating. Different minimum temperatures can be specified for day and night.

Specific settings for operating mode M6

SH 1 temperatures (with AC•THOR 9s SH 1, SH 2 and SH 3)

The maximum room temperature permitted to be reached at the my-PV temperature sensors can be adjusted (factory setting 22 °C), as are the minimum temperatures which should be maintained in the day and night periods (factory setting 20 °C in each case).

SH 1 Switching times (with AC•THOR 9s SH 1, SH 2 and SH 3)

Start and finish of the night period can both be adjusted with hours and minutes. The factory setting suggests the period between 10 pm and 5 am. This setting can be selected as desired for all days of the week with corresponding selection of the button alongside the time (MON-SUN, MON-FRI, SAT-SUN).

Temperature sensors

Sensor assignment AC•THOR:

Application	Sensor number
Space heating	1

Sensor assignment AC•THOR 9s:

Excess power control and boost backup are then carried out individually for each load output.

Load output / Application	Sensor numb
Out-3 / Space heating 3	3
Out-2 / Space heating 2	2
Out-1 / Space heating 1	1

M7: Hot water + PWM

AC•THOR: Hot water with a single-phase immersion heater
AC•THOR 9s: Hot water with a three-phase immersion heater

Explanation

In this operating mode, an electric heating element is supplied linearly with excess PV energy. In addition, the AC•THOR can send out a temperature-dependent PWM signal. This can for instance control the speed of a pump.

This function was tested by my-PV with the pump type **Wilo Yonos Para PWM1 and PWM2**. For PWM2, the setting command xxx.xxx.xxx.xxx.xxx/setup.jsn?pwmt=2 must be entered in the URL of the webinterface. For other pumps, the function cannot be certified.



In this operating mode, two my-PV temperature probes are required!

Optionally, the AC•THOR can also take over guaranteeing the hot water temperature. For this, a third my-PV temperature sensor is to be used.

Note: A temperature sensor is always included with the AC•THOR, other sensors must be purchased separately.

The screenshot shows the AC•THOR homescreen with the following elements:

- Top left: Date and time: 03.05.18, 18:08:48
- Top center: Device name and mode: ACTHOR 1 - M7
- Top right: Status icons (three wavy lines and two vertical arrows)
- Center: Large temperature display showing 22.3°C and 44.8°C, both highlighted with a red box.
- Right side: PWM status: Status PWM Output signal, PWM 36%
- Bottom center: Heating Power 48W, highlighted with a red box.
- Bottom right: Single-Boost button (wavy lines icon), highlighted with a red box.
- Bottom: Navigation bar with icons for bar chart, info, home, settings, and help.

Labels on the left side of the screenshot:

- Data my-PV temperature sensors (pointing to the temperature display)
- Current power output (pointing to the Heating Power 48W)

Labels on the right side of the screenshot:

- Status PWM Output signal (pointing to the PWM 36% indicator)
- Single-Boost Starts a once-only boost backup mode (button only appears if boost backup is activated) (pointing to the Single-Boost button)

Homescreen

Specific settings for operating mode M7

Hot water 1 temperatures

Adjustable is the maximum permitted temperature to be reached at the my-PV temperature sensor (factory setting = 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup is shown "On" in the window on the right (factory setting "Off") or the relay output has been selected, a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Automatic temperature boost backup "On":

The AC•THOR can ensure a minimum temperature at the my-PV temperature sensor through the immersion heating element connected. This is supplied with maximum power.

Relay output:

Alternatively, the minimum temperature can be maintained by enabling an external heat source. Enablement is by means of a potential-free contact. For details of wiring the potential-free contacts, please refer to the assembly instructions in the chapter "Connections".



TIP for AC•THOR (not AC•THOR 9s):

If as an external heat source a second immersion heating element (maximum 3 kW) is used, it can be suitably connected up for 6 kW operation. This differs from the 6 kW operating mode in that here the second immersion heating element is only used for temperature boost backup and not as an extension to the normal control range!

Hot water 1 min switching times

This setting can be selected when the temperature boost backup is "On" under "Hot water 1 temperatures", or when the relay output has been selected.

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the temperature boost backup is "On" under "Hot water 1 temperatures", or when the relay output has been selected.

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Boost output (only with AC•THOR 9s)

If boost backup is activated for AC•THOR 9s, it is possible to specify which load outputs are to be used for this purpose. All three outputs are activated at the factory.



TIP: If not all three outputs of a three-phase heating element are used for boosting, control power is still available in case of excess energy!

M8: Frequency mode

AC•THOR: Hot water with a single-phase heating load

AC•THOR 9s: Hot water with a three-phase heating load

Explanation

In this operating mode, a dump-load in an AC island network is linearly supplied with excess PV power. The output of the AC•THOR is specified to the unit by a battery inverter through alteration of the grid frequency via power-grid connection. Wiring for intercommunication is not required!

If an immersion heating element element is used as a dump load, the AC•THOR can optionally also take over boost backup of the hot water temperature. For this, the my-PV temperature sensor is to be used.




In this application, the my-PV temperature sensor in the storage tank must in any event be installed above the immersion heating element to provide a reliable reading!



In boost backup mode, the battery must be expected to discharge!

Data my-PV
temperature sensor
Current grid frequency
Current power output

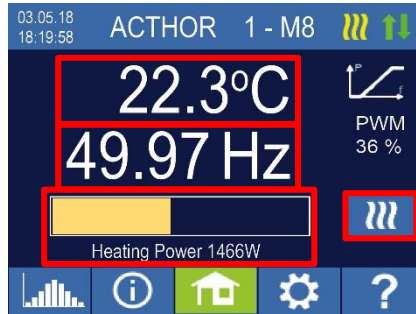

Single-Boost
Starts a once-only boost
backup mode
(button only appears if boost
backup is activated)

Homescreen



TIP: Using several AC•THORs, each one may specify a different frequency range. In this way it is also possible to set priorities for several dump loads.

Specific settings for operating mode M8

Frequency

The frequency range in which the adjustable power can be linearly fed can be altered. As lower limit (no power) and upper limit (maximum power) a range between 45 and 65 Hz is available. The factory settings are 50 Hz and 51 Hz.

The frequency range must be at least 0.5 Hz!

Maximum power

The input of maximum power of the heating load is extremely important for this operating mode. This is why this setting possibility appears here in second place again, in addition to its normal position in the settings. See "General Settings" for details.

Hot water 1 temperatures

Adjustable is the maximum permitted temperature to be reached at the my-PV temperature sensor (factory setting = 60 °C). This has nothing to do with a bimetal thermostat which may be installed!



If the cut out temperature of an immersion heating element with a bimetal thermostat is set too low, the AC•THOR may possibly be unable to reach the desired temperature!

If the optional automatic temperature boost backup is shown "On" in the window on the right (factory setting "Off") or the relay output has been selected, a minimum temperature can then be set (factory setting 50 °C). It cannot be set higher than the maximum temperature.

Automatic temperature boost backup "On":

The AC•THOR can ensure a minimum temperature at the my-PV temperature sensor through the immersion heating element connected. This is supplied with maximum power.

Relay output:

Alternatively, the minimum temperature can be maintained by enabling an external heat source. Enablement is by means of a potential-free contact. For details of wiring the potential-free contacts, please refer to the assembly instructions in the chapter "Connections".

TIP for AC•THOR (not AC•THOR 9s):



If as an external heat source a second immersion heating element (maximum 3 kW) is used, it can be suitably connected up for 6 kW operation. This differs from the 6 kW operating mode in that here the second immersion heating element is only used for temperature boost backup and not as an extension to the normal control range!

Hot water 1 min switching times

This setting can be selected when the temperature boost backup is "On" under "Hot water 1 temperatures", or when the relay output has been selected.

There are two time windows available to maintain the minimum temperature on the my-PV temperature sensor. Start and finish can each be defined at full hours. Factory settings suggest switching times of 5 to 11 pm and 5 to 7 am.



TIP: Restrict the times when the minimum temperature has to be maintained to mornings and evenings, to increase your own PV consumption through the day!



Start hour and stop hour refer to the same calendar day. If a time window is defined over midnight, hot water backup will not start!



If the adjusted start-hour is after the stop-hour, hot water backup will not start!

Hot water 1 min weekdays

This setting can be selected when the temperature boost backup is "On" under "Hot water 1 temperatures", or when the relay output has been selected.

You can select the weekdays on which the minimum temperature has to be maintained. In the factory settings, all weekdays are activated.

Legionella program

For ensuring drinking water hygiene, a period can be specified by the end of which a set minimum temperature must again be reached after the last time it was reached. The number of days in this period can be set between 1 and 14. A time at which the legionella program is to start can also be specified. Factory settings are number of days 7, starting time 8 pm, temperature is 60 °C, the legionella program is "Off".

The immersion heating element is supplied with maximum power.

Load priority (only with AC•THOR 9s)

Defines the sequence in which the three load outputs are controlled.

Out 1-2-3: Standard, for a three-phase immersion heater.

Out 3-2-1: For stratified charging with three single-phase immersion heater.



Connect the smallest heat power to Out-3, the biggest heat output to Out-1!

Boost output (only with AC•THOR 9s)

If boost backup is activated for AC•THOR 9s, it is possible to specify which load outputs are to be used for this purpose. All three outputs are activated at the factory.



TIP: If, for example, 3 single-phase heating elements are used, it may only be necessary to use the boost function on the top heating element. This keeps storage capacities free for excess energy, which can significantly improve the degree of self-sufficiency!

TIP: If not all three outputs of a three-phase heating element are used for boosting, control power is still available in case of excess energy!

Temperature sensors (only with AC•THOR 9s)

Optionally, three temperature sensors can also be used in the operation of three single-phase heating elements. The assignment must be made vice versa to the load outputs.

Note: One temperature sensor is always enclosed with the AC•THOR, other sensors must be purchased separately.

Load output / heater	Sensor number
Out-3 / Top	1
Out-2 / Center	2
Out-1 / Bottom	3

Excess power control and boost backup are then carried out individually for each heating element; the settings in " Hot water 1 temperatures" affect all three elements. If only one sensor is used, this only switches off the upper heating element, the other heating elements must be controlled via thermostats.

5. General settings

For settings specific to the different operating modes, please see the chapter "Operating modes". Under the settings these are accessed on the first sheet "Setup 1/X" and some of them on sheet two, "Setup 2/X".

Time zone: The time zone can be set for the time. In addition, summer time is activated for Europe.

Date: The date can be entered in the format dd.mm.yy.

Time: The time can be entered in the format hh:mm:ss.

NTP server: (NTP = Network Time Protocol) As long as the router provides an Internet, the AC•THOR draws its time information automatically from the Internet. However, the respective time zone is not specified. NTP-Timeserver-address can be changed if necessary. The factory setting is 131.130.251.107.



With a direct connection from the AC•THOR to the my-PV power meter, there is no Internet connection. Hence the time cannot be taken!

IP DHCP/static: As standard, DHCP is activated, i.e., the unit will get an IP address from the router to which it is connected. This only works when the router is configured as a DHCP server. If no DHCP server is active in the grid or if a static assignment is required, a fixed IP address is needed.



The settings have to fit with the router, otherwise the device become invisible in the network!

IP address: can only be set when "Static IP" has been selected and there is no direct connection to the my-PV power meter.

Subnet mask: can only be set when "Static IP" has been selected and there is no direct connection to the my-PV power meter.

Gateway address: can only be set when "Static IP" has been selected and there is no direct connection to the my-PV power meter.

DNS server: can only be set when "Static IP" has been selected and there is no direct connection to the my-PV power meter.

Display duration: the number of seconds elapsing until the display is turned off can be set. A value between "10" and "250" seconds can be entered.

Display brightness: brightness of the display can be adjusted in ten steps.

Logo brightness: brightness of the illuminated AC•THOR logo on the unit can be adjusted in ten steps. "0" indicates that the logo will not be turned off

Control: In this section the choice of the signal source for the AC•THOR is made. See chapter "Commissioning".

Ctrl IP: The IP address of the signal source can be selected manually. Fr example, this is necessary when there are several compatible sources in the network and a special one of them should be chosen as the control system.

Control target value: here the set value of the power at the metering point is specified. A negative value means feed-in. The factory pre-set of the set-point is -50 W. This parameter can be freely chosen in a range between -999 and +999 W.


Sensors: Here the temperature sensor is selected for the operating mode. See chapter "Commissioning".

Operating mode: Detailed description will be found in the chapter "Operating modes".

Language: Apart from German, the following languages can be selected: English, French and Spanish.

Unit number: Ex-factory, every AC•THOR carries the number 1. The possibility of setting higher numbers is to allow for future functions.

Maximum power: This setting limits the output voltage of the AC•THOR. This results in a reduction factor of the nominal power of the load, i. the actual maximum output power depends on the rated power of the load. The maximum output voltage as a function of the parameter results from the following characteristic curve:

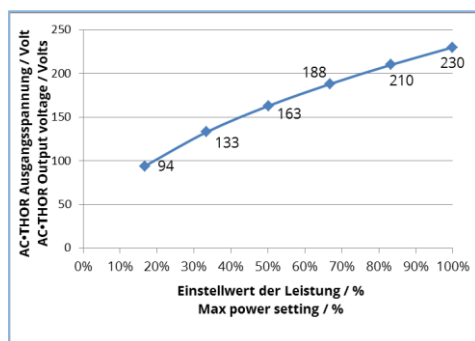

The value can be set on the display between 17 – 100 percent.

With AC•THOR 9s this value can only be set in frequency mode.



Adjustment is generally only required if the rated load power is bigger than the power available for the AC•THOR.

(protection, inverter power in frequency mode)



Even in operating mode M3 (DHW 6kW), the maximum unit output can be set to a maximum of 3,000 W since this specification affects the regulated output. DO NOT limit the power in this operating mode, otherwise there will be a jump in the power control.

Access level (only until Firmware-Version a0010103): according to user level (1 – 3), different setting possibilities are enabled on the AC•THOR. In level 3 all settings are enabled. As factory setting, this level is active. It is possible to restrict the setting options enabled.

Level 2 offers slightly restricted setting possibilities for experienced users. Some examples of settings which cannot be altered are those for communication, operating mode, basic settings, sensor assignment and control settings.

In level 1 the setting possibilities are limited to temperature specifications and switching times for space heating (only relevant in operating modes M5 and M6), as well as the brightness and duration of the display settings and brightness of the AC•THOR logo.

A password is required to be able to return to a higher level. The password for level 2 is "1970", that for level 3, "1965".

Hysteresis: switch hysteresis can be set for hot water and room heating. This does not cause too high a target temperature! After reaching the target temperature, the value is allowed to fall by the set amount before the heating process is restarted.

Hot water maximum temperature (factory setting 3.0 °C)
Hot water minimum temperature (factory setting 3.0 °C)
Space heating maximum temperature (factory setting 0.5 °C)
Space heating minimum temperature (factory setting 0.5 °C)

Fault record: See chapter "Fault messages"

Factory settings:

Factory settings: tapping on the menu point resets the AC•THOR to its factory settings. This will cause all altered settings in the unit to be deleted!

CAUTION! No security confirmation is requested!

Check for new firmware:



Internet access is required!

Start check for new updates manually. When a new version is available, it will be stored on the SD card. This procedure takes several minutes. The AC•THOR will operate normally during this period.

Start firmware update: if a newer software version is present on the SD card, the update can be started manually. After the update, the unit will be restarted automatically.

Start power firmware update: if a newer output unit software version is present on the SD card, the update can be started manually. After the update, the unit will be restarted automatically.

6. Web-Interface

By means of a HTML file (required for Ethernet firmware version a0020000 or higher) data of the AC•THOR can be retrieved and adjustments can be made.



TIP: The Web-Interface offers much more extensive setting options than the AC•THOR Display!

Search for devices in the network




You can only access the web interface if the AC•THOR is in a network. If it has a direct connection to the power meter, this access is not possible!



If you cannot access the AC•THOR in the network, check the network settings on the display!

Expiry of the network connection:

1. After the connection using a patch lead the AC•THOR is assigned a dynamic IP address by the router. It can then be searched for in the network using the program "my-PV Scanner.exe" (included in the "Software package AC•THOR.zip" on www.my-pv.com). To do this, unpack the scanner program into a local directory.

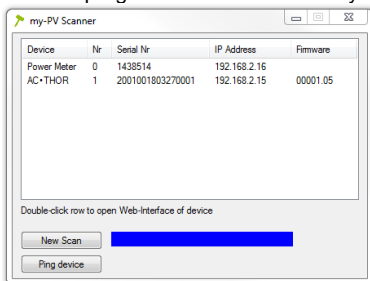

2. If there are several my-PV devices in the network, the unit to be configured can be identified by the serial number (for AC•THOR see type plate on the back of the unit).

- The web interface opens by double clicking on the respective search result.
From firmware version a0020000 onwards, the required HTML file is downloaded from the Internet and stored in the same directory as the scanner program.



Scanning is performed via UDP port 16124. Firewalls (or specific router settings) may prevent the AC•THOR from being found.



TIP: You will also find the IP address of the AC•THOR on the display or in the DHCP list in the router!

Alternatively, the second scan program "Scan AC ELWA-E ARP.exe" can be used, which sends an ARP query to the router and displays the connected my-PV devices. Since the router takes some time to update the ARP table it may be that the ARP scan takes some time to show AC ELWA-E results.

IP Address	MAC Address	Type
10.0.0.100	98-6d-35-c0-00-01	dynamisch
10.0.0.101	98-6d-35-c0-00-00	dynamisch
10.0.0.102	98-6d-35-c0-00-02	dynamisch

From firmware version a0020000 onwards, the Web-Interface of AC•THOR is outsourced to an external HTML file. If the device is accessed directly via the IP address in the web browser, this view appears.

DE: Ab Version a0020000 erfolgt der Aufruf des AC•THOR Webinterfaces durch eigene HTML Datei, die einmalig lokal gespeichert werden muss.
EN: From Version a0020000 the AC•THOR webinterface is accessed from a separate HTML file that needs to be stored locally once.
FR: À partir de la version a0020000, l'interface web AC•THOR est appelée par son propre fichier HTML, qui doit être enregistré localement une fois.
ES: A partir de la versión a0020000, la interfaz web de AC•THOR es llamada por su propio archivo HTML, que debe ser guardado localmente una vez.

[Download Webinterface](#)

DE: Alternativ kann das AC•THOR Webinterface auch direkt im Browser geöffnet werden.
EN: Alternatively, the AC•THOR webinterface can also be opened directly in the browser.
FR: L'interface web de la AC•THOR peut également être ouverte directement dans le navigateur.
ES: Alternativamente, la interfaz web de AC•THOR también puede abrirse directamente en el navegador.

[Open Webinterface in Browser](#)

Follow the download link (above) and save the file locally, then open the file to access the Web-Interface. Alternatively, you can open the Web-Interface directly in your web browser (link below).



my-PV does not recommend to connect the AC•THOR to the Internet via port forwarding access!

Systems without Internet access



From Ethernet firmware version a0020000 applies:

To be able to access the Web-Interface of AC•THOR in systems without internet access, please download the required HTML file in advance.

You will also find a corresponding note on the carton box:



Der Zugriff auf das Web-Interface dieses Gerätes ist nur durch eine HTML Datei möglich.

Download:

<https://www.my-pv.com/download/currentversionget.php>

Access to the web interface of this device is only possible through an HTML file.

Download:

<https://www.my-pv.com/download/currentversionget.php>

Connect Web-Interface

If the Web-Interface is started via the scanner program (see chapter "Search for devices in the network", the connection to the device is established automatically.


From firmware version a0020202 onwards, the current Web-Interface allows the selection of French or Spanish in addition to German and English.

If the Web-Interface is started by calling the HTML file, the IP address range of the network in which the device is located must be set once. The entry is saved by the web browser, but the address range can be redefined at any time using the "IP Search Range" button.


Home (homepage)



The AC•THOR start page in the web browser gives the same information as the home screen on the display. Navigation using the symbols bar is carried out in the same way. Further information in the chapter "Control and display elements".

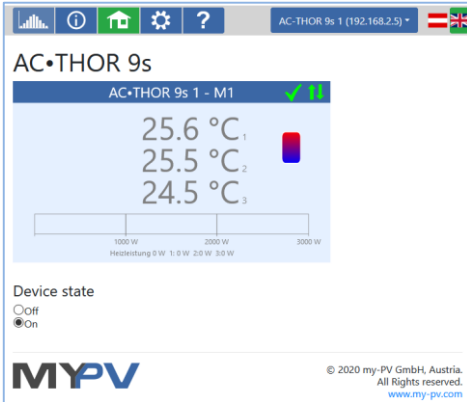

With device state "Off", the load control can be switched off.

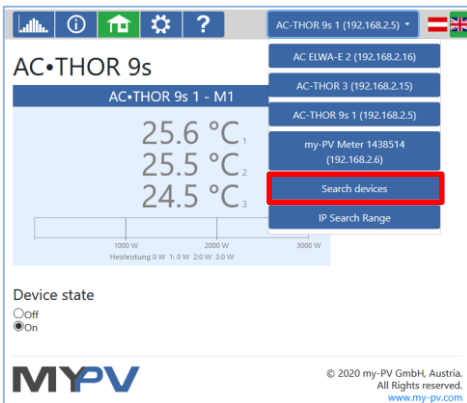

A quick selection in the upper right corner allows direct access to the Web-Interface from other my-PV devices in the network. The button "Search Devices" scans the network for my-PV devices.



TIP: If the device search does not produce a result, the IP address can also be entered manually in the address line of the web browser.

URL: ... / my-PV Websetup 00XXX.XX.html?ip=XXX. XXX. XXX. XXX

Consider that the appearance and the scope of options can change with updated software versions.


Data logger



The AC•THOR data logger in the web browser gives the same information as the data logger on the display. The selection of values and time period is possible using the menu bar above the diagram. Further information in the chapter "Control and display elements".



TIP: Move the mouse over the bar and the exact values will be shown!

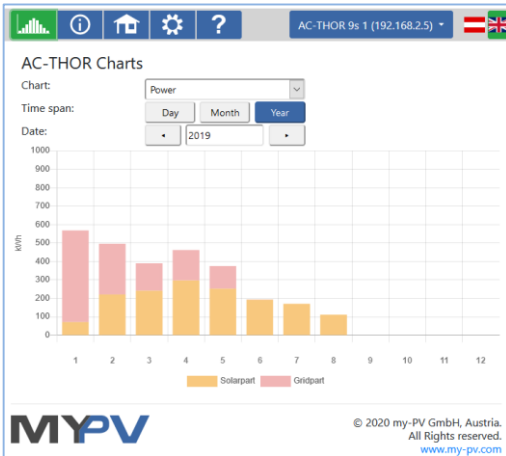

Orange bars indicate the proportion of energy that comes from the photovoltaic system, red bars indicate the proportion of optional boost-backup.



In the case of third-party control, for example through Modbus TCP, the bars always appear red because a distinction is not possible!

Status information



The status information in the web browser contains more details than that on the AC•THOR display. The following additional values are given. An explanation of the other values is given in the chapter "Status information in the display".

Power share PV:

this value shows the share of the total power from photovoltaics.

Power share grid:

this value shows the share of the total power from the electricity grid.

Power 1 share PV:

this value shows the share of the power for load 1 from photovoltaics.

Note: In operating mode M3 (hot water 6 kW) a figure is also only shown for power 1.

Power 1 share grid:

this value shows the share of the power from load 1 from the grid.

Power 2 share PV:

this value shows the share of the power for load 2 from photovoltaics.

Power 2 share grid:

this value shows the share of the power from load 2 from the grid.

Power 3 share PV: (only with AC•THOR 9s)

this value shows the share of the power for load 3 from photovoltaics.

Power 3 share grid: (only with AC•THOR 9s)

this value shows the share of the power from load 3 from the grid.

Load: With AC•THOR 9s, the load status (0 or 1) is displayed at this point on the three outputs.

Load nominal power: Shows the nominal power of the load (at 230V). This value can be determined from a power of 500 W.

discovered my-PV Power Meter: Power meters in the network are displayed with ID and IP address.

Hot water boost backup status: active for codes >0.

Next legionella cycle:
days remaining before next legionella cycle is run.

Settings



The setting possibilities in the web browser are more extensive than those on the AC•THOR display. See next section " Special setting possibilities in the Web-Interface".

An explanation of the other general unit settings is included in the chapter "General settings".

An explanation of the other specific unit settings for the different operating modes is included in the chapter "Operating modes".




The choice of setting options varies depending on the operating mode.

Special setting possibilities in the Web-Interface

The following unit settings are only possible in the web interface and cannot be carried out on the AC•THOR display.

Legionella boost outputs (only with AC•THOR 9s)

With the AC•THOR 9s, a selection of the load outputs to be used in the Legionella program can be made in the web interface. All three outputs are activated in the factory.

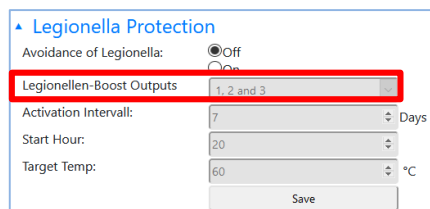



TIP: If, for example, 3 single-phase heating elements are used and only one of them is in a drinking water storage tank, then the Legionella programme should only be used on this heating element!

Control Settings

Control Settings

Control Type: ▾

ELWA Number > 1: only 'Slave' selectable.

Control Source IP Address: ▾ ▾ ▾ ▾

Control Status:

Power Timeout: ▾

Control Target: ▾ W

Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.

Block start / stop hour: ▾ ▾

In this section the choice of the signal source for the AC•THOR is made.



A control type can only be selected if the AC•THOR has the factory preset device number 1. See "Basic settings".



To have all signal sources of this list available for selection, you need the current version of the Web-Interface, i.e. the HTML file. You can get this file via the my-PV scanner or via the link that is displayed when you call the IP address of the AC•THOR in the web-browser! See chapter " Search for devices in the network".

For certain compatible partners the choice between „Auto“ (automatic IP-search of the device) or „Manual“ (manual entry of the IP address of the source) is possible. „Manual“ is for instance necessary when there are several compatible sources in the network and a special one of them should be chosen as the control system.

Besides the my-PV Power Meter and open communication protocols such as http, Modbus TCP, Adjustable Modbus RTU and Adjustable Modbus TCP, pre-set signal sources are available for these manufacturers:

With these the control signal is received via network (RJ45, Ethernet)!

Signal source	Comments
Carlo Gavazzi	Approved for meter type EM24 with Modbus TCP.
Fluvius Direct	Device connection requires the "Fluvius Interface" from my-PV as hardware interface. See here .
Fronius	Smart Meter required. For Modbus control Sunspec must be activated.
Huawei (Modbus TCP)	Communication via Modbus TCP is less common in Europe at Huawei. The AC•THOR can also be controlled via Modbus RTU. See next section.
KACO TL1 + TL3	Sunspec must be enabled on inverter.
Kostal PIKO IQ Plenticore plus	Suitable electricity meters please refer to the Kostal descriptions.
Kostal Smart Energy Meter	Device ID as set on the device. Modbus Settings – Modbus TCP – set "Enable TCP Slave" active
MEC electronics	Approved for meter type MECmeter.
RCT Power	-

SMA Direct meter communication	This control type is available for the SMA Energy Meter and SMA Sunny Home Manager devices. If this control type is carried out by the Sunny Home Manager, the superordinate energy planning for the my-PV device is then not given. There is also no visualization in the Load Balance. However, the power control is then carried out significantly faster than with the control type "SMA Home Manager".
SMA Home Manager	The power signal which the SMA Sunny Home Manager gives the my-PV device depends not only on the feed-in, but also on the superordinate energy planning.
SolarEdge	Sunspec must be enabled on SolarEdge. The communication works either via port 502 or 1502.
Steca	-
Sungrow	Works with Sungrow devices that communicate via Modbus TCP.
Varta	-
Victron	With Modbus control, the excess power control can be selected according to one or three phases.



TIP: For many of these **and other manufacturers** there are separate instructions for the required settings. More information about compatible manufacturers can be found [here](#).

**With these the control signal is received via Modbus RTU (RS485, A B GND)!
Connection diagram according to chapter 8.**



This control system is also configured via the Web-Interface. At least for commissioning, a network access is therefore temporarily necessary, but this can be removed after configuration!



TIP: A simple network router is part of the normal tools of a craftsman these days. If you always have your own router with you, you are not dependent on network access at the sight.
An Internet connection is not required.

Signalsource	Comments
Huawei (Modbus RTU)	-



Not every control type is approved for hybrid systems with battery storage. If required, please contact the technical support of my-PV.



For some control types the IP address must be set manually. This must not change during operation (e.g. by a DHCP router), otherwise the AC•THOR loses the control signal.



When controlled by an inverter, a feed-in meter is required in the system. The query of the inverter otherwise provides no data.



We ask for your understanding that we cannot do any binding support for third-party products. For questions about third-party products, please contact the technical support of the respective company.



Operation with battery may require additional control parameters. In this case, please contact the technical support of my-PV.

For certain compatible sources the choice between „Auto“ (automatic IP-search of the device) or „Manual“ (manual entry of the IP address of the source) is possible. „Manual“ is necessary when

there are several compatible sources in the network and a special one of them should be chosen as the control system.

The control mode "**my-PV Power Meter direct**" has to be selected when a direct data connection between the Power Meter and the AC•THOR is made (without network).



For this type of connection a crossover patch cable has to be used!



It can take up to a minute before the direct connection is established!

With the setting „**Power Timeout**“ the timeout of AC•THOR can be changed for the modes „http“, „Modbus TCP“, „Adjustable Modbus RTU“ and „Adjustable Modbus TCP“.

The parameter "**Control Target**" specifies the set point of the power at the metering point. A negative value means feed-in. The factory pre-set of the set-point is -50 W. This parameter can be freely chosen in a range between -500 and +500 W.

The function „**Block**“ allows to define a time window within AC•THOR must not run. Unlike the two time frames for hot water securing the transition to the following day is possible (Start Hour is higher than Stop Hour). For example, this function can be used to give an existing battery time for charging and to do the water heating subordinate.



Changes of the time settings are effective within one minute.

With the control modes "**Adjustable Modbus RTU**" and "**Adjustable Modbus TCP**" the AC•THOR receives the power-value in the feed-in point from an inverter or Modbus counter. The required communication registers shall be set according to the manufacturer's description.



With "**Adjustable Modbus TCP**" the control signal is received via network (RJ45, Ethernet)!



With "**Adjustable Modbus RTU**" the control signal is received via Modbus RTU (RS485, A B GND)! This control system is also configured via the Web-Interface. At least for commissioning, a network access is therefore temporarily necessary, but this can be removed after configuration!



TIP: A simple network router is part of the normal tools of a craftsman these days. If you always have your own router with you, you are not dependent on network access at the sight.

An Internet connection is not required.

Device ID must be set to the Modbus ID of the external device.

Control Settings

Control Type: Adjustable Modbus TCP (Sun ▾)
 ELWA Number > 1: only 'Slave' selectable.
 Control Source IP Address: 192 ▾ 168 ▾ 2 ▾ 6 ▾
 Device ID / Port: 1 ▾ 502 ▾
 Sign: - feed in ▾
 Meter Register: 1000 ▾ Int16 ▾
 Scale Register: 1001 ▾ none ▾
 L1/L2/L3 Registers: 0 ▾ 0 ▾ 0 ▾
 L1/L2/L3 Type: Int16 ▾
 L1/L2/L3 Scale Registers: 0 ▾ 0 ▾ 0 ▾
 L1/L2/L3 Scale Registers Type: none ▾
 Battery Charging Power Sign: + charging ▾
 Battery Charging Power Register: 0 ▾ Int16 ▾
 Battery Charging Power Scale Register: 0 ▾ none ▾
 Control Status: Conn. to Power Meter, P=6
 Power Timeout: 10 ▾
 Control Target: -50 ▾ W
 Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.
 Block start / stop hour: 0 ▾ 0 ▾


Save


Control Settings


Control type: Adjustable Modbus RTU ▾
 AC-THOR Number > 1: only 'Slave' selectable.
 Device ID: 1 ▾
 Baud rate: 19200 ▾
 Parity: even ▾
 Stop bits: 1 ▾
 Register range: Holding registers ▾
 Sign: - feed in ▾
 Meter register: 1000 ▾ Int16 ▾
 Scale register: 1001 ▾ none ▾
 L1/L2/L3 registers: 0 ▾ 0 ▾ 0 ▾
 L1/L2/L3 type: Int16 ▾
 L1/L2/L3 scale registers: 0 ▾ 0 ▾ 0 ▾
 L1/L2/L3 scale registers type: none ▾
 Battery charging power sign: + charging ▾
 Battery charging power register: 0 ▾ Int16 ▾
 Battery charging power scale register: 0 ▾ none ▾
 Control state: Conn. to Power Meter, P=2
 Power timeout: 10 ▾
 Control target: -50 ▾ W
 Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.
 Block start / stop hour: 0 ▾ 0 ▾


Save

 This control types are currently not approved for hybrid systems with battery storage.

 With the settings "Adjustable Modbus TCP (Sunspec etc)", the IP address of the signal source must not change during operation (eg by a DHCP router), otherwise the AC•THOR loses the control signal.


 When controlled by an inverter, a feed-in meter is required in the system. The query of the inverter otherwise provides no data.

 We ask for your understanding that we cannot do any binding support for third-party products. For questions about third-party products, please contact the technical support of the respective company.

 Operation with battery may require additional control parameters. In this case, please contact the technical support of my-PV.

Measurement Settings

As an option, other measurements can be queried in the system in addition to PV excess measurement (see Control Settings) and visualise them on the my-PV.LIVE data platform. Available variables are Photovoltaic power, Battery power, EV Charging station power and Heat pump power.

 These measured values have no relevance for the regular operation of the my-PV device!

If you are using the my-PV Power Meter to detect these values, you must enter the ID (serial number) of the device. You will find this number on the device.



If the measured values come from an inverter or Modbus meter, the required communication registers shall be set according to the manufacturer's description.



Measured value acquisition only works via network, not via Modbus RTU!



We ask for your understanding that we cannot do any binding support for third-party products. For questions about third-party products, please contact the technical support of the respective company.

Measurement Settings

Excess power in the grid feed-in point is already detected by the device configured for control (see Control Settings). In addition, these measured variables can optionally be detected for display in the my-pv.LIVE cloud. They have no relevance for the operation of the my-pv device.

Photovoltaic power
 Measure source: Adjustable Modbus TCP
 Modbus IP address: 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0
 Device ID / Port: 2 | 502
 Register range: Holding registers
 Meter register: 40499 | Int32
 Scale register: 0 | none
 L1/L2/L3 registers: 0 | 0 | 0
 L1/L2/L3 type: Int16
 L1/L2/L3 scale registers: 0 | 0 | 0
 L1/L2/L3 scale registers type: none
 Without PV power block device: Off On
Battery power
 Measure source: none
EV charging station power
 Measure source: none
Heat pump power
 Measure source: none
 Save

At the measuring point "Photovoltaic power" it is possible to block the my-PV device if the inverter does not produce any power. The operation for optional boost-backup is not affected by this.

E-Car-Function

More information on compatible charging stations can be found [here](#).

Multi units

Multiple AC ELWA-E, AC•THOR or AC•THOR 9s can be used in a network. Operation is based on the master / slave principle.




When using several units, the following things have to be considered:

- All devices must be connected to the router via network cable.
- Only one master can be assigned to a signal source and vice versa.
- A maximum of 10 slaves are possible per master.

- All slaves in the network must have different device numbers, even if these are assigned to different masters.
- **All devices must be assigned by permanent IP addresses.** This can be done in three ways:
 - In the web interface of the respective device (see IP Settings)
 - On the display of AC•THOR
 - By the router (recommended)


Settings on Slaves

For the slaves only the device numbers has to be specified (see Basic Settings). All other settings are only required on the master.

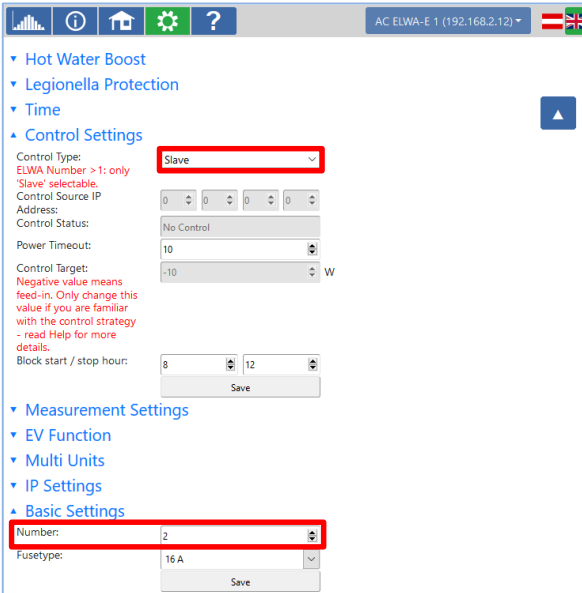


As soon as an assignment has been made, further control settings are no longer possible or required. The IP address field is disabled and "Slave" appears in the Signal source field.

After a device search in the quick selection at the top right, the slave with the set number appears. Switching between the devices is possible here.

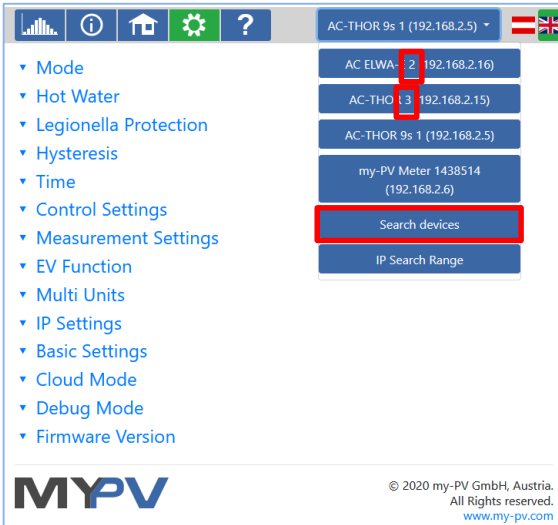


Settings on Master

 
Only for devices with number 1 (= master) the following display appears in the setup:



To make the settings for several devices on the master, first choose between **Synchron** and **Stratify**. In the case of synchronous charging, the power is evenly distributed to the master and its slaves. In the case of stratified charge, the devices are controlled one after the other according to their numbers, in each case until the set target temperature is reached.

After selection, please start the "Search for slaves" and activate the desired devices. Then save the setting.

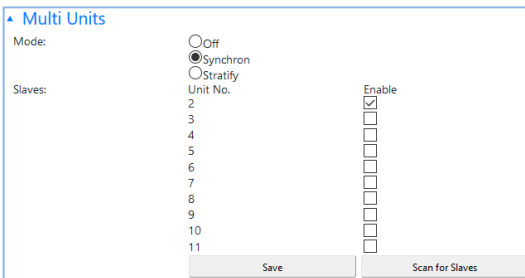


 Scanning is performed via UDP port 16124. Firewalls (or specific router settings) may prevent that other units can be found.

Cloud Mode



TIP: Inform yourself in advance on the Cloud Mode simply by watching our video explanation (activate English subtitles): <https://youtu.be/tJtAvwM7-7Q>

If your device has a device key, a connection to the data platform **my-PV.LIVE** possible. You will find it glued on the enclosed assembly instructions.

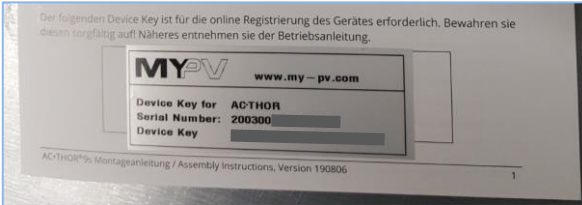

Activate the cloud mode and save the settings.

▲ Cloud Mode

Cloud Mode enabled disabled

With the activation I agree to transmit device data to the online platform my-pv.LIVE. This data will be kept strictly confidential and will not be passed on to third parties. my-PV may use device data for internal purposes such as data analysis, research or product improvement. For more information on privacy policy, please refer to the following link: <https://www.my-pv.com/en/about-us/data-protection-declaration>

Save

Open the website **www.my-pv.live** and log in or register as a new user.



TIP: If you register for a new account you will receive an email with a confirmation link. If it does not appear in your inbox, it might be in your spam folder.

my-PV.LIVE TEST

Anmelden **Registrieren** Passwort vergessen?

Anmelden

Benutzername (e-mail) max.mustermann@muster.com

Passwort *****

anmelden

my-PV.LIVE TEST

Anmelden Registrieren Passwort vergessen?



Anmelden

Benutzername (e-mail)

Passwort

Ihr Account wurde erfolgreich aktiviert.

anmelden

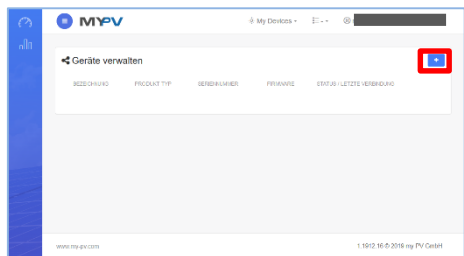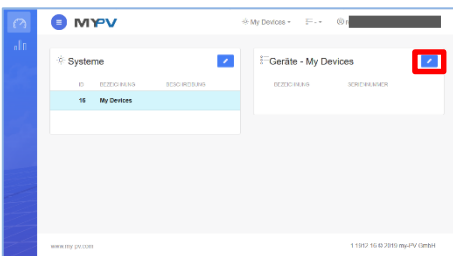


Edit device overview



Choose a name that is as unique as possible and enter the serial number and the device key (without hyphens) of your device. Click on Save.

Add Device

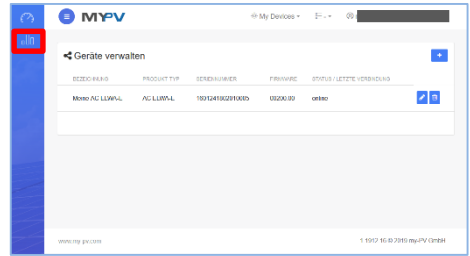

BEZUGSKOD	PRODUCT-TYP	SERIENNUMMER	FIRMWARE	STATUS (LETZTE VERBUNDEN)
180141802201005	AC-THOR	6b455680EduJy	02000-00	online

If the cloud mode has been activated, an overview of the operating data recorded from then on is available after connecting the device to the data platform.

Privacy

Information on the privacy regulations can be found at www.my-pv.com.

Debug-Mode

In order to simplify the analysis in the case of possible connection problems, a debug mode can be activated in coordination with our technical support.

Help




In the web interface the button leads to the online Operation Manual which corresponds to the firmware version installed.

7. Potential-free input for external control

Control with 3.3 - 24 V DC voltage from external source

The AC-THOR can also be operated via an external PWM signal with variable power. The corresponding signal input is located at the 8-pin connector to which the temperature sensor is also connected.

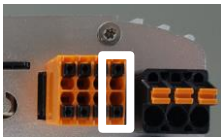


This control is independent of the selected operating mode, except M8 on single-phase AC-THOR. If a PWM signal is present, all other control signals that might be available via a network are also overridden. If the boost backup mode is set at the AC-THOR, it remains valid.




When using several AC-THORs, a separate PWM signal is required for each device. Multimode is not possible with this control mode!

As soon as a PWM signal is present, it is displayed in percent on the bottom right of the display above the help button.

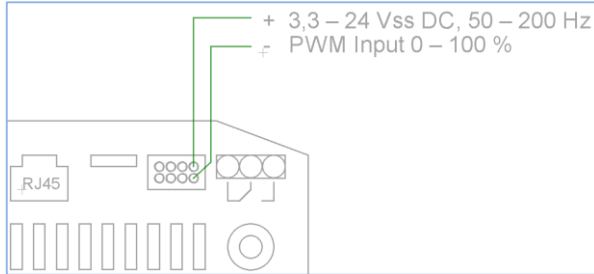


 Observe the polarity of the DC voltage!


 Without a temperature sensor, the AC•THOR will not switch off. This must then be done by the external signal source or by switching off by thermostat!


Control by potential-free contact

The AC•THOR can also be operated rigidly with maximum power via an external signal.

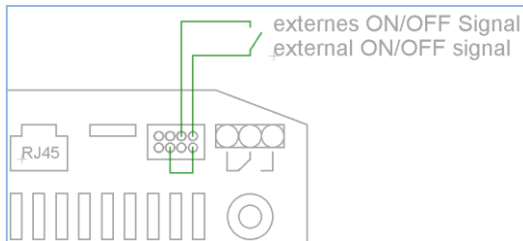


8. Modbus RTU connection for external control

 Use shielded twisted pair wire!

 RTU bus must be equipped with a 120 Ohm termination resistor!

(Not included in the scope of delivery)

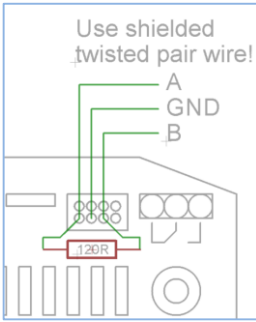

9. Description of the protocols for http and Modbus TCP

These are described in a separate document which can be provided on request.

10. Firmware update



To do a firmware update, the device must first be enabled for this. To do this, send us the 16-digit serial number to support@my-pv.com

Update of server



Internet access is required!

Manual Update

Display - Settings - Factory settings:

Check for new firmware: Start check for new updates manually. When a new version is available, it will be stored on the SD card. This procedure takes several minutes. The AC•THOR will operate normally during this period.

Start firmware update: if a newer software version is present on the SD card, the update can be started manually. After the update, the unit will be restarted automatically.

Start power firmware update: if a newer output unit software version is present on the SD card, the update can be started manually. After the update, the unit will be restarted automatically. With AC•THOR 9s the update for both power stages is started.

Update with SD card

This possibility is provided for installations without Internet access. Consultation with our technical support is necessary.



Never remove the SD card while the unit is operational!



Never exchange an SD card between one unit and another! It contains data specific to the serial number of the unit.

11. Status codes

AC•THOR:	0.... Off
	1-8... Unit start-up
	9... Operation
	>=200 Fault conditions power stage
AC•THOR 9s:	0-15 ... internal states for support purposes
	>=200 Error states power stage 9s

12. Temperature sensors: Assignment and function (only with AC•THOR 9s)

Sensor assignment:

Operator mode	M1		M2	M4	M5	M6	M7	M8	
Load priority	1-2-3	3-2-1	1-2-3	1-2-3	3-2-1	3-2-1	1-2-3	1-2-3	3-2-1
OUT-3	Sensor 1	Sensor 1	Sensor 1	Sensor 1	Sensor 1 HW	Sensor 3 SH3	Sensor 1	Sensor 1	Sensor 1
OUT-2	Sensor 1	Sensor 2	Sensor 1	Sensor 1	Sensor 3 SH2	Sensor 2 SH2	Sensor 1	Sensor 1	Sensor 2
OUT-1	Sensor 1	Sensor 3	Sensor 1	Sensor 1	Sensor 2 SH1	Sensor 1 SH1	Sensor 1	Sensor 1	Sensor 3

Sensor function:

Operating mode	M1		M2	M4	M5	M6	M7	M8	
Load priority	1-2-3	3-2-1	1-2-3	1-2-3	3-2-1	3-2-1	1-2-3	1-2-3	3-2-1
Sensor 1	Max / Min	Max / Min	Switch-over	Max / Min	Max / Min	Max / Min	Max	Max / Min	Max / Min
Sensor 2	none	Max / Min	none	none	Max / Min	Max / Min	PWM	none	Max / Min
Sensor 3	none	Max / Min	none	none	Max / Min	Max / Min	Min	none	Max / Min

13. Fault temperature sensors

0° Broken probe

85° Data disruption temperature sensor

14. Error messages on the Display

Error messages are only displayed on the home screen of the display. They are not shown in the web interface.

Error 101	No phase detected on the middle relay contact
Error 102	Temperature sensor 1 required for hot water boost backup Check if the sensor has been activated!
Error 103	Temperature sensor 1 required for 6 kW operating mode Check if the sensor has been activated!
Error 104	Temperature sensor 1 required for space heating Check if the sensor has been activated!
Error 105	Temperature sensor 1 required for hot water Check if the sensor has been activated!
Error 106	Power restriction <3 kW
Error 107	Temperature sensor 2 required for space heating Check if the sensor has been activated!
Error 108	Temperature sensor 2 required for PWM Check if the sensor has been activated!
Error 109	Temperature sensor 1 required for legionella protection Check if the sensor has been activated!
Error 110	Firmware update unsuccessful communication fault with output unit Restart the unit
Error 111	Firmware update unsuccessful Problem with p-file. Switch off the unit. Insert SD card with p-file. See Operating instructions www.my-pv.com Restart the unit

Error 112	Temp sensor 3 required for hot water boost backup Check if the sensor has been activated!
Error 113	Output unit communication timeout. Restart the unit.
Error 114	Output unit stuck in bootloader. Restart the unit.
Error 115	Temperature sensors 2+3 required for spaceheating Check if sensors have been activated!
Error 116	Powerstage overload. Check installation
Error 117	Powerstage overtemperature. Device restarts after cool down.

15. Fault signals by the AC•THOR Logo

1x blinking ►	SD Card error
2x blinking ►	Firmware defective
3x blinking ►	Display error

my-PV GmbH
Teichstrasse 43, A-4523 Neuzeug
www.my-pv.com

Subject to change without notice.

