Operating manual SUNNY HOME MANAGER 2.0





Legal Provisions

The information contained in these documents is the property of . No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, be it electronic, mechanical, photographic, magnetic or otherwise, without the prior written permission of . Internal reproduction used solely for the purpose of product evaluation or other proper use is allowed and does not require prior approval.

makes no representations or warranties, express or implied, with respect to this documentation or any of the equipment and/or software it may describe, including (with no limitation) any implied warranties of utility, merchantability, or fitness for any particular purpose. All such representations or warranties are expressly disclaimed. Neither nor its distributors or dealers shall be liable for any indirect, incidental, or consequential damages under any circumstances.

The exclusion of implied warranties may not apply in all cases under some statutes, and thus the above exclusion may not apply.

Specifications are subject to change without notice. Every attempt has been made to make this document complete, accurate and up-to-date. Readers are cautioned, however, that product improvements and field usage experience may cause to make changes to these specifications without advance notice or per contract provisions. shall not be responsible for any damages, including indirect, incidental or consequential damages, caused by reliance on the material presented, including, but not limited to, omissions, typographical errors, arithmetical errors or listing errors in the content material.

SMA Warranty

You can download the current warranty conditions from the Internet at www.SMA-Solar.com.

Software Licenses

The software licenses for the installed software modules are contained in the Sunny Home Manager software. Upon connecting the Sunny Home Manager with a web browser, you will find the licenses at the following address: http://###/legal_notices.txt, for example http://192.168.22.11/legal_notices.txt. The IP address (in this example, 192.168.22.11) will be assigned by your router for the Sunny Home Manager. You will find further information on determining the IP address in your router documentation.

Trademarks

All trademarks are recognized, even if not explicitly identified as such. Missing designations do not mean that a product or brand is not a registered trademark.

SMA Solar Technology AG

Sonnenallee 1 34266 Niestetal Germany Tel. +49 561 9522-0 Fax +49 561 9522-100 www.SMA.de Email: info@SMA.de As of: 3/2/2021 Copyright © 2021 . All rights reserved.

Table of Contents

1	Infor	mation o	on this Document	7		
	1.1	1.1 Validity				
	1.2	Target G	roup	7		
	1.3	1.3 Levels of Warning Messages				
	1.4	1.4 Symbols in the Document				
	1.5 Typographical Elements in the Document		phical Elements in the Document	8		
	1.6	Designat	ions in the Document	8		
	1.7	Addition	al Information	8		
2	Safe	ty		9		
	2.1	1 Intended Use				
	2.2 IMPORTANT SAFFTY INSTRUCTIONS		ANT SAFETY INSTRUCTIONS	9		
	2.3	Cyber Se	ecurity	11		
3	Scon	, of Deli	, Verv	12		
	Duad		·····	12		
4	Prod			13		
	4.1		Jescription	13		
	4.Z	Symbols	On the Product	13		
		4.2.1	Type Label	. 13		
	4.3	Compon	ents for Operating the Sunny Home Manager	15		
		4.3.1	Basic Operation	. 15		
		4.3.2	Operation of a PV system with SMA inverters	. 15		
		4.3.3	Operation of a PV system with third-party inverters	. 16 16		
~	F	4.5.4		. 10		
Э	runc	rions		10		
6	Syste	em Struct	ure	20		
	6.1	System R	lequirements	20		
	6.2	System T	opology	20		
7	Μου	nting		22		
	7.1	7.1 Requirements for Mounting the Sunny Home Manager				
	7.2	Mounting	g the Sunny Home Manager on the Top-Hat Rail	22		
8	Conr	nection		23		
	8.1	.1 Safety during Electrical Connection				
	8.2	Connect	ing the Voltage Supply	23		
		8.2.1	Requirements for connecting the voltage supply	. 23		
		8.2.2	Connecting the Voltage Supply up to 63 A	. 24		
	83	8.2.3 Establish	Connecting the Voltage Supply greater than 63 A	. 25 26		
	0.5	831	Prengring for Speedwire Communication	20		
		8.3.2	Connecting the Sunny Home Manager to the Router	. 26		
		8.3.3	Testing the Connection to Sunny Portal	. 27		
9	Getti	ing Starte	ed	28		
	9.1	Creating	a Sunny Home Manager System in Sunny Portal	28		
		9.1.1	Registering in Sunny Portal	. 28		
		9.1.2	Creating a new PV System	. 29		
		9.1.3	Registering Sunny Home Manager and Adding Other Devices	. 29		

		9.1.4	Configuring the Energy Meter	30	
		9.1.5 Entering the System Data		31	
	9.2	2 Logging In and Out of Sunny Portal		. 33	
	9.3	User Interface of the Sunny Home Manager System			
		9.3.1	Accessing the user interface	33	
	9.3.2		Overview of the User Interface	34	
		9.3.3	Overview of Menus and Pages	34	
		9.3.4	Display of tables and diagrams	36	
			9.3.4.1 Setting the Display Period	. 37	
			9.3.4.2 Saving Diagram Data	37	
			9.3.4.3 Printing Diagram Data	. 37	
10	Confi	guration	n of the Sunny Home Manager system	38	
	10.1	0.1 System data		. 38	
		, 10 1 1	Overview System Data	38	
		1012	Changing System Data		
		10.1.2	Changing the System Name	30	
		10.1.0	Deleting the System	30	
		10.1.4	Entering the Nominal System Power	37	
		10.1.5	Changing or Deleting the System Image		
	10.2	String C	Changing of Delening the System intage	40	
	10.2			. 40	
	10.3	Changin	g Operator Data	. 40	
	10.4	Configur	ing parameters	. 41	
		10.4.1	General Information about the Configuration of the Parameters	41	
		10.4.2	Entering the Feed-In Tariff and Electricity Tariff	41	
		10.4.3	Configuring Limitation of Active Power Feed-In	42	
		10.4.4	Activating or Deactivating Grid Management Services	43	
		10.4.5	Entering time period control for charging the battery-storage system	44	
		10.4.6	Setting the Optimization Target	44	
		10.4.7	Entering the Amount of CO2 Avoided	45	
		10.4.8	Entering the Expected Yield	45	
	10.5	Releasing	g Data	. 46	
11	Devic	e Admiı	nistration	48	
	11.1	Device (Dverview Tab	. 48	
		11 1 1	Filtering the Device Overview	10	
		1112	Configuring the Device Properties	47	
		1113	Changing Device Names and Description	47	
		1111	Activating Data Acceptance	/	
	112	Overviev	v of New Devices Tab		
	11.2			. 51	
	11.0		Adding or Keplacing Devices		
	11.3	Configur	ing the Sunny Home Manager	. 32	
		11.3.1	Selecting Simple or Extended Configuration	52	
		11.3.2	Setting Automatic Updates	53	
		11.3.3	Enabling Speedwire Encryption	53	
		11.3.4	Configuring AVM FRITZIBox Smart Home Control	53	
		11.3.5	Setting the Edimax Smart Plug	54	
		11.3.6	Enabling System Communication Monitoring	54	
		11.3.7	Setting the Data Request Interval	54	
		11.3.8	Activating SMA Smart Home	55	
			11.3.8.1 Setting up Forecast-Based Battery Charging	. 55	
			11.3.8.2 Activating the EEBUS Protocol	. 56	
		11.3.9	Configuring the External Current Transformer	56	
		11.3.10	Reconfiguring the Energy Meter	56	
		11.3.11	Configuring Modbus Interfaces	57	
	11.4	Adding of	and Configuring the Inverter	. 57	

		11.4.1 Adding an Inverter	57
		11.4.2 Entering Line Conductors	58
		11.4.3 Entering the PV Array Power	58
		11.4.4 Configuring Strings	
	11.5	Adding a Radio-Controlled Socket	60
	11.6	Adding Modbus Device	61
	11.7	Replacing the Sunny Home Manager	61
		11.7.1 Resetting the Sunny Home Manager	62
		11.7.2 Reassigning the Sunny Home Manager to the Sunny Portal System after the Reset	
	11.8	Deleting devices from Sunny Portal	63
12	Load	Control	64
	12.1	Background Information	64
	12.2	Configuring Switching Devices	65
		12.2.1 Safety when Configuring Switching Devices	65
		12.2.2 Requirements for Configuring Switching Devices	66
		12.2.3 Selecting the Load	66
		12.2.4 Entering the Device Name	
		12.2.5 State of the Assigned Switching Device after Load Operation	
		12.2.0 Configuring Startup Detection for Radio-Controlled Sockets	
	12.3	Load Overview and Planning	
	12.4	Configuring Load Characteristics	70
	12.4	12.4.1 Entering general information	70
		12.4.2 Selecting the Load Type	
		12.4.3 Selecting Program Controllability	
		12.4.4 Entering the Power Consumption	
		12.4.5 Entering the Maximum Program Operating Time	
		12.4.6 Entering the Minimum Switch-On and Switch-Off Time	
	125	Controlling Logds vig the Switching Device	
	12.5	12.5.1 Assigning a Switching Device	
		12.5.2 Setting Measuring and Switching of the Assigned Device	
	12.6	Setting Automatic Switch-Off	
	12.7	Configuring the Time Period	75
	12.8	Directly Controlling Loads	77
	12.0	Application example forecast based batteny charging	70
	12.7	Application example forecasi-based ballery charging	
		12.9.1 Objective and Background Information	
10			01
13	VISUC	alization of the energy management	81
	13.1	System selection with system list	81
	13.2	System overview	
	13.3	Current Status And Forecast	82
		13.3.1 Overview Current Status Area	
	10.4	13.3.2 Overview Forecast and Recommended Action Area	
	13.4	Energy Balance	
	13.5	Load Balance and Control	
		13.5.1 Overview load balance and control	
	10 Z	I 3.5.2 Selecting the Load Display	
	13.0	Display of the nominal system power	
		13.6.1 System yield in the annual comparison	
		13.6.2.1 Overview analysis	

		13.6.2.2 Setting the Device Selection	
14	Moni	toring of the Sunny Home Manager system	
	14.1	Overview of system monitoring	
		14.1.1 Communication Monitoring	
		14.1.2 Inverter Comparison	
		14.1.3 SMA Smart Connected	
	1/2	Configuring PV System Monitoring Options	
	17.2	1/21 Setting Communication Monitoring	98
		14.2.1 Setting the Inverter Comparison	
		14.2.3 Activating SMA Smart Connected	
		14.2.4 Filter and confirm messages in the system logbook	
		14.2.5 Configuring Reports	
15	Prese	entation of the Sunny Home Manager system	
	15.1	PV System Profile	
	15.2	Make PV system profile publicly available	
	15.3	Releasing and publishing pages	
	15.4	Specifying the System Home Page	
16	User	Management	
	16.1	User Groups and User Rights	
	16.2	Creating a New User	
	16.3	Deleting a User	
	16.4	Changing User Rights	
	16.5	Changing User Information	
17	Passv	word Information	
17	Passv 17.1	word Information Requirements for a Secure System Password	108
17	Passv 17.1 17.2	word Information Requirements for a Secure System Password Required Passwords	108
17	Passv 17.1 17.2 17.3	word Information Requirements for a Secure System Password Required Passwords Changing Passwords	108 108 108 108
17	Passv 17.1 17.2 17.3 17.4	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords	108 108 108 108 109 109
17	Passv 17.1 17.2 17.3 17.4 Trouk	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords oleshooting	108 108 108 109 109 111
17 18	Passv 17.1 17.2 17.3 17.4 Trouk 18.1	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords oleshooting.	108 108 108 108 109 109 109 111 111
17	Passy 17.1 17.2 17.3 17.4 Trouk 18.1 18.2	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords cleshooting Error messages general Errors during Registration in Sunny Portal	108 108 108 109 109 109 111
17	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords cleshooting Error messages general Errors during Registration in Sunny Portal Error message on the Sunny Home Manager	108 108 108 109 109 109 111 111 112 115
17	Passy 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords cleshooting Error messages general Errors during Registration in Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets	108 108 108 109 109 109 109 111 111 112 115 116
17	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords Procedure in Case of Forgotten Passwords cleshooting Error messages general Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface	108 108 108 109 109 109 109 111 111 112 112 115 116 117
17	Passy 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords Procedure in Case of Forgotten Passwords cleshooting Error messages general Errors during Registration in Sunny Portal Errors during Registration in Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface	108 108 108 109 109 109 109 111 111 112 115 116 117 119
17	Passy 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords oleshooting Error messages general Error message general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems	108 108 108 109 109 109 109 111 111 112 112 115 116 117 119 119
17	Passy 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords bleshooting Error messages general Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant	108 108 108 109 109 109 109 109 111 111 112 115 116 117 119 119 120
17	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords bleshooting Error messages general Errors during Registration in Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook	108 108 108 109 109 109 109 109 111 111 112 115 116 117 119 119 120 120
17	Passy 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7 18.8	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords oleshooting Error messages general Errors during Registration in Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook Devices with Communication via Data Exchange Protocol	108 108 109 109 109 109 111 111 112 115 116 117 119 119 120 121
17 18	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7 18.8 Deco	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords coleshooting Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook Devices with Communication via Data Exchange Protocol	108 108 108 109 109 109 111 111 112 115 116 117 119 119 120 120 121 123
17 18 19	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7 18.8 18.7 18.8 Deco 19.1	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords oleshooting Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook Devices with Communication via Data Exchange Protocol mmissioning Decommissioning the Sunny Home Manager	108 108 109 109 109 109 111 112 115 116 117 119 119 120 120 120 121 123
17 18	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7 18.8 18.7 18.8 18.7 18.8	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords bleshooting Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook Devices with Communication via Data Exchange Protocol mmissioning Decommissioning the Sunny Home Manager	108 108 109 109 109 110 111 112 113 114 115 116 117 119 119 120 121 123 123
17 18 19	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7 18.8 18.7 18.8 18.7 18.8 19.1 19.2 19.3	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords bleshooting Error messages general Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook Devices with Communication via Data Exchange Protocol mmissioning Decommissioning the Sunny Home Manager Packing the Product for Shipment Disposing of the Product	108 108 109 109 109 109 110 111 112 113 114 115 116 117 119 119 120 121 120 121 123 123 123 123
17 18 19 20	Passv 17.1 17.2 17.3 17.4 Trouk 18.1 18.2 18.3 18.4 18.5 18.6 18.7 18.8 18.7 18.8 18.7 18.8 18.7 18.8 19.1 19.2 19.3 Techr	word Information Requirements for a Secure System Password Required Passwords Changing Passwords Procedure in Case of Forgotten Passwords bleshooting Error messages general Error messages general Error message on the Sunny Portal Error message on the Sunny Home Manager Problems when Configuring and Controlling Radio-Controlled Sockets Incomplete/Outdated/Faulty Data on the User Interface Network problems 18.6.1 Using the Sunny Home Manager Assistant in case of network problems 18.6.2 Error in the Sunny Home Manager Assistant Messages concerning Active Power Limitation in the System Logbook Devices with Communication via Data Exchange Protocol mmissioning Decommissioning the Sunny Home Manager Decommissioning the Product for Shipment Disposing of the Product	108 108 108 109 109 109 111 111 112 115 116 117 119 119 120 120 120 121 123 123 123 123 123

1 Information on this Document

1.1 Validity

This document is valid for:

• Sunny Home Manager 2.0 from software package 2.3.0.R

1.2 Target Group

This document is intended for qualified persons and end users. Only qualified persons are allowed to perform the activities marked in this document with a warning symbol and the caption "Qualified person". Tasks that do not require any particular qualification are not marked and can also be performed by end users. Qualified persons must have the following skills:

- Training in how to deal with the dangers and risks associated with installing, repairing and using electrical devices and installations
- Training in the installation and commissioning of electrical devices and installations
- Knowledge of all applicable laws, standards and directives
- Knowledge of and compliance with this document and all safety information

1.3 Levels of Warning Messages

The following levels of warning messages may occur when handling the product.

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a situation which, if not avoided, can result in property damage.

1.4 Symbols in the Document

Symbol	Explanation
i	Information that is important for a specific topic or goal, but is not safety-relevant
	Indicates a requirement for meeting a specific goal
ĺ	Desired result
×	A problem that might occur
	Example
A QUALIFIED PERSON	Sections describing activities to be performed by gualified persons only

1.5 Typographical Elements in the Document

Typography	Use	Example
bold	 Messages Terminals Elements on a user interface Elements to be selected Elements to be entered 	 Connect the insulated conductors to the terminals X703:1 to X703:6. Enter 10 in the field Minutes.
>	 Connects several elements to be selected 	 Select Settings > Date.
[Button] [Key]	• Button or key to be selected or pressed	• Select [Enter].
#	 Placeholder for variable components (e.g., parameter names) 	Parameter WCtlHz.Hz#

1.6 Designations in the Document

Complete designation	Designation in this document
Sunny Home Manager 2.0	Sunny Home Manager, product

1.7 Additional Information

For more information, please go to www.SMA-Solar.com.

Title and information content	Type of information
SMA SMART HOME - Compatibility list for the Sunny Home Manager 2.0	Technical Information
	Planning Guidelines
The System Solution for Greater Independence	
	Technical Information
SMA FLEXIBLE STORAGE SYSTEM	System description
Increased Self-Consumption with Sunny Island and Sunny Home Manager	
"SUNNY PORTAL powered by ennexOS"	User Manual
	Technical information

2 Safety

2.1 Intended Use

The Sunny Home Manager is the central product responsible for energy management in households with a photovoltaics (PV) system and battery-storage system for self-consumption. The Sunny Home Manager continuously records the solar power generated by the PV system and, if desired, ensures optimal use of the solar power by combining all suitable energy flows in the household to create an intelligent system and, upon request, control it automatically.

The online portal Sunny Portal is used to operate and configure the Sunny Home Manager. The user can make all the required and desired settings here.

The Sunny Home Manager is not an energy meter for power consumption in the sense of the EU directive 2004/22/ EG (MID). The Sunny Home Manager may not be used for billing purposes. The data collected by the Sunny Home Manager relating to the power generated by your PV system may deviate from the data of the main energy meter, which is used for billing purposes.

The Sunny Home Manager is not suitable for controlling life-sustaining medical devices. A power outage must not lead to personal injury. Loads connected to the Sunny Home Manager must have an CE, RCM or UL identification label.

The Sunny Home Manager is approved for use in all EU member states, in Australia and selected other countries.

The type label must remain permanently attached to the product.

Environment

The product is designed for indoor use only.

The Sunny Home Manager may only be connected to the subdistribution of the household on the load side behind the energy meter of the electric utility company. The Sunny Home Manager must be installed in a switch cabinet or in a domestic installation cabinet in the area of the additional applications intended for this as per VDE-AR-N 4100:2019-04.

It is possible to use the Sunny Home Manager in delta IT grids. When using the Sunny Home Manager in delta IT grids, the cumulative power values are correctly measured. Due to the measuring principle of the Sunny Home Manager, other measured values may be incorrect.

Statutory Warranty

Use SMA products only in accordance with the information provided in the enclosed documentation and with the locally applicable laws, regulations, standards and directives. Any other application may cause personal injury or property damage.

Alterations to the SMA products, e.g., changes or modifications, are only permitted with the express written permission of . Unauthorized alterations will void guarantee and warranty claims and in most cases terminate the operating license. shall not be held liable for any damage caused by such changes.

Any use of the product other than that described in the Intended Use section does not qualify as the intended use.

The enclosed documentation is an integral part of this product. Keep the documentation in a convenient, dry place for future reference and observe all instructions contained therein.

This document does not replace and is not intended to replace any local, state, provincial, federal or national laws, regulations or codes applicable to the installation, electrical safety and use of the product. assumes no responsibility for the compliance or non-compliance with such laws or codes in connection with the installation of the product.

2.2 IMPORTANT SAFETY INSTRUCTIONS

Keep the manual for future reference.

2 Safety

This section contains safety information that must be observed at all times when working.

The product has been designed and tested in accordance with international safety requirements. As with all electrical or electronical devices, there are residual risks despite careful construction. To prevent personal injury and property damage and to ensure long-term operation of the product, read this section carefully and observe all safety information at all times.

A DANGER

Danger to life due to electric shock when live components or cables are touched

High voltages are present in the conductive components or cables of the product. Touching live parts and cables results in death or lethal injuries due to electric shock.

- Disconnect the product from voltage sources and make sure it cannot be reconnected before carrying out any work on the product.
- Before carrying out any work on the product, disconnect the grid side from all voltage sources using the installed disconnect switch.
- Ensure that the conductors to be connected are de-energized.
- Clean the product with a dry cloth only.
- Only use the product in a dry environment and keep it away from moisture.
- Install the product in the switch cabinet only and ensure that the connection areas for the line conductors and the neutral conductor are behind a cover or have contact protection.
- Observe the prescribed minimum clearance between the network cable and live installation components, or use suitable insulation.

Danger to life due to electric shock if external disconnect switch is missing

High voltages are present in the conductive components. Touching live parts results in death or lethal injuries due to electric shock.

- Install an external disconnect switch between the product and the grid-connection point. The external disconnector must be close to the product and easily accessible.
- Before carrying out any work on the product, disconnect the grid side from all voltage sources using the installed disconnect switch.

Danger to life due to electric shock in case of overvoltages and if surge protection is missing

Overvoltages (e. g. in the event of a flash of lightning) can be further conducted into the building and to other connected devices in the same network via the network cables or other data cables if there is no surge protection. Touching live parts and cables results in death or lethal injuries due to electric shock.

• Ensure that all devices in the same network are integrated in the existing overvoltage protection.

Danger of fire due to missing or incorrect fuse

If a fuse is missing or incorrect and a fault occurs, a fire may be caused. This can result in death or serious injury.

• Protect the line conductors of the product with a fuse or a selective circuit breaker with max. 63 A.

NOTICE

Manipulation of system data in networks

You can connect the supported SMA products to the Internet. When connected to the Internet, there is a risk that unauthorized users can access and manipulate the data of your system.

- Set up a firewall.
- Close unnecessary network ports.
- If absolutely necessary, only enable remote access via a virtual private network (VPN).
- Do not use the port forwarding feature. This also applies to the used Modbus ports.
- Disconnect system components from other network components (network segmentation).
- Even if the product is used as energy and grid-supply meter, the system setup assistant in Sunny Portal must be used and an administrator account created.

i DHCP Server is recommended.

The DCHP server automatically assigns the appropriate network settings to your nodes in the local network. A manual network configuration is therefore not necessary. In a local network, the Internet router is usually the DHCP server. If the IP addresses in the local network are to be assigned dynamically, DHCP must be activated in the Internet router (see the Internet router manual). In order to receive the same IP address by the internet router after a restart, set the MAC address binding.

In networks where no DHCP server is active, proper IP addresses must be assigned from the free address pool of the network segment to all network participants to be integrated during commissioning.

2.3 Cyber Security

Most operating activities such as monitoring and control of systems can be done locally by the PV system operator or service personnel without the need for data communication via public Internet infrastructure.

In other use cases of systems, the PV systems are also part of the global communication system, which is based on Internet infrastructures.

The data communication via Internet is an up-to-date, economically viable and customer-friendly approach in order to enable easy access for the following modern applications such as:

- Cloud platforms (e.g. Sunny Portal)
- Smartphones or other mobile devices (iOS or Android apps)
- SCADA systems, which are remotely connected
- Utility interfaces for grid management services

Alternatively, selected and secured communication interfaces may be used. These solutions are no longer state of the art and are very expensive to use (special communication interfaces, separate wide area networks and more).

When using the Internet infrastructure, the systems connected to the Internet are entering a basically unsecure area. Potential attackers constantly seek vulnerable systems. Usually, they are criminally motivated, have a terrorist background or aim to disrupt business operations. Without taking any measures to protect systems and other systems from such misuse, a data communication system should not be connected to the Internet.

Communication between the SMA internet platform Sunny Portal and the Sunny Home Manager takes place via the Webconnect process as well as the HTTPS protocol, i.e. an authenticated and encrypted connection and thus allows safe online communication.

You can find the current recommendations by on the topic of Cyber Security in the Technical Information at www.SMA-Solar.com.

3 Scope of Delivery

Check the scope of delivery for completeness and any externally visible damage. Contact your distributor if the scope of delivery is incomplete or damaged.





Figure 1: Components included in scope of delivery

Position	Quantity	Designation
А	1	Sunny Home Manager
В	1	Quick reference guide for commissioning
С	1	Label with serial number (SN), registration ID (RID) and identification key (PIC) for registration of the device by means of the setup assis- tant in the Sunny Portal

4 Product Overview

4.1 Product Description



Figure 2: Sunny Home Manager 2.0

Position	Designation
А	Connection area for line conductors and neutral conductor
В	Light-emitting diodes
С	Reset button
D	Network terminal (Speedwire/Ethernet)
E	Type label

4.2 Symbols on the Product

4.2.1 Light-Emitting Diodes (LEDs)

The LEDs indicate the operating state of the product.



Figure 3: LEDs of the Sunny Home Manager

Position	LED symbol	Designation	Explanation
A	(i)	Status LED	Displays the operating state of the Sunny Home Manager (operation, startup process, error status)

Position	LED symbol	Designation	Explanation
В	율	COM LED	Displays the status of the Ethernet connection to the router
С	\checkmark	Performance LED	Displays the operating state, energy management, portal con- nection and error status.

Sunny Home Manager operating states

LED	Status and meaning
Status LED	Glowing green: Sunny Home Manager is switched on.
	Flashing green: Firmware is being updated.
	Glowing red: Sunny Home Manager is starting up.
	Flashing red: No connection to Sunny Portal.
COM LED	Off: No Ethernet connection.
	Glowing green: Ethernet connection is established.
	Flashing green: The Sunny Home Manager is sending or receiving data.
Performance LED	Off: Sunny Home Manager is not registered in Sunny Portal
	Flashing green: Energy management in the Sunny Home Manager running smoothly.
	Flashing green: An error has occurred. The error has already been reported to Sunny Portal.
	Glowing red: An error has occurred. The error has not yet been reported to Sunny Portal.
	Flashing red: No connection to Sunny Portal.

4.2.2 Type Label

Data on the Type Label

The type label clearly identifies the product. The type label is located on the side of the product and must remain permanently attached to the product. You will find the following information on the type label:

- Assembly name
- Hardware version (Version)
- Serial number (SN)
- Registration ID (RID)
- Identification key (PIC)
- MAC address (MAC)

You will require the information on the type label to use the product safely and when seeking customer support from Service (see Section 21 "Contact", page 126).

Symbols on the type label

Symbol	Explanation
	WEEE designation Do not dispose of the product together with the household waste but in accordance with the
	disposal regulations for electronic waste applicable at the installation site.

Symbol	Explanation
	Protection class II The product has a reinforced or double insulation between grid current circuit and output voltage.
	Qualified person The product may only be installed by a qualified person.
CE	CE marking The product complies with the requirements of the applicable EU directives.
Ì	RCM (Regulatory Compliance Mark) The product complies with the requirements of the applicable Australian standards.
	Data matrix code 2D code for device-specific characteristics

4.3 Components for Operating the Sunny Home Manager

4.3.1 Basic Operation

The following components are required for operating the Sunny Home Manager:

- □ Internet access via router (for Sunny Portal connection)
- \square PC with web browser
- □ Sunny Portal access

Router

The Sunny Home Manager establishes the internet connection to Sunny Portal via a router.

Via the Ethernet connection of the Sunny Home Manager to the router, the data read out by the integrated measuring device of the Sunny Home Manager from all devices integrated in the system is sent to the Sunny Portal. The user can make all the required settings for the Sunny Home Manager system via Sunny Portal.

Sunny Portal

Sunny Portal is an Internet portal which enables you to monitor and configure systems and to visualize system data. The Sunny Portal system setup assistant is used to commission the Sunny Home Manager (to www.sunnyportal.com/ register)

4.3.2 Operation of a PV system with SMA inverters

The Sunny Home Manager organizes the electricity generated by the PV system and provided by inverters within the loads in the household. The Sunny Home Manager regulates the feed-in of the residual current into the utility grid at the point of interconnection.

Inverters can communicate in two different ways with the Sunny Home Manager:

- Wired via SMA Speedwire/Ethernet The inverter must be connected to the local network via a network cable (e.g. via a router).
- Wireless via SMA Speedwire/Wi-Fi

The Sunny Home Manager does not have its own a Wi-Fi connection, however it can communicate with all devices connected to the same router.

The Sunny Home Manager supports all inverters with integrated or retrofitted Speedwire interface of SMA Solar Technology AG. The PV inverters must have the current firmware version in each case (see the inverter product page at www.SMA-Solar.com).

Maximum Number of Supported Devices

The Sunny Home Manager supports a maximum of 24 devices.

The term device includes all components that exchange data with the Sunny Home Manager, i.e. SMA inverters (including 1 battery inverter per system at most), radio-controlled sockets, switching devices and smart loads. The SMA Energy Meter is not included in these devices.

Of the 24 devices, a maximum of 12 devices can be actively controlled by the Sunny Home Manager. Actively controlled means that the Sunny Home Manager not only displays the consumption of the device, but actively switches the device. Further devices up to the maximum supported number of 24 devices can be monitored and visualized via switching devices.



Fully equipped energy management system

A fully equipped energy management system (with a maximum of 24 devices) can consist of the following components:

- 3 x SMA Inverters
- 1 x heat pump that is controlled by the Sunny Home Manager via a direct data connection (e.g. SEMP or EEBus).
- 20 x radio-controlled sockets

Due to the actively controlled heat pump, a maximum of 11 of these radio-controlled loads can be actively controlled by the Sunny Home Manager. Only the consumption data of the loads connected to the 9 remaining radio-controlled sockets will be recorded by Sunny Home Manager.

4.3.3 Operation of a PV system with third-party inverters

For the operation of the Sunny Home Manager in a system with third-party inverters, an SMA Energy Meter as a PV generation meter is required.

□ The power output of the inverters from other manufacturers must be captured via a separate SMA Energy Meter.

□ The SMA Energy Meter must be configured in Sunny Portal as a PV generation meter.

If third-party inverters are also used in the PV system, the SMA Energy Meter handles the recording of the generated PV energy. In hybrid systems with SMA inverters and inverters from other manufacturers, the generated energy of all inverters is measured via the energy meter since it is used as the central PV generation meter. Upon registering and configuring a PV generation meter in the Sunny Home Manager system, the Sunny Home Manager will receive the power data of the SMA inverters on this PV generation meter.

Monitoring of the PV system and the dynamic limitation of the active power fed into the utility grid are not possible with inverters from other manufacturers. In this case, verify whether operation of the PV system without dynamic active power limitation is permitted in the given country, or whether dynamic active power limitation can be performed independently by the inverter itself.

4.3.4 Components for the control of loads

At least one of the following compatible components must be present to control loads:

- □ Switching device, e.g. a radio-controlled socket, a relay or a Modbus device
- □ Device with EEBus or SEMP interface

Switching device

Devices that do not have a directly communicating data connection can be integrated into the energy management system as an intermediate switch via radio-controlled sockets, relays or Modbus devices. The Sunny Home Manager controls the switching device; the switching device can then switch the loads on and off via control signals from the Sunny Home Manager.

At which times the Sunny Home Manager switches the switching device on or off automatically and without any further manual operation depends on the configuration of the load and the current load planning configured in the Sunny Portal: The Sunny Home Manager can measure the power consumption and length of the power consumption of individual loads connected to a switching device and transmits these measured values to Sunny Portal. There, you can control specific loads so that they are switched on if a lot of PV power is available, for example.

In addition, switching devices can be used purely for monitoring purposes, i.e. to measure the energy consumption of individual loads.

The Sunny Home Manager supports different switching devices available from electronics retailers:

The Moxa E1214, for example, can be integrated as a Modbus device into the SMA energy management system of the Sunny Home Manager as a relay or switching device. The Moxa device offers the possibility to control a heat pump via the relay output RO (terminal 9 and 10).

Device with EEBus or SEMP interface

To control a load that communicates directly, this load must have an EEBus or SEMP interface that is compatible with the Sunny Home Manager.

Links to additional information can be found at www.SMA-Solar.com.

i SMA offers the option to use the protocol interface SEMP under https://www.sma.de/produkte/smadeveloper.html.

5 Functions

The field of applications for the Sunny Home Manager ranges from its use as a simple energy meter to monitoring a PV system and intelligent energy management.

Sunny Home Manager as energy meter

The Sunny Home Manager detects energy flows in both directions:

- Continuous recording of the energy generated by the PV system
- Measurement of the feed-in of generated energy into the utility grid as well as the consumption of energy from the utility grid takes place at the point of interconnection.

Sunny Home Manager in systems without self-consumption

Monitoring

Basic PV system status monitoring to confirm correct system performance: All energy flows are recorded and evaluated. You will be notified about disturbances at an early stage.

Limitation of Active Power Feed-In

Local legal regulations, for example the Renewable Energy Sources Act (EEG) in Germany, can call for permanent limitation of active power feed-in for your PV system - that is, a limitation of the active power fed into the utility grid to a fixed amount or a percentage share of the installed nominal PV system power.

The Sunny Home Manager monitors the active power that is fed into the utility grid. If the active power feed-in exceeds the prescribed threshold, the Sunny Home Manager will limit the PV generation of the inverters.

Sunny Home Manager in systems with self-consumption

Self-consumption means that the energy produced by your PV system is consumed at the site where it is generated. Self-consumption reduces the amount of energy that you feed into the utility grid, but also the amount of energy that you purchase from your grid operator.

Energy Management - Monitoring and Forecast

Creation of a PV generation forecast - based on the location-based weather forecast

Creation of a load profile - based on individual analysis of time-dependent energy consumption:

Taking into account different electricity prices, the Sunny Home Manager makes recommendations for the prudent use of electrical energy. This allows you to selectively switch on loads at times when electricity is cheap (loads include, for example, home appliances such as dishwashers, dryers, washing machines, as well as heating and hot water preparation via heat pumps, and heating elements, but also charging stations for e-mobility).

To learn the load profile, the consumption data should be available over a period of at least 2 weeks.

The forecast generated by the Sunny Home Manager is calculated from the estimated energy balance from generation and consumption for the next 48 hours.

Optimized self-consumption through load control

The Sunny Home Manager measures the power consumption of all connected loads and records both the power consumption and the usage time of a load. The Sunny Home Manager uses this individual load profile combined with the location-based weather forecast to support your increased self-consumption:

To control loads, there are the following options:

- Control of loads that do not communicate directly via switching devices such as radio-controlled sockets or relays, e.g. Modbus devices that control the SG Ready interface of loads
- Control of directly communicating loads via the standard protocol interfaces EEBus or SEMP

The Sunny Home Manager switches home appliances on automatically when PV energy is available.

Optimized self-consumption through dynamic active power limitation

- Through forecast-based load control, the Sunny Home Manager ensures that even on sunny days excess energy hardly ever gets lost that has to be "curtailed" due to the limitation of the active power.
- When using SMA battery inverters, the Sunny Home Manager prevents derating losses that can be caused by limiting the active power feed-in. Taking the PV generation forecast and the consumption forecast into account, the time and duration of battery charging are chosen so that the battery is charged when PV energy is available.

Increased Self-Consumption through Forecast-Based Battery Charging:

The Sunny Home Manager increases the efficiency of your PV system by storing the excess energy generated during the midday peak, which is not allowed to be fed into the utility grid due to the active power limitation, in batteries. By means of the location-based weather forecast, the Sunny Home Manager can predict the solar irradiation for some hours to days and check whether derating losses due to the limitation of PV grid feed-in are to be expected for the current or following day. This means that in the afternoon of the current day only as much PV energy is charged to the battery as to ensure that, with the remaining battery charge, grid-supplied power at night and on the morning of the next day can be avoided. Any derating losses forecast for the following day are avoided by the free storage capacity of the more heavily discharged battery.

6 System Structure

6.1 System Requirements

Router

The router connects the Sunny Home Manager via the Internet to Sunny Portal.

SMA recommends a permanent Internet connection (flat rate) and the use of a router that supports the dynamic assignment of IP addresses (DHCP – Dynamic Host Configuration Protocol), e.g. a Fritz!Box.

All network components used must support the IGMP protocol, minimum version 3 (IGMPv3). If Ethernet network switches are used in the system, make sure that they do not perform "IGMP snooping". This is the case with most simple switches; this function must be turned off for higher-quality "managed" network switches. Using media couplers such as powerline adaptors can cause transmission problems. Usually, a firmware update of the manufacturer makes these devices compatible with multicast operation.

Supported web browsers

The Sunny Home Manager uses the Sunny Portal as an operating and visualization surface. Sunny Portal supports all major web browsers.

Recommended display resolution of PCs connected to Sunny Portal

• Minimum 1024 pixels x 768 pixels

Network cable requirements

- Cable length between two nodes: max. 50 m with patch cable, max. 100 m with installation cable
- Cable cross section: at least 2x2x0.22 mm² (2x2x24 AWG)
- Cable category: Cat5, Cat5e, Cat6, Cat6a, Cat7
- Cable shield: SF/UTP, S/UTP, SF/FTP, S/FTP
- Plug type: RJ45 of Cat5, Cat5e, Cat6, Cat6a

6.2 System Topology

SMA recommends using the Sunny Home Manager for measuring at the point of interconnection. As a bidirectional device, the Sunny Home Manager measures both the grid-supplied power and the grid feed-in at the point of interconnection. For the function **Limiting of the active power feed-in**, at least one measurement at the point of interconnection is required.

The Sunny Home Manger receives the measured data for PV generation, grid feed-in, and grid-supplied power via the integrated measuring device directly from the connected SMA inverters or a separate, optionally connected SMA Energy Meter.

If third-party inverters are installed in the system, an energy meter must measure the PV generation of all inverters. The Sunny Home Manager adopts the data and processes it.

Operation of the PV system with SMA inverters

Measuring all energy flows with the Sunny Home Manager at the point of interconnection.



Figure 4: Topology with SMA inverters (example)

Operation of the PV system with third-party inverters

The SMA Energy Meter is used to measure the PV power generation. The Sunny Home Manager is installed at the point of interconnection.



Figure 5: Topology with third-party inverters and use of an SMA Energy Meter

7 Mounting

7.1 Requirements for Mounting the Sunny Home Manager

- □ The mounting location must be indoors.
- \Box The Sunny Home Manager must be installed in a switch cabinet.
- \Box The mounting location must be protected against dust, moisture and corrosive substances.
- □ The cable route from the mounting location to the router must not exceed a maximum length of 100 m.
- A minimum distance of 1 m must be maintained from devices using the 2.4 GHz radio spectrum (e.g. WLAN devices, microwave ovens). This will prevent reduced connection quality and data transmission speed.
- □ The ambient conditions at the mounting location must be suitable for the operation of the Sunny Home Manager (see Section 20, page 124).

7.2 Mounting the Sunny Home Manager on the Top-Hat Rail

A QUALIFIED PERSON

Requirement:

 \Box The top-hat rail must be securely mounted in the switch cabinet.

Procedure:

1. Press the Sunny Home Manager with the upper retainers into the upper edge of the top-hat rail.

2. Hook the lower retainers into the lower edge of the top-hat rail.





8.1 Safety during Electrical Connection

Risk of fire due to dirty or oxidized contact surfaces of live aluminum conductors

Connecting dirty or oxidized contact surfaces with aluminum conductors reduces the ampacity of the live terminals, thereby increasing the transition resistances. This can cause components to overheat and catch fire.

• The contact surfaces are to be cleaned, brushed, and treated with acidic and alkaline substances (e.g. petroleum jelly or special thermal grease).

8.2 Connecting the Voltage Supply

A QUALIFIED PERSON

8.2.1 Requirements for connecting the voltage supply

Requirements:

□ The setpoints of the electric utility company must be observed.

- □ The product can be operated single-phase or three-phase. Since the product is supplied with electric current by the line conductor L1, at least the line conductor L1 and the neutral conductor N must be connected in order that the Sunny Home Manager switches on.
- □ When using fine stranded conductors, bootlace ferrules must be used.

Cable requirements:

- □ Conductor cross-section for measurements up to 63 A:
- □ Conductor cross-section with current transformer: see recommendations of the current transformer manufacturer



8.2.2 Connecting the Voltage Supply up to 63 A

Figure 6: The following figure shows a connection example in TN and TT utility grids in the case of installation at the grid-connection point when using the integrated measuring unit.

Procedure:

- 1. Disconnect the connection point from voltage sources and make sure it cannot be reconnected.
- 2. Connect the line conductors to the Sunny Home Manager:
 - When using the Sunny Home Manager to measure the grid exchange capacity
 - in **Three-phase utility grids** connect the line conductors L1, L2, L3 and the neutral conductor N to the screw terminals at the input of the Sunny Home Manager.
 - in **single-phase utility grids** connect the line conductor L1 and the neutral conductor N to the screw terminals at the input of the Sunny Home Manager.
 - in **Delta IT utility grids** connect the line conductors L1, L2 and L3 to the screw terminals at the input of the Sunny Home Manager. In addition, also connect the line conductor L3 to the neutral conductor N.
 - in **split phase grids** (split-phase system) connect the line conductors L1 and L2 and the neutral conductor N to the screw terminals at the input of the Sunny Home Manager.

Open each screw terminal using a cross-head screwdriver, insert the conductor into the contact terminal and tighten the screw (torque:).

- If the Sunny Home Manager is not to measure the grid exchange capacity, connect the line conductor L1 and the neutral conductor to the screw terminals at the input of the Sunny Home Manager. Open each screw terminal using a cross-head screwdriver, insert the conductor into the contact terminal and tighten the screw (torque:).
- If the Sunny Home Manager is only used for measuring the PV generation output, connect the Sunny Home Manager to the common connection point of all PV inverters in the household grid. To measure the grid exchange capacity, an SMA Energy Meter must be installed at the point of interconnection.

8.2.3 Connecting the Voltage Supply greater than 63 A

Current transformers must be installed for a voltage supply > 63 A.



Figure 7: The following figure shows a connection example in TN and TT utility grids in the case of installation at the grid-connection point.

Additionally required material (not included in the scope of delivery):

- □ 3 x current transformer (recommendation: 5 A secondary current, accuracy class at least 1)
- □ Connection cables for current transformers

Procedure:

- 1. Disconnect the connection point from voltage sources and make sure it cannot be reconnected.
- 2. Connect one current transformer to each line conductor L1, L2 and L3.

- 3. On each current transformer, connect 1 connection cable for secondary current measurement to terminals k/S1 and I/S2.
- 4. Connect the connection cables for current measurement (dashed gray line) to the screw terminals L1, L2 and L3 of the Sunny Home Manager. To do this, open each screw terminal using a cross-head screwdriver, insert the conductor into the contact terminal and tighten the screw using a cross-head screwdriver (torque:).
- 5. Connect the connection cables for voltage measurement (solid gray line) to the screw terminals L1, L2 and L3 at the output of the Sunny Home Manager. To do this, open each screw terminal using a cross-head screwdriver, insert the conductor into the contact terminal and tighten the screw using a cross-head screwdriver (torque:).
- 6. Connect the connection cables for voltage measurement L1, L2 and L3 (solid gray line) to the corresponding line conductors L1, L2 and L3.

8.3 Establishing communication to Sunny Portal

8.3.1 Preparing for Speedwire Communication

If the Sunny Home Manager is to communicate with other SMA devices via SMA Speedwire (Ethernet), the Sunny Home Manager and the Speedwire devices must be in the same local network.

i Inverters with Webconnect function

If an inverter is already registered in Sunny Portal with the Webconnect function, the inverter cannot be added to the Sunny Home Manager system in Sunny Portal.

 In order to be able to add the inverter to the Sunny Home Manager system in Sunny Portal, delete the inverter with Webconnect function from the Webconnect system in Sunny Portal or deactivate data reception for the inverter in the Webconnect system in Sunny Portal.

Requirements:

- DHCP must be active on the router (see router documentation).
- □ All UDP ports > 1024 on the router must be open for outgoing connections. If there is a firewall installed on the router, you might have to adjust the firewall settings.
- □ It must be possible for the outgoing router connections to reach all Internet destinations (target IP, target port). If there is a firewall installed on the router, you might have to adjust the firewall settings.
- □ On the router with Network Address Translation), no port forwarding must be entered. Potential communication problems can thus be prevented.
- □ There must be no packet filtering or manipulation for SIP packets installed on the router.
- □ The routers and network switches with router function must forward the Multicast telegrams (telegrams with destination address 239.0.0.0 to 239.255.255.255) required for the Speedwire connection to all nodes of the Speedwire network.
- □ All network components used must support the IGMP protocol, minimum version 3 (IGMPv3) (see network component documentation).

Procedure:

• Connect the Speedwire devices to the router (see Speedwire device documentation).

8.3.2 Connecting the Sunny Home Manager to the Router

Additionally required material (not included in the scope of delivery):

Ethernet cable (10/100 Mbit/s, RJ45 plug)

Procedure:

1. Connect the network cable to the network terminal of the product.



2. Connect the other end of the network cable to the router.

8.3.3 Testing the Connection to Sunny Portal

The Sunny Home Manager automatically establishes a connection to Sunny Portal.

Requirements:

- □ The Sunny Home Manager must be supplied with voltage.
- □ The Sunny Home Manager must be connected to the router.
- DHCP must be active for the router (see router manual). If your router does not support DHCP, you can configure the static network settings on the Sunny Home Manager using the Sunny Home Manager Assistant (see Section 18.6.1 "Using the Sunny Home Manager Assistant in case of network problems", page 119).

Procedure:

1. Check whether the status LED of the Sunny Home Manager is glowing green and whether the performance LED is off.

Status display LED	Description	Further Actions
Status LED: glowing green Performance LED: off	There is a connection to Sunny Portal.	You can register the Sunny Home Manager in Sunny Por- tal.
Status LED: flashing red or Performance LED: flashing red	Error message: The Sunny Home Manager cannot es- tablish the connection to Sunny Portal automatically. Possible cause: There is a proxy server in your net- work or your router does not support DHCP.	Use the Sunny Home Manager Assistant (see Section 18.6.1, page 119).

2. Check whether the status LED of the Sunny Home Manager is glowing green and whether the performance LED is glowing green.

Status display LED	Description	Further procedure
Status LED: glowing green Performance LED: glowing green	There is in active connection to Sunny Portal and the registration in Sunny Portal has already been exe- cuted.	Use your user data to log on to Sunny Portal (see Section 9.2, page 33).

9 Getting Started

9.1 Creating a Sunny Home Manager System in Sunny Portal

9.1.1 Registering in Sunny Portal

Sunny Portal serves as the user interface of the Sunny Home Manager. Therefore, you must register the Sunny Home Manager in Sunny Portal.

An exclusively local use of the Sunny Home Manager is not intended. An exclusively local use is possible after setting up the active power limitation online, but it would entail significant limitations of the functions in energy management.

i The system setup assistant is a step-by-step guide of the processes required for user registration and the capturing of your Sunny Home Manager system in Sunny Portal. On the right-hand side of the portal page you can find a column with detailed user information.

Requirements:

- □ The PV system and all devices in the local network must be in operation and connected to the Sunny Home Manager via a router.
- □ The registration ID (RID) and the identification key (PIC) of the type label of the Sunny Home Manager or of other provided labels must be available.
- □ The status LED must glow green and the performance LED must be off on the Sunny Home Manager.

Procedure:

- 1. Start the web browser and go to www.SunnyPortal.com.
- Switch the language if necessary.
 In the website's header the default language of your web browser is specified: Click on the arrow next to the language and select the desired language from the drop-down menu.
- 3. To start the the system setup assistant, select [**Register now**]. Alternatively, you can directly go to **www.sunnyportal.com/register**.

☑ The system setup assistant opens.

- 4. Select [Next].
- ☑ The page **User registration** opens.

Register as new user:

- 1. Activate the field I am not yet registered and select [Next].
- 2. Enter the necessary data for registration.
- 3. Select [Next].

After a few minutes you will receive an e-mail containing a link and your access data to Sunny Portal.

- If you have not received an e-mail from Sunny Portal, check whether the e-mail has been redirected to a folder for junk mail or whether it was accidentally sent to another e-mail address. If this other e-mail address is an unknown address, restart the system setup assistant and register as a new user again.
- 5. Follow the link in the confirmation e-mail within 24 hours.

☑ Sunny Portal opens a separate window to confirm successful registration.

- 6. Select [Next].
- ☑ The page Select PV system opens.

Log in as already registered user:

1. Select the field I am already registered in Sunny Portal.

- 2. Enter the e-mail address and the Sunny Portal password in the fields **Sunny Portal e-mail address** and **Password**.
- 3. Select [Next].
- ☑ The page Select PV system opens.

9.1.2 Creating a new PV System

i Even if you already have a PV system in which you want to integrate a Sunny Home Manager, you have to create a new system.

In order to be able to transfer the devices of the previous system to the new Sunny Home Manager system, you must first deactivate these devices (usually at least 1 inverter) in the old system. Then you can add the devices to the new system.

The procedure for later adding or replacing devices, is described in a later section (see Section 11.2.1, page 51).

On the page **Select PV system** you can create a new PV system or select an existing system in order to replace or add devices.

i All devices with an identical password form a system. For this reason, a password used for all devices in a system is called a system password. The system password is the same as the device password for the user group **Installer**.

Requirements:

- □ The PV system and all devices in the local network must be in operation and connected to the Sunny Home Manager via a router/network switch.
- The Sunny Home Manager must be in operation: The status LED must glow green and the performance LED must be off.
- □ A uniform user-defined system password must be set on all Speedwire devices for the user group Installer. If necessary, set a uniform system password for all Speedwire devices.

Procedure:

- 1. Enable the option Create a new PV system and enter the required information under PV system properties.
- 2. In the field **PV system name** enter a name for your system. In this document, the PV system is called **Sunny Home Manager system**.
- 3. Enter a PV system password in the **Password** field.
 - If the standard password 1111 is still set on all devices for the user group **Installer**, enter a new system password.
 - If a different uniform password has already been set on all devices, enter this password as the system password.
 - If a uniform password has not been set on all devices, set a uniform password for the user group **Installer** and enter this password in the system setup assistant as the system password.
- 4. Enter the system password again in the field Repeat password.
- 5. Select [Next].

☑ The page **Select devices** opens.

9.1.3 Registering Sunny Home Manager and Adding Other Devices

i Only after the Sunny Home Manager has been registered, can other devices in the system be detected or further devices integrated.

Useful hint: Note down the PIC and RID of the Sunny Home Manager as well as the serial numbers of the devices you want to add. The information on the Sunny Home Manager can be found on the type label that is attached on the side of the product as well as on the label provided.

Procedure:

- 1. On the page **Select devices** enter the identification key (PIC) and the registration ID (RID) of the Sunny Home Manager in the fields **PIC** and **RID**.
- 2. Select [Identify].
 - Sunny Portal searches for the Sunny Home Manager with the corresponding identification key and registration ID. The system setup assistant displays the correct Sunny Home Manager.
- 3. If no Sunny Home Manager with the entered PIC and RID is found, check your entries for typos and use Troubleshooting if necessary.
- 4. Select [Next].
 - The Sunny Home Manager now searches for devices in the local network. After a maximum of ten minutes the system setup assistant lists the serial numbers of any available devices in the local network.
- 5. If the system setup assistant lists none or not all of the Speedwire devices of your PV system, select **[Update**]. If the problem persists, use Troubleshooting.
- 6. Activate the checkboxes of the devices you wish to add to the Sunny Home Manager system. You can identify the devices by means of the serial number. If devices with a warning symbol are displayed, the Sunny Home Manager cannot access the devices. You may have entered an invalid system password or the connection to the devices could not be established.
- 7. Select [Add] to add the devices to the Sunny Home Manager system immediately.
 - ☑ The system password is transferred to the devices. This process can take several minutes. The devices are then shown with a green tick.
- 8. Select [Next].
 - ☑ The page Meter Configuration opens.

9.1.4 Configuring the Energy Meter

Requirements:

□ In order to be able to display PV generation and consumption in your household, energy meters for the measurement of the power- and energy values must be connected.

i The Sunny Home Manager is equipped with an internal energy meter and measures the energy flows in both directions, i.e. at the point of interconnection it measures the energy generated by the PV system (and possibly reduced by self-consumption) fed into the utility grid as well as the energy supplied by the utility grid.

Procedure:

1. In the area **Meter configuration** enter the desired energy meter each from the drop-down lists **Supply and feed-in** and **PV power generation**:

System topology	Configuration
PV system with SMA inverters	 Select the entry Internal Energy Meter in the Purchased Electricity and Grid feed-in dropdown-list.
	 Select the entry No energy meter in the PV Generation drop-down list. PV production data from the connected SMA inverters are used.
PV system with third-party inverters	 Select the entry Internal Energy Meter in the Purchased Electricity and Grid feed-in dropdown-list.
	 Select the entry SMA Energy Meter xxx in the PV Generation drop-down list. Here, xxx is the placeholder for the SMA Energy Meter serial number. If there are 2 SMA Energy Meters in the PV system, select the desired SMA Energy Meter. The generation power of the PV inverters is only measured via this selected energy meter. This means that any combination of PV inverters can be used.

2. Select [Next].

☑ The page Extended PV System Properties opens.

9.1.5 Entering the System Data

i When entering the data, pay attention to the background information and the information in the column on the right **User information**.

You can change your details at any time in Sunny Portal (see Section 10.1, page 38).

1 > 2 >	3	> 4	\geq	5		6	7	\geq	8
Extended PV System Properties									
PV system power: *	0	kWp							
Specific Annual Yield: *	1000	kWh / kWp							
Zip Code/City: *									
Country: *	United King	lom		•					
Time Zone: *	(UTC+01:00)) Amsterdam, Be	rlin, Bern, N	lieste					
Feed-in Tariff: *	0,2	United Kingo	dom Pounds	; (GB / kWh					
Do you use self-generated PV energy in your household (self-consumption)? *	@ Yes ⊖ No								
Self-Consumption Tariff: *	0.0000	GBP / kWh							
	O no limiting	g of the active po	wer feed-in						
Limiting of the active power feed-in $\ensuremath{^*}$	max. 70	% of the	he nominal F	PV system p	ower				
		NT							
Automatic updates: *	Sunny Hom	e Manager, inverters	and additiona	V system al components					
Sunny Places:	Approve s	stem for Sunny I	Places						
E-mail address of the operator:									
* Mandatory field									

Back

Figure 8: Entering the PV system data (example)

Procedure:

- On the page Extended PV system properties enter your PV system data. You can obtain the nominal system power from your installer. You can obtain the specific annual yield for your system location from irradiation maps. The feed-in tariff is given to you by your local network provider.
- 2. **I** If you want to consume the energy produced by your system yourself, to switch loads for example, you have to answer the question of Self-consumption with **Yes**.
- 3. Select [Next].

☑ The system setup assistant shows a summary of your entered data.

- 4. Select [Finish].
 - Sunny Portal will confirm on the next page that your system registration was successful.
 A message also appears indicating that communication monitoring has been activated and that you will receive a daily report by e-mail every day.
- 5. To go to the Sunny Home Manager system, select [To the PV system].

☑ The user interface of your system opens.

Next

9.2 Logging In and Out of Sunny Portal

Logging into Sunny Portal

Requirements:

□ The Sunny Home Manager must be registered with the PV System Setup Assistant in Sunny Portal (see Section 9.1.1, page 28).

Procedure:

- 1. Go to www.sunnyportal.com.
- 2. In the Login area, enter the e-mail address in the field E-mail.
- 3. Enter the Sunny Portal password in the field **Password**.
- 4. Activate the checkbox **Remain logged in** to stay logged in for your next Sunny Portal visits. This way, you stay logged into Sunny Portal until you log out via the user interface.

5. **i** Public or shared computers

If you are using a public computer or are sharing yours with other people, deactivate the **Remain logged in** function. Other people could call up your data in Sunny Portal.

6. Select [Login].

Logging out of Sunny Portal

When you log out of Sunny Portal user interface, your PV system will be protected against unauthorized access. The function [**Remain logged in**] is reset in this case.



.

Procedure:

• Select the user name in the header of the user interface and select [Logout].

9.3 User Interface of the Sunny Home Manager System

9.3.1 Accessing the user interface

If you have only created one system in Sunny Portal, you will automatically access the user interface of your system after logging into Sunny Portal. If you have several systems in Sunny Portal, you will need to access the user interface of the Sunny Home Manager system after logging into Sunny Portal.

Procedure:

- 1. Log into Sunny Portal (see Section 9.2, page 33).
- 2. Select PV System Selection > "Sunny Home Manager system" in the page and menu selection.
- \blacksquare The user interface of the system opens.

In the **Configuration** menu under **System presentation > System home page** you can select which home page of your system you will see after login.



9.3.2 Overview of the User Interface

Figure 10: User interface of the Sunny Home Manager system in Sunny Portal (example)

Position	Designation	Explanation
А	Header	Selection of the user interface language
		Logout from Sunny Portal
В	Content area	Contents of the selected page
С	Page and menu selection	 Access to the various pages and menus of the Sunny Home Manager system
D	Help	 Explanation of the content of the selected page
		Link to Sunny Portal help

9.3.3 Overview of Menus and Pages

Depending on your system design and the products installed in your system, you may not see all menus and pages listed here.

System Selection Menu

The name of the currently chosen plant will be used for item under the **Plant selection** main menu. All other pages always refer to the currently selected system. The menu is only shown if your e-mail address is assigned to more than one plant. In this menu you can select the desired system.

Page	Explanation
System List	Overview of systems that are assigned to your e-mail address.

"Sunny Home Manager System" menu

This menu contains all information, data, and visualizations for your system. You can usually adapt the visual representation of the data in the tables and diagrams shown here to your wishes and needs. You can also access the associated page from each page in the configuration menu to make changes in the configuration of your system.

Page	Explanation		
System overview	Overview of the most important information about your system. To obtain more detailed information on individual data, you can switch directly from this page to the more specific pages.		
PV System Profile	Overview with information for the current system. Sunny Portal compiles the plant profile from information that you have entered on your Sunny Portal pages. Infor- mation that you have not entered is not shown in the system profile.		
Current Status And Forecast	This page is divided into two areas:		
	 The area Current Status visualizes which portions of your household are being supplied with power from the utility grid and from your PV system respectively. 		
	 The area Forecast and Recommended Action gives an overview of the expected PV power as well as recommendations on the manual switching-on of loads. 		
Energy balance	Visualization of the temporal progression of the power or energy flowing be- tween your PV system, your household, the utility grid and, possibly your battery.		
Load balance and control	Display of the power and energy consumption of the connected loads.		
Annual comparison	Summary of the total yield and the specific system yield per month in a year over- view.		
System Monitoring	Functions for monitoring your current system:		
	 Communication monitoring: monitoring of the communication between Sunny Portal and the inverters 		
	 Inverter comparison: system monitoring via comparison of the inverter yields, provided that at least two inverters are present in the system 		
	If the communication monitoring or the inverter comparison shows an error or warning, an exclamation mark will be displayed in the page and menu selection next to the menu item System Monitoring. The icon will be displayed until commu- nication is restored or the inverter comparison error has been eliminated.		
System logbook	Display of messages in connection with the current system status. These messages help you to identify system disturbances, for example. The number of unread warning, disturbance and fault messages is indicated after the colon.		

Page	Explanation
Analysis	Display of the power values of individual or multiple devices or the overall system for the period selected with the tab. You can choose between the display types absolute " or specific .
	A summary of the current diagram data can be found under Details .
Report	The page is divided into Daily system report and Monthly system report .
	Depending on the selection, meter change of the total yield is displayed.
Machine	Display of the individual devices that are integrated in the system.
	In separate diagrams, for each individual device the total yield (kWh) over one year and the total yield (kW) as well as the power (kW) on a defined day is shown.

Configuration Menu

When logging in to Sunny Portal, the menu **Configuration** is collapsed by default.

The main purpose of the configuration menu is the basic setup of your system and changes you want to make to general system settings or for the configuration of your devices. You can also carry out all configurations directly from the respective pages of the menu "Sunny Home Manager system".

Most data and graphics are only fully displayed on these pages if both a feed-in meter and grid-supply meter are connected. The Sunny Home Manager functions both as a feed-in meter and grid-supply meter.

Refer to the User rights (see Section 16.1, page 105) to find out which individual configurations of the system you can carry out.

Page	Explanation
System properties	On this page, you can use the various tabs to configure your Sunny Portal sys- tem.
PV System Presentation	You can release selected pages of your system for viewing, include your system profile into your own internet presence, and specify which Sunny Portal page is to be displayed first for your PV system upon login or after switching PV systems.
Device Overview	List with all devices of your system. You can call up device properties, parame- ters, and messages of these devices. You can search for new devices and update the list.
Load Overview and planning	Display of all loads configured with the Sunny Home Manager. Load planning shows loads for which certain time periods are configured and when these loads are to operate.
Report configuration	On this page you can configure Sunny Portal to inform you by e-mail of events and other information such as yield.
User administration	List of all users to whom you have granted access to the system.

9.3.4 Display of tables and diagrams

You can display tables and diagrams and their scope differently on many pages.

For this, there are symbols on the diagrams and tables:

When you move the mouse pointer over a symbol, an explanation of the meaning of the symbol is displayed. Clicking on the symbol enables the underlying command.
9.3.4.1 Setting the Display Period

The control element for setting the display period can be found below each diagram.

Procedure:

- If there is a time bar with a slider below the diagram, keeping the left mouse button pressed, click on the blue arrow and set the desired time period.
- If there is a date and arrow icons below the diagram, set the date using the arrow icons or a calendar:
 - Scroll backwards or forwards with the arrow icons and select the date.
 - Click on the date between the arrow icons and select the desired date in the calendar.
- If there are drop-down lists between the arrow icons, select the desired time period in the drop-down lists.

9.3.4.2 Saving Diagram Data

You can save diagram data as csv files.

Procedure:

- 1. If the gearwheel icon @ is displayed on the right below the diagram, move the mouse pointer onto the gearwheel icon @ and select in the drop-down menus.
- 2. If there two icons are displayed on the right below the diagram, select $\underline{$.
- 3. Click on [Save].
- 4. Select the target directory.
- 5. Click on **[Save**].

9.3.4.3 Printing Diagram Data

- 1. Move the mouse pointer onto gearwheel icon @ on the right below the diagram.
- 2. In the drop-down window select ①.
- 3. Select [Print].
- 4. Select the desired printer and select [Print].

10 Configuration of the Sunny Home Manager system

In the **Configuration** menu on the page **PV system properties** you can change system properties and add details to optimize the functionality of your PV system.

The menu page **PV system properties** includes the following 5 tabs:

- System data
- String configuration
- Operator/installer
- Parameter
- Data release

10.1 System data

10.1.1 Overview System Data

This tab lists general data relevant to the PV system. Some of the information is displayed on the **PV system profile** page.

System Data Area

Under **PV system data** the name of your PV system, the system identifier, the day of commissioning and the exact location are displayed. Here, you can add to or change these data that were already entered during the registration of the Sunny Home Manager system.

Furthermore, the system can be permanently deleted here.

Section: Power

The nominal PV system power is the sum of the power of all PV modules. It can be calculated automatically from the data in the device properties.

The nominal PV system power is required in order to display the following data:

- Specific system yield
- Average expected yield

Description

You can describe your system here. The description appears on the **PV system profile** page. The editor can format text, but does not support HTML.

PV system image area

Here can replace the standard PV system image with a user-defined system image.

The user-defined system image will also be displayed at the following locations:

- On the PV system profile page
- If pages have been released for Sunny Portal, the PV system image will be shown on the list of released systems on the www.SunnyPortal.com **home page**.

You can save several images in a gallery in Sunny Portal. This makes it easy to change the system image and access your images from different computers.

10.1.2 Changing System Data

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Procedure:

- 1. In the tab PV system data, select the button [Edit].
- 2. Change the desired PV system data.
- 3. Click on [**Save**].

10.1.3 Changing the System Name

A sensible name eases the differentiation between other systems in Sunny Portal.

System name requirement:

□ The system name can have a maximum of 30 characters.

Procedure:

- 1. In the tab PV system data, select the button [Edit].
- 2. In the field **Name**, enter the desired system name.
- 3. Click on [Save].

10.1.4 Deleting the System

If you delete the Sunny Home Manager system, the system and its data will be permanently deleted.

Requirement:

□ You must be a **system administrator** (see Section 16.1, page 105).

Procedure:

1. In the tab PV system data, select the button [Edit].

2. In the PV system data area, select [Irretrievably delete PV system].

- A security prompt opens.
- 3. Select [Yes] to permanently delete the Sunny Home Manager system.

i Assigning the Sunny Home Manager to another system

To enable assignment of the Sunny Home Manager to another system, you must perform a complete reset of the Sunny Home Manager (see Section 11.7.1, page 62).

10.1.5 Entering the Nominal System Power

Nominal PV system power is required for limiting active power feed-in.

You must enter the nominal PV system power correctly to ensure limitation of the active power feed-in to the correct value (see Section 10.4.3, page 42). If there are changes to the installed PV system power, you will need to adjust this value.

Manually enter the nominal system power:

- 1. In the field **PV System Power** in the **Power** area, enter the nominal system power.
- 2. To set the manufacturer of the PV modules, select the manufacturer in the drop-down list Manufacturer.
- 3. To set the module types, select the module types in the drop-down list **Module type**.

Automatic calculation of nominal PV system power

Requirement:

□ You must have entered the PV array power of all inverters (see Section 11.4.3, page 58).

- In the area **Power**, activate the checkbox **Calculate PV system performance from device properties**.
 - ☑ The calculated nominal PV system power is displayed.

10.1.6 Changing or Deleting the System Image

Changing the System Image

System image requirements:

- □ Maximum image size: 500 kB
- D Possible image formats: JPG, PNG, GIF

Procedure:

- 1. In the area PV system image, select [Load image].
- 2. Select the desired image from one of your directories.
- 3. Click on [Open].
- 4. To change the system image size, move the gray squares with the mouse.
- 5. To move the image section, click on the image section and move it while holding the left mouse button pressed.
- 6. Click on [Save].
- 7. To save an image in the gallery, upload the image to the gallery as follows:
 - Select [Select from the gallery].
 - Select Upload.
 - Select [Browse].
 - Select the desired image from one of your directories.
 - Select [Upload selected file].
 - Select 🗙.

☑ The image is saved in the gallery.

- 8. To upload an image from the gallery as the system image, select [Select from the gallery].
- 9. Double-click the desired image.
- 10. Click on [Save].

Deleting the User-Defined System Image

If you delete the user-defined system image, Sunny Portal will display the default system image (again).

Procedure:

- 1. Select [No PV system image] in the area PV system image.
- 2. Click on [Save].

10.2 String Configuration

A string describes a group of series-connected PV modules. Normally, a system is made up of multiple strings. Each string has specific properties, such as deviation to south (azimuth) or the roof tilt angle.

The configuration of the strings is of fundamental importance for the correct calculation of the PV forecast and thus an important prerequisite for load planning as well as the optimization of self-consumption and the self-sufficiency quota (see Section 11.4.4, page 58).

10.3 Changing Operator Data

The contact data of the operator and the installer are listed on the tab **Operator/installer**.

The operator is a private individual or legal entity who owns PV systems for business purposes, for example. The operator can farm out use of the PV system without necessarily being the user himself.

The name of the operator is displayed on the page **PV system profile**.

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Procedure:

- 1. In the tab select [Edit].
- 2. Enter the operator data.
- 3. Click on [Save].

10.4 Configuring parameters

10.4.1 General Information about the Configuration of the Parameters

The following is required for configuration within the tab Parameters:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

You can find the button [Edit] on the very bottom of the tab **Parameters**. It applies to all parameter settings of this tab.

When selecting [**Edit**], you can change settings of different parameters and apply all changes at once with the button [**Save**].

If you do not want to apply the changes, select [Cancel].

Both the buttons [Save] and [Cancel] are also on the very bottom of the tab.

Tip: Since all the changes are either applied with **[Save]** or dismissed with **[Cancel]** for the entire tab, it is recommended to save each change made on this tab separately.

10.4.2 Entering the Feed-In Tariff and Electricity Tariff

The values for feed-in tariff and electricity tariff were already queried and possibly entered during the system registration.

You can either use the electricity generated by your PV system for self-consumption or sell it , i.e., feed it into the utility grid. The Sunny Home Manager uses this information for cost cost saving and takes the entered values into account during load control to optimize self-consumption.

The entered values affect:

- Recommended actions for manually switching on loads Current status and forecast > Forecast and recommended action
- Load control via the Sunny Home Manager (either directly via the local network or via switching devices such as a radio-controlled sockets or a relays)

- 1. Enter the feed-in tariff per kWh in the area **Reimbursement** in the text field **Feed-In Tariff**. Also select the desired currency in the accompanying drop-down list.
- In the text field PV system with self-consumption, select whether self-generated PV energy is consumed in your household (self-consumption). If you select Yes, the self-consumption of the household is taken into consideration in the load control and recommended actions.
- 3. If you receive compensation for self-consumption, enter the self-consumption tariff in the text field **Self-Consumption Tariff**.
- 4. If you do not receive compensation for self-consumption, enter **0** in the text field **Self-Consumption Tariff**.
- 5. In the area Electricity Tariff, enter the time for which the electricity tariff applies in the input fields From and To. Tip: Split the night tariff into two tariffs. Configure the first tariff up to 12 midnight. Configure the second tariff from 12 midnight.

- 6. Enter the electricity tariff that applies to the entered time in the input field **Price**.
- 7. If the electricity tariff only applies to specific weekdays, activate the checkboxes with the respective weekdays.
- 8. If the electricity tariff applies to each weekday, activate all weekday checkboxes.
- 9. To enter additional electricity tariffs, select 🕂 and enter the data.

10. Click on [Save].

10.4.3 Configuring Limitation of Active Power Feed-In

Requirements:

□ The parameter **Operating mode active power setting** must be set to **Active power limitation P via system control** or to **External specification** for the inverters.

NOTICE

Responsibility of the system operator for limitation of active power feed-in

The system operator is responsible for the correctness of information on limiting the active power feed-in and nominal PV system power.

- Ask your grid operator beforehand whether you are permitted to use the Sunny Home Manager to limit active power feed-in (Manufacturer's Declaration available at www.SMA-Solar.com).
- Set the limitation of active power feed-in required by the grid operator. If you are not sure about this, contact your grid operator.
- Ensure you have correct information on the nominal PV system power. If you extend the system, adjust the value for the nominal PV system power accordingly.

i Ensure that your feed-in meter complies with the requirements.

The Sunny Home Manager avoids derating losses due to limitation of PV power generation by taking the current selfconsumption of the household into account and by increasing the self-consumption quota through direct use of the generated PV power for PV systems with self-consumption. For PV systems with SMA battery inverters, the Sunny Home Manager preferentially uses the derated active power to charge the battery.

Limitation of the active power feed-in to 70% of the nominal PV system power

Due to high levels of solar irradiation, the system can currently produce 90% of the nominal PV system power.

20% of the nominal PV system power is currently being consumed by loads in the household. The remaining
amount of 70% of the nominal PV system power is being fed into the utility grid.

☑ No limitation of PV generation is required.

• A load is switched off and only 10% of the nominal PV system power is consumed in the household. As a result, 80% of the nominal system power is available for feed-in to the utility grid – more than allowed.

☑ The Sunny Home Manager reduces PV generation from the theoretically possible 90% of nominal PV system power to 80%. 70% of the nominal PV system power continues to be fed into the utility grid.

i Supported inverters for the limitation of the active power feed-in to 0%

Limitation of the active power feed-in to 0% is only supported by inverters that support the fallback function: in the event of a communication failure between the Sunny Home Manager and the inverter, the inverter reverts to an output power of 0 watts. For more information see the inverter manual at www.SMA-Solar.com.

If your grid operator only allows a certain active power feed-in into the utility grid, the Sunny Home Manager can monitor and fulfill this requirement by reducing the PV generation of the inverters when the specified limit is exceeded. This takes into account that in times when your PV system generates a lot of PV power, which is also used directly by loads - household appliances or a battery that is being charged - a PV power higher than the feed-in limitation is allowed regardless (dynamic active power limitation).

In addition to the dynamic limitation of PV generation, the Sunny Home Manager can also use intelligent energy management to ensure that loads in the household are switched on at precisely those times when so much PV energy is available that the feed-in limit will be reached. If switching on a load means that more power is consumed directly in the household, the PV generation must not be reduced by as much or must not be reduced at all.

- Limitation to a fixed value in kW
- Limitation to a percentage of the nominal system power (setting range: 0% to 99%)
- Zero feed-in or zero export (avoids feeding into the utility grid) (setting: 0% of the nominal PV system power) Despite zero export, an inevitable remaining quantity of energy might be fed into the utility grid due to control cycle times.

If a battery inverter is part of your PV system, entering a minimum reaction time becomes possible starting with a limitation set at < 10% of the nominal PV system power. After grid feed-in has occurred, the battery inverter will thus be given enough time to use the feed-in power to charge the battery-storage system.

A reaction time of 5 s is preset for SMA battery inverters. This default value ensures the inclusion of the usual batterystorage systems (for specific values see documentation of the battery inverters).

Procedure:

- 1. In the area Limiting of the active power feed-in, select the applicable option:
 - If limitation of active power feed-in is not required for your system, select **no limiting of the active power feed-in** (default setting).
 - If limitation of active power feed-in is required for your system, carry out the following steps:
 - To test whether the limitation of active power feed-in is working in the system, select the option max. xx
 kW and enter the value 0. Thus, the Sunny Home Manager immediately limits the active power when the inverters starts feeding into the utility grid.
 - If the grid operator requires limitation to a percentage of the nominal PV system power, select the option **Max. xx % of the nominal PV system power** and enter the required percentage.
 - If the grid operator requires limitation of the active power feed-in to 0%, select the option Max. xx% of nominal PV system power and enter the value 0.
 - If the grid operator requires limitation to a maximum active power in kW, select the option **max. xx kW** and enter the maximum permitted active power in kW.
- 2. Click on [Save].

☑ The data is being transferred. This can take up to 5 minutes.

3. To display the active power limitation, select **Energy balance > Day** in the page and menu selection.

In the diagram **Generation** the specified limitation of active power feed-in is displayed as a dotted red line.

10.4.4 Activating or Deactivating Grid Management Services

As part of grid management services, it may be necessary to implement grid operator specifications for active power limitation and for reactive power feed-in in your PV system. The Sunny Home Manager can receive these specifications via Ethernet-based communication. The grid operator can set up this link. For this, you have to activate grid management services for the Sunny Home Manager.

Procedure:

1. Select the appropriate option in the area Grid management services via Ethernet based communication:

- If the Sunny Home Manager does not have to implement any grid operator specifications, select **No** (default setting).
- If the Sunny Home Manager has to implement any grid operator specifications, select **Yes**. The default setting Port **502** can normally remain set.
- 2. Change the port if necessary:

If there are several Modbus devices in the network or if the grid operator specifications are to be transmitted via a certain port, enter this port in **Port xxx**.

If you change this port, you must also change the port in your VPN router and inform the grid operator of this change.

- 3. Click on [Save].
- ☑ The data is being transferred. This can take up to 5 minutes.

10.4.5 Entering time period control for charging the battery-storage system

The time period control is only available for systems with Sunny Island or Sunny Boy Storage.

It might make sense to charge battery-storage systems at defined times (typically at low tariffs at night) due to timedependent electricity tariffs from the electric utility company.

The time period control for battery charging competes with the regular control of a battery inverter. As soon as a time frame for battery charging has been defined, the values self-consumption/self-consumption rate and self-sufficiency/ self-sufficiency quota are therefore hidden in the energy balance of the system. Reason: Due to set specifications of the battery charging power and time periods, it is likely that energy from the utility grid is also used for charging the battery. This can distort the above-mentioned values significantly and permanently. Should all time frames be removed at a later time, incorrect values might then be displayed.

You can specify time periods for several days as well as several consecutive time periods within a specific day.

Procedure:

- 1. In the Time period area click on 🛨.
- 2. Enter time interval (in 15 minute steps).
- 3. Select the period for which this time interval shall apply.
- 4. Enter the charging power in W.
- 5. To enter another time period, click on Ŧ again and repeat the procedure.
- 6. You can undo unwanted entries with 📃.
- 7. Confirm all your entries with [Save].

10.4.6 Setting the Optimization Target

The optimization target indicates whether the Sunny Home Manager should prioritize ecological or economical factors during load management:

- ecological: highest possible self-consumption
 Greater self-consumption conserves the environment because there is no energy loss caused by the transport of current through the utility grid.
- economical: highest possible cost savings
 The Sunny Home Manager calculates the most financially rewarding control of the loads, taking into
 consideration the feed-in and self-consumption tariffs. In certain cases, it may be more economical to feed the PV
 electricity into the utility grid and to operate the individual loads at night using electricity purchased from the grid.

The optimization target affects the following components:

- Load control with Sunny Home Manager
- Recommended actions in the diagram Forecast and Recommended Action on the page Current Status and Forecast

Requirement:

The feed-in tariff, self-consumption tariff and electricity tariff must be entered (see Section 10.4.2, page 41).

Procedure:

- 1. In the area **Optimization Target**, click the slider and, holding the left mouse button pressed, set the optimization target:
 - To achieve the highest self-consumption possible, move the slider towards ecological.
 - To achieve the greatest possible cost savings, move the slider towards economical.
- 2. Click on [Save].

10.4.7 Entering the Amount of CO2 Avoided

The CO₂ factor indicates how much CO₂ is produced for one kilowatt hour of electric current generated in the country. Depending on the technology used and the efficiency, the CO₂ factor can vary between the different electric utility companies in the region. You can find out the value of the CO₂ factor of the electric current supplied in your region from your electric utility company.

Sunny Portal can use the CO₂ factor to calculate how much CO₂ was saved due to the power generation of your system.

You can view the value of CO₂ avoided on the following pages:

- System profile
- Report configuration

Procedure:

- 1. In the area **Factor**, enter the CO₂ factor in the text field or click the slider and, holding the left mouse button pressed, set the CO₂ factor.
- 2. Click on [**Save**].

10.4.8 Entering the Expected Yield

Entering the Predicted Annual Yield

Sunny Portal can display in a table how the predicted annual yield of your system is likely to be distributed throughout the months of the year.

The predicted annual yield of the system is calculated from the specific annual yield (kWh/kWp) at the system location multiplied by the nominal PV system power (kWp).

You can obtain the specific annual yield for your system location from irradiation maps. Local conditions such as the shading or orientation of the system are not taken into account by Sunny Portal. You can obtain the nominal system power (also called nominal power) from your installer.

Requirements:

□ The nominal PV system power must be set (see Section 11.4.3, page 58).

Procedure:

- 1. In the area Yield Expectations, enter the specific annual yield in the text field Specific Annual Yield.
- 2. To enable configuration of the average expected yield and the monthly distribution on the page **Annual Comparison**, activate the checkbox **The monthly distribution can be configured in the diagrams**.
- 3. Click on [**Save**].

Entering the monthly distribution of the predicted annual yield

The monthly distribution shows how the predicted annual yield is likely to be distributed throughout the months of the year.

You have the following options:

- Having Sunny Portal Suggest the Monthly Distribution
- Entering the monthly distribution manually

Requirement:

□ The system location must be entered (see Section 10.1.2, page 38).

Having Sunny Portal suggest the monthly distribution:

1. In the area Yield expectations, select [Suggest a Monthly Distribution].

☑ The monthly distribution is displayed in the table with the months.

- 2. To display the average expected yield and the monthly distribution in the diagrams on the pages Annual Comparison and Energy and Power, activate the checkbox Display the monthly distribution in the yearly comparison, as well as energy and power.
- 3. To enable configuration of the average expected yield on the pages Annual Comparison and Energy and Power, activate the checkbox The monthly distribution can be configured in the diagrams.
- 4. Click on [Save].

Entering the monthly distribution manually:

- 1. In the area **Yield Expectations**, enter the values in the fields **in** % in the table with the months. The sum must add up to 100%. You can change these values at any time to get a better distribution.
- To display the predicted annual yield and the monthly distribution in the diagrams on the pages Annual Comparison and Energy and Power, activate the checkbox Display the monthly distribution in the yearly comparison, as well as energy and power.
- 3. To enable configuration of the predicted annual yield on the pages **Annual Comparison** and **Energy and Power**, activate the checkbox **The monthly distribution can be configured in the diagrams**.
- 4. Click on [Save].

10.5 Releasing Data

SMA takes the security of your data very seriously. This applies to personal and system-related data. We guarantee that your data will be treated confidentially and will not be used by SMA or third parties for any other purpose without your explicit agreement. You can specify here to what extent SMA or third parties may use your data. You can withdraw your consent to the use of your data at any time with effect for the future.

You can set whether to make your PV system data available to the internet portal Sunny Places and/or participate in the program SolarCoin.

Requirements:

□ The system location must be entered (see Section 10.1.2, page 38).

Sunny Places is an Internet portal for private PV system owners where you can publicly present your PV system in addition to Sunny Portal, compare your PV system with other registered PV systems, and exchange experiences with other PV system owners. Sunny Places is free of charge.

SolarCoin is a reward system for producers of solar energy. The SolarCoin Foundation gives energy producers blockchain based digital tokens worth a SolarCoin (SLR) for each megawatt hour (MWh) of produced solar energy. SolarCoin is free of charge. Everyone who produces solar energy can receive SolarCoin. SolarCoin is global, decentralized and independent of each government. The sales part of the project is designed for a term of 40 years. SolarCoin can be spent and traded like a crypto currency, but focuses on promoting environmental activities in the real world: verifiably generated solar energy.

The **SolarCoin Foundation** aims to help accelerate the global energy transition through rewarding solar power generation by issuing of blockchain-based digital tokens. One SolarCoin (SLR) is issued for each megawatt hour (MWh) of power generated. SolarCoins constitute a monetary value and, as a solar currency, reduce the financing costs in the solar industry worldwide.

Agreement of data use via Sunny Places:

Your agreement includes that Sunny Places may regularly call up the system name and energy yields of your system via Sunny Portal. Thus, you have the possibility of also using the Sunny Places services alongside Sunny Portal without any extra costs. Your PV system data will only be displayed in Sunny Places once you register in Sunny Places and connect with your PV system there. In Sunny Places, you also have the option of defining how much of the PV system data or of your profile will be published by making the appropriate settings.

Consent to participate in the SolarCoin program:

With your consent you allow your PV system to participate in the SolarCoin program. Yield data are transmitted to solarcoin.org and credited to your wallet.

11 Device Administration

In the menu **Configuration > Device overview** you can configure and add devices to your Home Manager system as well as replace. You also obtain information on all the devices in your system.

11.1 Device Overview Tab

This tab displays information on all the products that have already been configured in your PV system.

If new devices were detected in the system, this is shown to you in the tab **Device overview**. By clicking on [**Set up device(s) now**} you are redirected to the tab [**Overview of new devices**].

Α—	Coverview Overview of New E	Devices						
	2 new devices ha Set up devices now »	ve been detected	in this PV system.					_
B —	Device Name: Serial Number:	Devices:	Data Collection:					N
C —	Refresh Reset	Update parameters						Ê E
	Device Name	Serial Number	Product Group	Data Collection	Monitoring	Properties	Parameters	Logbook
	1901700012	1901700012	Sunny Home Manager 2.0	0	•		×	Щ.
	Edimax 875	801F02FA6875	Edimax Smart Plug	0			*	ţ,
	Edimax A6A19	801F02FA6A19	Edimax Smart Plug	0			*	
	SB 4000TL-20 01129	2100001129	Sunny Boy 4000TL-20	•	0		*	<u> </u>
	SB 4000TL-20 054	210000054	Sunny Boy 4000TL-20	•	0		*	<u> </u>
	E	F	G	H		K		M

Figure 11: Device overview tab (example of new devices having been detected.)

Position	Designation	Explanation
A	Tabs of this menu page	Device overview tab is active.
В	Filters	Text fields and drop-down lists for filtering the device overview
С	Buttons	These buttons refer to the filters (B):
		Update or Reset - refers to the previously set filter
		 Update parameters - updates the parameters of all devices
D	Device List	-
E	Device Name	Symbol and name of the device
F	Serial Number	Serial number of the device
G	Product group	Product group of the device, e.g. Sunny Home Manager 2.0, Sunny Boy 4.0 1AV-41
Н	Data collection	Displays whether the data of this device is to be used on your Sunny Portal pages (©).
I	Monitoring	Displays whether the communication monitoring or the inverter comparison is activated (©) on the devices.
К	Characteristics	Opens the tab Device: # with information on the device each selected. Depending on the device and the device settings, various device properties can be displayed on the tab of the device.
		You can make settings on the devices using the Properties 💷 tab.

Position	Designation	Explanation
L	Parameter	Opens the Parameters is tab with the parameters of each the selected device.
		You can read off the software package version in the parameter list.
		The parameters of a device are described in the respective device manual. The device parameters on this page can only be read but not changed. However, you can have previous changes displayed in the column History E .
Mon.	Logbook	Opens the System logbook tab with the messages for this device.
N	Table display	Device display in hierarchal tree structure or as list.

11.1.1 Filtering the Device Overview

You can find individual devices more easily if you filter the device overview. You have the following options for this:

Text field or drop-down list	Explanation	
Device name	Complete name of the device or parts of the device name	
Serial Number	Complete device serial number or parts of the serial number	
Machine	Searched device class	
Data collection	• All: both activated and deactivated devices are shown.	
	Active: only activated devices are shown.	
	• Deactivated : only deactivated devices are shown.	

Procedure:

- 1. Set one or more filters.
- 2. Select [Refresh].

Tip: In the list view 🔳 you can sort the devices in the device overview in ascending or descending order by clicking the blue entries in the table header.

3. To clear the filter, select [Reset].

11.1.2 Configuring the Device Properties

On the page **Device overview** you can view the **Properties** is for each listed device and, depending on the user right, verify and change the current configuration of a device.

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

The configuration options depend on the **device class**. Only the device properties area is available for all device classes.

11.1.3 Changing Device Names and Description

The serial number of the device is displayed as the default device name. You can enter any description for each device. The description of the device is displayed in **Device Properties**. This information enables the device to be uniquely identified.

Procedure:

Enter a device name in the field **Device Name**.
 The maximum length of the device name may be 20 characters.

- 2. Enter a description in the field **Description**.
- 3. Click on [Save].

11.1.4 Activating Data Acceptance

You can set whether or not Sunny Portal should accept and display data of the devices integrated in the system.

Only if you enable the data collection for a device, can Sunny Home Manager capture and use the data of this device for monitoring, forecast and control.

i The device must not be the Sunny Home Manager.

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

You must **Activate** data collection:

• for Inverters:

if you want to monitor the power of an inverter (and thus the system) or compare yields of different inverters to each other

- for radio-controlled sockets/relays and for Smart appliances: if you would like to control loads indirectly or directly via the interface included in the device
- for other connected devices: if they are to be displayed in the portal.

In the following cases, you must **deactivate** the data collection of a device in Sunny Portal:

- You no longer wish to display the device in Sunny Portal or
- You have removed the device from your PV system or
- You would like to replace the device in Sunny Portal by another device.

The data of the deactivated device is retained in Sunny Portal and remains visible on the menu page **Evaluation**.

- 1. Call up the device **properties** of the required device in the menu **Device overview**.
- 2. Select [Edit].
- 3. Place a checkmark in the field **Active** under **Data collection** to activate data collection.
- Remove the checkmark in the field Active under Data collection to deactivate data collection. If data collection has been Deactivated for a device, the device is not listed in the device overview with the filter setting Active.
- 5. Click on [**Save**].

Refresh devices

11.2 Overview of New Devices Tab

Via this tab, you can add new devices to the system or replace devices using the configuration wizard.

Device Ove	overview of New Devices		
*	A new device has been With which configuration would yo	n detected in this PV syste u like to add the new device to this Sunny	M. Portal PV system?
	 As a PV System Extension (Additional Device) (configuration assistant opens) Edit the device name Adjust generator power Adjust generator power Adjust generator power Select the device to be replaced Transfer data to the replacement device 		ement Device assistant opens) ing the configuration wizard, you must the data acceptance of the device to be levice to be replaced ta to the replacement device
	Important Information: Incorrect all	ocation of new devices may lead to faulty display	у.
Device	Product Group	Serial Number 🛎	Configuration
Ŀ	Edimax Smart Plug		+ 2

Figure 12: Tab new devices - a radio-controlled socket was added to the system in the example

There are the following configuration options for new devices:

- Configure the device as a system extension 🛨
- Configure the device as a replacement device 🖃

The configuration wizard guides you through the individual steps. Various information is queried depending on the device type.

11.2.1 Adding or Replacing Devices

i You have to capture the new device with the Sunny Home Manager.

The Sunny Home Manager uses the system password to log in to the devices of the system. If new devices (inverters, batteries, etc.) are to be added to the system, the Home Manager must also log in there. For this, the default password 1111 (factory-preset) or the system password must be set for these devices. The Sunny Home Manager then first tries to log in to the new devices with the system password. If this fails, the Sunny Home Manager repeats the process with the preset default password 1111.

Requirements:

- □ The new device must be in operation.
- □ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).
- □ For the new SMA device, the default password **1111** for the user group **Installer** or the system password of the existing system must be set (see Section 17.3, page 109).
- □ When adding AVM products, the AVM FRITZ!Box Smart Home control must first be set up (see Section 11.3.4, page 53).

i If you need to replace the Sunny Home Manager, you must use the system setup assistant (see Section 9.1.1, page 28).

i A device can only be assigned to ONE Sunny Portal system.

To use a device that has already been used in another system, it must be deactivated in the old system.

i Device replacement: The old device must NOT be deleted, but deactivated

If you delete the device that you wish to replace from Sunny Portal, all the device data is irretrievably deleted.

- To retain the data of the old device in Sunny Portal, do not delete the old device, but deactivate it.
- Add the new device as an additional device to the Sunny Home Manager system (replacement device).
- If the Sunny Home Manager is to be replaced, the old device must be deleted from the system; deactivation is not possible.

i Smart appliances cannot be replaced

Smart appliances which communicate via a data exchange protocol with the Sunny Home Manager cannot be replaced in Sunny Portal.

- To retain the data of the old load in Sunny Portal, do not delete the old load, but deactivate it (see Section 11.1.4, page 50).
- Add the new load as an additional device to the Sunny Home Manager system (system extension).

Procedure:

- 1. Select **Device overview > Overview of new devices** in the page and menu selection.
- 2. Select [Refresh devices]. The Sunny Home Manager then searches for new devices in the local network.
 - After a maximum of one minute, all new devices are displayed.
- 3. If none or not all of the new devices are displayed, there is an error that must first be rectified (see Section 18, page 111).
- 4. To add a device, select 🛨 in the line of the device.
- 5. To replace a device, select a in the line of the new device.

I The Sunny Home Manager connects to the new device. Page 2 of the configuration wizard opens.

- 6. If page 2 of the configuration wizard does not open, but the error message **Connection failed** is displayed, there is an error that must first be rectified (see Section 18, page 111). A password other than the standard password 1111 or than the system password of the existing system may have been set for the new device. In this case, temporarily change the system password of the existing system to the password of the new SMA device (see Section 17.3, page 109).
- 7. Follow the instructions of the configuration wizard.
 - The new SMA device is displayed under **Configuration > Device overview**.
 - ☑ The new device connected via Ethernet is displayed under **Configuration > Load overview and** planning.
 - Replacing a device can take up to 20 minutes.
- 8. If you have just changed the system password of the existing system to the password of the new SMA device, reset the old system password (see Section 17.3, page 109).
- 9. Configure the new device.

11.3 Configuring the Sunny Home Manager

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

11.3.1 Selecting Simple or Extended Configuration

When calling up the Device properties of the Home Manager the Simple configuration is shown. Here, you can make all default settings.

Under Extended configuration you can make further settings Generally, configuration of the fields displayed in this view is only required during initial configuration of the Sunny Home Manager.

Selection of the Extended Configuration:

- 1. Call up the **Properties** under **Device overview** in the row of the Sunny Home Manager.
- 2. Select [Edit].
 - In the View: line both options are now shown: Simple configuration (activated) and Extended configuration.
- 3. If you want to configure further functions, select Extended configuration.
- 4. Make the required settings and confirm with [Save].

11.3.2 Setting Automatic Updates

If the automatic software update is activated, Sunny Portal regularly checks whether there are update files for the Sunny Home Manager or for the PV system devices. If there are update files, these are automatically downloaded and the devices are updated.

You can activate/deactivate the automatic software update for:

- Sunny Home Manager
- PV system devices

By default, the automatic software update is activated for the Sunny Home Manager and the devices in the PV system.

Enabling Speedwire Encryption 11.3.3

The Speedwire encryption lets you safely encrypt the local SMA system network with SEC (Speedwire Encrypted Communication) and protect from unauthorized access.

i The Speedwire encryption can only be enabled if all devices in the system support SEC (Speedwire Encrypted Communication) and the devices can be accessed by the Sunny Home Manager.

Procedure:

- 1. Call up the **Properties** of the SMA Home Manager.
- 2. Select [Edit] on the device tab.
- 3. In the line **Speedwire encryption** enable the field **Active**.
- 4. Click on [Save].

i I f a new device is integrated into the system, this device must support encryption so that the encryption of the system can be maintained. Speedwire encryption must be temporarily deactivated if a new encryption-capable device is not displayed in the **Overview of new devices**. Once the new device has been added to the system, encryption can be re-enabled.

11.3.4 Configuring AVM FRITZ!Box Smart Home Control

The Sunny Home Manager communicates with FRITZ!DECT products such as radio-controlled sockets or thermostats only indirectly via the FRITZ!Box.

Requirements:

- □ You must have a FRITZ!Box with Smart Home software support.
- □ The FRITZ!DECT products connected to the FRITZ!Box must have been correctly connected and commissioned (see manufacturer's manual).
- □ The radio-controlled sockets connected to the FRITZ!Box must be able to measure the energy consumption.
- □ FRITZ!Box with DECT function must be available.

Procedure:

1. In the menu Configuration select the Device overview.

- 2. Select Properties in the row of the Sunny Home Manager.
- 3. Select [Edit].
- 4. Go to AVM FRITZ!Box Smart Home control and select Yes under FRITZ!Box Smart Home available.

Further setting options open up.

5. Under **FRITZ!Box login to home network**, select the login type which is set for the FRITZ!Box from the dropdown list.

By default, the FRITZ!Box uses the **FRITZ!Box password** for login. If the login type in the FRITZ!Box has been changed, it can be viewed in the FRITZ!Box settings in the FRITZ!Box user interface under **System > FRITZ!Box** users **> Login to the home network**.

If a user was created in the FRITZ!Box for controlling the AVM products by the Sunny Home Manager, the setting **FRITZ!Box user and password** must be selected both in the FRITZ!Box and here.

Make sure that the settings for the FRITZ!Box login in the home network are the same in the FRITZ!Box and in the Sunny Home Manager.

- 6. Under **FRITZ!Box address** keep the default setting, the IP address of the FRITZ!Box or the IP address under which the user interface of your FRITZ!Box in your home network can be reached.
- 7. If you set up a password query for logging in to your FRITZ!Box, you must enter and repeat this password under **FRITZ!Box password**.
- 8. Click on [Save].
- After a few minutes, the FRITZ!DECT products appear in the **Overview of new devices** and can now be configured.

i If you have a FRITZ!DECT radio-controlled socket or a FRITZ!DECT thermostat, the ambient temperature of the device is displayed on menu page **Smart Home > Temperature**.

11.3.5 Setting the Edimax Smart Plug

Now the password for the Edimax radio-controlled sockets can be entered in the device properties of the Sunny Home Manager:

• Enter the Edimax password.

All Edimax smart plug outlets in the system must have the same password. Otherwise the Edimax smart plug outlets may not be controlled by the Sunny Home Manager.

Ensure that the shared password is also entered in the Edimax app for each outlet.

11.3.6 Enabling System Communication Monitoring

In the area **System communication monitoring** you can only deactivate or activate monitoring of your system. In the other fields the current configuration of the communication monitoring is displayed.

Procedure:

- 1. In the main menu, call up the page system monitoring.
- 2. Click on the button [**Settings**].

I The tab Configuration communication monitoring opens.

3. Set the desired option (off / liberal / tolerant / sharp) using the slider under Alerts.

Inder **Time** the associated time period is displayed after which an alarm may be issued.

4. Click on [Save].

11.3.7 Setting the Data Request Interval

The data request interval defines how often the Sunny Home Manager sends data to and requests date from Sunny Portal.

□ This setting is only possible under **Extended configuration**.

Procedure:

1. In the area **Data request interval** , select the desired option:

Option	Description
automatically	The Sunny Home Manager updates data on the pages Current Status and Forecast and on the tabs Current within a few seconds. The Sunny Home Manager sends data that is displayed on other pages to Sunny Portal within a few minutes (up to a maximum of 15 minutes).
Hourly	The Sunny Home Manager sends data to and requests data from Sunny Portal hourly. Settings made via Sunny Portal are sent to the Sunny Home Manager within 60 minutes.
Daily	The Sunny Home Manager sends data to and requests data from Sunny Portal every 24 hours. Settings made on Sunny Portal are sent to the Sunny Home Manager within 24 hours.

2. Click on [Save].

i If loads are controlled via switching devices such as radio-controlled sockets or all-or-nothing relays, you must activate the **Automatic** option.

only recommends setting the data request interval to **Hourly** or **Daily** if your Internet connection is established via a GSM modem. This way, depending on your GSM tariff, you will avoid additional costs.

11.3.8 Activating SMA Smart Home

11.3.8.1 Setting up Forecast-Based Battery Charging

Forecast-based battery charging is based on the production and consumption forecast of your smart home. The settings for charging a battery are only displayed for systems with a battery

Setting	Explanation
Forecast-based bat- tery charging	To create a battery-charging forecast for the next 48 hours, the Sunny Home Manager uses the current day and the two following days by default.
Required state of charge (SOC) in terms of forecast-	Disables the forecast-based charging until the battery is charged to the specified % value (SoC = State of Charge). If this value is reached, the Sunny Home Manager enables fore-cast-based battery charging function.
based charging	This configuration may lead to derating losses. The electricity generation and consumption forecast is not taken into account up to the en- tered value. The energy may be reduced if the battery does not have sufficient free capacity for storage.
Charging of battery prior to optional loads	If you enable this function, the battery charge is prioritized over an optional load that you have defined.
Shortened forecast period	Shortens the default forecast period to the current day. This allows more PV energy to be loaded into the battery on the current day.
	This configuration may lead to derating losses. PV energy may have to be derated on the following days due to insufficient free battery capacity.

Requirements:

□ Strings must be configured in the system.

Procedure:

1. Go to SMA SMART HOME Settings and select Active under Storage management via the Home Manager.

Only select the option if active power limitation is configured in the system.

Another setting option opens.

- 2. Enter the required value under Required state of charge (SOC) in terms of forecast-based charging.
- 3. If the battery needs to be charged prior to a defined optional load, select **Active** under **Charging of battery prior to optional load**.
- 4. If the forecast period is to be shortened from 48 h to the current day, select **Active** under **Shortened forecast period**
- 5. Click on [Save].

11.3.8.2 Activating the EEBUS Protocol

This setting is only possible under **Extended configuration**.

By activating the EEBus protocol, you enable devices with an EEBus interface to connect to the Sunny Home Manager. For more information on the EEBus protocol, please see https://www.eebus.org/

Procedure:

• Go to SMA SMART HOME Settings and select Active under EEBUS protocol:.

11.3.9 Configuring the External Current Transformer

- □ Setting only possible under **Extended configuration**.
- □ If the integrated measuring unit of the Sunny Home Manager is connected directly, it can measure a maximum current of 63 A per phase. Current transformers must be used to measure currents > 63 A per phase (see Section 8.2.3, page 25).

Procedure:

- 1. For the request External current transformer: click on Yes.
- 2. Enter the specified transformation ratios (default setting: 1 each) in the fields **Primary current:** and **Secondary** current:.
- 3. Click on [Save].

11.3.10 Reconfiguring the Energy Meter

In the **Meter configuration** area the data are displayed that were entered during commissioning and registration of the system (see Section 9.1.4, page 30)

A change is only possible under **Extended configuration**.

i Only reconfigure the energy meter for changes that are absolutely necessary.

This might be the case, for example, if the grid operator demands a faster reaction for the dynamic active power limitation or the zero feed-in (zero export).

- 1. Select [Edit] on the tab for the device setting of the Sunny Home Manager.
- 2. In the **Meter configuration** area in the fields **Supply and feed-in** as well as **PV power generation**, select the desired feed-in and grid-supply meter as well as PV generation meter from the drop-down list:

- Select the desired measuring interval from the drop-down list Measuring interval internal energy meter. Tip: Set the interval to 200 ms to achieve the maximum possible control speed of SMA inverters. (When it comes to battery inverters, the firmware version is to be updated if necessary.)
- 4. If communication problems occur, enter IP addresses in the input fields under Direct meter communication.
- 5. Click on [Save].

11.3.11 Configuring Modbus Interfaces

□ This setting is only possible under **Extended configuration**.

Each device that is to communicate with the Sunny Home Manager via a Modbus communication protocol must be uniquely addressed.

On the tab **Modbus configuration**, you can store up to 4 different Modbus configurations with which the Sunny Home Manager searches for connected devices. After a successful search, the detected devices appear on the tab **Overview new devices** and can be added there (see Section 11.2.1, page 51).

Procedure:

- 1. After selecting the Extended configuration view, open the tab Modbus Configuration.
- 2. In the Modbus Profile column, select the desired predefined Modbus device from the drop-down menu.
- Enter the data of the selected device in the fields IP address, Port and Unit ID.
 If the Modbus device is a Moxa device, it is recommended to set the Moxa in the router with an IP address/MAC address binding or to subsequently set to a fixed IP address from the free range of the router not used for DHCP.
 Port (default 502) and Unit ID (default 1 or 2) do not need to be changed.
 Existing entries can be changed by overwriting.

To **delete** a configuration, click on the recycle bin symbol in the corresponding line.

4. Click on [Save].

11.4 Adding and Configuring the Inverter

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

11.4.1 Adding an Inverter

Requirements:

- □ The new device must be in operation.
- □ For the new SMA device, the default password **1111** for the user group **Installer** or the system password of the existing system must already be set (see Section 17.3, page 109).
- □ In the new device this must be set: **Data collection activated** (see Section 11.1.4, page 50).
- □ For the Sunny Home Manager this must be set: **Data request interval Automatic** (see Section 11.3.7, page 54).

Procedure:

- 1. Under Configuration > Device overview select the tab Overview of new devices.
- 2. Select device after preselection via the device filter or in the list and activate via 手.

I The configuration wizard opens and provides the further procedure step by step.

- 3. Enter the device name. You can also select and edit one of the suggestions displayed.
- 4. Enter the Phase and Generator power in the device properties.
- 5. When required, activate inverter comparison and enter a percentage value for the tolerance in the system monitoring.

6. Select [Next].

A summary of your entries is displayed.

- 7. If the data are correct, select [Finish].
- ✓ The new SMA device is displayed under Configuration > Device overview. It can take up to 20 minutes to replace an inverter using the configuration wizard.

11.4.2 Entering Line Conductors

Sunny Portal can display in the devices classes PV inverter and battery inverter the line conductor(s) to which each inverter is connected.

Procedure:

- 1. In the checkbox **Phase**, activate the line conductor(s) to which the inverter is connected.
- 2. Click on [Save].

11.4.3 Entering the PV Array Power

The PV array power is the maximum power of the PV modules connected to one PV inverter.

You can calculate the PV array power via the string properties (see Section 11.4.4, page 58) or enter it manually.

SMA recommends calculating the PV array power via the string properties. A string describes a group of seriesconnected PV modules. Normally, a PV system is made up of multiple strings. Each string has specific properties, such as deviation to south (azimuth) or the roof tilt angle.

Entering the string properties provides the following advantages:

- Sunny Portal can determine the PV array power more precisely.
- The Sunny Home Manager can deliver more exact yield forecasts and control loads more efficiently.

You can find out the connected PV array power present on each inverter from your installer. Using the PV array power, Sunny Portal can calculate your nominal PV system power.

i Nominal PV system power required for limiting active power feed-in

You must enter the PV array power correctly to ensure limitation of the active power feed-in to the correct value. If there are changes to the installed PV array power, you will need to adjust this value.

Procedure:

- 1. In the area **Generator capacity**, enter the PV array power in the field **kWp**.
- 2. Click on [Save].

11.4.4 Configuring Strings

Requirements:

□ The system must contain at least 1 inverter.

Creating New String

- 1. Under Configuration > PV system properties select the tab String configuration and then Add string.
- 2. Enter the string properties:

Text box	Explanation
Inverters	From the drop-down list select an inverter to which the string is to be assigned (see Sec- tion 11.1, page 48).
	You can register the connected strings for all inverters. To initially register the same con- figuration for all devices, select Apply for all inverters when adding a string.

Text box	Explanation
Designation	Name of the string, e.g. String A or East side
Manufacturer	PV module manufacturer
Module type	Depending on the selected manufacturer, different module types are displayed in the drop-down list.
module power*	
Module surface	Ihese values are applied automatically from the module database once you have se- lected the module type. You can change the values using a or the arrow keys on the key-
Efficiency	board.
Number of mod- ules*	Number of modules forming the string
Azimuth	The azimuth angle indicates by how many degrees the module surfaces deviate from a southern orientation.
	 In the text field, enter the number of degrees by which the module surfaces deviate from a southern orientation. Enter a negative value (e.g20) for a deviation to the east and a positive value (e.g. 20) for a deviation to the west.
	• If the module surfaces track the sun automatically, activate the checkbox Tracking .
Tilt angle	The tilt angle indicates by how many degrees the module surfaces deviate from the hori- zontal. In some systems, the module surfaces are optimally aligned according to the lati- tude. In Germany, the optimum orientation is 30 degrees from the horizontal.
	 In the text field, enter the number of degrees by which the module surfaces deviate from the horizontal.
	 If the module surfaces are optimally aligned according to the latitude, activate the checkbox Optimized.
Description	Optional, e.g. String A - Orientation to the east

* These fields are necessary for calculation of the nominal system power.

3. Select [Accept].

4. Click on [Save].

Accept existing string and edit

Requirements:

□ At least 1 string must already be configured in your system.

- 1. Select one string or inverter shown in the table on the tab **String configuration**.
- 2. In the line of the selected string and the column **Copy**, select
- 3. In the column **Edit** of the copied string line, select $\underline{\mathbb{S}}$.
 - I The menu for setting the string opens.
- 4. Enter the string properties:
- 5. Click on [**Save**].

11.5 Adding a Radio-Controlled Socket

Requirements:

- □ The new device must be in operation.
- □ For the Sunny Home Manager this must be set: **Data request interval Automatic** (see Section 11.3.7, page 54).

Procedure:

- 1. Under Configuration > Device overview select the tab Overview of new devices.
- 2. Select device after preselection via the device filter or in the list and activate via 🕂.

☑ The configuration wizard opens and provides the further procedure step by step.

- 3. Enter the device name. You can also select and edit one of the suggestions displayed.
- 4. Select [Next].
- In the drop-down list select the Load that is connected to the radio-controlled socket. If the desired load is not available, select No assignment and then add the new load for this radio-controlled socket later.
- 6. Select [Next].
 - A summary of your entries is displayed (see the following example).
- 7. If the data are correct, click on [Finish].
 - ✓ You are automatically forwarded to the tab **New load** of the configuration page **Load overview and planning** to configure the new load.

1	2	3
Davica Nama	Device Characteristics	Summany

Edimax Smart Plug - PV System Extension



Figure 13: System extension with radio-controlled socket (example)

Detailed information on the configuration of new loads can be found under **Load overview and planning** (see Section 12.3, page 68).

i FRITZ!DECT radio-controlled sockets automatically measure the ambient temperature near the device. The temperature is displayed on the menu page **Smart Home > Temperature**.

11.6 Adding Modbus Device

Requirements:

- □ The new device must have been installed in the system and commissioned in accordance with the manufacturer specifications.
- □ The **Modbus configuration** must have been performed on the Sunny Home Manager (see Section 11.3.11, page 57).
- □ For the Sunny Home Manager this must be set: **Data request interval Automatic** (see Section 11.3.7, page 54).

Procedure:

- 1. Under Configuration > Device overview select the tab Overview of new devices.
- 2. Select device after preselection via the device filter or in the list and activate via 🛨.

 \blacksquare The configuration wizard opens and provides the further procedure step by step.

- 3. Enter the device name. You can also select and edit one of the suggestions displayed.
- 4. Select [Next].
- In the drop-down list select the Load that is connected to the Modbus device. If the desired load is not available, select No assignment and then add the new load later.
- 6. Select [Next].
 - A summary of your entries is displayed.
- 7. If the data are correct, click on [Finish].
 - ✓ You are automatically forwarded to the tab **New load** of the configuration page **Load overview and planning** to configure the new load.

Currently only one load can be switched per one Modbus device.

11.7 Replacing the Sunny Home Manager

Requirements:

- □ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).
- □ The Sunny Home Manager to be replaced must have been decommissioned (see Section 19.1, page 123).
- □ The new Sunny Home Manager must be reset prior to the replacement:
 - Ex works (new device)
 - Manually (already used device)
- □ The new Sunny Home Manager must have been commissioned:
 - The new Sunny Home Manager must be connected to the router (see Section 8.3.2, page 26).
 - The new Sunny Home Manager must be supplied with voltage (see Section 8.2, page 23).
- □ The serial number and the registration ID of the new Sunny Home Manager are available. These data can be found on the type label that is attached on the side of the device or on the label provided.

- 1. Log in to the Sunny Portal system setup assistant and enter the access data (see Section 9.1.1, page 28).
- Select [Next].
 - The page Select PV system opens.
- 3. Activate the field **Add or replace devices**.
- Select
 in the line of the Sunny Home Manager system for which you want to replace the Sunny Home Manager.

5. Select [Next].

☑ The page **Select devices** opens.

- 6. Enter the identification key of the Sunny Home Manager in the field **PIC**. Enter the registration ID of the Sunny Home Manager in the field **RID**.
- 7. Select [Identify].
 - Sunny Portal checks whether the identification key and registration ID correspond to the connected Sunny Home Manager.
- 8. If the system setup assistant does not find a Sunny Home Manager with this information, rectify the error (see Section 18, page 111).
- 9. Select [Next].
- 10. Select [Finish].

11.7.1 Resetting the Sunny Home Manager

A Sunny Home Manager must only be reset if it had been installed in another system previously.

i Loss of data due to replacement or due to resetting to default settings

If the Sunny Home Manager is reset to the default settings, all data saved in the Sunny Home Manager will be deleted. The data saved in Sunny Portal can be transmitted to the Sunny Home Manager after calling up the PV system again in Sunny Portal.

Reset to default setting

• Hold down the reset button with a pointed object (between 2 and 6 seconds) until the LEDs flash red. Pressing down and holding the reset button for less than 2 seconds has no effect.

 \blacksquare LEDs flash first green and then red.

Restart

A restart is required if devices are connected to the Sunny Home Manager via EEBUS (see technical information "SMA SMART HOME - Load energy management using EEBUS").

• Hold down the reset button with a pointed object until the LEDs stop flashing red (at least 6 seconds).

 \blacksquare LEDs go out. The status LED then glows red constantly during system startup.

11.7.2 Reassigning the Sunny Home Manager to the Sunny Portal System after the Reset

If you have performed a complete reset of the Sunny Home Manager, you must reassign the Sunny Home Manager to your Sunny Home Manager system in Sunny Portal. Otherwise, Sunny Portal will not accept any data from the Sunny Home Manager.

When you log in the portal after resetting the Sunny Home Manager, a notice is shown automatically stating that the Sunny Home Manager has been reset. You will be asked whether you want to reassign the Sunny Home Manager to the system.

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Procedure:

1. Open www.sunnyportal.com and select System setup assistant.

or

Go to **www.sunnyportal.com/register**.

 \blacksquare The system setup assistant opens.

2. Select [Next].

☑ The page **User registration** opens.

- 3. Activate the checkbox I am already registered in Sunny Portal.
- 4. Enter the e-mail address and the Sunny Portal password in the fields E-mail address and Password.
- 5. Select [Next].

☑ The page Select PV system opens.

- 6. Activate the field **Add or replace devices**.
- 7. In the line of the Sunny Home Manager system to which you would like to reassign the Sunny Home Manager, select *■*.
- 8. Select [Next].

☑ The page **Select devices** opens.

- 9. Enter the identification key of the Sunny Home Manager in the field **PIC**. Enter the registration ID of the Sunny Home Manager in the field **RID**. Tip: You can read off the identification key and the registration ID from the type label on the side of the Sunny Home Manager or from the supplied label.
- 10. Select [Identify].
 - Sunny Portal checks whether the identification key and registration ID correspond to the connected Sunny Home Manager.
- 11. If the system setup assistant does not find a Sunny Home Manager with the entered data (PIC and RID), an error is present that needs to be rectified (see Section 18 "Troubleshooting", page 111).
- 12. Select [Next].
- 13. Select [Finish].

11.8 Deleting devices from Sunny Portal

i Device data is irretrievably deleted

If you delete a device, all the data of that device is irretrievably deleted.

• Check whether it is sufficient to deactivate the device.

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

- 1. Select the device properties of the device.
- 2. Select [Edit].
- 3. Select [Delete].
 - A window with a security prompt opens.
- 4. To irretrievably delete the device, select [Delete].

12 Load Control

12.1 Background Information

A load is a device in a household that is operated with electrical energy.

Loads that are only switched on when they are needed immediately afterwards (e.g. a toaster or vacuum cleaner) are not suited for being controlled by the Sunny Home Manager.

Well suited are loads whose use is flexible in terms of time (e.g. washing machine, heat pump, charging station for electric vehicles).

A distinction is made between the two types of loads that are suited for being controlled by the Sunny Home Manager:

- Non-program-controlled loads
- Program-controlled loads

Control through Sunny Home Manager	Explanation
Non-program-controlled loads	These loads must be able to switch on and off as needed.
	The load can be switched on at any time. In other words, Sunny Home Man- ager can select one or more periods within the user-defined time frame in which it can switch the load on or off.
	The load can optionally be switched on whenever there is enough PV energy or whenever the actual energy costs fall below the configured maximum threshold.
	The load can also be switched off quickly if the switch-on condition is no longer met, as when the weather suddenly changes. To prevent loads from being switched on and off too frequently, you can configure a minimum switch-on time and a minimum switch-off time when configuring the load prop- erties (see Section 12.4.6, page 72).
	To see an application example that uses a non-program-controlled load, see the "SMA SMART HOME - Load control via CAN time period (example: pond pump)" technical information in the download area of Sunny Home Manager at www.SMA-Solar.com.
Program-controlled loads	Sunny Home Manager should automatically switch the load on and off so that the load mostly consumes PV energy and incurs the lowest-possible en- ergy costs during operation.
	A program-controlled load runs through a preset program during operation. The program is typically selected by the user prior to operation and started by pressing the start button on the load. Once the program has started, the load should no longer be switched off. Typical program-controlled loads include washing machines, dishwashers and clothes dryers.
	Sunny Home Manager can only control a program-controlled load if, after an interruption in the power supply, the load's program picks up at the point where the power supply was interrupted.

To have loads captured and controlled by the Sunny Home Manager, you must establish a connection between the load and Sunny Home Manager:

• Via radio-controlled sockets/relays as intermediate switches (not directly communicating loads)

- Capturing the energy consumption of individual home appliances: measuring function of assigned device
- Controlling household appliances: on/off function of the assigned device

• Via the standard protocol interfaces (directly communicating loads)

Connection option	Explanation
Switch and measure via switch- ing devices	In the Sunny Home Manager system, switching devices can switch connected loads on and off. The switching devices can also measure the energy con- sumption of the connected loads and transmit this value to the Sunny Home Manager. For this purpose, the switching devices must be as- signed as devices to the Sunny Home Manager system (see Section 11.2.1, page 51).
	A load can either be permanently connected to the same switching device or to alternate switching devices. For each change, the load must be assigned to the new switching devices (see Section 12.5.1, page 73). If the load is not assigned to a switching device, the Sunny Home Manager cannot control this load or receive any consumption data from this load.
	Since the Sunny Home Manager does not receive any detailed data on loads if they are controlled via switching devices, you will need to make additional settings in the load profiles depending on the respective load type. Thus, the Sunny Home Manager can effectively schedule the loads in the load control and optimize energy and cost savings.
Direct communication of devices	This connection option is only possible for the following devices:
using data exchange protocols (EEBus, SEMP)	 Smart appliances which communicate with the Sunny Home Manager via a data exchange protocol such as EEBus or SEMP (see Section 12.8, page 77)
	The load has an internal EEBus or SEMP interface and is connected via net- work cables or Wi-Fi to the local network in which the Sunny Home Manager is also located. Thus, the load can automatically send information on its en- ergy requirement and consumption to the Sunny Home Manager and it can also receive switch-on and switch-off commands from the Sunny Home Man- ager.

12.2 Configuring Switching Devices

12.2.1 Safety when Configuring Switching Devices

WARNING

Danger to life by switching medical devices

Unintentional switching of medical devices can result in life-threatening situations.

• Do not connect any medical devices to the switching device (e.g. radio-controlled socket/relay).

WARNING

Risk of injury and fire due to unintentional and unattended switching on of loads

Loads that are switched on via a radio-controlled socket or a relay unintentionally and while unattended can cause injuries and fires (e.g. an iron).

• Do not connect any loads to the switching device that could endanger persons or cause damage if unintentionally switched on.

NOTICE

Damage to loads

Frequently switching a load on and off can damage it.

- Ask the load manufacturer whether the load is suitable for control via a radio-controlled socket or relay, for example.
- Configure the switching device so that the load connected is not switched on or off more frequently than specified by the load manufacturer.
- Do not connect any loads to the switching device if they require a continuous current supply.

12.2.2 Requirements for Configuring Switching Devices

- □ The switching device must have been commissioned and registered in Sunny Portal (see Section 11.2.1, page 51).
- □ For the Sunny Home Manager this must be set: **Data request interval Automatic** (see Section 11.3.7, page 54).

12.2.3 Selecting the Load

In order that the switching device can be controlled by the Sunny Home Manager, you must assign a load to it. You will first need to create a load profile for the load (see Section 12.4, page 70). If you have already installed a commissioned switching device without assigning a load, you can subsequently assign this switching device to the required load when creating the load profile.

Procedure:

- 1. Call up the switching device properties (see Section 11.1.2, page 49).
- 2. Select [Edit].

☑ The menu for setting the device properties opens.

3. Select the connected load from the drop-down list Loads.

12.2.4 Entering the Device Name

Using the device name, you can identify the device assigned to the load in the Sunny Home Manager system.

Procedure:

• Enter the desired device name in the text field **Device name**, for example, **radio-controlled socket washing machine basement**.

12.2.5 State of the Assigned Switching Device after Load Operation

Depending on the load type, the device assigned to the load is either switched on or switched off after load operation.

- Load is program-controlled: switched on
- Load is not program-controlled: switched off

Upon expiry of the set time period, the load remains in operation until the previously set target value (e.g. target temperature for a heat pump) is reached. You must set the target value directly on the load (see manual for the load).

12.2.6 Configuring the Operating Mode

Requirements:

- □ The switching device must be assigned to the connected load (see Section 12.2.3, page 66).
- □ In Sunny Portal, the data request interval must be set to Automatic (see Section 11.3.7, page 54).

Procedure:

- 1. In Sunny Portal select Load balance and control in the page and menu selection.
- 2. Select the **Current** tab.
- 3. In the table, in the column **Operating mode**, select the button for the desired operating mode next to the required load.

Op. mode	Explanation
Switch on	No control of the switching device by the Sunny Home Manager
	The switching device is switched on and switches to the operating mode On . The connected load can draw electric current.
Switch off	No control of the switching device by the Sunny Home Manager
	The switching device is switched off and switches to the operating mode Off . The connected load cannot draw electric current.
Automatic	Control of the switching device by the Sunny Home Manager
	Depending on the current control command of the Sunny Home Manager, the switching device is either switched on or off in this mode.
	This operating mode cannot be set for the load type Measure only

For radio-controlled sockets, you can also configure the operating mode via the Sunny Portal app or the keys on the radio-controlled socket and change the current switching state (on/off).

12.2.7 Configuring Start-up Detection for Radio-Controlled Sockets

□ Start-up detection can only be configured for a load that is connected via a radio-controlled socket.

With start-up detection activated, the radio-controlled socket detects when the load starts a program and switches the load off again instantly. Then, the Sunny Home Manager can schedule the load into the load control accordingly and at the appropriate time switch the load back on automatically via the radio-controlled socket.

Sunny Home Manager blocks start-up detection for the duration of the load's maximum program operating time in order that the program can run without interruption even with fluctuations in the power consumption of the load. You specify the maximum program operating time when configuring the load.

Requirements:

- □ The load must be connected to the energy management system via a radio-controlled socket compatible with the Sunny Home Manager.
- The load must be a dishwasher, washing machine or self-configured, program-controlled (see Section 12.4.2, page 71).
 With other program-controlled loads, the power consumption right after switch-on is normally too low for start-up detection.
- □ The SMA radio-controlled socket must be **Switched on** (see Section 12.2.6, page 66).
- □ In order that start-up detection can be activated, the radio-controlled socket must have at least the firmware version 12.12.110.R and be in the operating mode **Manual switch-on**.

- 1. In the field Start-up detection, select the checkbox Active.
- 2. If required, in the text field **Power threshold for detection**, adjust the preset threshold for the power consumption of the load during start-up. Information on power consumption during start-up can be found in the load's manual.
- 3. If required, in the text field **Detection time**, adjust the preset time period over which the threshold of the power consumption must be exceeded before a start-up of the load is detected.

4. Click on [Save].

5. If required, in the text field **Detection time**, adjust the preset time period for which the threshold of the power consumption must at least be exceeded in order to detect standby mode.

i Direct start of a load despite enabled start-up detection

If you wish to start the load right away even though start-up detection is activated, the operating mode of the radio-controlled socket must be set to **Manual switch-on** even after starting the load's program (e.g. by activating the touch key on the radio-controlled socket, via the Sunny Portal app or in Sunny Portal via the page **Load balance and control**, tab **Current**). This way, the load can start immediately and, in the radio-controlled socket, the start-up detection is blocked again for the duration of the maximum program operating time so that the load program can run without being interrupted by the start-up detection.

i Manual switching of a radio-controlled socket after detected start-up

If a start-up has been detected and the touch key on the radio-controlled socket is pressed manually during the program run of the load, the Home Manager automatically sets a locking time of 3 hours for the start-up detection. The start-up detection remains switched on, i.e. a start-up can be detected again after the locking time.

i Special case Initial commissioning

The radio-controlled socket is in manual mode and is switched off (e.g. factory setting). When the radio-controlled socket (see Section 12.2.6, page 66) is switched on, the locking time is initially set to 3 hours. This prevents a start-up from being detected immediately when start-up detection is switched on. A started load is not interrupted in this case. The Home Manager can then take over control and set the locking time.

12.3 Load Overview and Planning

This menu page is divided into two areas:

- Load overview shows the loads that are configured for use with Sunny Home Manager. You can view and change the configuration at any time or add new loads.
- Load planning provides a graphical overview of the scheduled time periods in which the active loads must be operated (dark-colored bar) or can be operated (light-colored bar). Loads with direct communication are not listed here.

		, select (Add loads).		Add load
C Load	 Type of load 	Status	Configuration	
(N)	- The or most		e ⁰ 2	
C Malaungen Bad	self-configured	•	5 <u>9</u>	
	sali confin rad		263	
	an constants	•	- <u>up</u>	
ON Spuelmaschine	Direct communication	•	- - 	
			-	
	Washing machine	•	- (i)	
4 of 4 entries		< First pa	ge « Previous page 1 N	ext page > Last page
	F	F	G	
	-			
ad planning				
ad planning 1 periods are configured for the following loads. Show	time periods when a load must run (dark bar) or can	run (light bar).		
ad planning 1 periods are configured for the following loads. Show onday Tuesday	time periods when a load must run (dark bar) or can Wednesday Thursday	run (light bar). Friday	Saturday	Sunday
ad planning a periods are configured for the following loads. Show onday Tuesday Upper too	time periods when a load must run (dark bar) or can Wednesday Thursday	run (light bar). Friday	Saturday	Sunday

Figure 14: Load overview and planning (example)

Position	Designation	Explanation
A	Filter options	Using the filter options, you can filter the list of loads. Selecting the option Active loads will hide the loads that are currently not assigned to a switching device and therefore not controlled by the Sunny Home Manager.
В	Load list	List of loads which have been configured for use with the Sunny Home Manager.
С	Load icon	Symbol of the load
D	Name of load	Name of the load with assigned color A new color can be selected from the color palette.
E	Type of load	Type of the load
F	Status	Status of the load = OK Load is fully configured and receives data = Not active Load is not assigned to a switching device. = Load is not fully configured
G	Configuration	Opens the tab Name of Load , on which you can configure the load properties.

Position	Designation	Explanation
Н	Add loads	Using this button, you can add further loads to the Sunny Home Manager system.
		Smart appliances are recognized automatically by the configuration wizard and are displayed under Device overview > Overview of new devices . Following successful registration, the devices are displayed on the page Load Overview and Planning in the area Load Overview .
I	Weekdays	For each individual weekday time periods can be configured for the loads.
К	Loads with time period setting	Only loads are shown here for which time periods were configured (see Section 12.7, page 75).
		Loads directly communicating with the Sunny Home Manager are not shown here.
L	Configuring time periods	Light blue bars - CAN time period
Mon.	Configuring time periods	Dark blue bars - MUST time period

12.4 Configuring Load Characteristics

As soon as a load has been configured, only the general information can be changed. In order to change a load's configuration once made, the relevant load must be deleted and reconfigured.

12.4.1 Entering general information

Regardless of whether you want to configure a new or an already existing load, the tab (new load or name of the load) with the **Load properties** opens.

In order to configure a new load, you should enter the following general information:

General properties	Explanation
Name of load	Using the load name, you can identify the load and the switching device assigned to the load in the Sunny Home Manager system.
	 Enter a load name in the Name of Load text field, e.g. Washing machine basement. The load name can have a maximum of 24 characters.
Load icon	Select load icon:
	• Select the desired load icon from the drop-down list to use a standard load icon.
	Upload load icon
	 At the bottom of the page select [Upload load icon].
	• Select the desired file (permitted file formats: JPG, JPEG, PNG, GIF, BMP).
	Click on [Open].
	The file is uploaded and then displayed in the drop-down list Load icon as the selected new load icon.
	• Select [Save].
Load color	• Select the desired color from the drop-down list.

12.4.2 Selecting the Load Type

Depending on the selected load type, you can display and configure different load properties on the tab. A preconfigured load profile is stored for some load types. If you select such a load type, some settings are not configurable.

Type of load	Explanation
Self-configured	You configure the connected load individually. With this type of load, you must also state whether the load is program-controlled or if its operation can be interrupted at any time.
	Example of program-controlled load: dryer
	Example of load where operation can be interrupted: pond pump
Direct communication	The load is connected via network cable or WLAN to the local network in which the Sunny Home Manager is also located. Thus, the load can automatically send informa- tion on its energy requirement and consumption to the Sunny Home Manager and it can also receive switch-on and switch-off commands from the Sunny Home Manager. On of your entries is omitted.
Energy monitoring (measur- ing only)	Only the power consumption of the connected load is to be measured. (e.g. office outlet or devices that permanently consume electricity such as a refrigerator or devices in standby mode)
Washing machine Dishwasher Stiebel Eltron WWK 300/ WWP300 Tecacolor TTA 300 heating	A preconfigured profile is stored for these loads. Some settings (e.g. program controllability) are blocked because they are not config- urable for the relevant device. You can use the preconfigured profile or configure the device yourself.
element Heat pump SG Ready	

12.4.3 Selecting Program Controllability

□ This option is only adjustable for the load type **Self-configured**.

Here you specify whether the load must run through predefined programs or not.

Setting	Explanation
Yes	After the start, the load runs through a defined program. Interrupting the load during the course of the program can affect the operation result and should therefore be avoided. (Examples: washing machine, dryer)
No	The load always carries out the same function during operation. Multiple switching on and off per day does not cause any problems. The load does not have to run permanently - as long as a minimum operation time per day is achieved, in- terruption of operation has no negative effect on the function being carried out. (Exam- ples: pond pump, heating element, water heater)

i A washing machine is a program-controlled load. That is why for a washing machine **Yes** is pre-selected and cannot be changed.

12.4.4 Entering the Power Consumption

The power consumption is the power (medium watt amount) typically required by a load for operation (see type label or load manual).

The Sunny Home Manager takes account of this value in the initial calculation of the required energy.

Once the load provides measured values of its actual consumption during operation, the Sunny Home Manager can determine a more precise power value after a learning phase. This way, the Sunny Home Manager gradually improves its load planning and increases energy and cost savings.

Procedure:

• Enter the power of the load connected in the text field **Power Consumption**.

12.4.5 Entering the Maximum Program Operating Time

□ The connected load must be program-controlled.

The maximum program runtime is the time that a program-controlled load requires for its longest program. The maximum program operating time defines the latest time at which a load must be switched on so that its longest program can be completed within the specified time limits.



Maximum program operating time for a washing machine

You have defined a time slot from 10:00 a.m. to 6:00 p.m. for your washing machine (see Section 12.7, page 75), i.e. your washing machine's washing cycle must be completed by 6:00 p.m.

The longest washing cycle of your washing machine lasts three hours. Therefore, enter at least three hours as the maximum program runtime when configuring the switching device. In this case, the washing machine will start at 3:00 p.m. at the latest so that the longest washing cycle can be completed. If the selected washing cycle is of shorter duration, the Sunny Home Manager still adheres to the maximum program runtime.

Procedure:

• Enter the maximum program operating time for the load connected in the **Max. program operating time** text field (see the load manual).

12.4.6 Entering the Minimum Switch-On and Switch-Off Time

□ This option is only adjustable for loads that are not program-controlled.

Setting	Explanation
Minimum switch-on time	The minimum switch-on time is the minimum time that the load connected must re- main switched on, for example, to complete its starting sequence or complete a work sequence.
	Delayed activation possible: Some loads may not start to operate immediately after switching on the assigned switching device, e.g. heat pumps for water storage tanks. Immediate activation can only be ensured for the switching device, not for the connected loads.
	• Enter the minimum switch-on time in the Minimum switch-on time text field. Take into consideration any possible delays in starting the connected load.
Minimum switch-off time	The minimum switch-off time is the minimum time the connected load must remain switched off, for example, to prevent overheating or enable restarting. • Enter the minimum switch-off time in the Minimum switch-off time text field.

12.4.7 Setting the Priority of the Load

This setting will only take effect if you have set the time period type **Load can be switched on**. In the case of the time period type **Load must be switched on**, the priority of the load does not have any effect, as the load is switched on in any event, possibly also with grid-supplied power.

The priority will only be considered for the following loads:
- Smart appliances with optional energy absorption. You will have already set the priority of these devices when adding them to your Sunny Home Manager system via the configuration wizard.
- Loads connected to switching devices for which you have set time periods of type Load can be switched on.

The priority of the optional load decides in which order the Sunny Home Manager considers the individual optional loads. For this reason the priority of appliances with low power (e.g. washing machine and dishwasher) should be lower than, for example, the priority of charging devices such as the SMA EV Charger. Basically, the Sunny Home Manager schedules optional loads only if it can ensure that the planning target is met. If the slider is set to 100% PV generation, it is possible that optional loads cannot be scheduled for use on cloudy days because minimum grid-supplied power cannot be excluded.



Conflict between 2 loads

2 loads, for which you have configured an optional time period in each case, should only be switched on if excess PV energy is available. As the amount of surplus PV energy is currently only sufficient for one load, however, the load with the higher priority is switched on. If both loads have the same priority, the load with the higher level of consumption is switched on first.

Procedure:

• Set the slider to the desired level.

12.5 Controlling Loads via the Switching Device

12.5.1 Assigning a Switching Device

For the following reasons, you must assign the switching device to the load to which it is connected:

- to have the load controlled by the Sunny Home Manager
- to have the Sunny Home Manager save the data of the load

If a load was temporarily not assigned to any switching device, corresponding data gaps will appear in the diagrams such as **Current status and forecast**.

A load can be connected to another (free) switching device at any time and controlled via this; the measured values or consumption data basically remain with the load and can only be called up via the load itself.

Procedure:

• In the drop-down list **Device Assignment**, select the switching device to which the load is connected. By default, no switching device is assigned to the load.

If the desired switching device is already assigned to a different load, a "*" will be displayed in front of the name of the switching device. In order to be able to reassign the switching device, you must first remove the assignment of the switching device in the profile of the other load.

12.5.2 Setting Measuring and Switching of the Assigned Device

• In the drop-down list Measuring and switching, select the required setting.

Setting	Explanation
The assigned device is to measure and switch (intel- ligent power consumption)	The load draws electric current via the switching device. Using the consumption values measured by the switching device, the Sunny Home Manager "learns" how much power the load typically consumes. This information flows into the load control of the Sunny Home Manager.
The assigned device is only to switch, not mea- sure (fixed power con- sumption)	The load is switched e.g. via a relay which is connected to the radio-controlled socket. Using the connected relay, the radio-controlled socket switches the load only in accordance with the configuration (time period) and the specifications of the Sunny Home Manager.
	The value that is entered in the load profile in the field Power Consumption is the power consumption factored in for planning the load control.

12.6 Setting Automatic Switch-Off

If the load has internal automatic switch-off, you must provide additional information in order that the switching device can detect whether the load is in operation or in standby mode. This ensures that premature disconnection of the load is avoided, so that it can also run for longer than the configured time period (see Section 12.7, page 75) if necessary.



Heating element with automatic switch-off

When controlled via a switching device, the heating element is switched on and off depending on the availability of PV energy within the time period defined. If the automatic switch-off is activated and the water has not yet reached the set temperature at the end of the time period, the heating element can continue to draw electric current from the switching device even though the time period has expired, until the target temperature is reached and the heating element has switched to standby mode on its own. The Sunny Home Manager recognizes the standby mode of the heating element and switches the switching device off.

Requirements:

□ The load must not be program-controlled.

Procedure:

- 1. In the field Load has internal automatic switch-off, activate the checkbox Yes.
- If required, in the text field Threshold for disconnection, enter the lower threshold for the power consumption of the load in standby mode (typically 50% of the mean power consumption in operation). When the power consumption falls below this threshold, the Sunny Home Manager recognizes the switch to standby mode and disconnects the switching device.
- 3. If required, in the text field **Detection time for disconnection**, enter the minimum time period over which the power consumption must be below the lower threshold for disconnection in order that the Sunny Home Manager recognizes the switch to standby mode.

12.7 Configuring the Time Period

The time period defines in which time period the Sunny Home Manager can or must switch the loads on. Time periods can only be configured for loads that are connected to switching device. You can set several time periods for each of these load.

By default, a daily time period is set so that the load is switched on within the time period (**Load MUST be switched on**). The option **Load can be switched on** can only be selected if the self-generated PV energy is also used in the own household (self-consumption).

The time periods configured according to weekdays are shown as colored bars in the **Load planning** area:

Color	Explanation
Dark blue	Compulsory time period The load will always be switched on during the time frame.
light blue	Optional time period Can only be activated in systems with self-consumption The load will only be switched on during the time period if certain conditions have been met (see below).
Red	Invalid time period configuration It is possible that the time period overlaps with other already configured time periods, or that the time period is too short for the entered minimum switch-on time of the load.

i Length of time period

The time period within which the load is supposed to be operated must be significantly longer than the actual operating duration so that Sunny Home Manager has enough leeway within the time period to be able to identify the times when energy is the cheapest.

i CAN time period: In some cases, the load is not switched on

If the configured proportion of PV energy is not attained or the maximum permissible energy costs are exceeded, it is possible that the load will not receive any energy in the optional time period and the switching device is not switched on.

i MUST time period: Load is switched on in any case

The load is also switched on if there is not sufficient self-generated energy available, i.e. energy required for the load to operate may be drawn from the utility grid.

i Shorter electrical endurance of the radio-controlled socket through the frequent switching of loads

The more often a radio-controlled socket switches loads on and off, the shorter the electrical endurance of the radio-controlled socket.

• When setting time periods and device operating times, ensure that the radio-controlled socket does not have to switch loads on and off unnecessarily often.

Setting or changing the time windows

- 1. Select Configuration > Load Overview and Planning in the page and menu selection.
- 2. In the line of the desired load, in the column **Configuration**, select 🐲.
- 3. In the tab of the selected load, select the button [Edit].
- 4. Select [Configure time period].
- 5. In the window **Configure time period**, make the desired changes for the time period:
 - Select load should run **Daily** or **Only on the following weekdays**.
 - Using the slider, set the operating time in 30-minute intervals.

- Select the time period type or Load MUST be switched on or Load CAN be switched on. (More details see below.)
- Decide whether the load may run for longer than the set time period.
- 6. Select [Accept].
- 7. Click on [Save].

Selecting the Time Period Type "Load Can Be Switched on" or "Load Must Be Switched On"

- 1. If the load must definitely be switched on within the time period, select **Load must be switched on** (default setting).
- 2. If the load is only to be switched on under certain conditions within the time period, select **Load can be** switched on.

The window Load will be switched on depending on opens.

- 3. Select the Maximum permitted energy costs option or the Proportion of the PV energy option.
- 4. Select [Accept].

Proportion of PV energy:

You can set the load to be switched on only if a certain minimum proportion of PV energy is available to operate the load. If the function **Limiting of the active power feed-in** is activated (see Section 10.4.3, page 42), you can also set the proportion of surplus PV energy that would otherwise be derated.

Operating loads with at least 50% PV energy

A washing machine is only to be switched on if 50% of the washing machine's energy requirement can be covered by PV energy.

• The slider is set to **50%**. Only if enough PV energy is available, the washing machine is switched on.

Maximum permitted energy costs:

You can set a maximum amount for the energy costs for operating the load. The price range of the slider is based on the highest and the lowest possible energy costs, e.g. the highest energy costs for operation exclusively with expensive grid current and the lowest energy costs for operation exclusively with PV energy, the cost of which is calculated based on the feed-in tariff less the self-consumption tariff. In addition, if **Limiting of the active power feed-in** is activated, surplus PV energy can be taken into account which is free, as it would otherwise be derated.



Operating the load exclusively with free energy

A pond pump should only be switched on if there is more PV energy available than is permitted to be fed into the utility grid.

• The slider is set to **0 Euro/kWh**. Only when enough surplus PV energy is available, the pond pump will be switched on.

Adding an Additional Time Period

If a load is not to run throughout the day, but rather at predefined intervals (e.g. pond pump), you must set up several consecutive time periods for this day. Here, the number of time periods equates to the number of intervals in which the load is to run.

Procedure:

- 1. Select **Configuration > Load Overview and Planning** in the page and menu selection.
- 2. In the line of the desired load, in the column **Configuration**, select 🎡.
- 3. In the tab Name of Load, select the button [Edit].

- 4. Select [Configure time period].
- 5. Select Add time period **+**.

A new time period with the corresponding number will be displayed in the **Time period overview**.

- 6. Make the desired settings.
- 7. Select [Accept].
- 8. Click on [Save].

Deleting a Time Period

You cannot delete all the time periods for a load. At least one time period must always be configured for each load. If no switching device is assigned to the load, however, the time period has no effect on the operation of the load.

Procedure:

- 1. Select Configuration > Load Overview and Planning in the page and menu selection.
- 2. In the line of the desired load, in the column **Configuration**, select 🐲.
- 3. In the tab Name of Load, select the button [Edit].
- 4. Select [Configure time period].
- 5. Select the recycle bin symbol 🛛 for the desired time period and confirm the security prompt.
- 6. Select [Accept].
- 7. Click on [**Save**].

12.8 Directly Controlling Loads

Certain loads can directly communicate with the Sunny Home Manager via SEMP or EEBus protocol (see technical information "SMA SMART HOME - Compatibility List for Loads").

The loads send information via Ethernet or WLAN on the load type, the planned energy requirement, and the preferred operating time period to the Sunny Home Manager.

The Sunny Home Manager factors this information into its load control, and also taking the configured optimization targets in the context of load control into account, sends appropriate start and stop signals to the loads.

Requirements:

- □ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).
- □ The load must either support the data exchange protocol EEBUS or the data exchange protocol SEMP (see the manual of the load and technical information at www.SMA-Solar.com).

Procedure:

- 1. Connect the load to the local network and carry out the manufacturer-specific registration (see manual of the load). The load must be located in the same local network as the Sunny Home Manager.
 - ☑ The Sunny Home Manager detects the new load in the local network.
 - ☑ The load is displayed on the page **Device Overview > Overview of New Devices**.
- 2. Add the load to the the Sunny Home Manager system. In the case of loads with optional energy consumption, you can also set the priority and the maximum permissible energy costs.
 - The new load is automatically displayed on the page **Load Overview and Planning** with the available information and setting options.
- 3. Change the load name if necessary.

12.9 Application example forecast-based battery charging

12.9.1 Objective and Background Information

Objective of using battery storage-systems

The objective of using battery storage systems is to not feed excess PV energy that cannot currently be self-consumed into the utility grid, but instead to store it temporarily in batteries. It is then available and can be used when the self-generated PV energy is not sufficient, e.g. on a gloomy day, in the evening or at night.

System operators are less dependent on the electricity purchased from the utility grid and increase their self-sufficiency quota.

Background information on forecast-based battery charging

Without forecast-based battery charging

- The battery may already be fully charged by noon and can no longer absorb any excess PV energy. This then leads to the fact that the PV feed-in power at the point of interconnection has to be "derated" if the nominal PV system power exceeds the maximum feed-in power specified by the grid provider at the point of interconnection (see Limitation of active power feed-in).
- It can result in faster calendar aging of the battery if the state of charge is at 100% frequently and over longer periods of time.

The following features of the Sunny Home Manager play an essential role for the forecast-based battery charging:

- PV yield forecast Thanks to a weather forecast based on Internet data and by adapting this to the local conditions, the Sunny Home Manager can accurately predict solar irradiation for a few hours to a few days (48h).
- Consumption forecast
 The Sunny Home Manager creates an individual load profile on the consumption behavior of the system operator.
- PV curtailment forecast

From generation and consumption data the Sunny Home Manager identifies when the PV nominal system power would exceed the specified feed-in power at the point of interconnection. Without forecast-based battery charging this PV energy would have to be derated or would not be generated – and thus would get lost.

Prioritization of loads

For optional loads the order in which the Sunny Home Manager is to activate them can be determined. A preferred consideration of the battery charging ensures sufficient availability of energy e.g. in the evening and night-time hours.

Specifying a minimum load capacity of the battery
 Since a purely forecast-based charging of the battery can lead to insufficient stored energy being available when required, a percentage value can be set for the forecast-based charging of the battery, up to which the battery is definitely charged before the Sunny Home Manager enables the forecast-controlled battery charging and starts the energy distribution to the loads in the household.

Ideally

• all loads are controlled so as to avoid derating losses and to be able to cover the houshold's energy demand exclusively with self-produced PV energy.

The result is that the battery

- always has sufficient PV energy stored to satisfy the current demand.
- still has capacities to absorb PV energy even at the midday peak.
- exhibits rarely and only briefly a state of charge of 100%.

12.9.2 Setting up Forecast-Based Battery Charging

Preliminary considerations and requirements:

- □ To calculate the expected PV generation, the exact input of the system location (latitude, longitude, altitude) as well as the nominal system power (string configuration) are required.
- □ For the optimization of the energy costs, feed-in tariff and electricity tariff must be entered. The criteria according to which the costs are to be optimized must be set in the optimization target.
- □ "Learned" energy balance data (at least load profile of the past 14 days) should be available.
- □ If the local grid operator requires a limitation of the active power feed-in, this must be specified here (e.g. 70% capping).
- □ Since the battery should be able to step in as often as possible when energy is needed but is not being selfproduced, it makes sense
 - to specify the time period as liberally as possible.
 - to configure the battery as an optional load, but with higher priority.
- □ So that the battery still has capacities during PV generation peak periods (e.g. midday peak) and curtailment can be avoided, a percentage value for the state of charge should be specified, from which the Sunny Home Manager should consider other loads before the battery continues to charge.

Procedure:

- 1. On the configuration page **PV system properties** under the tab **PV system data** check the PV system location entry and adjust if necessary (see Section 10.1.2, page 38).
- 2. On the configuration page **PV system properties** under the tab **String configuration** check the string configuration and adjust if necessary (see Section 11.4.4, page 58).
- 3. On the configuration page **PV system properties** under the tab **Parameters** check the following settings and adjust if necessary:
 - Check entry of Feed-in tariff and electricity tariff (see Section 10.4.2, page 41).
 - If the local grid operator requires a **Limiting of the active power feed-in**, this must be specified here (e.g. 70% capping) (see Section 10.4.3, page 42).
 - Set optimization target(see Section 10.4.6, page 44): For each system, either an ecological (maximization of PV self-consumption) or an economic (minimization of energy costs) optimization target can be selected. Depending on the situation (e.g. PV feed-in tariff, electricity procurement costs), the Sunny Home Manager's planning can vary greatly.
- 4. On the configuration page Load overview and planning select the load and configure the Load properties:
 - Setting the Priority of the Load (see Section 12.4.7, page 72): The priority should be higher than the priority of loads with low power (e.g. washing machine and dishwasher).
- 5. On the configuration page **Device overview** select the Sunny Home Manager and call up its **Device properties**.
- 6. In the area SMA Smart Home settings make the following settings:
 - In the EEBUS protocol field place a checkmark: Active
 - If the active power limitation of the system is active, in the field **Forecast-based battery charging** place a checkmark: **Active**
 - In the field **Required state of charge (SOC) for forecast-based charging**, change the preset value from 0% to e.g. 60% if applicable.

The set value indicates the percentage of the battery charge that must be reached before the Sunny Home Manager activates the forecast-based battery charging function, i.e. up to this value the function forecast-based charging is deactivated.

• In the field **Charging of battery prior to optional loads** place a checkmark: **Active** This way you ensure that the battery is first charged before the Sunny Home Manager considers other loads such as a heating element, for example.

13 Visualization of the energy management

13.1 System selection with system list

i If only 1 system is assigned to your e-mail address, this menu is not shown to you.

All systems that are assigned to your e-mail address are listed under the menu item **PV system selection**. In the **PV system list** you can choose between the options **Simple list** and **Extended list** and sort the list.

System List	Explanation / display per system
Simple list	 Power of the system (kWp)
	Date of commissioning
	 Location of the system (country, zip code, city)
Extended list	 Nominal system power (kW)
	 Total yield (kWh) for the following time periods:
	- previous day
	- Current day
	- Previous month
	- current month
	 Total yield (kWh) as per meter reading
	 Specific yield (kWh/kWp) for the following time periods:
	- current month
	- current year

Sorting the System List

- When first calling up the page, the simple list is shown.
- The extended system list is sorted in ascending order in accordance with the specific system yield.

Sort the simple list:

- 1. To sort the simple list, click in the header of the table on the blue title of the column according to which the list is to be created. The list is then displayed in ascending or descending order according to this criterion.
- 2. To permanently keep this view, click on the field Show this list after login and select [Save].

Sort the extended list:

- 1. To sort the list by another value than the specific system yield, click one of the other blue values in the header.
- 2. To sort the list in descending order, click on the blue value in the header again.

13.2 System overview

The menu page **PV system overview** shows all available data of your system. When calling up your system, this overview appears as the home page by default.

When calling up your system for the first time, you can change your home page in the menu **Configuration > System presentation** at any time (see Section 15.4, page 104).



Figure 15: Example of a system

13.3 Current Status And Forecast

The Sunny Home Manager continuously logs the energy generated by the PV system. The Sunny Home Manager receives the PV generation data via the connected SMA inverters or via an optionally connected PV generation meter (e.g. an SMA Energy Meter). The Sunny Home Manager also receives location-based weather forecasts via the Internet. Based on this information, the Sunny Home Manager forecasts how much energy your PV system will likely generate in the next 48 hours and thus will be available.

The Sunny Home Manager includes the forecast of the energy availability in its energy planning and suggests costeffective operating times for home appliances, for example.

To query forecast information, in the **Configuration** menu on the **System properties** page under **PV system data**, the following input fields must be completed:

- Longitude
- Latitude
- Nominal PV system power (necessary for the correct power forecast)

If one of the three entries is missing in the forecast area, either the weather symbols are not displayed, the power forecast is not present or it is incorrect.

13.3.1 Overview Current Status Area

The graphic in the area Current Status visualizes the power transferred from your PV system to your household from the utility grid to your household and from your PV system to the utility grid.

Requirements for displaying this page:

□ The data request interval must be set to **Automatic** (see Section 11.3.7, page 54).



		100 %
0	50	100
En:nve:nven	veinwnver	
23	%	

Figure 16: Display: left **Option I** and right **Option II** (examples)

The displays **Option I** and **Option II** contain the following current data:

Designation	Explanation
PV Generation	Currently generated power of your PV system
Consumption (total con- sumption)	Power that your household is currently drawing from your PV system, the utility grid and the battery
	for Option II: The colors visualize which portion of the consumption is currently made up of purchased electricity, direct consumption (PV system) and battery discharging.
Grid-supplied power	Power that your household is currently drawing from the utility grid.
	for Option I: red
Grid feed-in	Power that your PV system is currently feeding in to the utility grid.
	If your system is generating more power than your household needs at the moment or can be stored in the battery, the surplus power is fed into the utility grid.
	for Option I: blue
Self-consumption	Power that your household is currently drawing from your PV system (direct consump- tion) and, if applicable, power/energy being stored into the battery from your PV sys- tem.
	for Option I: green
Self-consumption quota	Current ratio of self-consumption to PV power.
Self-Sufficiency Quota	Current ratio of internal power supply to total consumption
Only option II	Internal power supply: Power that your household is drawing directly from your PV sys- tem (direct consumption) and, if applicable, from the battery (battery discharging).
	In systems without batteries, the self-consumption is the same as the internal power sup- ply.
Battery charging*	Power that is being currently charged from your PV system into the battery
Battery discharging*	Power that your household is currently drawing from the battery

Designation	Explanation
Battery state of charge*	Current state of charge of the battery in percent, in relation to the battery capacity

* Only displayed for PV systems with battery

i Only for systems with self-consumption can be chosen between **Option I** and **Option II**. For systems without self-consumption only Option I is possible and the configuration block is hidden.

Changing the display:

- 1. Select [Configuration Current status and forecast] in the contents area on the page Current status and forecast.
- 2. Select the desired option in the field **Display**.
- 3. Confirm the selection with [Save].

13.3.2 Overview Forecast and Recommended Action Area

The graphic in the area Forecast and Recommended Action gives an overview of the expected PV power as well as recommendations on the manual switching-on of loads.

In addition the graphic shows the time periods that you have planned for the operation of the loads (see Section 12.7, page 75).

You can have a forecast displayed for up to 48 hours from the currently selected time.

You can select another period by clicking on the diagram, holding down the left mouse button and moving the mouse to the right or left.

Forecast and Recommended Action 😨



Figure 17: Forecast and Recommended Action diagram (example)

Position	Explanation
А	Weather forecast

Position	Explanation
В	 Suitable time for manually switching on loads The Sunny Home Manager takes the following information into consideration for the recommended action: Expected PV power (see position C) Requirement: The location of the system must be set. Expected energy consumption of the household and of loads for which the Sunny Home Manager receives measured values of the power consumed via switching device or via direct communication. The Sunny Home Manager determines the anticipated energy consumption in accordance with the consumption forecast based on the "learned" consumption behavior of the individual household. Requirement: The data collection of the loads must be activated. Feed-in tariff and electricity tariff Requirement: The feed-in tariff and electricity tariff must be entered. Optimization target The optimization target indicates whether the Sunny Home Manager should prioritize ecological- or economical factors during load management.
	Requirement: The inverter strings must be configured.
C	Expected PV power in accordance with the PV yield forecast The Sunny Home Manager determines the available PV power that can be expected in each case using the weather forecast for the selected location and the "learned" behavior of the specific sys- tem. Tip: When you move the mouse over one of the bars, the following details for this time period will be displayed in a window: Estimated PV generation Estimated consumption
D	 Tariff for the electric current purchased from the utility grid Red: expensive Green: good value If you have only entered one electricity tariff, green is always displayed. Other colors: electricity tariffs between the highest and the lowest electricity tariff
E	 View of the time periods for the planned operation of the loads (load prognosis) The configured time periods are shown as colored, semi-transparent bars. Time periods planned by the Sunny Home Manager in which the loads were actually in operation or are going to be in operation are shown as colored, solid bars. A simple solid line symbolizes times during which the self-consumption of the load is measured.
F	Loads legend The legend shows which color is assigned to which load in the time period view (E).

13.4 Energy Balance

This page visualizes the progression of the energy generation and energy consumption for a selected period. provides analyses for generation, consumption, self-consumption and battery usage.

A two-part diagram displays how the loads in your system have been supplied and how your PV energy has been used:

- The upper half of the diagram shows the total consumption of your system in the selected period. It is precisely broken down from which sources your system was supplied with energy (PV system, battery-storage system or utility grid).
- The lower half of the diagram shows when and how much electrical PV energy has been generated and how it was used (direct consumption, charging of a battery-storage system or utility grid feed-in).
- The data on this page are only fully displayed if both a feed-in meter and grid-supply meter are connected.
 The additionally required PV generation data will be determined either directly by the connected SMA inverters or can be captured via an additional PV production meter in PV systems with Sunny Home Manager. If a DC-coupled storage system is used (e.g. Sunny Boy Smart Energy), the PV production data must always be read out directly from the device, otherwise no differentiation between direct consumption and battery charging or discharging is possible.

Via Tabs you can select the period which is to be displayed in the view (current / day / month / year / total).

Energy Balance 🔞



Figure 18: Energy balance of a specific day (example)

i Point in time in the diagram and the corresponding data

If you move the mouse pointer over the diagram, a vertical line is displayed. This line visualizes the position of the mouse pointer on the time axis in the diagram and therefore the selected point in time. The power or energy values of the diagram for this point in time are displayed next to the line.

Designation	Explanation
Consumption	Power that your household drew from your system (direct consumption or internal power supply for systems without battery), the utility grid (grid-supplied power) and, if applicable, the battery (battery discharging) during the period selected.
Direct consumption*	Power that your household drew and consumed directly from your PV system during the period selected, without intermediate storage in the battery.
Grid-supplied power	Energy that was drawn from the utility grid during the period selected.
Internal power supply	Energy used in the system that did not come from the utility grid, but rather was gener- ated on site. It is made up of directly used PV energy (direct consumption) and stored PV energy (battery discharging). The internal power supply quota describes which proportion of the energy used in the system comes from that generated on site.
yield	Energy that was supplied to your household by your PV system during the period se- lected. For systems with battery, the energy comes preferably directly from the system (direct consumption). If the power produced by the system is not sufficient, the remaining power is supplied by discharging the battery.
Self-consumption	PV energy that is used on-site and not fed into the utility grid. It is made up of directly used PV energy (direct consumption) and stored PV energy (battery charging). The self-consumption quota describes which proportion of the PV energy generated on-site has been used on-site.
Grid feed-in	Energy that your PV system fed into the utility grid during the period selected.
Battery discharging*	Energy that your household drew from the battery during the period selected.
Battery charging*	Energy that your PV system stored in the battery during the period selected.
Self-Sufficiency Quota	Ratio of energy self-sufficiency to consumption in the period selected
Direct consumption quota*	Current ratio of direct consumption to PV power

Energy consumption and energy generation

* Only displayed for PV systems with battery

On the tabs **Current** and **Day** the gray envelope curve visualizes the consumption (grid-supplied power and energy self-sufficiency) and the generation (direct consumption and grid feed-in) for the selected period or the selected day. On the tabs **Month**, **Year** and **Total** the gray envelope curve visualizes the generation (direct consumption and grid feed-in) for the selected period. The envelope curve is only visible if the data are incomplete or cannot be calculated, or if the components of the generation are hidden using the legend below the diagram.

Limitation of Active Power Feed-In

The dotted red line indicates the maximum active power that may be fed into the utility grid.

- □ The dotted red line will only be displayed if you have set a limit for active power feed-in for your PV system in the Sunny Home Manager (see Section 10.4.3, page 42).
- □ The line is only displayed in the diagrams of the tabs **Current** and **Day**.
- □ If you have limited the active power feed-in to 0%, the red line runs directly on the x-axis of the diagram. Limitation of the active power feed-in to 0% is only supported by inverters that support the fallback function (fallback: in the event of a communication failure between the Sunny Home Manager and the inverter, the inverter reverts to an output power of 0 watts). For more information see the inverter manual at www.SMA-Solar.com.

The **Legend** below the diagram explains the colors used in the diagram and displays the most important overall values for the time period displayed.

Useful hint: You can show and hide data in the diagram by clicking on the term in the legend.

Useful hint: When you move the mouse pointer over a term in the legend, an explanation of this term is displayed.

Under **Balance**, the calculated values for the self-sufficiency and self-consumption quota, which reflect the type of your own energy supply, as well as other total values for the period shown are displayed.

Display with Battery

If a battery inverter is present in your system, you can select between the simplified view without battery data and the detailed view with battery data.

To have the battery data in the diagram and in the **Balance** area displayed, you must activate or deactivate the checkbox **Detailed view**.

13.5 Load Balance and Control

13.5.1 Overview load balance and control

The diagrams and tables on this page provide an overview of operating time, operating duration and energy consumption of the devices automatically controlled by the Sunny Home Manager

Requirements for displaying the page:

□ In the Sunny Home Manager system, loads must be available and configured which are either indirectly controlled by a switching device or which can be directly controlled by the Sunny Home Manager.

Depending on the tab, the diagram and table show different views and data of the loads:

Tab	Content
Currently	The following is required to display the tab Current:
,	□ The data request interval must be set to Automatic (see Section 11.3.7, page 54).
	Use energy meters recommended by SMA. Otherwise there may be a delay in the data be- ing displayed in the Current tab.
	The tab shows the following current data:
	In the diagram:
	• Line at the bottom of the diagram: Live data on the flow of the consumed power of each load in the selected display period (slider).
	In the table:
	• Operating Mode : Operating mode of the assigned device The button of the currently selected operating mode is highlighted in color. In addition, the LED status is displayed via an LED symbol and the current status is explicitly stated. The operating mode can be changed accordingly using the buttons. If the operating mode is controlled via the Sunny Home Manager, (Automatic) appears behind the operating mode.
	 Current value of consumption: Power currently being drawn by the load
	 Configuration: With the Configuration button [*] you can configure the properties of the load (e.g. priority).
Day	In the diagram:
	 With selected view Stacking order view (
	The lines below in the diagram show the progression of the power drawn by each load on the selected day. Via the legend below the diagram, you can show and hide the loads displayed in the diagram and change the stacking order of the loads in the diagram:
	 To hide a load, click on the desired load. Loads that have been hidden will be displayed in gray in the legend. You can display the load again by re-clicking on the load.
	- To show all loads that have been hidden, select Show all below the legend.
	 To display only the values for battery charging, overall consumption and purchased electricity in the diagram, select Display standard below the legend.
	 To change the stacking order in the diagram, select the desired load and, holding down the left mouse button, drag it to the desired position in the legend.
	 With selected view Time period ():
	The light-colored bars show the time periods which you have configured for the operation of the load.
	The dark-colored bars show the time periods in which the loads were actually in operation.
	 If you move the mouse pointer over one of the dark-colored bars, the energy consumed by the load in this time period is displayed in kWh.
	In the table:
	• Daily consumption: Energy drawn by the load on the selected day
	Configuration

Tab	Content
Month	In the diagram: • Energy drawn by each load in the selected month in days
	If you move the mouse pointer over one of the bars in the diagram, a window opens with the following information:
	 The respective daily consumption of the loads operated on that day
	 The respective percentage of the daily consumption which was covered by PV energy (*), battery discharging (=) or by the utility grid ([*]/₁)
	In the table:
	 Monthly consumption: Energy drawn by the load in the selected month
	 PV energy percentage: Percentage of the monthly consumption covered by PV energy
	 Battery discharging percentage: Percentage of the monthly consumption covered by battery discharging*
	 Purchased electricity percentage: Percentage of the monthly consumption covered by the utility grid
	Configuration
Year	In the diagram:
	 Energy drawn by each load in the selected year in months
	In the table:
	 Annual consumption: Energy drawn by the load in the selected year
	 Battery discharging percentage: Percentage of the annual consumption covered by battery discharging
	• PV energy percentage: Percentage of the annual consumption covered by PV energy
	 Purchased electricity percentage: Percentage of the monthly consumption covered by the utility grid
	Configuration
Total	In the diagram:
	 Energy drawn by each load in the individual years
	In the table:
	 Total consumption: Total energy drawn by the load so far
	• PV energy percentage: Percentage of the total consumption drawn from PV energy
	 Battery discharging percentage: Percentage of the total consumption drawn from battery discharging*
	 Purchased electricity percentage: Percentage of the total consumption drawn from the utility grid
	Configuration
control	This tab represents the table of the tab "Current", i.e. identical data are shown; the graphic is missing here compared to the tab "Current".

* Only displayed for PV systems with battery

Regardless of the selected tab, the column **Configuration** is always shown for each load in the table.

The [*] symbol takes you directly to the **Load properties** tab (on the load overview and planning page), on which you can configure the properties of the selected load (see Section 11.1.2, page 49).

13.5.2 Selecting the Load Display

Showing and hiding loads

Using the **Legend** below the diagram, you can show and hide the loads displayed in the diagram.

Procedure:

1. To hide a load, click on the desired load.

☑ Loads that have been hidden will be displayed in gray in the legend.

- 2. You can display the load again by re-clicking on the load.
- 3. To show all loads that have been hidden, select **Show all** below the legend.

Selecting the load color

The loads are displayed in different colors in the diagrams for better visualization. The assigned color can be changed if necessary.

Procedure:

• Click on the color square next to the desired load in the list below the diagram and choose a new color from the color palette.

13.6 Display of the nominal system power

13.6.1 System yield in the annual comparison

The system yields of previous years are compared to each other in a diagram with associated table on the menu page **Annual comparison**. Thus, the system must have been in operation for more than 1 year so that data for an annual comparison can be displayed here.

Tab	Content
Total Yield	In the diagram:Yield development over the previous years
	 Average yield development over the previous years
	 Average expected yield*
	In the table:
	 Yield values (kWh/kWp) of the previous years and the current year per month as well as added up.
	Mean values per month
	 Proportion year (can only be displayed once a full year has passed)
	 Expected yield
Specific system yield	In the diagram:
	The specific system yield is a key figure for describing the quality of a system. System-specific factors such as location, tilt angle, shading, module and inverter types are taken into consideration to calculate the specific system yield. The specific system yield enables you to compare various systems at various locations.
	 Development of the specific system yield of each previous year
	 Average development of the specific system yield of the previous years
	 Average expected yield*
	In the table:
	 Specific system yield (kWh/kWp) of the previous years and the current year per month as well as added up.
	Mean values per month
	 Proportion year (can only be displayed once a full year has passed)
	Expected yield
* The expected average the orientation and the	e yield results from a manual specification that you can make based on your system's location data. Depending on ne irradiation fluctuations between the individual years, there might be considerably larger deviations in contrast to

Calculation of the expected yield

the expected average yield.

The button **Edit prediction values** takes you directly to the menu where you enter the specific annual yield and can have the expected annual yield calculated (see Section 10.4.8, page 45).

The **Predicted annual yield** of the PV system is calculated from the specific annual yield (kWh/kWp) at the PV system location and the PV system power (kWp).

You can obtain the specific annual yield for your PV system location from irradiation maps. Local conditions such as shading or the system orientation are not taken into account. You can obtain the nominal system power from your installer.

The **Monthly distribution of the expected annual yield** shows how the expected annual yield is distributed throughout the year. Given complete information about the system location, Sunny Portal can suggest a distribution. For this, click on the button [**Suggest a monthly distribution**].

You may also enter a percentage value for each month (the sum must result in 100%).

You can enter or change all data regarding your system in the **Configuration** menu on the **PV system properties** page.

13.6.2 Nominal system power analysis

13.6.2.1 Overview analysis

On the page **Analysis**, you can compare the power and yield values of individual inverters with one another or with the complete system.





Position	Explanation
A	Device Selection area
В	Tabs
С	Diagram preview* The diagram preview is divided into sections by lines. If you select a section in the diagram pre- view, the content is shown in the large diagram.

Position	Explanation
D	Large diagram Tip: If you move the mouse on to the diagram, the value from the area Details is shown next to the cursor.
E	Total yield or Spec. total yield Depending on the type of display selected in the area Device selection , the total yield or specific total yield will be displayed here.
F	Details area This area contains the power values of the displayed diagram as 15-minute mean values.
G	Logbook area This area contains messages from selected devices and associated higher-level system messages.

* Not shown on the **Total** tab

Display on the tabs

Tab	Explanation
Day	Diagram preview:
	 Preview of diagrams with the progression of the PV system yields for individual days Tip: If you move the cursor over a day in the diagram, the total yield of the PV system for this day is shown.
	Large diagram:
	• Power value curve as 15-minute mean values of the selected devices for the selected day
	 Bottom right in the diagram*: Total yield of the PV system for the selected day
Week	Diagram preview:
	 Preview of diagrams with the progression of the PV system yields for individual weeks Tip: If you move the cursor over a week in the diagram, the total yield of the PV system for this week is shown.
	Large diagram:
	• Power value curve as 15-minute mean values of selected devices for the selected week.
	 Bottom right in the diagram*: Total yield of the PV system for the selected week
Month	Diagram preview:
	 Preview of diagrams with the yield values of the PV system for each month in days Tip: If you move the cursor over a month in the diagram, the total yield of the PV system for this month is shown.
	Large diagram:
	 Yield values of selected devices for the selected month in days
	• Bottom right in the diagram*: Total yield of the PV system for the selected month

Tab	Explanation
Year	 Diagram preview: Preview of diagrams with the yield values of the PV system for each year in months Tip: If you move the cursor over a year on a diagram, the total yield of the PV system for this year is shown.
	 Large diagram: Yield values of the selected devices for the selected year in months Bottom right in the diagram*: Total yield of the PV system for the selected year
Total	 Large diagram: Yield values of selected devices for individual years Bottom right in the diagram*: Total yield of the PV system for all years together

* Only displayed if the checkbox Complete PV system is activated in Device selection

13.6.2.2 Setting the Device Selection

In the **Device selection** area, you can select whether the complete system and/or individual inverters are to be displayed in the large diagram and in the **Details** area. Moreover, you can select whether absolute or specific values are to be displayed.

Selecting devices:

- 1. To display the values of the complete system, activate the checkbox **Complete PV system** in the area **Device** selection.
- 2. To display the values of individual inverters, perform the following steps:
 - Select the area **Device selection** .
 - ☑ The area opens and the individual inverters are displayed.
 - Activate the checkboxes for the desired inverters. Tip: If you activate the checkbox **Select all devices**, the checkboxes for all inverters will be activated.

Selecting the display type:

- In the area **Device selection**, next to **Display type**, select the desired option:
 - Absolute: Shows the system yield (kWh) or the system power (kW).
 - **Specific**: Shows the specific system yield (kWh/kWp) or the specific system power.

14 Monitoring of the Sunny Home Manager system

The menu page **PV system monitoring** displays the following information depending on your system's configuration:

- Communication Monitoring
- Inverter comparison
- SMA Smart Connected

Each of these areas can be configured separately via the [Settings] button.

14.1 Overview of system monitoring

14.1.1 Communication Monitoring

Communication monitoring displays the current communication status between the Sunny Home Manager and Sunny Portal. If the Sunny Home Manager does not communicate with Sunny Portal within the set time, Sunny Portal will display an error and notify you by e-mail.

The communication monitoring status is displayed with the following symbols:

Symbol	Status	Explanation
	Disabled	Communication monitoring is not set.
P	ОК	Communication with Sunny Portal is OK. The time of last contact is displayed.
	Errors	Communication with Sunny Portal is interrupted. The Details link provides you with detailed information on the time of the last contact. The error will be displayed until it has been rectified.
K		If the error is not corrected, Sunny Portal will send another e-mail reminder each day for up to three days after the first e-mail was sent.
1 P	E-mail	Clicking the bell icon stops the sending of reminder e-mails for the current error.
43	reminder is acti- vated	If a new error occurs, the e-mail reminder will be sent again.

14.1.2 Inverter Comparison

Requirements for displaying the information:

□ The system must contain at least two inverters.

The inverter comparison enables Sunny Portal to recognize possible yield losses. If the specific yield of an inverter differs significantly from the mean yield of all the inverters, Sunny Portal can notify you by e-mail.

Symbol	Status	Explanation
	Disabled	No inverter comparison is active at present.

Symbol	Status	Explanation
	OK	The yields of the monitored inverters are within the configured range. The total yield of all inverters on the last day is displayed.
	Errors	The specific yield is outside the tolerance for at least one monitored inverter. You can access the following information via the Details link:
		 Specific yield of the affected inverters
		 Average yield value of all monitored inverters

14.1.3 SMA Smart Connected

SMA Smart Connected is a service free of charge from that offers the following:

- Automatic inverter monitoring your inverters are continuously checked for anomalies and errors.
- Automatic proactive notification in the event of a fault following fault diagnosis and analysis you will be notified immediately via e-mail.
- Automatic replacement process if the inverter has to be replaced, you will guickly receive a free replacement device.

In order to be able to participate in the Smart Connected program, you must give your approval.

14.1.4 Further PV System Monitoring Options

System logbook

This menu page **PV system logbook** shows messages regarding the system status. These messages help you to identify disturbances in your PV system, for example.

You can filter messages and confirm that you have read the messages.



i You can find the number of unconfirmed messages right in the menu view of the page system logbook after the colon of the page name.

System report

On the menu page **Report** you can have the total yield and the meter changes of your system displayed as a summary table and in a diagram:

Daily System Report

- Table with meter change of the total yield for the current day, current month and current year
- Diagram with the development of the meter reading over the individual hours of a day

Monthly System Report

- Table with meter change of the total yield for the current month and current year
- Diagram with the development of the meter reading over the individual days of a month

You can have the reports sent by e-mail from Sunny Portal.

Machine

On the menu page **Devices** the data of the individual devices are displayed on their own page in clearly arranged diagrams.

- For **PV inverters:**
 - Development of the meter reading (total yield in kWh) over the months of a year

- Development of the meter reading (total yield in kWh and power in kW) over the hours of a day
- For **Battery inverters:**
 - Current battery charging capacity over a selected period

If you require more detailed system monitoring functions and more comprehensive data storage, you have the option of activating additional functions via the SMA Online Store subject to a fee.

14.2 Configuring PV System Monitoring

14.2.1 Setting Communication Monitoring

The [**Settings**] button lets you select whether you want to monitor the communication between Sunny Portal and your system. If you would like monitoring, you can specify at what interval and how strictly this monitoring should take place.

i Sunny Portal can only display current data of the Sunny Home Manager and switch loads if the data request interval is set to **Automatic**.

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Procedure:

- 1. In the area Communication Monitoring, select [Settings].
- 2. Click the slider below **Alerts** and, holding the left mouse button pressed, set the monitoring strength according to which Sunny Portal is to notify you by e-mail.

These options can be selected: off, liberal, tolerant and sharp.

☑ The result of the selected setting (time interval: 15 minutes) is shown in the column **Time**.

- 3. Enter the e-mail address(es) of the recipient(s) in the text field **Recipient**. If you enter several e-mail addresses, separate these by commas. (Only e-mail addresses already registered in Sunny Portal are authorized.)
- 4. Activate/deactivate monitoring for devices shown.
- 5. Click on [**Save**].

Setting the data request interval for the Sunny Home Manager:

The interval for the data request can be specified in the menu **Configuration** under **Device overview > Properties > Edit** (see Section 11.3.7, page 54) The options are automatic, hourly or daily.

i The Sunny Home Manager can only request data of the devices that have **Data request activated** (see Section 11.1.4, page 50).

14.2.2 Setting the Inverter Comparison

Requirements:

□ The system must contain at least two inverters.

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Procedure:

- 1. In the area Inverter comparison, select [Settings].
- 2. Enter the e-mail address of the recipient in the text field **Recipient**. If you enter several e-mail addresses, separate these by commas.
- 3. The PV array power is preset in the text field **Generator capacity**. Sunny Portal calculates the PV array power based on the nominal power of each inverter.

You can also enter the PV array power manually or have Sunny Portal calculate it if you have entered information on the strings before (see Section 11.4.4, page 58).

- 4. In the text field **Tolerance**, enter the permissible tolerance for the inverter's specific yield. This simultaneously sets the deviation of the inverter specific yield from which e-mail notification by Sunny Portal will be triggered.
- 5. To select an inverter for the inverter comparison, activate the checkbox **Monitoring** in the line of the inverter.
- 6. Click on [Save].

14.2.3 Activating SMA Smart Connected

i SMA Smart Connected can only be used in Sunny Portal when this feature is supported by the devices connected to the Sunny Home Manager.

In general, each device can be enabled for Smart Connected, however this must be carried out for each individual device and also for each individual country separately (manually).

In order to be able to participate in the Smart Connected program, you must give your approval. For optimal use of the program, you should also provide the operator and installer data, the delivery address for any replacement that may be required, and the e-mail address of the recipient of the monitoring data.

Procedure:

1. In the menu System monitoring click on [Settings] in the field SMA Smart Connected.

☑ The device properties of the product that supports the SMA Smart Connected function opens.

- 2. Select [Edit].
- 3. In the field SMA Smart Connected place a checkmark to give approval.
- 4. Click on [Save].

Alternative procedure:

- 1. Call up the menu page **Configuration > Device overview**.
- 2. Select the device that supports the SMA Smart Connected function and call up Properties.
- 3. Select [Edit].
- 4. In the field SMA Smart Connected place a checkmark to give approval.
- 5. Click on [**Save**].

14.2.4 Filter and confirm messages in the system logbook

In the upper area of the page **PV system logbook** there are different fields to filter the messages that are listed in the following table. This filtering only allows you to call up certain messages.

You can confirm messages in order to mark them as read. This will help you to differentiate between old and new messages.

Filtering Messages:

- 1. Select **PV System Logbook** in the page and menu selection.
- 2. To filter messages, set one or more of the following filters:

Input field or drop-down list	Explanation
Go to	The date for the current day is preset. With the arrows on the left and right you can go back any number of days or proceed again.
	In the table in the column Time all messages up to and including this day are shown.

Input field or drop-down list	Explanation
Туре	The following message types are available:
	Information message
	• Warning
	Event message
	• Error
	• Other
	To display messages of a specific type, activate the appropriate checkbox(es).
	The desired messages are displayed in the column Type with the respective symbol and further explained in the column Description .
Status	In the drop-down menu you can either call up all messages or just the ones that are new or that you already read:
	 Not approved messages: new x
	 Approved messages: read -
	• all
	In the table, the status is displayed in the Confirmed column with the corresponding symbol.
System/Devices	The portal, the system and all devices of your system are listed in the drop-down list.
	 To display the messages in Sunny Portal, the Sunny Home Manager system and the devices, select All.
	 To only display messages of a specific product, select the respective product (e.g. SB4.0-1A-41).
	The selected product can be found in the column PV system/Devices in the table.

Confirming messages:

Requirement:

- □ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).
- 1. To confirm individual messages, select x in the required message line and the column **Confirmed**.
- 2. To confirm all messages check the checkbox **Confirm all** above the table.

14.2.5 Configuring Reports

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Report	Possible content
3 x daily info report 3 x monthly info re- port	 Yield (kWh) in the selected time period Maximum power (kW) in the selected time period CO₂ avoided (kg) in the selected time period Feed-in tariff in the selected time period* Diagram of the page Energy balance for the selected time period (only with PDF delivery)
3x event report	 Information Warnings Disturbances Error
1x event report for standard	 Message regarding grounding errors, residual current and the grid disconnecting device AS 5033 DIN EN 62109-2 / IEC 62109-2

You can configure different types of event reports, each with different content:

* If applicable

In addition, you can create a report for a specific date in the past.

Configuring Info Reports

Sunny Portal sends you the Daily info reports when it has processed all the data from the previous day, and the Monthly info report at the end of the month.

Requirement:

 \Box You must have entered the CO₂ avoided factor (see Section 10.4.7, page 45).

Procedure:

- 1. In the drop-down list Report Configuration, select a Daily info report or a Monthly info report.
- 2. Select [Edit].
- 3. Configure the report:

Range	Explanation
Activate report	• Activate the checkbox Active .
Recipient	• Enter the e-mail address(es) of the recipient(s) in the text field E-mail address(es) . If you enter several e-mail addresses, separate these by commas.
Content	 In the area Select channel(s), activate the content that is to be displayed in the e- mail.
	 In the area Send report as, select the format in which Sunny Portal is to send the report.
	If Sunny Portal is to send a Sunny Portal page along with the report, select a page in the drop-down list in the area Portal Page to Be Sent .
	 If Sunny Portal is not to send a Sunny Portal page along with the report, select Send no page.

- 4. To send a test report to the stated e-mail address, select [Send test report].
- 5. Click on [Save].

Configuring Event Reports

Sunny Portal sends you the event reports at the times set.

Procedure:

- 1. In the drop-down list Report configuration, select an Event report.
- 2. Select [Edit].
- 3. Configure the report:

Range	Explanation
Activate report	Activate the checkbox Active.
Recipient	• Enter the e-mail address(es) of the recipient(s) in the text field E-mail address(es) . If you enter several e-mail addresses, separate these by commas.
Interval	• To receive an e-mail with event report every hour, activate the option Hourly .
	 To receive one e-mail with event report per day, activate the option Daily and, in the drop-down list, select the time you would like to receive the e-mail.
Content	You can select up to four Sunny Portal and Sunny Home Manager system event types: Information, Warnings, Failures, Errors.
	 Activate the content that is to be displayed in the e-mail.
	 In the area Send report as select the format in which Sunny Portal is to send the report: text, HTML format or PDF.
	 In the area Limit messages in one report, use the drop-down list to select the maximum number of messages to be displayed in the e-mail.
	 If you wish to send reports even if there are no new events, activate Send empty reports if no new events are available.

- 4. To send a test report to the stated e-mail address, select [Send test report].
- 5. Click on [Save].

Manually Regenerating Reports

You can create a report for a specific date in the past.

Procedure:

- 1. Select the desired report in the drop-down list **Report configuration**.
- 2. In the field **Report date** in the area **Regenerate report manually**, enter the date for which you wish to create a report, either manually or using the calendar.
- 3. Select [Generate].

☑ A message that the report has been successfully sent is displayed.

15 Presentation of the Sunny Home Manager system

15.1 PV System Profile

Sunny Portal compiles the PV system profile from information that you can enter or have entered in different Sunny Portal pages. Thus, the system profile is extensive.

Basically, the profile shows your system's data in three fields, a system image (optional) in another field to the right of it and, if you configure or have configured this, a summary description in a text block below these fields.

The following information can be displayed in the PV system profile:

Position	Information
Field on top	LocationOperator (optional)Commissioning
Field center	 Nominal system power Annual production CO₂ avoided Nominal battery capacity (only displayed for PV systems with battery) Battery type (only displayed for PV systems with battery)
Field bottom	 Communication - Sunny Portal receives this information from the devices. Modules (optional) Inverter (optional)
Field on the right	Image of e.g. the system (optional)
Text block	System description (optional)

You can change the individual data in the system profile at any time (see Section 10.1, page 38).

You can make the system profile available for viewing to third parties and incorporate it in your own web presence.

15.2 Make PV system profile publicly available

On the menu page PV system presentation the source text is shown in the field PV system profile.

Clicking on the button [**Preview**] displays the stored PV system profile. You can incorporate this PV system profile in your web presence by copying and pasting the source text into your web presence.

Changes to your PV system profile can me made in **Configuration** under **PV system properties > PV system data**.

15.3 Releasing and publishing pages

With Sunny Portal you can present your PV system to third parties.

- You can make selected Sunny Portal pages of your PV system available for viewing on sunnyportal.com and send links on these pages by e-mail to interested persons.
- You can set a link to your Sunny Portal page on other websites.

The following Sunny Portal pages can be selected for release or for linking:

- System profile
- System overview
- Annual comparison

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

Releasing Pages for Viewing in Sunny Portal

□ You must have published at least one page.

Procedure:

- 1. In the field **Publicly available area** click on the link **Open publicly available area of this PV system** to see which pages you have released so far (usually at least the PV system profile).
- 2. Click on the button [Send the website by e-mail].
- 3. Enter the e-mail address of the recipient and (optional) a message for the recipient.
- 4. [Send e-mail].

Presenting Sunny Portal Pages on the Internet

Each of your Sunny Portal pages has its own URL. Using these URLs, you can set a link to your Sunny Portal page on other websites.

Procedure:

- 1. Select the desired page in the page and menu selection.
- 2. In the contents area, select [Configuration "Name of the page"].
- 3. To view a preview of the page, select **Open page in a new window**.
- 4. Copy the URL from the **URL of the Page** field onto the clipboard.
- 5. Copy the URL from the clipboard to a program for creating websites (e.g. Microsoft Office Frontpage) or integrate it into your own website by means of an inline frame.

15.4 Specifying the System Home Page

In the field **System home page** you can specify which Sunny Portal page is to be displayed first for your PV system upon login or after switching PV systems.

- 1. From the drop-down menu select one of the menu pages of your Sunny Home Manager system as the home page.
- 2. Click on [Save].

16 User Management

Requirements for displaying the page:

□ You must be a **System administrator**.

This page displays all users created for the Sunny Home Manager system (see Section 16.2, page 106). You can also edit previously created users and, for example, change the user roles or delete users.

16.1 User Groups and User Rights

If you have the user role **PV system administrator**, you can create further users in Sunny Portal so that they have access to your Sunny Portal system. You can assign various roles to users. The roles are differentiated by the rights they grant to users in your Sunny Portal system. The following roles are possible:

- Guest
- Standard user
- Installer
- System administrator

Rights	Role			
	Guest	Standard user	Installer	PV system administrator
Log in	1	1	✓	1
View pages	✓	✓	✓	✓
Change and delete pages	_	_	✓	✓
Release pages for viewing in Sunny Portal and publish pages	_	_	✓	✓
View live data	_	✓	✓	✓
Save diagram data	_	✓	✓	✓
View and change user informa- tion	1	1	✓	1
Changing the Sunny Portal Pass- word	_	1	✓	1
Change system password	_	-	✓	✓
View and read out device prop- erties	_	1	✓	1
Change device properties	_	-	✓	✓
View system properties	_	✓	✓	✓
Change system properties	_	-	✓	✓
View report configuration	_	✓	✓	✓
Change report configuration	_	-	✓	✓
Add and configure radio-con- trolled sockets	_	1	✓	1

Rights	Role			
	Guest	Standard user	Installer	PV system administrator
Add and configure Modbus de- vices	_	1	1	✓
Set the operating mode of switching devices via Sunny Por- tal	-	4	1	✓
Replace Sunny Home Manager	_	-	✓	✓
Delete Sunny Home Manager	_	_	✓	✓
Reassign the Sunny Home Man- ager to the system	_	-	1	✓
Delete the Sunny Home Man- ager system	_	_	_	✓
Add devices	_	-	✓	✓
Replace devices	_	_	✓	✓
Delete devices	_	-	✓	✓
Set communication monitoring	_	_	✓	✓
Set inverter comparison	-	_	✓	✓
Set the meter configuration	-	_	✓	✓
View the PV system logbook	_	✓	✓	✓
Confirm entries in the PV system logbook	_	_	1	✓
Import data	-	_	✓	✓
Read off the software package version	-	1	✓	✓
View user management	-	_	-	✓
Create and delete users and as- sign roles	_	_	-	✓

16.2 Creating a New User

Procedure:

- 1. Select **Configuration > User management** in the page and menu selection.
- 2. Select [New User].
- 3. Enter the e-mail address of the new user in the text field **E-mail address**.
- 4. Activate the desired role option in the area **Roles**.
- 5. Click on [Save].
- ${f Z}$ The new user receives an e-mail with the access data.

16.3 Deleting a User

Procedure:

- 1. Select Configuration > User management in the page and menu selection.
- 2. In the user line and the column **Delete**, select **a**.
- 3. Confirm the security prompt with [Yes].

16.4 Changing User Rights

Procedure:

- 1. Select **Configuration > User management** in the page and menu selection.
- 2. In the user line and the column **Edit**, select 🚲

☑ The areas E-mail Address and Roles open.

- 3. Activate the desired role option in the area Roles.
- 4. Click on [Save].
- ☑ The user rights are changed for the Sunny Home Manager system.

16.5 Changing User Information

Every user can enter user information. User information includes, for example, the user's name and address.

Procedure:

- 1. Select User Info/Logout > User information in the page and menu selection.
- 2. Select [Edit].

☑ The menu for setting user information opens.

- 3. Enter the user information.
- 4. Click on [Save].

17 Password Information

17.1 Requirements for a Secure System Password

Rules to increase the security of your password:

Select passwords containing at least 10 characters and a maximum of 50 characters, including

- at least a lowercase letter
- at least an uppercase letter
- at least a digit and
- at least one of the following permitted special characters: (!\"§\$%&/()=?*+'#-_:;;<> | {[]}^{23^}

17.2 Required Passwords

Sunny Portal password

If you register a PV system in Sunny Portal, you must specify a Sunny Portal password during registration which you will use to log in to Sunny Portal.

If you have registered as a new user in Sunny Portal (see Section 16.2, page 106), you will receive an e-mail with a Sunny Portal password.

You can change the Sunny Portal password (see Section 17.3, page 109).

System Password

All devices connected via Speedwire with the same password form a system. For this reason, a password used for all devices in a system is called a system password. The system-specific password protects a system's communication.

You can only access the devices in your PV system via your communication product if all devices have the same password.

You must define the system password in Sunny Portal when you register the Sunny Home Manager system. The system password that you defined upon registration of the Sunny Home Manager is the password of the user group **Installer**. You can change the system password (see Section 17.3, page 109).

Password for Edimax radio-controlled sockets

The same password must be used for all Edimax radio-controlled sockets in the system that require a password. If there are different passwords for the radio-controlled sockets, the Sunny Home Manager cannot control all radio-controlled sockets.

Make sure that the shared password is entered at the following positions:

- In the separate Edimax app for each radio-controlled socket registered there
- In the Sunny Home Manager properties (see Section 11.3.5, page 54)

FRITZ!Box password

There is no separate password for AVM FRITZ!DECT products, Communication of the Sunny Home Manager takes place indirectly via the FRITZ!Box. For this, a FRITZ!Box password is required depending on the set login (see Section 11.3.4, page 53).

Make sure that the settings for the FRITZ!Box login in the home network are the same in the FRITZ!Box and in the Sunny Home Manager.
17.3 Changing Passwords

Changing the Sunny Portal Password

Requirements:

□ You must be a Standard user, Installer or PV system administrator (see Section 16.1, page 105).

Sunny Portal password requirements:

□ The Sunny Portal password must at least consist of 10 characters and have a maximum of 50 characters. The strict rules previously stated apply (see Section 17.1, page 108).

Procedure:

- 1. Select User Info/Logout > Personal data in the page and menu selection.
- 2. On the tab Personal data, select the hyperlink If you want to change your password, please click here.
- 3. Enter the old and the new Sunny Portal passwords in the designated text fields.
- 4. Click on [Save].

Change system password

Requirement:

□ You must have the user role Installer or PV System Administrator (see Section 16.1, page 105).

System password requirements:

The system-specific system password must consist of at least 8 characters and no more than 12 characters, including

- at least a lowercase letter
- at least an uppercase letter
- at least a digit and
- at least one of the following permitted special characters: ? _ ! -

Procedure:

- 1. Call up the device properties of the Sunny Home Manager (see Section 11.3, page 52).
- 2. Select [Edit].

☑ The menu for setting the device properties opens.

- 3. Enter a new password in the **PV system password** field.
- 4. Enter the new password again in the field Repeat password.
- 5. Click on [**Save**].
- ☑ The Sunny Home Manager changes the password for all devices.

17.4 Procedure in Case of Forgotten Passwords

Sunny Portal Password Forgotten

- 1. Go to **www.sunnyportal.com**.
- 2. In the Login area, select the Forgotten password link.
- 3. Enter your e-mail address in the **E-mail** field.
- 4. Select [Generate New Password].

☑ You will receive an e-mail with a new password.

5. Change the assigned password (see Section 17.3, page 109).

System Password Forgotten

Activate each device with a personal unlocking key (PUK).

Forgotten password for Edimax Wi-Fi radio-controlled sockets

See manufacturer's manual.

Forgotten password for the Fritz!Box

See manufacturer's manual.

18 Troubleshooting

18.1 Error messages general

Problem	Causes and remedies
In my system, there were commu- nication problems due to an inter- net failure. Are all generation data lost for the time of the fail- ure?	The data is not lost. With a maximum of 24 connected devices, the Sunny Home Manager 2.0 can bridge a period of approx. 5 days without data loss in the event of an Internet connection failure. If less equipment is installed, the period is proportionally extended.
The Home Manager has switched off a load during opera- tion.	The Home Manager learns how long a load's program takes. If another device with a longer program runtime is used, the Home Manager switches off the load during operation.
	Corrective measures:
	Manually switch the load to automatic mode if the program is running for a longer period of time.
The Home Manager does not de- tect any devices.	The devices must be connected to the local router via Ethernet/Wi-Fi and also be able to communicate with the Sunny Home Manager:
	Corrective measures:
	• All Ethernet/Wi-Fi devices in your PV system must be in operation.
	 The Ethernet/Wi-Fi devices must be connected to the router/network switch correctly.
	 The network cable connecting the Ethernet devices with the router/network switch must be suitable for 100 MBit/s.
	 The Ethernet devices must be in the same local network as the Home Manager.
	• DHCP must be activated on the router.
	 The router must have an Internet connection.
	 For Ethernet devices with integrated Bluetooth interface, the NetID of 0 must be set. In this way, Bluetooth is deactivated.
	 The LAN ports on the router / network switch may not be switched off in the event of apparent inactivity (see router / network switch manual).
	 The network switch may not use IGMP snooping (see network switch manual).
Device updates are not being loaded.	Some devices can only get their update directly since the update file is too large.
	Corrective measures:
	 Check the status or event messages of the affected device. If necessary, perform a manual device update (as per the device manual).
Device parameters are not up- dated.	It is possible that the device cannot be accessed.
	Corrective measures:
	• Try to manually update the device parameters (see Section 11.1, page 48).
	The system password may be incorrect.
	Corrective measures:
	Enter the correct password.

18.2 Errors during Registration in Sunny Portal

Problem	Cause and corrective measures
The system setup assistant cannot establish a connection to the Sunny Home Manager.	It is possible that the Sunny Home Manager is not correctly connected to the router.
	or
	It is possible that the Sunny Home Manager is not connected to the voltage sup- ply. In this case, all LEDs on the Sunny Home Manager will be off.
	Corrective measures:
	 Ensure that the Sunny Home Manager is correctly connected to the router (see Section 8.3.2 "Connecting the Sunny Home Manager to the Router", page 26).
	 Ensure that the Sunny Home Manager is supplied with voltage.
	 If the Sunny Home Manager is correctly connected to the router and is supplied with voltage but all LEDs remain off, contact the Service (see Section 21, page 126).
	It is possible that the SMA device is not correctly connected to the router or is not supplied with voltage.
	Corrective measures:
	 Ensure that the SMA device is correctly connected to the router and is supplied with voltage (see SMA device documentation).
	The SMA device is already registered in Sunny Portal via Webconnect.
	Corrective measures:
	 Delete the SMA device from the Webconnect system or deactivate the data reception of the device in the Webconnect system.
	The SMA device is not located in the same local network as the Sunny Home Manager.
	Corrective measures:
	 Connect the SMA device to the same router/network switch as the Sunny Home Manager.

Problem	Cause and corrective measures
The system setup assistant cannot establish a connection to the	The network cable that connects the SMA device to the router/network switch is not suitable for 100 MBit/s.
Sunny Home Manager.	Corrective measures:
	 Use a network cable suitable for Speedwire (for network cable requirements, see the Speedwire device documentation).
	DHCP is not activated in your router.
	Corrective measures:
	Activate DHCP in the router.
	 If your router does not support DHCP, configure the static network settings on the Speedwire device using SMA Connection Assist. You can obtain the SMA Connection Assist software free of charge from the download area at www.SMA-Solar.com.
	The router/network switch used in the network deactivates the LAN ports when they appear to be inactive in order to save energy. As a result, it is not possible to establish any connection to the SMA device.
	Corrective measures:
	 Configure the router/network switch so that the LAN ports are not deactivated.
The system setup assistant lists none or not all of the new SMA devices that are connected via	The network switch used in the network uses IGMP snooping. This means that the connection to the SMA device is interrupted due to apparent inactivity, and cannot be subsequently restored.
Speedwire/Ethernet.	Corrective measures:
	 Deactivate the "IGMP snooping" function in the network switch if this is possible. Otherwise, replace the network switch.
	The firewall or IP filter may not have been configured correctly.
	Corrective measures:
	• Adjust the firewall or IP filter settings (see firewall- or router documentation).
The system setup assistant cannot	The serial number and/or the registration ID may have been entered incorrectly.
find any Sunny Home Manager with the entered identification and registration ID.	Corrective measures:
	Ensure that the entries are correct.
	It is possible that the registration procedure was previously initiated but not com- pleted.
	Corrective measures:
	• Perform a complete reset of the Sunny Home Manager (see Section 11.7.1, page 62).

Problem	Cause and corrective measures
The system setup assistant cannot find any Sunny Home Manager	It is possible that the Sunny Home Manager is not properly connected to the router.
with the entered identification	Corrective measures:
and registration ID.	 Ensure that the Sunny Home Manager is correctly connected to the router (see Section 8.3.2 "Connecting the Sunny Home Manager to the Router", page 26).
	DHCP is possibly not activated on your router or there is a proxy server in your network. For this reason, Sunny Home Manager cannot establish a connection to Sunny Portal.
	Corrective measures:
	 Establish the connection to Sunny Portal using the Sunny Home Manager Assistant (see Section 18.6.1 "Using the Sunny Home Manager Assistant in case of network problems", page 119).
	The Sunny Home Manager has already been assigned to a system in Sunny Por- tal with your e-mail address.
	Corrective measures:
	 Delete the Sunny Home Manager from the PV system (see Section 11.8, page 63).
	The Sunny Home Manager is assigned to a different system in Sunny Portal, for instance, if you have bought the Sunny Home Manager second-hand.
	Corrective measures:
	 If possible, contact the previous owners and ask them to delete the Sunny Home Manager system in Sunny Portal.
After you have entered the sys- tem password and added de-	There is a different installer password configured in the devices with warning symbols.
vices, some devices are shown	Corrective measures:
with a warning symbol in the sys- tem setup assistant.	 Select [Skip forward] in the system setup assistant and finish registration without selecting the devices.
	2. Set a uniform installer password for all devices via the inverter user interface.
	 If you do not know the password set on each device, apply for a Personal Unlocking Key (PUK) for each device from the Service (see Section 21, page 126).
	 Enable each device with the corresponding PUK. Then set a uniform installer password in all devices.
	Log in to Sunny Portal and add the devices to the Sunny Home Manager system as new devices using the configuration wizard.

Problem	Cause and corrective measures
While the system setup assistant is performing the device search, the status LED of the Sunny Home Manager first flashes red for one to two min- utes. Subsequently, the status LED glows green again.	 Device detection takes a few minutes longer. Corrective measures: No measures required.
The automatic firmware update is not working and there is a corre- sponding error message.	The Sunny Home Manager may not be able to establish a connection to the SMA Update Portal because there is a proxy server in your network. Corrective measures:

• Configure the settings of your network in such a way that the SMA Update Portal https://Update.SunnyPortal.de can be reached.

18.3 Error message on the Sunny Home Manager

LED status	Cause and corrective measures
Status LED: off	The Sunny Home Manager is not supplied with voltage.
	 Connect the Sunny Home Manager to the voltage supply (see Section 8.2, page 23).
Status LED: flashing red	The Sunny Home Manager cannot establish the connection to Sunny Portal auto- matically.
	Corrective measures:
	• Use the Sunny Home Manager Assistant (see Section 18.6.1, page 119).
Performance LED: off	The Sunny Home Manager has not been registered in Sunny Portal yet.
	Corrective measures:
	 Register the Sunny Home Manager in Sunny Portal (see Section 9.1.1, page 28).
	If the Sunny Home Manager is used as an energy meter, it does not have to be registered - and the performance LED never glows.
Performance LED: glowing red	The Sunny Home Manager cannot establish the connection to Sunny Portal auto- matically. One or several of the devices in the system is/are in a fault state. This could not be reported yet to Sunny Portal due to the connection failure.
	Corrective measures:
	• Check connection and configuration of all devices in the system.
Performance LED: flashing red	The Sunny Home Manager cannot establish the connection to Sunny Portal auto- matically.
	Corrective measures:
	 Ensure that the Sunny Home Manager is correctly connected to the router (see Section 8.3.2 "Connecting the Sunny Home Manager to the Router", page 26).
	• Use the Sunny Home Manager Assistant (see Section 18.6.1, page 119).

18.4 Problems when Configuring and Controlling Radio-Controlled Sockets

Problem	Cause and corrective measures
When configuring the radio-con- trolled sockets, the time period	The time period must be at least as long as
	 the maximum program runtime
cannot be set as desired.	or
	the sum of the minimum switch-on time and the minimum switch-off time and the sum of the device operating time and the minimum switch-off time set for the time period.
	Corrective measures:
	• When setting the time period, take into consideration the maximum program runtime or the minimum switch-on and switch-off time and the set device operating time.
You can not configure the radio-	You do not have Installer or Plant Administrator user rights.
controlled sockets in Sunny Portal	Corrective measures:
or set the operating mode of the radio-controlled sockets using Sunny Portal.	 Ask the system administrator to assign you Installer or Plant administrator user rights (see Section 16.4, page 107).
The Sunny Home Manager can- not control the Edimax smart plug	The password of the Edimax smart plug switch is unknown to the Sunny Home Manager.
switch.	Corrective measures:
	 Enter the password of the Edimax smart plug switch in the Sunny Home Manager properties (see Section 11.3.5, page 54).
The Edimax smart plug switch registered in the local network is	This is a smart plug switch by Edimax, which is not supported by the Sunny Home Manager.
not found by the	Corrective measures:
Sunny Home Manager.	 Check whether the smart plug switch by Edimax is supported by the Sunny Home Manager.
The Home Manager is not com- municating with the FritzIBox	The smart home settings in the Fritz!Box are not correct.
monicaling with the thi2.box.	Corrective measures:
	 It you selected the option Login without password for the Fritz!Box login when you set up the smart home control, in the Fritz!Box itself under the tab Login for access from the home network the option Login with keystroke must not be activated.
The Sunny Home Manager is not able to switch my AVM radio-	In the settings of the FRITZ!Box, it is specified that the radio-controlled socket can be switched via smart home devices.
controlled socket.	Corrective measures:
	 Check whether the settings in Sunny Portal match the settings for login of the FRITZ!Boz.
	 In the Fritz!Box settings, select the respective device under Home network Smart home > Smart home devices and click on the button for editing the properties. Got to Manual switching and enable the Permit manual switching by phone, app, user interface or other smart home device checkbox.

Problem	Cause and corrective measures
The Sunny Home Manager can- not establish a connection to the AVM radio-controlled sockets.	The TR-064 interface of the FRITZ!Box is disabled. Corrective measures: • The interface TR-064 must be enabled in the FRITZ!Box under network settings: Select Home network > Home network overview > Network settings in the FRITZ!Box settings. Then enable the Allow access for applications option under Home network share (see manufacturer manual).
The Sunny Home Manager switches my AVM radio-con- trolled socket even though this is not configured in Sunny Portal.	An automatic switching program is stored in the FRITZ!Box. Corrective measures: • Delete all automatic switching programs.
	 The socket has assumed a predefined state due to a restart, for example. Corrective measures: After a restart, configure the switching state of the AVM radio-controlled socket to "Last state".

18.5 Incomplete/Outdated/Faulty Data on the User Interface

Problem	Cause and corrective measures
The page Energy Balance is not displayed.	The Energy balance page is only displayed if the integrated measuring device or a separate SMA Energy Meter supplies measurement data from the grid-con- nection point.
	Corrective measures:
	• Ensure that a measuring device is installed at the grid-connection point. Assign the measuring device (integrated or separate SMA Energy Meter) to the point of interconnection in the Sunny Home Manager properties (see Section 11.3.10, page 56).
On the pages Energy balance and Load balance and con- trol , the Current tab is not dis- played.	 The tab is only displayed if the data request interval is set to Automatic. Corrective measures: Set the data request interval to Automatic (see Section 11.3.7, page 54).
The diagrams are empty or in- complete.	No energy meters or not all energy meters are connected to the Sunny Home Manager or they are not configured.
	Corrective measures:
	• Connect the energy meters to the Sunny Home Manager and configure (see Section 9.1.4, page 30).
	Sunny Portal cannot receive any data from the Sunny Home Manager.
	Corrective measures:
	• Make sure that the connection between the Sunny Home Manager and the Sunny Portal is established (see Section 8.3, page 26).

Problem	Cause and corrective measures
 Data on the following pages is not up to date: Current Status And Forecast Energy balance on the Current tab Load balance and control on the Current tab 	 Settings in the router prevent Sunny Portal from requesting current data from the Sunny Home Manager. Corrective measures: Ensure that the following requirements are fulfilled All UDP ports > 1024 on the router or modem must be open for outgoing connections. If there is a firewall installed on the router or modem, you may need to adjust the firewall rules. It must be possible for the outgoing router or modem connections to reach all Internet destinations (target IP, target port). If there is a firewall rules. On the router or modem with NAT (Network Address Translation) there must not be any port forwarding. Potential communication problems can thus be prevented. There must be no packet filtering or manipulation for SIP packets installed on the router or modem.
An exclamation mark is perma- nently displayed after parameters have been changed.	 Sunny Portal could not transfer the parameters to the Sunny Home Manager. Corrective measures: Make sure that the connection between the Sunny Home Manager and the Sunny Portal is established (see Section 8.3, page 26).
Sunny Portal is displaying unreal- istic data.	The integrated measuring device of the Sunny Home Manager or the separate SMA Energy Meter is not correctly connected or configured. Corrective measures: • Ensure that all devices are correctly connected and configured.
Sunny Portal is not showing any weather forecast in the diagram Forecast and recommended action .	 It can take up to 24 hours after the Sunny Home Manager has been initially registered in Sunny Portal until the weather forecast is displayed. Corrective measures: After 24 hours, check again to see whether the weather forecast is displayed. If after 24 hours there is still no weather forecast displayed, contact the Service team (see Section 21, page 126).
The animated graphic on the page Current status and Fore- cast is not displaying any current data.	 The reception of current data from the Sunny Home Manager is only possible if the data request interval is set to Automatic. Corrective measures: Set the data request interval to Automatic (see Section 11.3.7, page 54). It is possible that no PV generation meter is connected to the Sunny Home Manager and that too many data capture devices are simultaneously accessing the devices of your PV system. Corrective measures: Ensure that, apart from the Sunny Home Manager, a maximum of two other

Problem	Cause and corrective measures
No data is displayed on the Cur - rent tab on the page Load Bal -	Too many data capture devices may be simultaneously accessing the devices of your system.
ance and Control.	Corrective measures:
	• Ensure that, apart from the Sunny Home Manager, a maximum of two other data capture devices are accessing your system at any one time.
No data is displayed on the Cur- rent tab on the page Energy Balance .	It is possible that no PV generation meter is connected to the Sunny Home Man- ager and that too many data capture devices are simultaneously accessing the devices of your system.
	Corrective measures:
	• Ensure that, apart from the Sunny Home Manager, a maximum of two other data capture devices are accessing your system at any one time.
After a device has been replaced using the configuration wizard, the current parameters are not displayed in the parameter list.	It is possible that the new parameters have not yet been transferred to Sunny Por- tal.
	Corrective measures:
	Call up the parameter list again later.

18.6 Network problems

18.6.1 Using the Sunny Home Manager Assistant in case of network problems

The Sunny Home Manager Assistant only has to be used in exceptional cases. The Sunny Home Manager Assistant will help you configure the Sunny Home Manager for your network if the Sunny Home Manager does not automatically connect to Sunny Portal.

In addition, you can use the Sunny Home Manager Assistant to display the latest connection status to Sunny Portal and the network settings and the connected BLUETOOTH devices, and save these as a log file. If servicing should be necessary, the Service can use this log file to analyze the problem.

The following operating systems are supported by the Home Manager Assistant (firewall shares may need to be confirmed when using for the first time):

- Microsoft Windows from version Vista
- Linux from Kernel 2.6.12 with Java Runtime Environment version 6
- Apple macOS from version 1.6, with Java Runtime Environment from version 6

Procedure:

- 1. Use a network cable to connect the computer to the same router to which the Sunny Home Manager is also connected.
- 2. In the download area at www.SMA-Solar.com, download the Sunny Home Manager Assistant for the operating system of your computer.
- 3. Start the Sunny Home Manager Assistant by double-clicking on the file name.
- 4. Follow the Sunny Home Manager Assistant instructions.

18.6.2 Error in the Sunny Home Manager Assistant

Problem	Cause and corrective measures
The Sunny Home Manager Assis- tant does not detect a Sunny Home Manager.	The computer with the Sunny Home Manager Assistant is not connected to the router to which the Sunny Home Manager is connected. Corrective measures:
	• Connect the computer with the Sunny Home Manager Assistant to the router to which the Sunny Home Manager is connected.

18.7 Messages concerning Active Power Limitation in the System Logbook

Problem	Cause and corrective measures	
Message in the system logbook: Supplied power has ex- ceeded the permitted value several times.	Although the function Limitation of active power feed-in is activated, more than the maximum permitted active power has been fed into the utility grid. Corrective measures: • Ensure that the feed-in meter is configured correctly (see Section 9.1.4,	
	page 30).For the inverter ensure that the parameter Operating mode active power	
	is set to External setpoint or for devices with web UI.	
Message in the system logbook: Act. power limitation deacti- vated due to incorr. configu-	The function Limiting of the active power feed-in was deactivated by Sunny Home Manager because the system configuration in Sunny Portal was faulty.	
ration.	Corrective measures:	
	 This message can appear while making changes to the Sunny Home Manager system, e.g. upon device replacement. In this case, no action is needed. 	
	 If the message appears over an extended time period, contact the Service (see Section 21, page 126). 	
Message in the system logbook: Event: act. power limitation acti-	The function Limiting of the active power feed-in is faulty because there is no data from the feed-in meter. Risk of yield loss because the self-consumption of the household cannot be taken into account.	
vated w/o regard to own	Corrective measures:	
concompriori	• Ensure that the feed-in meter is working and correctly connected.	
Message in the system logbook:	At least one inverter is not responding to limit the active power feed-in.	
Inverter does not respond to active power limitation	In this case, the Sunny Home Manager initiates stronger active power limitation in the remaining inverters. Consequently, the maximum permitted active power feed-in is complied with.	
	If the message Fed-in power has repeatedly exceeded the permitted value appears on the same day, an error is present.	
	Corrective measures:	
	• For the inverter ensure that the parameter Operating mode active power is set to External setpoint or for devices with web UI.	

18.8 Devices with Communication via Data Exchange Protocol

Devices having a specific interface for data exchange, e.g. SEMP or EEBus, can communicate directly with the Sunny Home Manager via a so-called EM (Energy Management) gateway.

Problem	Cause and corrective measures
Message in the system logbook: EM gateway not found: XXXX, name:*	The gateway is not connected to the local network. Corrective measures: • Check whether all network cable plugs are inserted and locked.
	 The voltage supply of the gateway is faulty. Corrective measures: Check whether the power plug of the gateway is plugged into the outlet.
	The gateway could not be found by the Sunny Home Manager. Corrective measures: • Restart the gateway (see manual of the gateway).
Message in the system logbook: EM gateway not found: XXXX, name:*	 The Sunny Home Manager and the gateway are located in different local networks. Corrective measures: Connect the gateway and the Sunny Home Manager to the same network switch/router.
	 The Sunny Home Manager and the gateway are configured for different IP subnets. Corrective measures: If your router supports DHCP, configure the Sunny Home Manager (default setting) and the gateway to DHCP (see manual of the gateway). If your router does not support DHCP, manually assign IP addresses in the same subnet for the Sunny Home Manager and the gateway (see manual of the respective device).
	 The voltage supply of the device is faulty. Corrective measures: Check whether the power plug of the device is plugged into the outlet.

Problem	Cause and corrective measures
Message in the system logbook: EM gateway not found: XXXX, name:*	 The device is not connected to its gateway. Corrective measures: Check whether the communication between the device and the gateway is working. The device might be outside the range of its gateway (e.g. with power-line communication).
	The device could not be found by the Sunny Home Manager.
	Corrective measures:
	 Restart the device (see manual of the device).
	One or more devices are not correctly configured in the gateway or for the smart grid.
	Corrective measures:
	 Configure the device for its gateway (see manual of the gateway).
	 Configure the device for the smart grid (see manual of the respective device).
Message in the system logbook:	The gateway is not connected to the local network.
Communication with the EM	Corrective measures:
gateway disturbed: XXXX,	 Check whether all network cable plugs are inserted and locked.
nume.	The gateway is not communicating correctly with the Sunny Home Manager. Corrective measures:
	 Restart the gateway (see manual of the gateway).
Message in the system logbook:	The device is not communicating correctly with its gateway.
Communication with the EM	Corrective measures:
gateway disturbed: XXXX, name:*	 Check whether the communication between the device and the gateway is working. The device might be outside the range of its gateway (e.g. with power-line communication).
	 Restart the gateway (see manual of the gateway).
	 Restart the device (see manual of the device).
Message in the system logbook:	The supported firmware version is not installed on the gateway.
EM gateway has incompati-	Corrective measures:
ble firmware: XXXX, name:*	 Update the gateway to the supported firmware version (see manual of the gateway).
Message in the system logbook:	A software error has occurred on the Sunny Home Manager.
EM communication:	Corrective measures:
An internal error has oc- curred (error number: YYYY**)	 Reset the Sunny Home Manager (see Section 11.7.1, page 62)

 $^{\star}\,$ "XXXX" is a placeholder for the used data exchange protocol SEMP or EEBus).

** "YYYY" is a placeholder for the respective 4-digit error number.

19 Decommissioning

19.1 Decommissioning the Sunny Home Manager

QUALIFIED PERSON

Procedure:

- Disconnecting the Sunny Home Manager from the voltage supply
- Removing the cables and dismounting the Sunny Home Manager

Disconnecting the Sunny Home Manager from the voltage supply

A DANGER

Danger to life due to electric shock

Lethal voltages are present at the connection point of the utility grid.

• Disconnect the connection point from the utility grid via the disconnection device (e.g. in the distribution board).

Removing the cables and dismounting the Sunny Home Manager

- 1. Unplug the network cable from the network terminal of the Sunny Home Manager.
- 2. Unplug the other end of the network cable from the router.
- 3. Remove the Sunny Home Manager from the top-hat rail:
 - Press the top-hat rail locking mechanism located underneath the Sunny Home Manager downwards using a screwdriver. Tilt the lower edge of the Sunny Home Manager forwards and remove upwards from the top-hat rail.



19.2 Packing the Product for Shipment

• Pack the product for shipping. Use the original packaging or packaging that is suitable for the weight and size of the product.

19.3 Disposing of the Product

• Dispose of the product in accordance with the locally applicable disposal regulations for electronic waste.

20 Technical Data

Energy Manager

Connection to the local router	via Ethernet cable (10/100 Mbit/s, RJ45 plug)			
Connection of SMA PV inverters and battery systems	Ethernet or WLAN via local router			
Connection of loads in the energy management (for ex-	 x- 1. Direct data connection (EEBUS, SEMP) e.g. intelligent heat pumps, electric car charging stations, heating elements, home appliances, etc. 			
amples of applications for appliance connection and controls, see technical information on the				
Solar.com)	 2. Indirect data connection via radio-controlled socket/ relay 			
	 e.g. switching of hom power 	e appliances of up to 12 A of		
Integrated measuring device				
Measurement accuracy	Energy Manager	Voltage: ±0.5%		
Accuracy class according to IEC 61557-12		Current: ±0.5%		
based on measured value		Voltage: ±0.5%		
		Active power: ±1.0%		
		Reactive power: ±1.0%		
		Power factor: ±1.0%		
Based on IEC 62053-22 or -23 (typical)		Active Energy: class 1 Reactive energy: class 1		
When using external current transformers, the respective measuring accuracy must be taken into account				
Measuring cycle	200 ms, 600 ms or 1000 ms			
Standard application	Measurement of purchased electricity and grid feed- the grid connection point			
Alternative application	1. Measurement of PV generation power			
	2. Measurement inactive (L1, N, network)			
Max. number of devices on the system (excludir	ng the SMA Energy Met	ter)		
Total number of devices in the system	nt	o to 24		
 of which devices as loads in active energy management 	up to 12			
Inputs (voltage and current)				
Nominal voltage	110 V / 230 V / 400 V			
Frequency	50 Hz ± 59	% / 60 Hz ± 5%		
Nominal current/limiting current per line conductor	5 A/63 A (>63 A can be covered via external current transformers)			

Connection cross-section	10 mm ² to 16 mm ² (for 63 A application)
Torque for screw terminals	2.0 Nm
Ambient Conditions in Operation	
Ambient temperature	-25°C to +40°C
Storage temperature range	-25°C to +70°C
Protection class (as per IEC 62103)	II
Degree of protection (to IEC 60529)	IP20
Maximum permissible value for the relative humidity (non-condensing)	5% to 90%
Altitude above MSL	0 m to 2,000 m
General Data	
Width x height x depth	70 mm x 88 mm x 65 mm
Individual units DIN rail	4
Weight	0.3 kg
Mounting location	Switch or meter cabinet
Mounting type	Top-hat rail mounting
Status display	3 x LED
Self-consumption	< 3 W
Equipment	
Operation and visualization	via Sunny Portal, Sunny Places, Sunny Portal Pro
Update function	Automatic for the Sunny Home Manager and the connected SMA devices
Warranty	2 years
Certificates and approvals	www.SMA-Solar.com
Accessories	
SMA Energy Meter as complement to integrated Measuring devices	Precise three-phase measuring, connection via Ethernet in the local network.
Model number	HM-20

21 Contact

If you have technical problems with our products, please contact the SMA Service Line. The following data is required in order to provide you with the necessary assistance:

- Serial number and software package of the Sunny Home Manager
- Name of the Sunny Home Manager system
- Type of energy meters
- Manufacturer, serial number and firmware version of the switching devices (radio-controlled socket/relay, Modbus device)

Deutschland	SMA Solar Technology AG	Belgien	SMA Benelux BVBA/SPRL
Österreich	Niestetal	Belgique	Mechelen
Schweiz	Sunny Boy, Sunny Mini Central, Sunny Tripower, Sunny Highpower:	België Luxemburg	+32 15 286 730
			for Netherlands: +31 30 2492 000
	+44 JOI 9JZZ-1444	Luxembourg	SMA Online Service Center:
	+49 561 9522-2499	Nederland	www.5/viA-3ervice.com
	Hybrid Controller:	Česko	SMA Service Partner TERMS a.s
	+49 561 9522-3199	Magyarország	+420 387 6 85 111
	Sunny Island, Sunny Boy Storage, Sunny Backup:	Slovensko	SMA Online Service Center: www.SMA-Service.com
	+49 561 9522-399	Türkiye	SMA Service Partner DEKOM
	Sunny Central, Sunny Central Storage: +49 561 9522-299		Telekomünikasyon A. Ş +90 24 22430605
	SMA Online Service Center: www.SMA-Service.com		SMA Online Service Center: www.SMA-Service.com
France	SMA France S.A.S.	Ελλάδα	SMA Service Partner AKTOR FM.
	Lyon +33 472 22 97 00	Κύπρος	Αθήνα +30 210 8184550
	SMA Online Service Center: www.SMA-Service.com		SMA Online Service Center: www.SMA-Service.com
España	SMA Ibérica Tecnología Solar, S.L.U.	United Kingdom	SMA Solar UK Ltd.
Portugal	Barcelona +34 935 63 50 99		Milton Keynes +44 1908 304899
	SMA Online Service Center: www.SMA-Service.com		SMA Online Service Center: www.SMA-Service.com
Italia	SMA Italia S.r.l.	Australia	SMA Australia Pty Ltd.
	Milano		Sydney
	+39 02 8934-7299		Toll free for Australia:
	SMA Online Service Center:		1800 SMA AUS
	www.SIVIA-Service.com		(1800 762 287)
			International: +61 2 9491 4200

SMA Solar Technology AG

United Arab Emirates	SMA Middle Fast IIC	India	SMA Solar India Put Itd
	Aby Dhahi	India	Mumbai
	+971 2234 6177		+91 22 61713888
	SMA Online Service Center: www.SMA-Service.com		
ไทย	Service Partner for String inverter:	대한민국	Enerone Technology Co., Ltd
	Solar Power Engineering Co., Ltd.		4th Fl, Jungbu Bldg, 329,
	333/7,8,9 United Tower Building 4th		Yeongdong-daero, Gangnam-gu,
	Soi Sukhumvit 55 (Thonglor 17), Klong-		Seoul, 06188, Korea +82-2-520-2666
	ton Nua, Wattana, 10110 Bangkok, Thailand +66 20598220	Argentina Brasil Chile	SMA South America SPA
			Santiago de Chile +562 2820 2101
	smaservice@spe.co.th		
	Service Partner for Utility:	Perú	
	Tirathai E & S Co., Ltd	South Africa	SMA Solar Technology South Africa Pty Ltd. Cape Town
	516/1 Moo 4, Bangpoo Industrial Es- tate Sukhumvit Road, T. Praksa, A. Muang 10280 Samutprakarn, Thailand +63 1799866 servicepartner.sma@tirathai.co.th		
			(08600 78669)
			International: +27 (0)21 826 0699
			SMA Online Service Center: www.SMA-Service.com
Other coun- tries	International SMA Service Line		
	Niestetal		
	00800 SMA SERVICE		
	(00800 762 7378423)		
	SMA Online Service Center: www.SMA-Service.com		

