

# GUESS

WARRANTY / INSTRUCTION BOOKLET

**GUESS**

■ **WOMENS**

 
# Operating Instructions

To find the instructions that apply to your watch, simply match your watch to the diagrams on the following pages.

## ■ Simple Time/Mini Sweep

### To set the time:

1. PULL out crown to B position.
  2. TURN crown either way to correct time.
  3. Push in crown to A position.
- Note: Mini sweep subdial measures seconds.

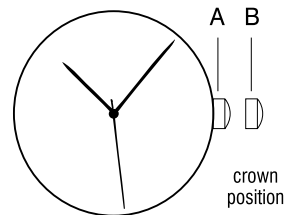


## ■ Date/Day & Date

### To set the time:

1. PULL out Crown to C position.
2. TURN Crown either way to correct time.
3. PUSH in Crown to A position.

### To set the calendar / date:

 1. PULL out Crown to B position.
2. TURN Crown away from you to correct date.
3. TURN Crown towards you to correct the day.
4. PUSH in crown to A position.

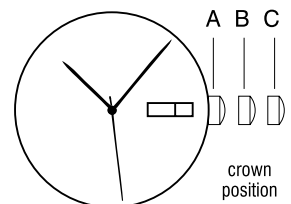

**NOTE:** The date changes automatically every 24 hours. On "Day & Date" watches, the days of the week are in English + French. Once set in English, the consecutive days will continue to be in English.

## ■ Day/Date/24 Hour

### To set time:

1. PULL out crown to “B” position.
2. TURN crown either way to correct time.
3. PUSH in crown to “A” position

### To set date:

**DO NOT reset Date between 9:00 p.m. & 4:00 a.m.**

 
**This may result in damaging the inner workings of the watch.**

Note: the date changes automatically every 24 hours


1. Push Pusher “B” to correct date.

### To set day:

1. Push Pusher “A” to correct day.

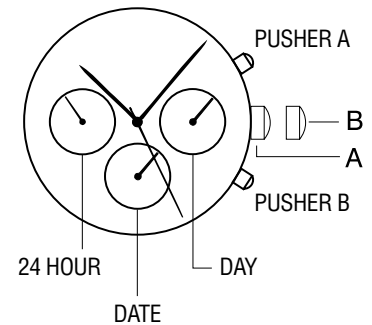

## ■ Day/Date/24 Hour

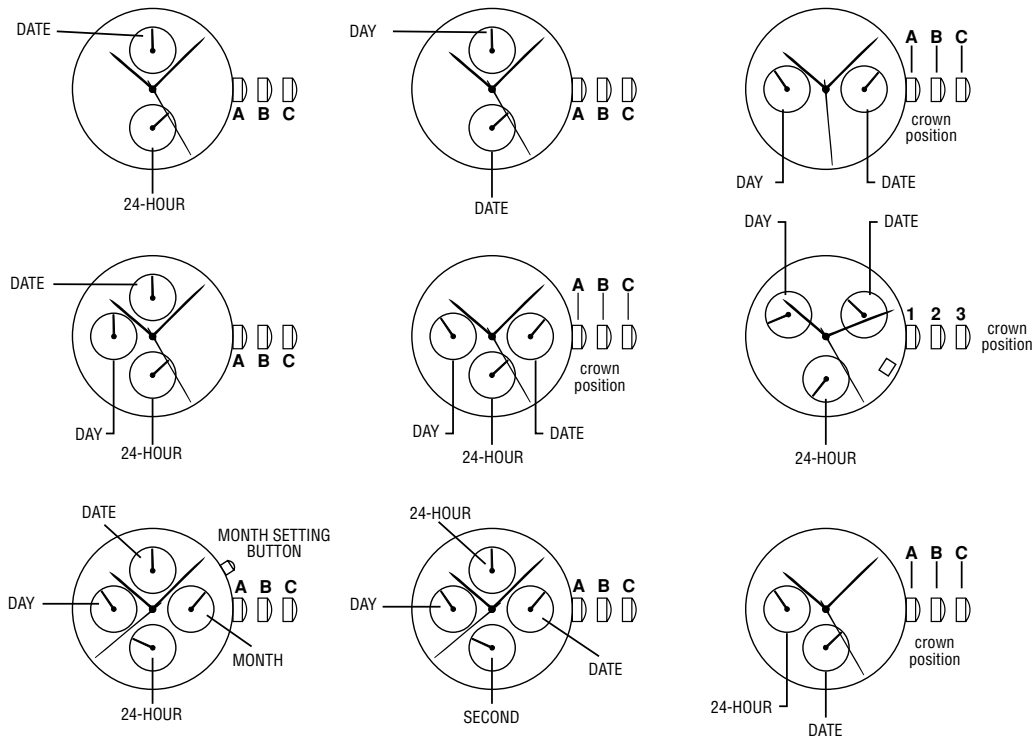 

### To set time:

1. PULL out crown to C position.
2. TURN crown either way to correct time.
3. PUSH in crown to A position.

### To set day:

1. PULL out crown to C position.
2. Advance time 24 hours to change the day.
3. PUSH in crown to A position.

NOTE: 24 hour indicator can change only when setting the time.

### To set date:

NOTE the date changes automatically every 24 hours.

1. PULL out crown to B position.
2. TURN crown clockwise to correct date.
3. PUSH in crown to A position.

### To set month:

Push month setting button until the small hand of month is set to the correct month.

## ■ 6,12 Two-Eye Chronograph With Date

Crown position “A” , “B” & “C”.  
 Pushers “A” (top) & “B” (bottom).  
 12 o'clock eye “1 minute up to maximum 60 minute”.  
 6 o'clock eye “second”.

**This chronograph watch has 3 functions:**  
 TIME, CALENDAR, STOPWATCH.

### TIME

To set the time:

1. PULL crown to “C” position.
2. TURN crown either way to correct time.
3. PUSH crown in to “A” position, small second hand begins to run.

### CALENDAR

To set the calendar:

1. PULL out crown to “B” position.
2. TURN crown clockwise to correct date.
3. PUSH in crown to “A” position.

NOTE: The date changes automatically every 24 hours.

### STOPWATCH

The stopwatch is capable of measuring:

1/1 second elapsed up to maximum of 60 minute (top eye).

BEFORE USING THE STOP WATCH, reset the stopwatch hands to the “60” and “0” positions.

### To reset stopwatch hands:

 
1. PULL crown to position “C”.
2. PRESS pusher “A” intermittently until the chronograph second hand is reset to “0”.

### Standard stopwatch measurement:

1. PRESS pusher “A” to start timing.
2. PRESS pusher “A” to stop timing.
3. PRESS pusher “B” to reset.

### Accumulated elapsed time measurement:

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS pusher “A” to restart timing.
4. PRESS Pusher “A” to stop 2nd timing.
5. PRESS Pusher “B” to reset.

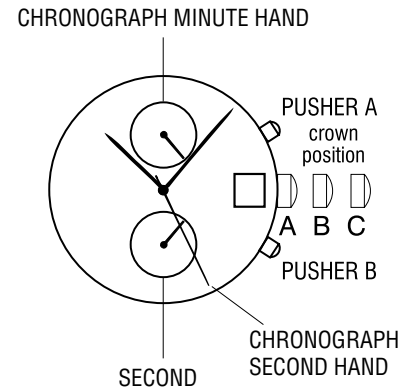

## ■ Ana-Digit

### FEATURES

Hour, Minute, Second  
Month, Date  
Back Light (EL)

### NORMAL TIME MODE

1. PRESS S1 once to view Month & Date
2. PRESS S1 twice to view Second
3. PRESS S2 once, ""Time"" & ""Date"" mode will be displayed alternatively  
PRESS S1 twice, back to Time mode"
4. PRESS EL to light-up display

### SETTING SEQUENCE

1. PRESS S2 twice to set "Month"; Press S1 to advance
2. PRESS S2 once to set "Date"; Press S1 to advance
3. PRESS S2 once to set "Hour"; Press S1 to advance
4. PRESS S2 once to set "Minute"; Press S1 to advance
5. PRESS S2 once when setting is complete. Normal time will be displayed  
(Press S1 if time mode does not flash).



## ■ Digital

### Features:

Hour, minute, seconds, month & date.

### Setting Sequence:

1. PRESS "B" to get to Normal Time mode.
2. Set Month: PRESS "B" to "Month". PRESS "A" to advance.
3. Set Date: PRESS "B" to "Date". PRESS "A" to advance.
4. Set Hour: PRESS "B" to "Hour". PRESS "A" to advance.  
("A"=A.M., "P"=P.M., "H"=24 hour format)
5. Set Minute: PRESS "B" to "Minute". PRESS "A" to advance.
6. When hour & minutes are set, PRESS "A" to confirm.
7. Return to Normal Time: PRESS "B".

To view month & date from Normal Time mode, PRESS "A".





# GUESS

■ MENS

 
# Operating Instructions

To find the instructions that apply to your watch, simply match your watch to the diagrams on the following pages.

## ■ Simple Time/Mini Sweep

### To set the time:

1. PULL out crown to B position.
  2. TURN crown either way to correct time.
  3. Push in crown to A position.
- Note: Mini sweep subdial measures seconds.

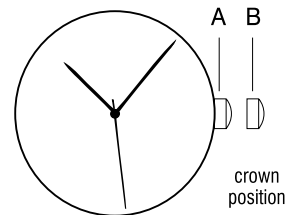


## ■ Date/Day & Date

### To set the time:

1. PULL out Crown to C position.
2. TURN Crown either way to correct time.
3. PUSH in Crown to A position.

### To set the calendar / date:

 1. PULL out Crown to B position.
2. TURN Crown away from you to correct date.
3. TURN Crown towards you to correct the day.
4. PUSH in crown to A position.

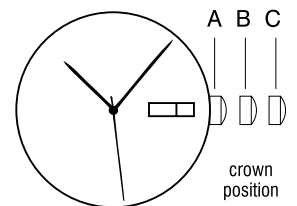

**NOTE:** The date changes automatically every 24 hours. On "Day & Date" watches, the days of the week are in English + French. Once set in English, the consecutive days will continue to be in English.

## ■ Day + Date

### To set time:

 
1. PULL out crown to C position.
2. TURN crown either way to correct time.
3. PUSH in crown to A position.

### To set date:

1. PULL out crown to B position.
2. TURN crown towards you to correct date.
3. PUSH in crown to A position.

### To set day:

1. PULL out crown to B position.
2. TURN crown away from you to change the day.
3. PUSH in crown to A position.

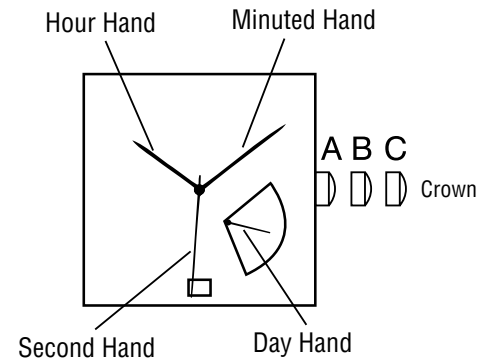

## ■ Day/Date/A.M./P.M./Sun/Moon

### To set the time:

1. PULL out Crown to C position.
2. TURN Crown clockwise to correct time. Day / am / pm / moon will also change.
3. PUSH in Crown to A position.

 
NOTE: Remember to set time for am or pm (sun or moon)

### To set the date:


1. PULL out Crown to B position.
2. TURN Crown clockwise to correct date.
3. PUSH in crown to A position.

### To set the day:

1. PULL out Crown to C position.
2. Advance time 24 hours to change the day.
3. PUSH in Crown to A position.

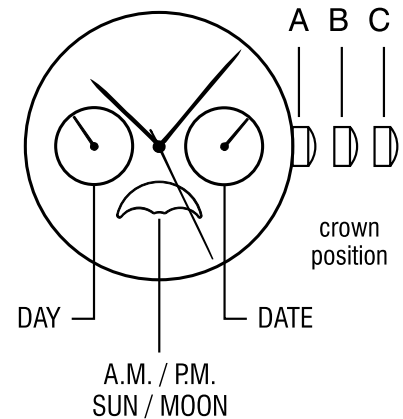

## ■ Day/Date/24 Hour

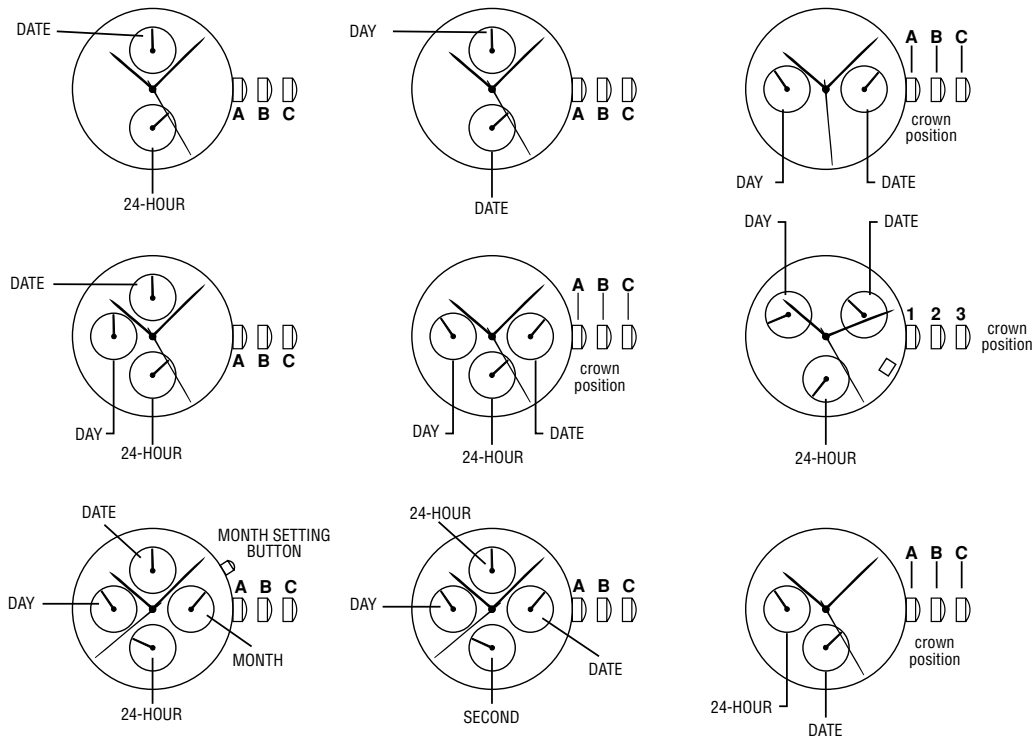 

### To set time:

1. PULL out crown to C position.
2. TURN crown either way to correct time.
3. PUSH in crown to A position.

### To set day:

1. PULL out crown to C position.
2. Advance time 24 hours to change the day.
3. PUSH in crown to A position.

NOTE: 24 hour indicator can change only when setting the time.

### To set date:

NOTE the date changes automatically every 24 hours.

1. PULL out crown to B position.
2. TURN crown clockwise to correct date.
3. PUSH in crown to A position.

### To set month:

Push month setting button until the small hand of month is set to the correct month.

## ■ Date/24 Hour

### To set the time:

 
1. PULL out Crown to C position.
2. TURN Crown either way to correct time.
3. PUSH in Crown to A position.

### To set the 24 hour indicator:

1. PULL out Crown to B position.
2. TURN Crown counter-clockwise to correct time.
3. PUSH in Crown to A position.

### To set the date:

1. PULL out Crown to B position.
2. TURN Crown clockwise to correct date.
3. PUSH in Crown to A position.

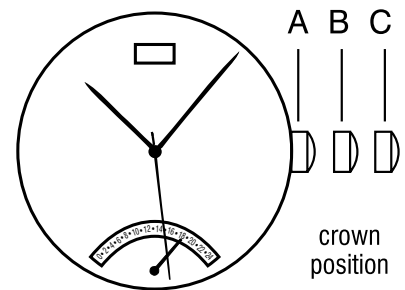

## ■ Day/Date/24 Hour

### To set the time:

1. PULL out Crown to C position.
2. TURN Crown clockwise/counter-clockwise to correct time.
3. PUSH in Crown to A position.

 
 
### To set the date:

1. PULL out Crown to B position.
2. TURN Crown counter-clockwise to correct date.
3. PUSH in Crown to A position.

### To set the day:

1. PULL out Crown to C position.
2. Advance time 24 hours to change the day.
3. PUSH in Crown to A position.

Note: 24 Hour indicator changes automatically when time is adjusted.

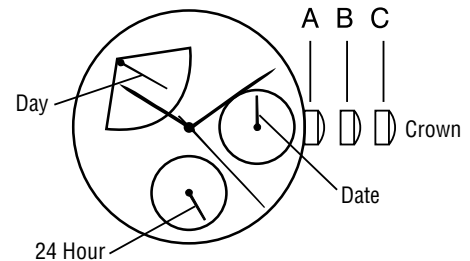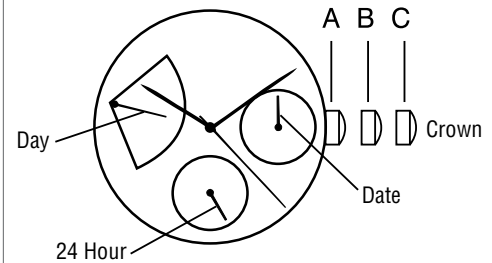

## ■ 6,12 Two-Eye Chronograph With Date

Crown position “A” , “B” & “C”.  
 Pushers “A” (top) & “B” (bottom).  
 12 o'clock eye “1 minute up to maximum 60 minute”.  
 6 o'clock eye “second”.

### **This chronograph watch has 3 functions:**

TIME, CALENDAR, STOPWATCH.

#### **TIME**

To set the time:

1. PULL crown to “C” position.
2. TURN crown either way to correct time.
3. PUSH crown in to “A” position, small second hand begins to run.

#### **CALENDAR**

To set the calendar:

1. PULL out crown to “B” position.
2. TURN crown clockwise to correct date.
3. PUSH in crown to “A” position.

NOTE: The date changes automatically every 24 hours.

#### **STOPWATCH**

The stopwatch is capable of measuring:

1/1 second elapsed up to maximum of 60 minute (top eye).

BEFORE USING THE STOP WATCH, reset the stopwatch hands to the “60” and “0” positions.

#### **To reset stopwatch hands:**

 
1. PULL crown to position “C”.
2. PRESS pusher “A” intermittently until the chronograph second hand is reset to “0”.

#### **Standard stopwatch measurement:**

1. PRESS pusher “A” to start timing.
2. PRESS pusher “A” to stop timing.
3. PRESS pusher “B” to reset.

#### **Accumulated elapsed time measurement:**

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS pusher “A” to restart timing.
4. PRESS Pusher “A” to stop 2nd timing.
5. PRESS Pusher “B” to reset.

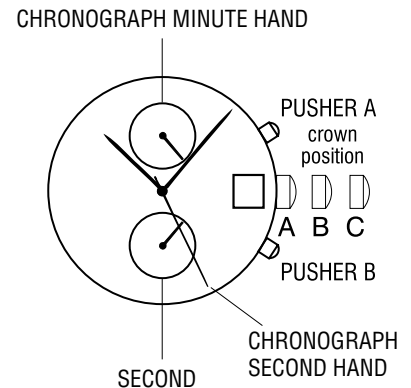



## ■ 6,9,12 Three-Eye Chronograph With & Without Date

Crown position “A”, “B” & “C”.  
 Pushers “A” (top) & “B” (bottom)  
 12 o'clock eye “1/10 seconds elapsed”  
 9 o'clock eye “minutes elapsed”  
 6 o'clock eye “seconds elapsed”

**This chronograph watch has 3 functions:**  
 TIME, CALENDAR, STOPWATCH

### TIME

#### To set the time:

1. PULL Crown to “C” position.
2. TURN Crown either way to correct time.
3. PUSH Crown into “A” position.

### CALENDAR

#### To set the calendar:

 
 
1. PULL out Crown to “B” position.
2. TURN Crown clockwise to correct date.
3. PUSH in Crown to “A” position.

NOTE: The date changes automatically every 24 hours.

### STOPWATCH

The stopwatch is capable of measuring:  
 1/10 seconds elapsed up to one second (top eye).  
 Minutes elapsed up to one hour (middle eye).  
 Seconds elapsed up to one minute (bottom eye)

BEFORE USING THE STOP WATCH, reset the stopwatch hands to the “60” and “0” positions.

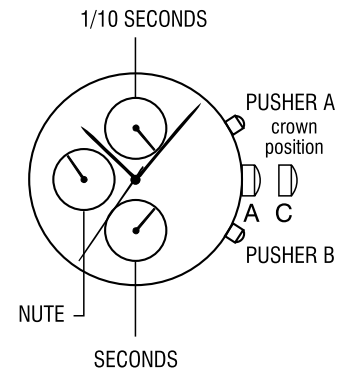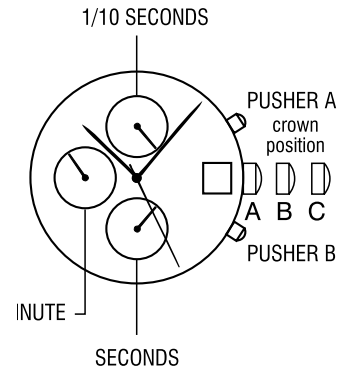

## ■ 6,9,12 Three-Eye Chronograph With & Without Date

Continued....

### To reset stopwatch hands:

1. PULL Crown to position "C".
2. PRESS Pusher "A" intermittently until the top eye hand is reset to "0".
3. PRESS Pusher "B" intermittently until the middle and top eye hands is reset to "60".

NOTE: PRESSING and HOLDING either Pusher "A" or "B" will cause the hands to continue to move until the pusher is released.

### If the stopwatch hands move improperly:

1. PULL out the Crown to "B" position.
2. PRESS Pushers "A" & "B" simultaneously for 3 seconds.
3. RELEASE Pushers, stopwatch hands will move 180 degrees.
4. PUSH Crown in to "A" position.

### Standard stopwatch measurement:

 
 
1. PRESS Pusher "A" to start timing.
2. PRESS Pusher "A" to stop timing.
3. PRESS Pusher "B" to reset.

### Timing 2 competitors:

1. PRESS Pusher "A" to start timing.
2. PRESS Pusher "B" to stop timing.
3. PRESS Pusher "A" to stop timing of second event.
4. PRESS Pusher "B" to view time of second event.
5. PRESS Pusher "B" to reset.

### Split time:

1. PRESS Pusher "A" to start timing.
2. PRESS Pusher "B" to stop split.
3. PRESS Pusher "B" to begin again.
4. PRESS Pusher "A" to stop.
5. PRESS Pusher "B" to reset.

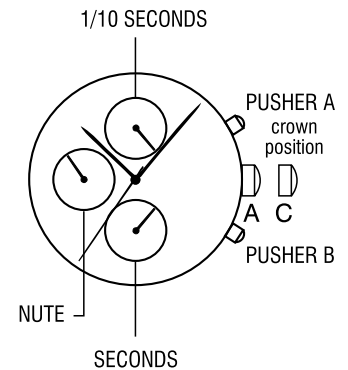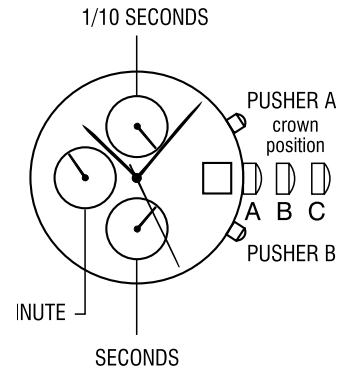



## ■ 6,9,12 Three-Eye 1/20 Second Chronograph With Date

Crown position “A”, “B” & “C”.  
Pushers “A” (top) & “B”  
(bottom).  
6 o’clock eye “hour & minutes  
elapsed”.  
9 o’clock eye “second”.  
12 o’clock eye “1/20 seconds  
elapsed”.

### **This chronograph watch has 3 functions:**

TIME, STOPWATCH, CALENDAR.

#### **TIME**

##### **To set the time:**

1. PULL Crown to “C” position.
2. TURN Crown either way to correct time.
3. PUSH Crown in to “A” position.

#### **CALENDAR**

##### **To set the calendar:**

1. PULL out Crown to “B” position.
2. TURN Crown clockwise to correct date.
3. PUSH in Crown to “A” position.

 
NOTE: The date changes automatically every 24 hours.

Do not set the date between 9:00 PM and 1:00 AM.

#### **STOPWATCH**

##### **The stopwatch is capable of measuring:**

Hour & Minutes elapsed up to 12 hours (bottom eye).  
1/20 Seconds elapsed up to 12 hours (top eye).  
Seconds elapsed up to 12 hours.

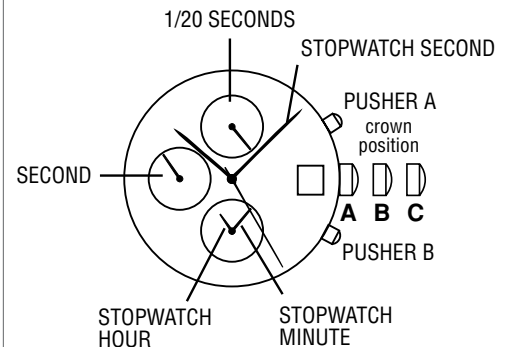

## ■ 6,9,12 Three-Eye 1/20 Second Chronograph With Date

Continued....

BEFORE USING THE STOP WATCH  
“60” and “12 o'clock” positions.

### To reset stopwatch hands:

1. PULL Crown to position “C”.
2. PRESS Pusher “A” for 2 seconds and second hand is reset to “0”.

### Standard stopwatch measurement:

1. PRESS Pusher “A” to start timing
2. PRESS Pusher “A” to stop timing.
3. PRESS Pusher “B” to reset.

### Split time:

 
1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “B” to stop split.
3. PRESS Pusher “B” to begin again.
4. PRESS Pusher “A” to stop.
5. PRESS Pusher “B” to reset.

### Accumulated elapsed time measurement:

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS Pusher “A” to restart timing.
4. PRESS Pusher “A” to stop 2nd timing.
5. PRESS Pusher “B” to reset.

### Timing 2 competitors:

1. PRESS pusher “A” to start timing.
2. PRESS pusher “B” to stop timing of first event. Stopwatch continues to run internally.
3. PRESS pusher “A” to stop timing of second event.
4. PRESS pusher “B” to view time of second event.
5. PRESS pusher “B” to reset.

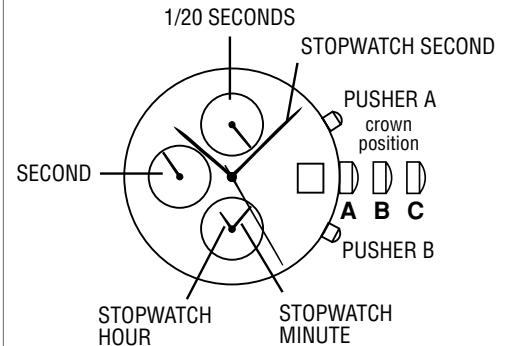

## ■ 2, 6, 10 Three-Eye Chronograph With Or Without Date Window

NOTE: Crown position “1”, “2” & “3”

NOTE: Pushers “A” (top) & “B” (bottom)

NOTE: Left eye “minute totalizer”

NOTE: Right eye “small second”

NOTE: Centre eye “date indicator”

**This chronograph watch has 3 functions:**  
TIME, CALENDAR, STOPWATCH

### TIME

#### To set the time:

1. PULL Crown to position “3” .
2. TURN Crown either way to correct time.
3. PUSH Crown to position “1” .

### CALENDAR

#### To set the calendar:

1. PULL Crown to position “2” .
2. TURN Crown clockwise to correct the date.
3. PUSH in Crown to position “1” .

### STOPWATCH

 
 
#### The stopwatch is capable of measuring:

1. Minutes elapsed up to 30 minutes (left eye).
2. Chronograph hand 1/5 second

BEFORE USING THE STOPWATCH, reset the stopwatch hands to the “60” position by mean of pusher “B”. If stopwatch Hands move improperly, reset the hands as follow:

#### To reset stopwatch hands:

1. PRESS Pusher “A” & “B”.
2. PRESS Pusher “B” intermittently until the left eye hand is reset to “0”.
3. PRESS Pusher “A” intermittently until the chronograph hand reset to “60”.
4. PRESS Pusher “A” & “B”.

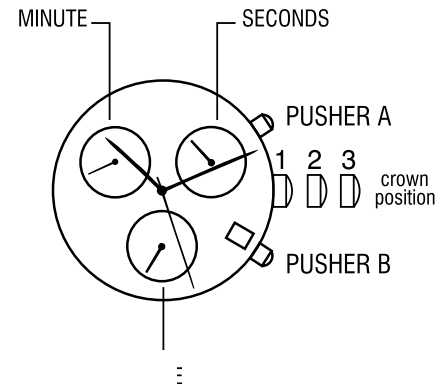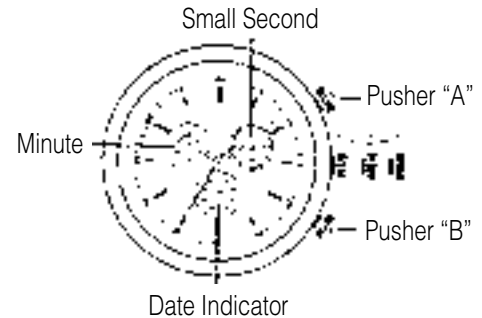

## ■ 2, 6, 10 Three-Eye Chronograph With Or Without Date Window

Continued....

NOTE: PRESSING and HOLDING either Pusher “A” or “B” will cause the hands to continue to move until the pusher is released.

### Standard stopwatch measurement:

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS Pusher “B” to reset.

### Accumulated elapsed time measurement:

 
 
1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS Pusher “A” to restart timing.
4. PRESS Pusher “A” to stop 2nd timing.
5. PRESS Pusher “B” to reset.

### Split time measurement:

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “B” to split.
3. PRESS Pusher “B” to begin again.
4. PRESS Pusher “A” to stop.
5. PRESS Pusher “B” to reset.

### Timing 2 competitors:

1. PRESS Pusher “A” to start timing of first event.
2. PRESS Pusher “B” to stop timing of first event. Stopwatch continues to run internally.
3. PRESS Pusher “A” to stop timing of second event.
4. PRESS Pusher “B” to view time of second event.
5. PRESS Pusher “B” to reset.

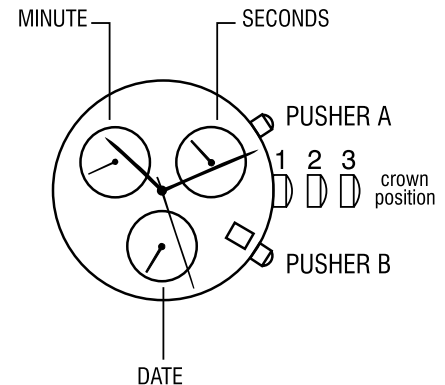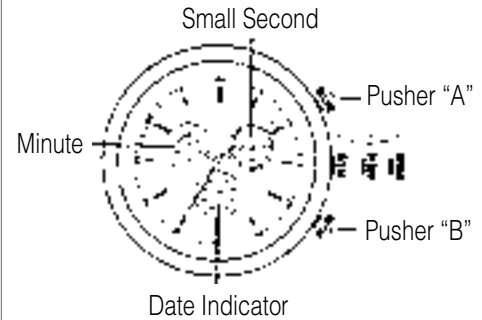

## ■ 3, 6, 9, 12 Four-Eye Chronograph

NOTE: Crown position “A” & “B”

NOTE: Pushers “A” (top) & “B” (bottom)

NOTE: 12 o’clock eye “1/10” or seconds elapsed”

NOTE: 9 o’clock eye “minutes elapsed”

NOTE: 6 o’clock eye “seconds elapsed”

NOTE: 3 o’clock eye “24-hour”

**This chronograph watch has 2 functions:**

TIME, STOPWATCH.

### TIME

**To set the time:**

1. PULL Crown to “B” position.
2. TURN Crown either way to correct time.
3. PUSH Crown in to “A” position.

 
### STOPWATCH

**The stopwatch is capable of measuring:**

1/10 seconds elapsed up to 60 minutes (top eye).

Minutes elapsed up to one hour (middle eye).

Seconds elapsed up to one minute (bottom eye)

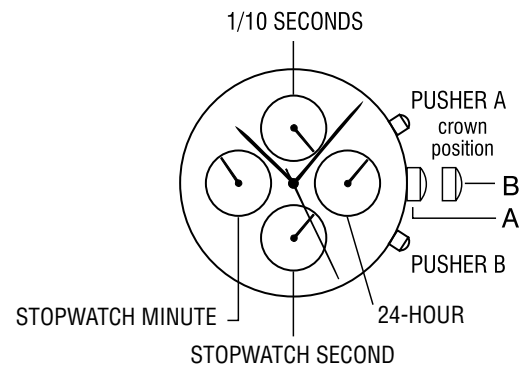

## ■ 3, 6, 9, 12 Four-Eye Chronograph

Continued....

BEFORE USING THE STOPWATCH, reset the stopwatch hands to the “60” and “0” positions.

### To reset stopwatch hands:

1. PULL Crown to position “B”.
2. PRESS Pusher “A” intermittently until the top eye hand is reset to “0”.
3. PRESS Pusher “B” intermittently until the minute and : second eye hands reset to “60”.

NOTE: PRESSING and HOLDING either Pusher “A” or “B” will cause the hands to continue to move until the pusher is released.

### Standard stopwatch measurement:

 
1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS Pusher “B” to reset.

### Accumulated elapsed time measurement:

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “A” to stop timing.
3. PRESS Pusher “A” to restart timing.
4. PRESS Pusher “A” to stop 2nd timing.
5. PRESS Pusher “B” to reset.

### Split time measurement:

1. PRESS Pusher “A” to start timing.
2. PRESS Pusher “B” to stop split.
3. PRESS Pusher “B” to begin again.
4. PRESS Pusher “A” to stop.
5. PRESS Pusher “B” to reset.

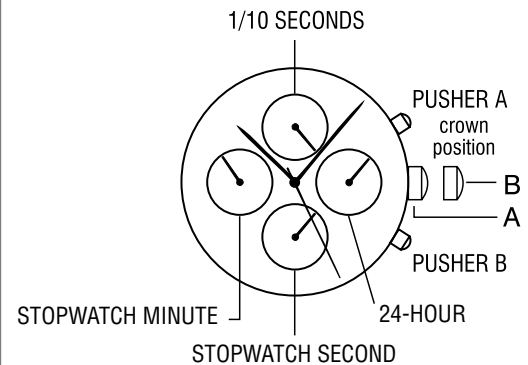



## ■ Ana-Digit

### FEATURES

Hour, Minute, Second  
 Month, Date  
 Back Light (EL)

### NORMAL TIME MODE

1. PRESS S1 once to view Month & Date
2. PRESS S1 twice to view Second
3. PRESS S2 once, ""Time"" & ""Date"" mode will be displayed alternatively  
 PRESS S1 twice, back to Time mode"
4. PRESS EL to light-up display

### SETTING SEQUENCE

1. PRESS S2 twice to set "Month"; Press S1 to advance
2. PRESS S2 once to set "Date"; Press S1 to advance
3. PRESS S2 once to set "Hour"; Press S1 to advance
4. PRESS S2 once to set "Minute"; Press S1 to advance
5. PRESS S2 once when setting is complete. Normal time will be displayed  
 (Press S1 if time mode does not flash).



## ■ Digital With Alarm/Dual Time/Chronograph



### FEATURES

Hour, Minute, Second  
 Day, Date, Month  
 Dual Time, Alarm, Timer  
 Chronograph 1/100 Second with Split Back Light (EL)

### OPERATION MODES

1. PRESS S3 once to view Time, Day, Date, Month
2. PRESS S3 once to view Alarm
3. PRESS S3 once to view Chrono
5. PRESS S3 once to set Timer
6. PRESS S3 again back to Time mode

### SETTING SEQUENCE

#### A) NORMAL TIME SETTING .

1. HOLD S2 2 seconds to set "Second"; Press S1 for 00
2. PRESS S3 once to set "Minute"; Press S1 to advance
3. PRESS S3 once to set "Hour"; Press S1 to advance
4. PRESS S3 once to set hour display; Press S1 to set "12H" / "24H"
5. PRESS S3 once to set "Month"; Press S1 to advance
6. PRESS S3 once to set "Date"; Press S1 to advance
7. PRESS S3 once to set "Day"; Press S1 to advance
8. PRESS S2 once when setting is complete. Normal time will be displayed.

## ■ Digital With Alarm/Dual Time/Chronograph

Continued....



### B) DUAL TIME SETTING .

1. PRESS S1 to Dual Time
2. HOLD S2 2 seconds to set "Minute"; Press S1 for 00
3. PRESS S3 once to set "Hour"; Press S1 to advance
4. PRESS S2 once when setting is complete. Normal time will be displayed.

### C) ALARM SETTING

PRESS S3 to Alarm Mode

1. PRESS S1 once to on "Alarm" ONLY
2. PRESS S1 once to on "Chime" ONLY
3. PRESS S1 once to on "Alarm" & "Chime"
4. PRESS S1 once to off "Alarm" & "Chime"
5. HOLD S2 2 seconds to set "Hour"; Press S1 to advance
6. PRESS S3 once to set "Minute"; Press S1 to advance
7. PRESS S2 once when setting is complete. Return to Alarm Mode.

### D) CHRONOGRAPH

PRESS S3 twice to Chronograph function

1. PRESS S1 to "Start" / "Stop" timing
2. PRESS S2 to "Split" time
3. PRESS S1, then S2 to "Reset"

### E) TIMER

PRESS S3 three times to Time Mode

1. HOLD S2 2 seconds to set "Hour"; Press S1 to advance
2. PRESS S3 once to set "Minute"; Press S1 to advance
3. PRESS S2 once when setting is complete.
4. PRESS S1 to "Start" / "Stop"
5. PRESS S2 to "Reset"

When counting complete, alarm will sound.

## ■ Digital With Alarm, Chronograph 1/100 Sec, Countdown & Dual Time

### FEATURES

Hour, Minute, Second

Day, Date, Month

Dual Time, Alarm, Countdown

Chronograph 1/100 Second with lap control

Back Light (EL)

### SETTING SEQUENCE

#### A) NORMAL TIME SETTING

1. HOLD S2 3 seconds to "Second"; Press S1 or S3 for 00
2. PRESS S2 once to set "Minute"; Press S1 or S3 to advance / backward
3. PRESS S2 once to set "Hour"; Press S1 or S3 to advance / backward
4. PRESS S2 once to set "Year"; Press S1 or S3 to advance / backward
5. PRESS S2 once to set "Month"; Press S1 or S3 to advance / backward
6. PRESS S2 once to set "Day"; Press S1 or S3 to advance / backward
7. HOLD S2 3 seconds to return to normal time display.

#### B) DUAL TIME SETTING

1. PRESS S1 to Dual Time
2. HOLD S2 2 seconds to set "Minute"; Press S1 for 00
3. PRESS S3 once to set "Hour"; Press S1 to advance
4. PRESS S2 once when setting is complete. Normal time will be displayed.



## ■ Digital With Alarm, Chronograph 1/100 Sec, Countdown & Dual Time

Continued....

### C) ALARM SETTING

PRESS S3 to Alarm Mode

1. PRESS S1 to "Alarm 1" – "Alarm 5"
2. HOLD S2 2 seconds until "AL" flash  
PRESS S1/S3 to set "Alarm" / "Chime"
3. PRESS S2 once to set "Hour" Press S1 or S3 to advance / backward
4. PRESS S2 once to set "Minute" Press S1 or S3 to advance / backward
5. HOLD S2 3 seconds when setting is complete. Return to Alarm Model.

### D) COUNTDOWN TIMER SETTING

- (i) PRESS S3 twice to Countdown Timer function [T1] (1~90 mins)
  - 1) HOLD S2 2 seconds to set "Minute"; Press S1/S3 to advance / backward
  - 2) HOLD S2 3 sec to end setting
  - 3) PRESS S2 to start/stop countdown
- (ii) PRESS S1 to get into Countdown timer [T2] (from normal time to preset time – within 24hrs)
  - 1) HOLD S2 3 seconds to set "Hour"; Press S1/S3 to advance / backward
  - 2) PRESS S2 once to set "Minute" Press S1 or S3 to advance / backward
  - 3) HOLD S2 3 sec to end setting
  - 4) PRESS S2 to start/stop countdown. Time different between Normal time & Preset time will be shown
- (iii) PRESS S1 to get into Countdown Day Timer [T3]
  - 1) HOLD S2 3 seconds to set "Year"; Press S1/S3 to advance / backward
  - 2) PRESS S2 once to set "Month" Press S1 or S3 to advance / backward
  - 3) PRESS S2 once to set "Day" Press S1 or S3 to advance / backward
  - 4) PRESS S2 once when setting is complete.

### E) CHRONOGRAPH

PRESS S3 three times to Chronograph Mode

 
 
- 1) PRESS S1 to select LAP (LAP) or Split (SPL) option
- 2) PRESS S2 to start/stop
- 3) PRESS S1 to get Lap/Split time
- 5) HOLD S2, then press S1 to "Reset"



# GUESS

■ INTERCHANGEABLES

# How To Remove Straps and Metal Bands

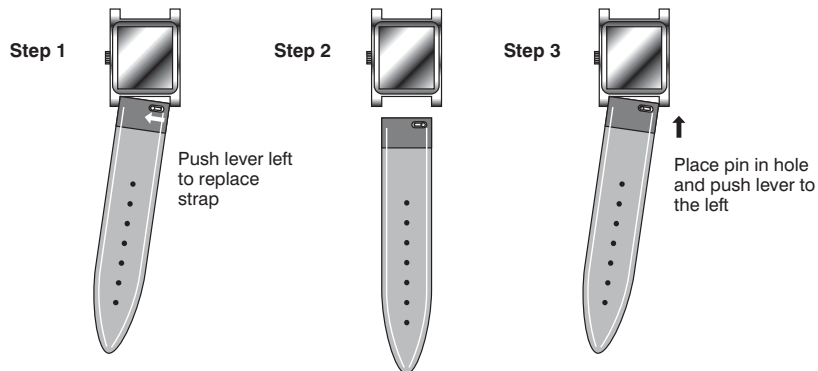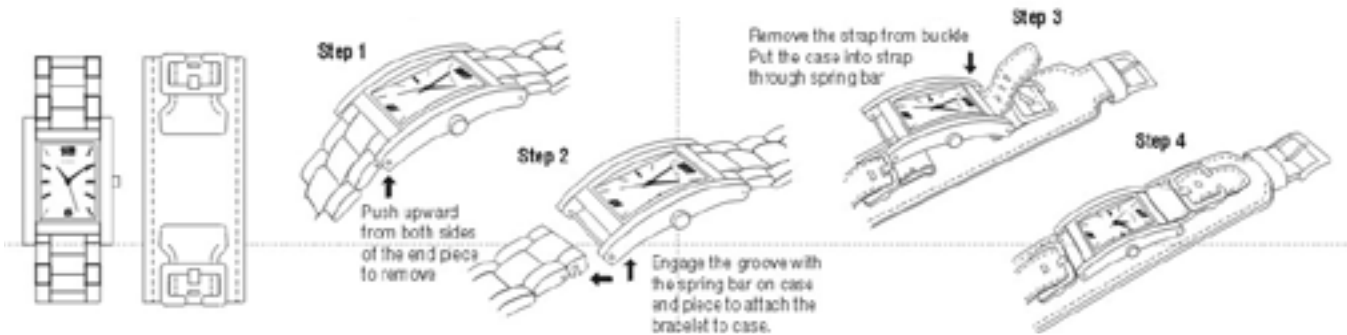

# GUESS

■ CARE & WARRANTY





## Water Resistant Care and Details

Watches are marked Water Resistant from 3ATM to 10ATM only as long as lens, buttons, crown, case, caseback and gaskets remain intact. Do NOT operate crowns or buttons when the watch is wet or under water.

Always wipe watch dry after being exposed to water.

Water Resistance levels are marked on case backs.

Example:

Water Resistant

3 atm/30m/100 ft.

5 atm/50m/165 ft

10atm/100m/330ft.

Withstands splashes of water or rain; do not submerge

Rain, do not submerge

Rain, showering do not submerge

Rain, showering, swimming

## Care and Safety Measures

Water resistance is not permanent. In the course of time, the gaskets of the cases may become worn and reduce the water resistance of the watches.



## Battery Care and Safety Measures

The battery contains a small amount of mercury. Please recycle or dispose of properly. Visit [www.watchbatteryrecycle.org](http://www.watchbatteryrecycle.org) for more information.



# GUESS

## Warranty

We offer a Two Year Warranty on all purchases made from July 1st, 2017. Any purchases made prior to July 1st, 2017 hold a 10 Year Limited Warranty. This GUESS Watch is warranted to you, the owner, for the warranty period from the date of original purchase against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse or water damage and excludes batteries, case, strap or bracelet; does not cover costs, parts or labor or defects or damage caused by any source other than SEQUEL. We do not recommend changing your own battery. If you would like your battery, case/crystal and/or strap replaced, please see the warranty repair coupon for additional charges. Any implied warranties are also limited to ten years from date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. In the event of a defect or malfunction within this period, it will be repaired or replaced, at our option provided that it is returned prepaid with VISA, MASTERCARD or AMEX for \$8.50 to cover the cost of handling and return postage (this is not a repair charge). **DO NOT SEND CASH.** Never include a special watch band or any other article of personal value in your shipment.

**GUESS Watches/SEQUEL is not responsible for lost or stolen watches.**

Return the watch, carefully packed (do not send in original packaging as it will not be returned) and insured to:

Sequel  
145 Woodward Avenue  
Norwalk, CT 06854  
ATT: Repair Department

Enclose your payment and the completed warranty coupon.

Any questions, call Customer Service at 1.800.2GUESS5 or 1.800.248.3775  
Monday - Friday, 8:30am - 5pm EST

