



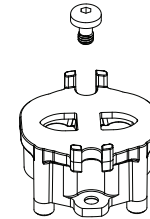

CARTRIDGE AND SPACER ASSEMBLY

CONJUNTO DE ESPACIADOR Y CARTUCHO /
ASSEMBLAGE DE LA CARTOUCHE ET DES CALES D'ESPACEMENT

Installation Instructions Instructions pour l'installation / Instrucciones de instalación

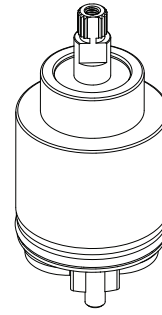

ACF4001UCRT

ENGLISH

CAUTION-TIPS FOR REMOVAL OF OLD FAUCET:

Always turn off water supply before removing existing faucet or replacing any part of the faucet. Open the faucet handle to relieve water pressure and ensure that water is completely shut off.

CARE INSTRUCTIONS:

To preserve the finish of your faucet, apply non-abrasive wax. Any cleaners should be rinsed off immediately. Do not use abrasive cleaners on the faucet.

ESPAÑOL

PRECAUCIÓN-CONSEJOS PARA CAMBIAR LA LLAVE MEZCLADORA:

Siempre corte el suministro de agua antes de retirar el grifo actual o reemplazar cualquier pieza del mismo. Abra la llave del grifo para liberar la presión de agua y asegurar que ya no corre agua.

INSTRUCCIONES DE CUIDADO:

Para conservar el acabado que cubre las partes metálicas de su llave mezcladora, aplique cera que no sea abrasiva, como una cera para autos. Si usa algún tipo de limpiador, deberá enjuagarlo inmediatamente. Los abrasivos suaves son aceptables en acabados platinum y LifeShine.

FRANÇAIS


ATTENTION-SUGGESTIONS POUR ENLEVER L'ANCIEN ROBIET:

Toujours couper l'alimentation en eau avant d'enlever ou de démonter le robinet. Ouvrir le robinet pour libérer la pression d'eau et pour s'assurer que l'alimentation en eau a bien été coupée.


DIRECTIVES D'ENTRETIEN:

Pour préserver le fini des pièces métalliques du robinet, appliquer une cire non abrasive comme une cire à voiture. Rincer immédiatement le robinet après l'avoir nettoyé avec un agent nettoyant. Les finis platinum et LifeShine peuvent être nettoyés à l'aide de produits abrasifs doux.


You may need/Usted puede necesitar/ Aticles dont vous pouvez avoir besion

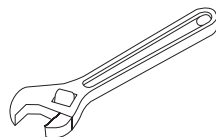

Wrench
Llave
Clé ajustable

 

2.5mm Hex Allen Wrench
2.5mm Hex Llave Allen
2.5mm Clé hexagonale

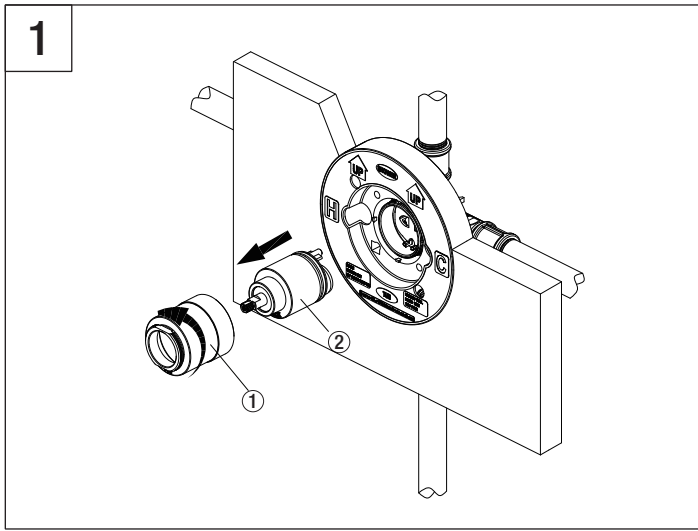


Remove old cartridge and spacer assembly.
Make sure that water is turned off. Use wrench to remove rough brass valve bonnet (1) and cartridge (2) from valve body.

Remove old cartridge and spacer assembly.

Asegura haber cortado el suministro de agua. Usa la llave para quitar el bonete de válvula de latón sin pulir (1) y el cartucho (2) del cuerpo de la válvula.

Remove old cartridge and spacer assembly.


Assurez-vous que l'alimentation en eau est coupée. Servez-vous d'une clé pour retirer l'enjoliveur du robinet en laiton (1) et la cartouche (2) du corps du robinet.

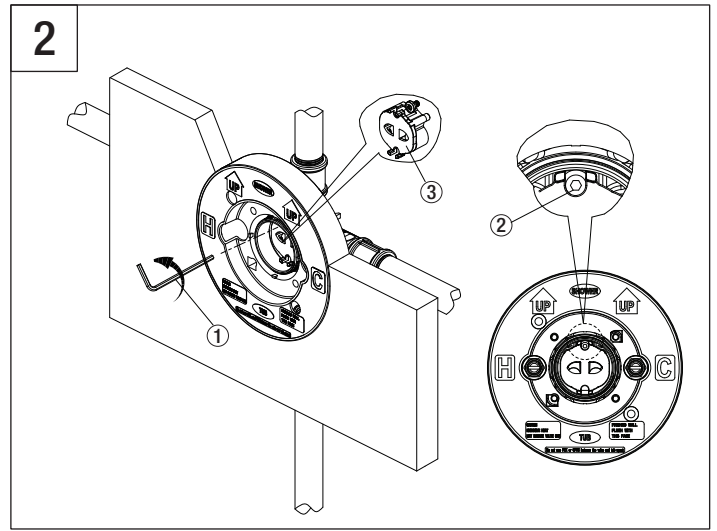

Use the 2.5mm Hex Allen Wrench (1) to turn the hexagon socket screw (2) counterclockwise, then remove spacer assembly (3).

Use the 2.5mm Hex Allen Wrench (1) to turn the hexagon socket screw (2) counterclockwise, then remove spacer assembly (3).


Use the 2.5mm Hex Allen Wrench (1) to turn the hexagon socket screw (2) counterclockwise, then remove spacer assembly (3).

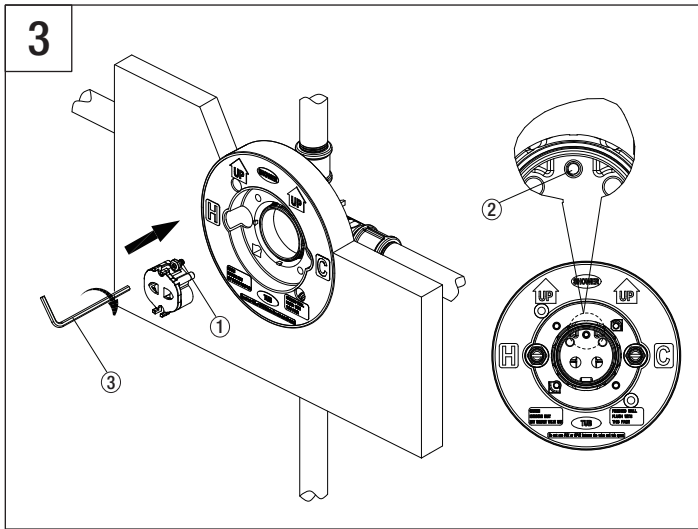

Align the hexagon socket screw (1) with the screw hole (2), then use the 2.5mm Hex Allen Wrench (3) to tighten the screw clockwise, do not over tighten.

Align the hexagon socket screw (1) with the screw hole (2), then use the 2.5mm Hex Allen Wrench (3) to tighten the screw clockwise, do not over tighten.

Align the hexagon socket screw (1) with the screw hole (2), then use the 2.5mm Hex Allen Wrench (3) to tighten the screw clockwise, do not over tighten.

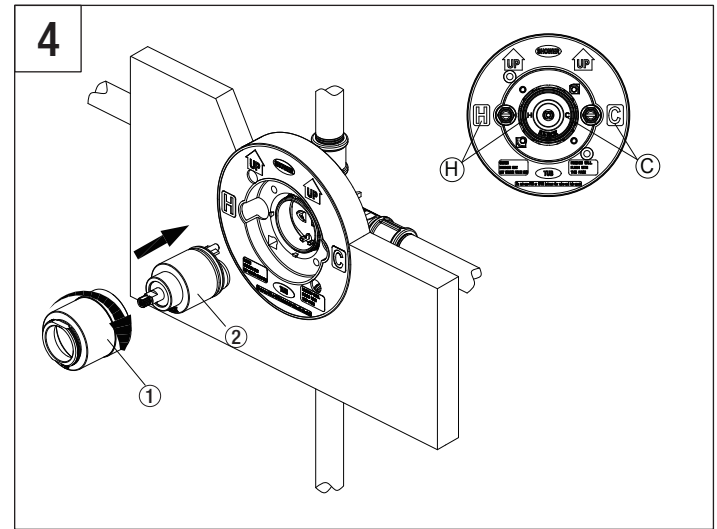

After installing the cartridge (2), tighten the valve bonnet (1) clockwise with a wrench. Important: The "H" and "C" marks of the cartridge must correspond to the "H" and "C" marks on the plaster guard and must not be reversed.

After installing the cartridge (2), tighten the valve bonnet (1) clockwise with a wrench. Important: The "H" and "C" marks of the cartridge must correspond to the "H" and "C" marks on the plaster guard and must not be reversed.

After installing the cartridge (2), tighten the valve bonnet (1) clockwise with a wrench. Important: The "H" and "C" marks of the cartridge must correspond to the "H" and "C" marks on the plaster guard and must not be reversed.