

BULLET® PIERCING VALVE

INSTRUCTIONS

1. Separate the 2 half sections by removing the outside hollow head cap screws (use enclosed key). **DO NOT TURN THE CENTER PIERCING SCREW.** The piercing screw has been preset at the factory, and is ready for installation.

NOTE: ON BPV 31 VALVE, use large adapter for 1/4" tube; Small adapter for 5/16" tube; No adapter for 3/8" tube. ON THE BPV21 VALVE, use adapter for 1/2" tube; No adapter for 5/8" tube.

2. Match the 2 halves over the tube, install the cap screws and tighten with key, **UNTIL BOTH HALVES MEET.**
3. Using the same wrench, turn the center piercing needle all the way in (clockwise), until it is firmly seated. Now turn the needle back one full turn to operate the valve. **DO NOT TURN THE PIERCING NEEDLE BACK MORE THAN 2 FULL TURNS.** (The valve is opened to its full capacity with the needle turned back 2 full turns. Turning it any further may remove the piercing needle from the housing.)
4. To secure the valve, turn the piercing needle clockwise until it is firmly seated.

SEALED UNIT PARTS CO., INC.

P.O. BOX 21, 2230 LANDMARK PLACE, ALLENWOOD, NJ USA PH: (732) 223-6644 FX: (732) 223-1617