



MODEL 715/721 and 722/725 Portable Garment Racks




TOOLS REQUIRED:
(2) 7/16 wrenches or sockets



2 person assembly suggested

STEP 1

Install casters to upright legs by inserting caster stems into bottom of legs. Insert bolts through side with flush bolt holes, and secure with nuts on the side with dimpled bolt holes.

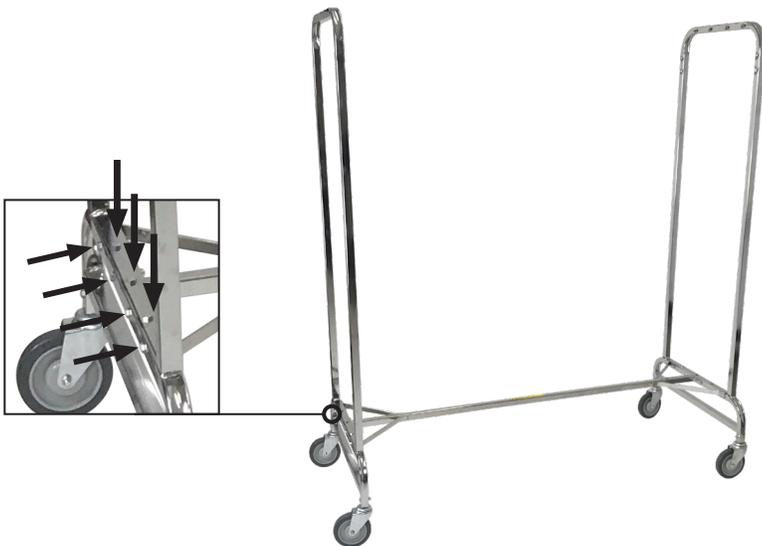

STEP 2

Place crossbar (with warning label side facing up) onto the side of the wheelbase with nuts. Align the three vertical holes and secure with partial-thread bolts and nuts, with nuts on underside. Then secure horizontal holes with four partial-thread bolts. Nuts should be on the same side as crossbar. Repeat for other side.

WARNING



- Never allow children (or adults) to ride on or swing from garment rack
- Keep casters free of thread, lint, hair and other debris. Be sure casters turn easily and roll freely at all times. If a caster does not roll properly, remove the garment rack from service immediately.
- Periodically check all nuts and bolts to ensure they are tight.
- Weight limit 175 lbs. — Do not overload!
- Be sure all loads are evenly balanced at all times. Overloading or unbalanced loads may cause tipping, resulting in serious injury.
- Always proceed slowly and use extra caution when turning corners.

715, 721 HARDWARE INCLUDED (Not to scale)

x28 Nuts



x4 Full-thread bolts



x24 Partial-thread bolts





MODEL 715/721 and 722/725
Portable Garment Racks
pg 2



STEP
3

Model 715/721: With upper horizontal crossbar resting and centered on top of uprights, align the three vertical holes at each end and secure with three partial-thread bolts and nuts, nuts on the underside. Then secure crossbar at each end with two partial-thread bolts and nuts through the two center holes, nuts on inside.

Model 722/725: Position one upper crossbar as pictured, with flush side of triangular support facing out. Align crossbar and upright holes and secure with two partial-thread bolts on each side, with nuts on the side of triangular support. Repeat for other crossbar.

NOTE: Be sure all bolts and nuts are securely tightened.

Your Portable Garment Rack is ready for use.

If you have purchased the Basket Shelf Accessory, please continue onto page 3.

WARNING



- Never allow children (or adults) to ride on or swing from garment rack
- Keep casters free of thread, lint, hair and other debris. Be sure casters turn easily and roll freely at all times. If a caster does not roll properly, remove the garment rack from service immediately.
- Periodically check all nuts and bolts to ensure they are tight.
- Weight limit 175 lbs. — Do not overload!
- Be sure all loads are evenly balanced at all times. Overloading or unbalanced loads may cause tipping, resulting in serious injury.
- Always proceed slowly and use extra caution when turning corners.

722, 725 HARDWARE INCLUDED (Not to scale)

 x26 Nuts



x4 Full-thread bolts



x22 Partial-thread bolts





MODEL 715/721 and 722/725
Portable Garment Racks
pg 3



Basket Shelf Accessory Installation:

STEP
1

Remove bolt and nut in center of lower crossbar at both ends.



STEP
2

Place one half of basket on top of lower crossbar so that hole in basket lines up with hole in center of crossbar at one end. Replace bolt and nut through basket and crossbar.



STEP
3

Take other half of basket and slide male connector end into female connector end so that it rests on crossbar. Align hole in basket with hole in crossbar and replace bolt and nut.

