


# Setting the Rates in COIN MODE:

## Display Panel

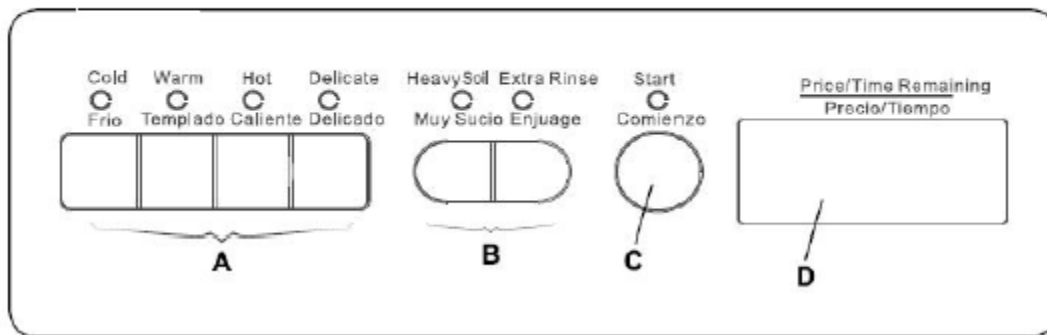

### HINTS:

1. Install the units – hook up all utilities and make sure units are level. Don't forget the shipping bolts!
2. Install Coin Receiver (Drop) and connect wire harness to unit. Do not install "Coin Box".
  - a. When installing the Coin Receiver & Coin Receiver Plate, start with the face at 90° on the right hand side of the cut-out and then carefully close the Receiver Plate into the hole taking note of the "metal tab" on the bottom left that it fits into the divot on the face of unit and secures. Then adjust the plate until it sits flush.
3. Program Unit – see below instructions.
  - a. **The "START" button is the key to activating which cycle you want to set pricing for and then finalizing that pricing. You will push the "Start" button TWICE for each cycle that pricing is set for.**
4. Finish with installing Coin Box.

Bottom Control Dryers – the "Service Switch" is located on the back of the control panel. Use the supplied key to access the back side of the control panel. You are looking for a small red push switch.

## Coin-Operated Machines

In coin-operated machines, prices for programs and options must be programmed during machine setup, and can be modified at any time. The machine must be set to COIN MODE.

Prices can be programmed as dollars and cents or as the number of coins or tokens required to start. There are four wash programs COLD, WARM, HOT, and DELICATE and two options HEAVY SOIL and EXTRA RINSE that can be programmed to the same or different prices. The option prices are added to the base prices of the COLD, WARM, and HOT programs. The options cannot be added to the DELICATE program.

## PRICE PROGRAMMING

1. To enter the programming mode unlock and remove the coin box.
2. Press and release the "Service Switch" located in the rear of the coin vault to enter service mode. The display will **flash all "8's"**.
  - a. Bottom Control Dryers – the "Service Switch" is located on the back of the control panel. Use the supplied key to access the back side of the control panel. You are looking for a small red push switch.

3. Select one of the six program or option buttons for which the price is to be programmed. The current price for that selection is displayed.
4. Press the START button. The price will blink indicating it can be edited.
5. Use the four program selection buttons; COLD, WARM, HOT, and DELICATE to change each of the four digits in the price display. Each button increments a corresponding digit, left to right, in the price. Each digit rolls over from 9 to 0 without affecting the other digits. The left most digit cannot be programmed to "0" but can be blanked out completely.
6. When the desired price is displayed, press START. The display will stop blinking indicating the new value has been saved.
7. Repeat steps 3 through 6 for each remaining wash program and option. The option buttons only make adjustments to the basic programs and are typically 0.25 or 0.50.
8. When all prices have been entered, press the Service Switch in the vault to exit service mode.
9. Check the newly entered prices by selecting each program without and with the option selections.

Register 26 ("No Decimal in Price") determines how prices are displayed by the machine. When set to "00" (default), prices are set and displayed with a decimal (e.g. "3.00"). When set to "01", the decimal point is turned off, and prices are set and displayed as "number of coins or tokens" required (e.g. "12").

In either case, the value of each coin drop is stored in Register 33 "Coin Value 1" and Register 34 "Coin Value 2" and determines how much the remaining price will be reduced each time a coin is deposited. The coin-value registers can be adjusted to accommodate any currency.