

SYMBOLS AND DEFINITIONS

⚠ DANGER ⚠	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
⚠ WARNING ⚠	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
⚠ CAUTION ⚠	Indicates a hazardous situation which, if not avoided, could result in moderate injury.

⚠ DANGER ⚠

- Do not submerge this fixture in water or other liquids.
- Do not use with extension cord near water or where water may accumulate.
- Keep light at least 16 feet from pools and spas. Keep plugs and receptacles dry.
- Suitable for Damp Locations only.

⚠ WARNING ⚠

- Avoid electrical shock by turning off or disconnecting from power while moving or installing the unit.
- When using product, basic precautions should always be followed.
- Read and follow these instructions and observe all warnings.
- Carefully read and understand the information given in this guide before using this light. Failure to do so could lead to electrical shock, fire, or other injuries which could be hazardous or even fatal.
- Save this User Guide.
- Do not use in areas with temperature higher than 104° Fahrenheit.

⚠ CAUTION ⚠

- Do not use in areas near a gas source. This light is not for use in potentially explosive environments. This is not a vapor proof light.
- This light is not a toy and is not suitable for use by children.
- Protect your eyes. Do not look directly at the LED lights for extended periods of time.
- Do not remove the lens protecting the LED. It is not possible to change the LED light source. The LED chips are not replaceable.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- Disassembling or modifying this unit will void the warranty.



GT-Lite

User Guide


1-800-865-6799
www.gtledlighting.com

GT-507R

4,000/2,000 Lumen LED Rechargeable Work Light with USB Port



GT-LITE WARRANTY: This product is guaranteed against failure due to factory defects in materials or workmanship for one (1) year from the date of purchase. This warranty is non-transferable and applies only to the original owner. Proof of purchase required for repair or replacement. Keep product receipt with this User Guide and save in a dry location. The warranty does not cover normal wear and tear of parts or damage resulting from misuse of the product. Misuse of the product includes but is not limited to: using in extreme weather conditions, opening the housing of the product, or alterations to the product.

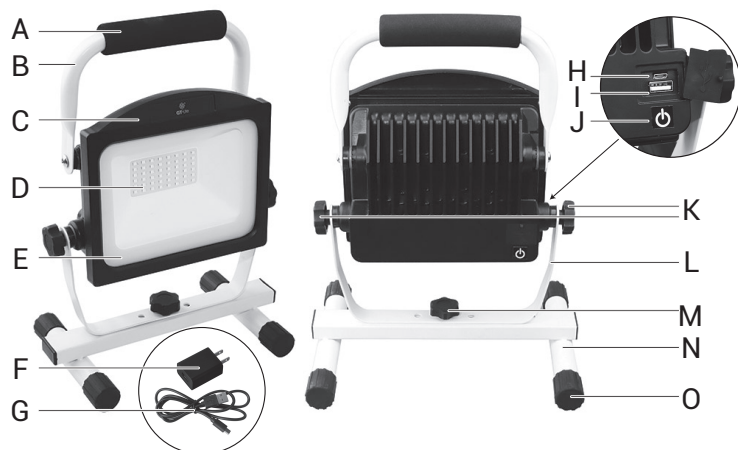

WORK LIGHT CONSTRUCTION:

- A. Carrying handle with comfort grip
- B. Lightweight, scratch-resistant aluminum frame
- C. Tiltable light face
- D. LEDs
- E. Tempered glass protective lens
- F. AC Power Adapter (ETL)
- G. 6ft Micro USB Cable
- H. Micro port for charging the light
- I. USB port for charging other devices
- J. On/Off Button
- K. Side star knobs (2)
- L. U-frame
- M. Base knob (1)
- N. H-stand base
- O. Textured rubber feet for strong surface grip

ASSEMBLY:

1. Attach U-Frame (L) to H-Stand (N) by screwing Base Knob (M) completely through the holes on (L)+(N) until tight.

TO USE:

1. **CHARGE THE LIGHT FOR APPROXIMATELY 8-10 HOURS**
 - a. Insert the Micro End of the 6ft Micro Cable (G) into the Micro Port (H) on the back of the work light.
 - b. Insert USB End of the 6ft Micro Cable (G) into the AC adapter (F).
 - c. This product must be charged with UL or ETL certified adapters or warranty will be void.
 - d. Plug the AC Adapter (F) into Power.
2. Place H-Stand (N) on a sturdy surface. Ensure that all 4 Rubber Feet (O) have a secure grip on the surface.

3. Slightly loosen side Star Knobs (K)(do not unscrew completely).
4. Tilt Light Face (C) up or down to the desired angle.
5. Tighten Star Knobs (K).
6. Slightly loosen Base Knob (M)(do not unscrew completely).
7. Swivel U-Frame (L) side to side to the desired angle.
8. Tighten Base Knob (M).
9. Remove light from power if desired. Light will work while charging or if removed from power.
10. To turn light on HIGH 4000 LM, press On/Off button (J) one time.
11. To turn light on LOW 2000 LM, press On/Off button (J) a second time.
12. To turn light off, press On/Off button (J) a third time.
13. To charge a device, plug device into USB port (I).
 - a. USB port works with LED light on or off—as long as the unit is plugged into a power outlet or the internal battery is charged.
14. Store in a cool dry place when not in use.

TROUBLESHOOTING

Problem	Cause	Solution
LED is not lighting up.	No power or faulty connection.	Check that all connections are secure, and power is ON.
	LED Light is not fully charged.	Charge battery for a full 8-10 hours and try again.
Questions, Missing Parts		Customer Service: 1-800-865-6799

CARE AND CLEANING

Your fixture is made from quality materials that will last an extended period of time with proper care—including periodically cleaning the surface of the fixture.

1. Use a mild, non-abrasive cleaner. Do not use any solvents or harsh cleaning agents.
2. Use a soft, non-abrasive cloth.
3. Lightly spray cleaner onto the cloth. Do not spray liquid cleaners directly onto LEDs, power cord, or any part of this product.
4. Lightly wipe down fixture with damp cloth. Allow product to dry completely before restoring power and using LED lights.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.