

ASSEMBLY INSTRUCTIONS

07 – DISHWASH OUTLET BENCH



600 SERIES:

 

- 07-6-1200L
- 07-6-1200R
- 07-6-1500L
- 07-6-1500R
- 07-6-1650L
- 07-6-1650R

700 SERIES:

- 07-7-1200L
- 07-7-1200R
- 07-7-1500L
- 07-7-1500R
- 07-7-1650L
- 07-7-1650R



CONTENTS:

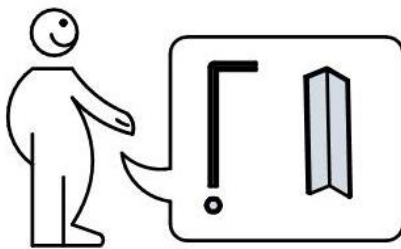

X 1




X 1




X 8



X 4

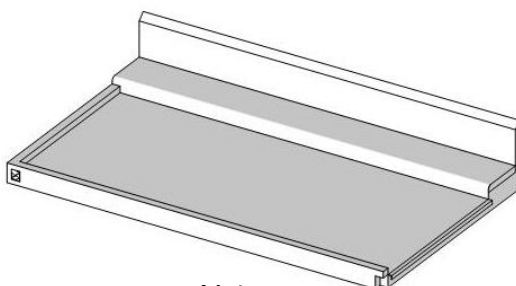


X 1

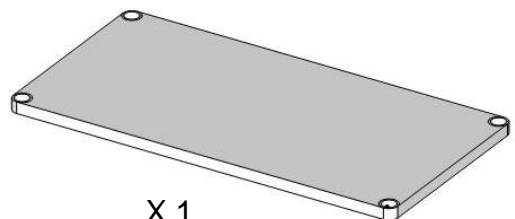


X 1


01

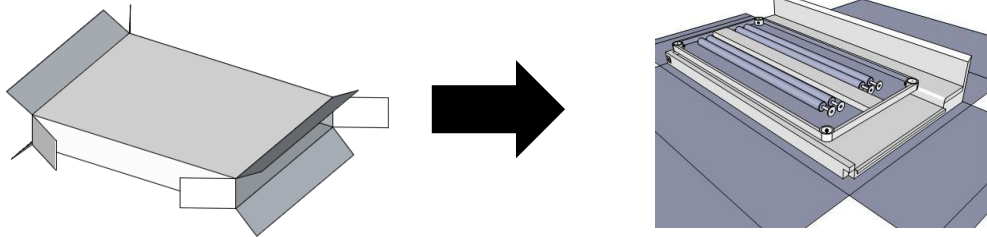

02

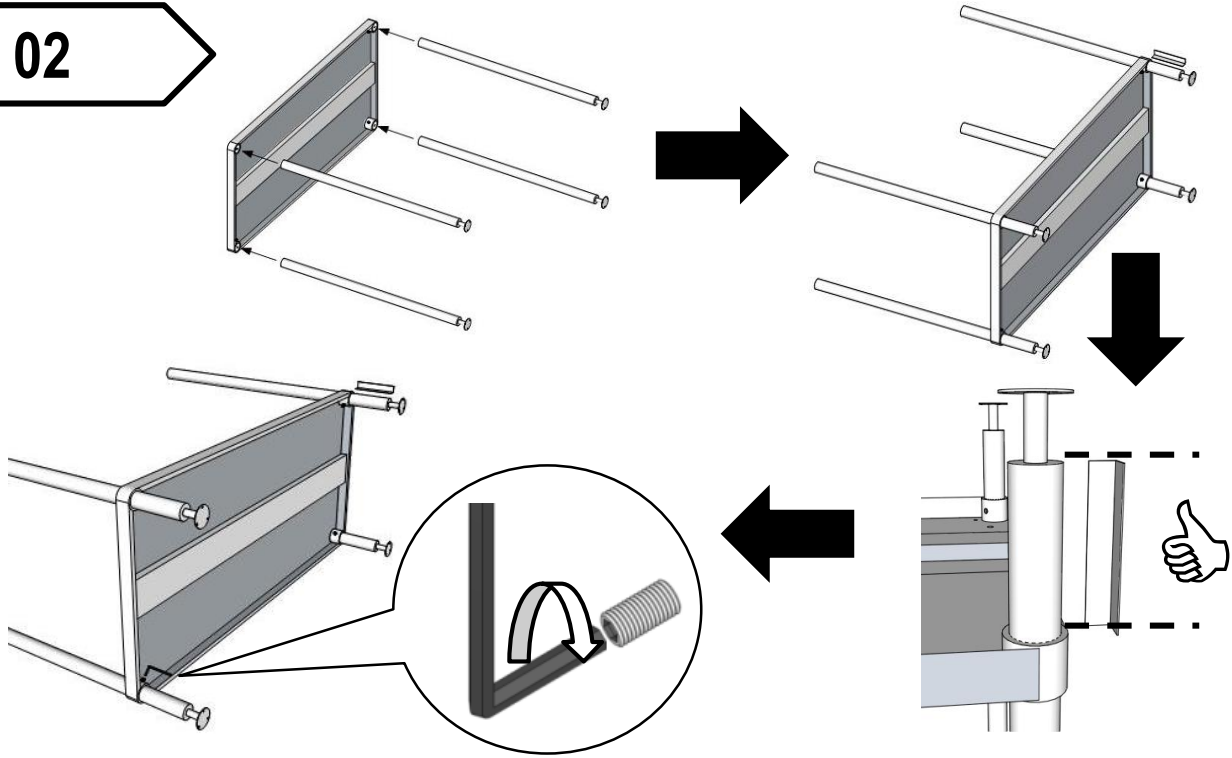

03

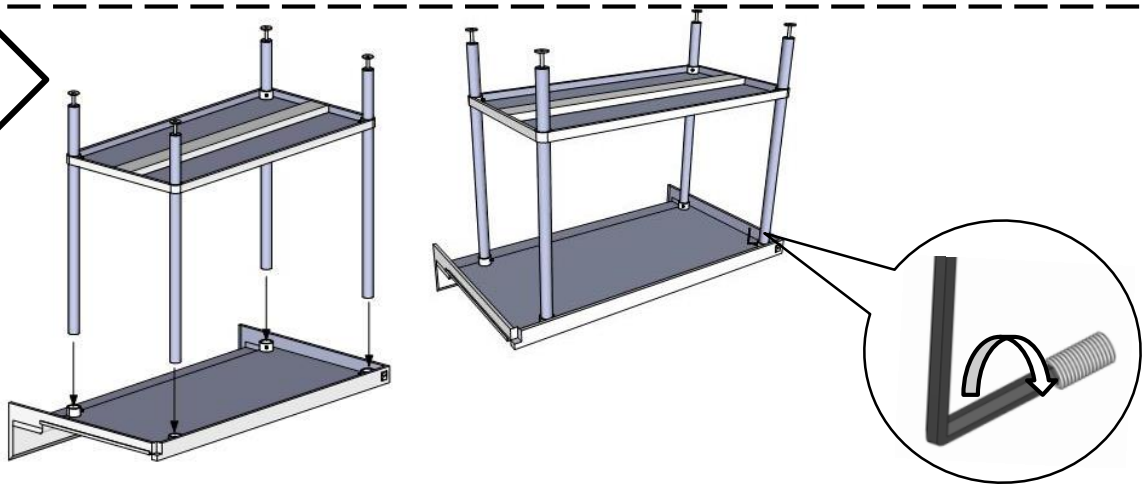

04

