 





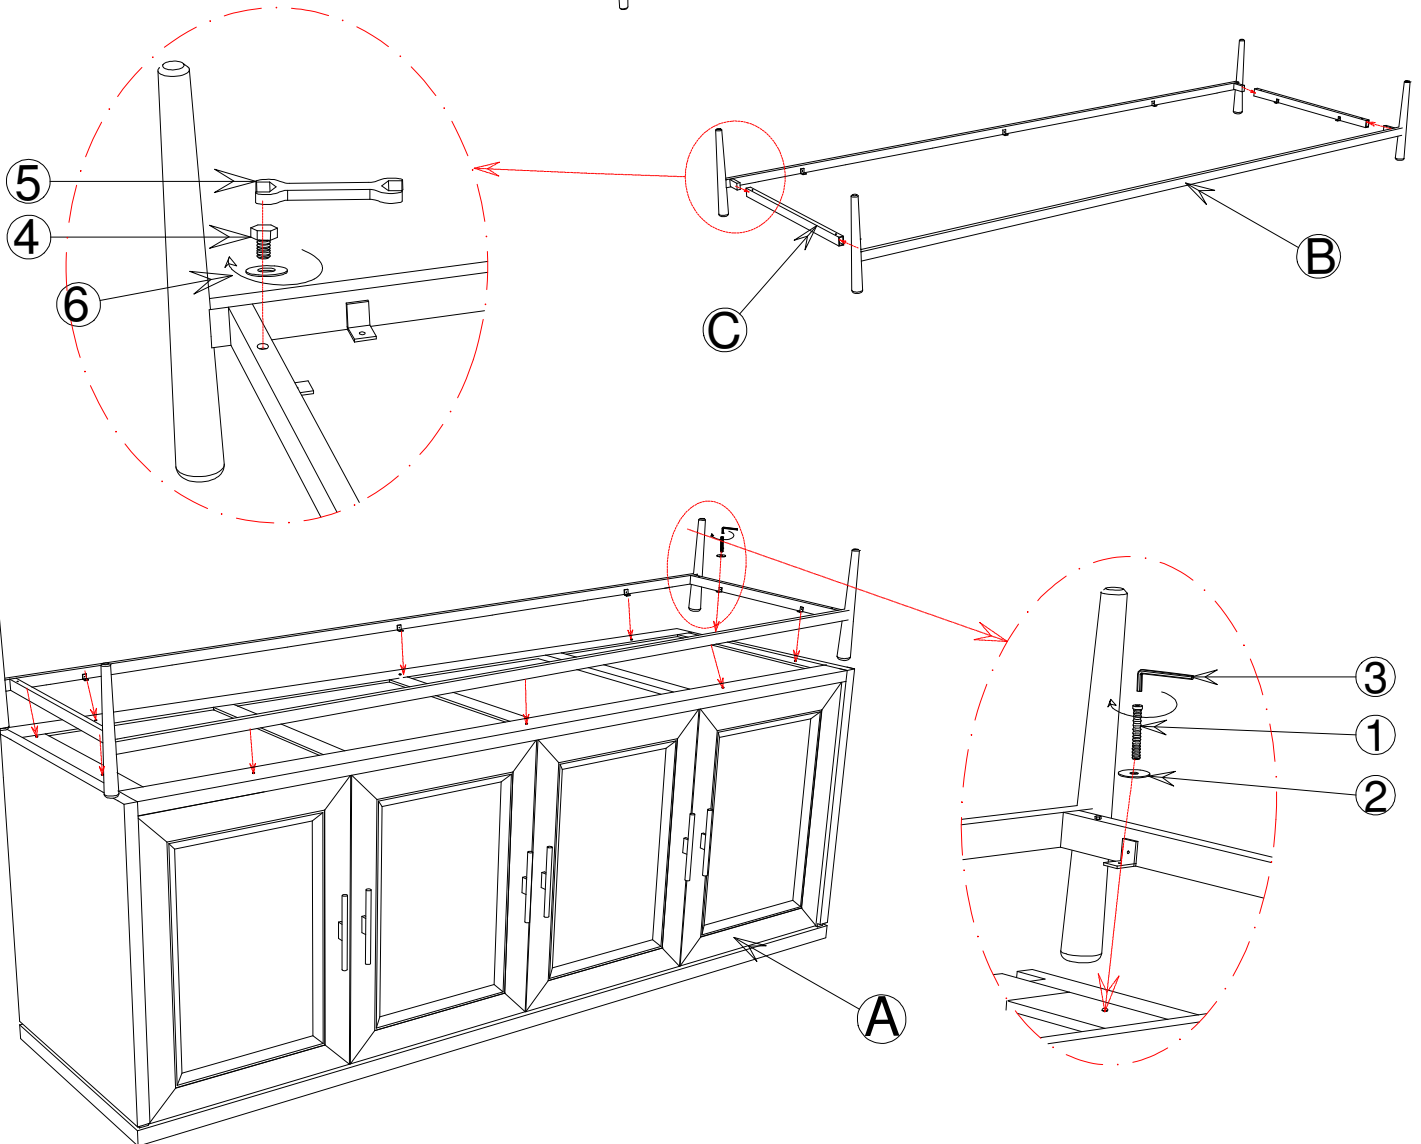
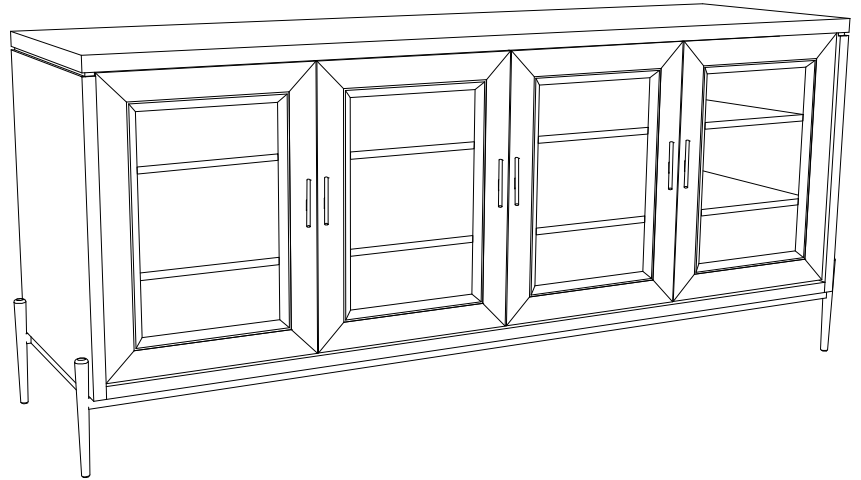


## ASSEMBLY INSTRUCTION FOR 24950 ENTERTAINMENT CONSOLE

### HARDWARE LIST

NO.	ITEM	DESCRIPTIN	QTY.
1		JCB Bolt M6 X 20 MM	10
2		Flat washer M8X25 MM	10
3		Allen wrench	1
4		Bolt M8X20 MM	4
5		Wrench	1
6		Flat washer M6X18 MM	4



### TO ASSEMBLY :

- STEP 1 : Unpack entertainment console.
- STEP 2 : Roll entertainment console on its back, then on its top on a clean, soft surface, so that doors do not swing open and get damaged.
- STEP 3 : Thread the HEX. bolt(4) to iron leg(B) & iron cross bar(C).using small washers(6) tighten end assemblies fully.
- STEP 4 : Set base assembly on the upside down case and attach JCB bolt (1) and washer (2) using allen wrench (3).
- STEP 5 : Tighten bolts in step 6 fully with allen wrench (3) & wrench (5) then carefully turn the entertainment console upright.