

Allsteel®

SEATING INSTRUCTIONS

Trooper®



Allsteel®

SEATING INSTRUCTIONS

Trooper Asynchronous Control



1. Seat Height Adjustment — Enables the seat to adjust to the preferred height.

To raise the seat, lift your weight off the seat and pull up on the lever; release lever when seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

2. Seat Depth Adjustment — The depth of your seat adjusts to accommodate different leg lengths.

To change the seat depth, lift and hold the lever as you push the seat forward or backward.

Release the lever to lock seat in place.

3. Seat Angle Adjustment — Allows user to independently position and lock the seat angle relative to the floor.

Push the lever down to unlock and free float.

Adjust to preferred angle and pull the lever up to lock into position.

4. Forward Tilt Adjustment — To utilize, the Seat Angle Adjustment lever must be in the down (free float) position.

To obtain a forward seat angle, lean back slightly and rotate right front lever clockwise.

To obtain a neutral seat angle, lean back slightly and rotate right front lever counterclockwise.

5. Tilt Tension Adjustment — Increases or decreases the amount of effort needed to recline in the chair.

Turn the knob counterclockwise to decrease the amount of tension required to tilt the chair back.

Turn the knob clockwise to increase the amount of tension required to tilt the chair back.

6. Back Height Adjustment — Provides custom lumbar support.

From a seated or standing position, lift up on the back to adjust the back height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

7. Back Angle Adjustment — Adjusts the angle of the back relative to the seat.

To adjust, lift lever up and adjust the back to the preferred position.

Release lever to lock into place.

8. Arm Height Adjustment — Enables arms to adjust to your body size and personal preference.

Lift up on lever, and adjust arm height to desired position.

Release lever to lock arm into place.

9. Arm Width Adjustment — Enables arm to adjust to your body size and personal preference.

Turn knob counterclockwise to loosen.

Adjust arm in or out to desired width.

Turn knob clockwise to tighten.

Trooper Synchro-Tilt Control

4 Back Height Adjustment

5 Arm Height Adjustment

6 Arm Width Adjustment

1 Seat Height Adjustment

3 Tilt Tension Adjustment



2 Tilt Lock

7 Seat Depth Adjustment

1. Seat Height Adjustment — To raise seat, lift your weight off the seat and pull up on the lever; release lever when your seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when your seat reaches desired height.

2. Tilt Lock — While leaning forward, pull the telescoping knob out and turn counter clockwise to lock tilt position, lean back to activate.

Turn the knob clockwise and lean back to unlock.

3. Tilt Tension Adjustment — Pull telescoping knob out and turn clockwise to increase tension, counter clockwise to reduce tension.

4. Back Height Adjustment — Lift up on the back to adjust the height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

5. Arm Height Adjustment — To adjust height, lift up on the arm trigger.

Release trigger to lock the arm into desired placement.

6. Arm Width Adjustment — To adjust width, turn knob under seat clockwise to loosen. Adjust arm to desired width, then turn knob counter clockwise to lock position. Repeat with other arm.

7. Seat Depth Adjustment — To change seat depth, lift and hold the lever as you push the seat forward and backward.

Release the lever to lock seat in place.

Allsteel®

SEATING INSTRUCTIONS

Trooper Mid-Range Knee Tilt Control



1. Seat Height Adjustment — Enables the seat to adjust to the preferred height.

To raise the seat, lift your weight off the seat and pull up on the lever; release lever when seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

2. Tilt Lock — Locks the chair in an upright position for full task support.

Push the lever in while the seat and back are upright to lock into upright work position.

Pull lever out to unlock and free float.

3. Tilt Tension Adjustment — Increases or decreases the amount of effort needed to recline in the chair.

Turn the knob counterclockwise to decrease the amount of tension required to tilt the chair back.

Turn the knob clockwise to increase the amount of tension required to tilt the chair back.

4. Back Height Adjustment — Provides custom lumbar support.

From a seated or standing position, lift up on the back to adjust the back height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

5. Arm Height Adjustment — Enables arms to adjust to your body size and personal preference.

Lift up on lever, and adjust arm height to desired position. Release lever to lock arm into place.

6. Arm Width Adjustment — Enables arms to adjust to your body size and personal preference.

Turn knob counterclockwise to loosen.

Adjust arm in or out to desired width.

Turn knob clockwise to tighten.

Allsteel®

SEATING INSTRUCTIONS

Trooper Work Stool



1. Seat Height Adjustment — Enables the seat to adjust to the preferred height.

To raise the seat, lift your weight off the seat and pull up on the lever; release lever when seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

2. Back Height Adjustment — Provides custom lumbar support.

From a seated or standing position, lift up on the back to adjust the back height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

3. Arm Height Adjustment — Enables arms to adjust to your body size and personal preference.

Lift up on lever, and adjust arm height to desired position.

Release lever to lock arm into place.

4. Arm Width Adjustment — Enables arms to adjust to your body size and personal preference.

Turn knob counterclockwise to loosen.

Adjust arm in or out to desired width.

Turn knob clockwise to tighten.

5. Footring Height Adjustment — Ensures comfortable position for feet and legs, regardless of chair position or user height.

Turn knob counterclockwise to loosen.

Move footring to desired height, making sure that the thread on the adjustment knob is seated into one of eight retaining slots.

Turn knob clockwise to tighten.

Allsteel®

SEATING INSTRUCTIONS

Trooper Large and Tall



1. Seat Height Adjustment — Enables the seat to adjust to the preferred height.

To raise the seat, lift your weight off the seat and pull up on the lever; release lever when seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

2. Tilt Lock — Locks the chair in an upright position for full task support.

Slide the lever back while the seat and back are upright to lock into upright work position.

Slide the lever forward to unlock and free float.

3. Tilt Tension Adjustment — Increases or decreases the amount of effort needed to recline in the chair.

Turn the knob counterclockwise to decrease the amount of tension required to tilt the chair back.

Turn the knob clockwise to increase the amount of tension required to tilt the chair back.

4. Back Height Adjustment — Provides custom lumbar support.

From a seated or standing position, lift up on the back to adjust the back height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

5. Arm Height Adjustment — Enables arms to adjust to your body size and personal preference.

Lift up on lever, and adjust arm height to desired position.

Release lever to lock arm into place.

6. Manual Seat Depth Adjustment — Loosen (do not remove) three hex head screws located on bottom side of chair back assembly, and adjust back to desired sitting depth.

Tighten three hex bolts to 200 in. lbs.

Refer to instructions located on the bottom of the seat.

User information: Installers do not remove.

Periodically inspect mechanisms for loose, broken, or missing parts. If any missing parts or loose or broken mechanisms are found, remove the chair from use until repairs are made using factory authorized parts.

Find out more about Allsteel products at **Allsteeloffice.com**.

Allsteel®

Allsteel Inc.
Muscatine, Iowa 52761-5257
allsteeloffice.com

©2009 Allsteel Inc.
Allsteel and Trooper are registered
trademarks and Designed to work.
Built to last is a trademark.

Product meets or exceeds
ANSI/BIFMA performance
standards for business
and institutional furniture,
and is backed by the
Allsteel Lifetime Warranty.