SARANAC GUNLOCKE

ASSEMBLY INSTRUCTION WIRE MANAGMENT

YA013-6101-00

GENERAL NOTES:

1. ALWAYS INSTALL AFTER TOP HAS BEEN PLACED AND LEVELED

2. REMOVE WIRE MANAGMENT IF TOP NEEDS TO BE MOVED

ATTACHMENT HARDWARE: GYAWIREBASE-W



19917-4326-35 SCR TP-AB 10X1-1/4 FT PH ST BL


INSTALLMENT: GYAWIREBASE-W

1 FIND FRONT PANEL WITH THE FINGER ROUT ON THE BOTTOM OF THE PANEL

2 PULL PANEL PARALLEL TO FLOOR TO RELEASE KEKU'S

3 PLACE WIRE MANAGER, INSTALL 6 SCREWS IN TOP PANEL TO TOP

4 RUN WIRES AS NEEDED, INSTALL FRONT PANEL BACK ONTO UNIT

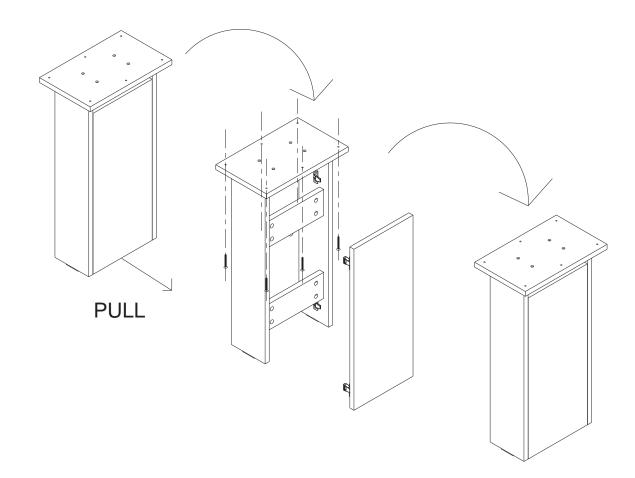

SARANAC ASSEMBLY INSTRUCTION SARANAC TABLE

GUNLOCKE

GENERAL NOTES

1. ALWAYS PROTECT THE WORKSURFACE DURING INSTALLATION. 2. ALWAYS LEVEL UNIT(S) AT FINAL LOCATION.

THERE ARE (2) UNIQUE TABLE TYPES. EACH TABLE IS ILLUSTRATED. THE LEG ATTACHMENT TO EACH TABLE IS SIMILAR.

LEG ATTACHMENT HARDWARE



19907-2006-36 FLAT WASHER 5/16-7/8 ODX3/8 ID 19931-2011-36 HEX NUT 5/16-18



19917-4394-35 SCREW TP-AB 8X5/8




19962-0001-00 **GLIDE & INSTRUCTION** SHEET

LEG ATTACHMENT

WITH TABLE TURNED UPSIDE DOWN 1 SLIDE LEG ASSEMBLY INTO THE CORNER BRACKET, LINING UP LEG STUDS. USE WASHER AND HEX NUT TO TIGHTEN DOWN LEG. 19907-2006-36 \bigcirc 19931-2011-36 PAGE 1 OF 6

LEG ATTACHMENT CONTINUED

2 USE PROVIDED SCREWS TO ATTACH LEG ASSEMBLY PLATE TO TOP, BE VERY CAREFUL TO NOT HIT LEGS WHEN ATTACHING

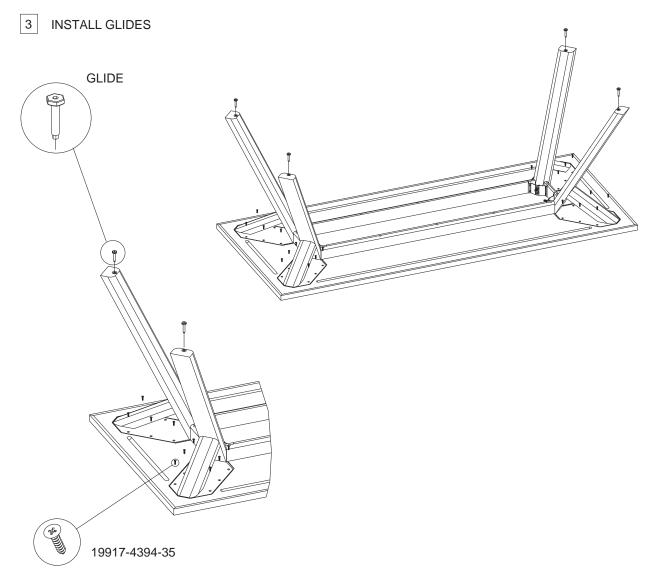


PORT ATTACHEMENT FOR TABLE 42" WIDE AND LARGER




2 INSTALL PORT B WITH SUPPLIED SCREWS


3 REINSTALL CENTER BRACKETS A

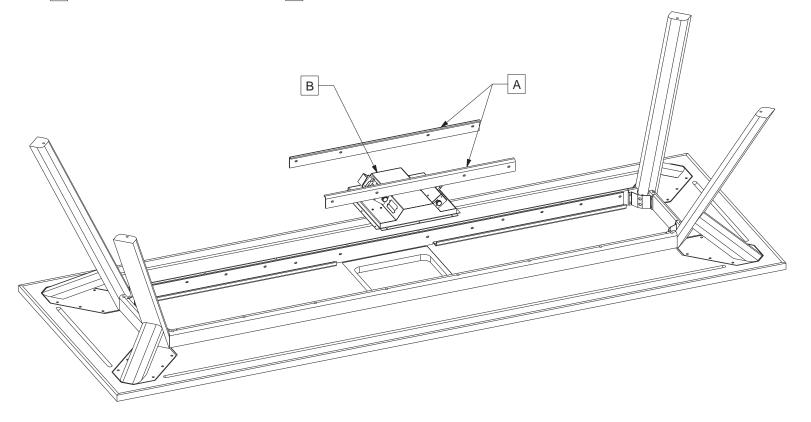

MULTI-PIECE TABLE ASSEMBLY INSTRUCTION SARANAC TABLE

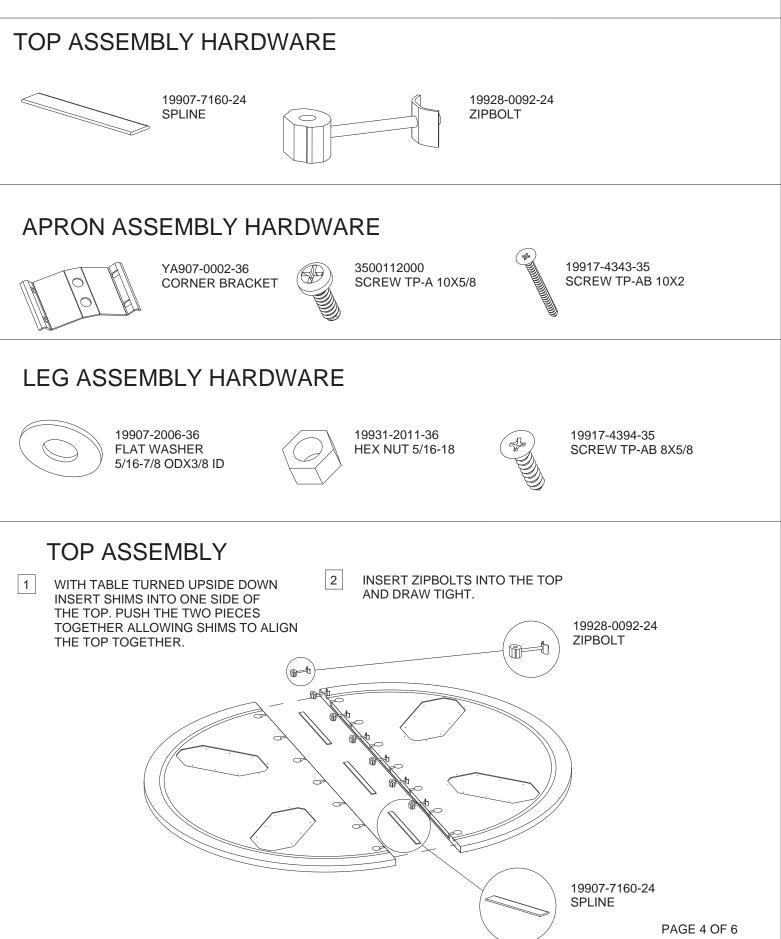

APRON ASSEMBLY

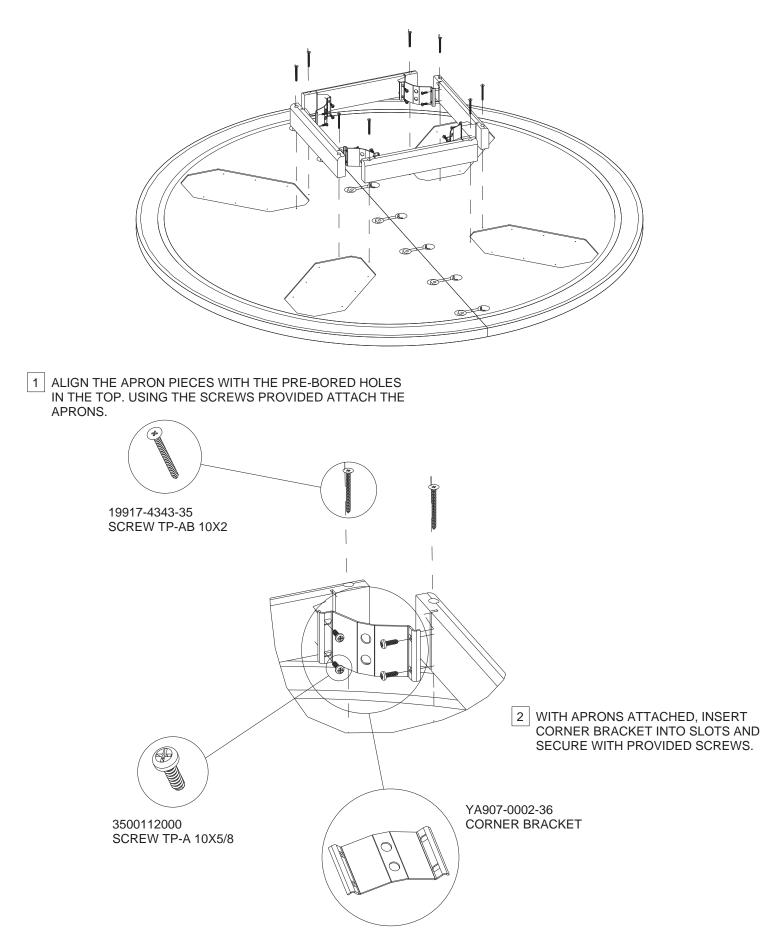


LEG ATTACHMENT

1 WITH TABLE TURNED UPSIDE DOWN SLIDE LEG ASSEMBLY INTO THE CORNER BRACKET, LINING UP LEG STUDS. USE WASHER AND HEX NUT TO TIGHTEN DOWN LEG.

2

3

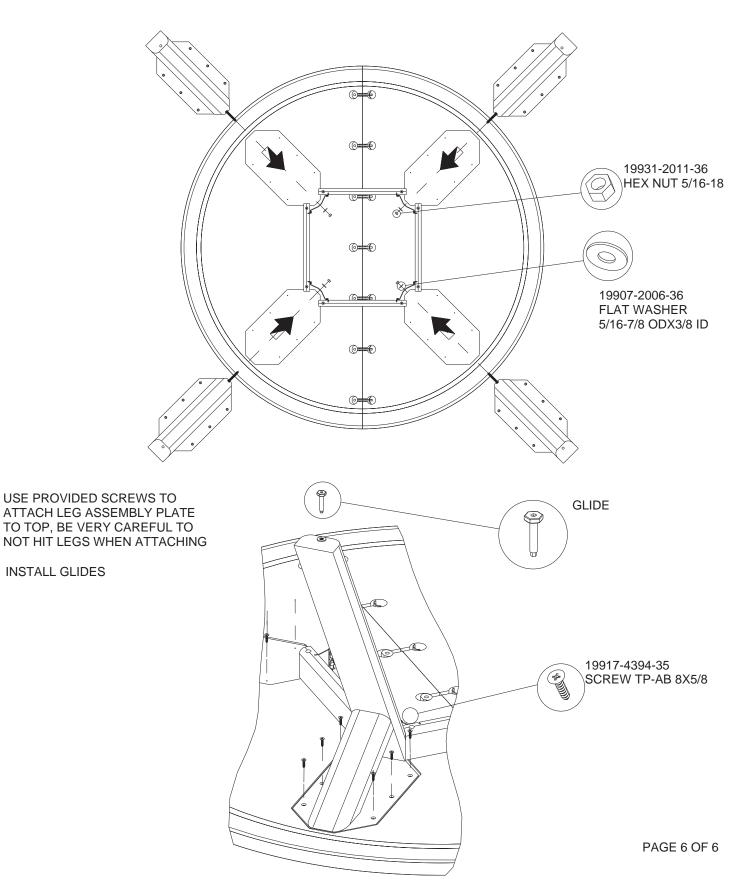

YA013-6101-00

GENERAL NOTES:

1. ALWAYS INSTALL AFTER TOP HAS BEEN PLACED AND LEVELED 2. REMOVE WIRE MANAGMENT IF TOP NEEDS TO BE MOVED

ATTACHMENT HARDWARE: GYAWIRECLMN-W



19917-4326-35 SCR TP-AB 10X1-1/4 FT PH ST BL

INSTALLMENT: GYAWIRECLMN-W

- 1 FIND FRONT PANEL WITH THE FINGER ROUT ON THE BOTTOM OF THE PANEL
- 2 PULL PANEL IN THE UPWARD DIRECTION TO RELEASE CLIPS
- 3 PLACE WIRE MANAGER, INSTALL 4 SCREWS IN TOP PANEL TO TOP
- 4 RUN WIRES AS NEEDED, INSTALL FRONT PANEL BACK ONTO UNIT BY LOCATING SCREWS AND THE CLIPS AND SLIDING FRONT DOWN

