 






Infinity Massage Chairs
72 Stard Road
Seabrook, NH 03874

603-910-5000
www.infinitymassagechairs.com

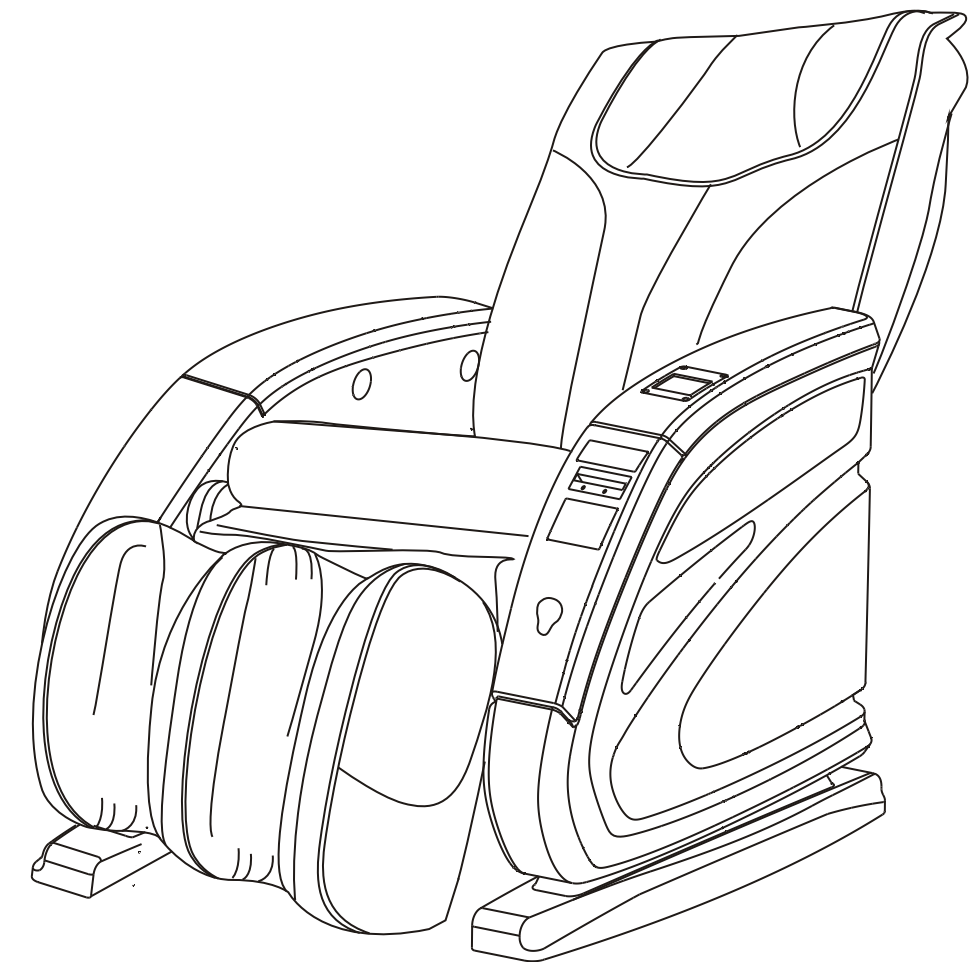

INFINITY VENDING MASSAGE CHAIR

  IT-6900V2
OPERATING INSTRUCTIONS

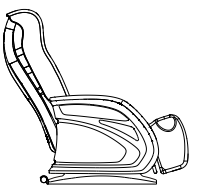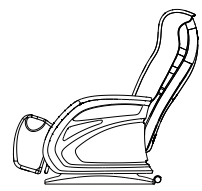

INDEX

Safety precautions-----	1
Product function features-----	4
Name and function for each part-----	5
Preparation before use-----	9
Operation steps-----	10
Assembly method-----	11
Troubleshooting-----	12
Maintenance & care-----	13
Specifications-----	13

MAINTENANCE AND CARE

Maintenance method

● Chair

To clean plastic, pipe and armrest, please use cotton fabric immersed in a neutral detergent, wring out it to until dry and use it to clean , after all the above parts are cleaned by the detergent, then use dry cloth to clean the chair.

Notice



Do not use corrosive detergent or cleansing powder, such as ethanol, so as to avoid damage, colour changes, dehiscence etc.

● Controller

Please use dry cloth to clean the controller

Notice



Do not use a wet towel to clean the controller so as to avoid malfunction.

● Back cushion and pillow

If there is dirt, please use cloth with neutral detergent, then use wet cloth to clean it, finally place it in a ventilated area to dry naturally.

Storage method

Put the chair in a dry place after cleaning. Please cover it when not in use to avoid dirt and dust.

Notice



Do not place the chair under the sunshine directly for long time, and not near a hot object, such as a burner, to avoid color changes or deterioration.

Friendly inspection



Be sure to inspect the product once use it for long time.

Check for:



- A burning smell
- Damage to the power cord
- Overheating of the power cord
- Other abnormal condition.

Please stop using

To prevent malfunction and accidents, please pull out the power plug from the socket. And contact the dealer where you purchased the product or our company. Please do not disassemble it by yourself.

SPECIFICATIONS

Name	Infinity Vending Massage Chair	Rated power	100W
Model	IT-6900V2	Safe design	Class I
Rated voltage	110~120 Volt	Weight	90Kg
Rated frequency	60 Hz	Dimensions	130X86X140 (cm)
Spread dimensions	176X86X75 (cm)	Used	Indoors

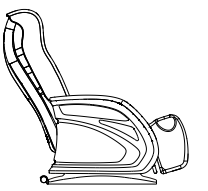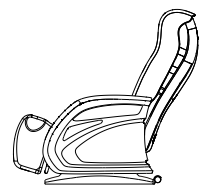  

TROUBLESHOOTING

Phenomenas	Reasons	Solutions
No display after starting	If plug is inserted to the socket?	Plug into the socket.
	If power switch behind the armis cut?	Switch on the power.
	If the fuse is burnt?	replace the fuse with same type.
Stop working suddenly	If the back cushion touches on the wall or other obstacles?	To avoid collision, please shut off the power switch ,move the machine, turn on the power switch again.
	If it exerts heavily? (For safety, the massage mechanism will stop working once bear the overburden)	Let the body to leave the back cushion temporarily, shut off the power switch , after turn on the switch again to press the function button. All start again.
Red light flashes at the inserting place	If the cash box is full?	Take out the money, and restart the machine
screen show Err1	Massage mechanism can not return to original state.	Check the massage chair, try it again after powered on . If it can not be recovered, the massage chair should be sent for repair.
screen show Err2	If the current is unstable?	Try it again after shutting off the power for 5 seconds.

! Warnings If the chair still does not work, cut the power off and remove the plug from power socket, please contact with the distributor or our company for maintenance and care.

Is it a malfunction?

During operation, should the chair make the following sounds or not feel right, it could be the normal phenomena come from the structure. it will not influence the lifetime of the chair.

- The clack sound when travelling up and down of the kneading mechanism.
- The gears and motor sounds in operation.
- The friction of the massage chair and other materials.
- Noise of inflating and deflating air bags.



SAFETY PRECAUTIONS

- Before using the product, please read the “Safety precautions” carefully and use it properly.
- Please put relevant notice on visible area if necessary.
- To clearly indicate the degrees of damage, the notice items are divided into the proper applications of “warnings” and “cautions”.

Both are important and relevant to your safety concern, please comply with them.

	WARNINGS	Once Wrongly used, there is a possibility of death or to be seriously injured.
	CAUTIONS	Once wrongly used, there is a chance the user can be seriously injured or physical damage.

	Indication for prohibited actions and behaviours.
	Denote mandatory actions and instructions for safe operation.
	For safety, do not repair the product by yourself.

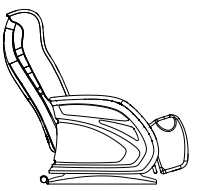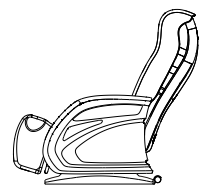  

ASSEMBLY METHOD

! WARNINGS!

 
1. Those who have electronic medical instruments imbedded in their body such as a cardiac pacemaker or the like should consult a doctor before using.
2. Those who are sick and being treated by a doctor should avoid using massage chair, and should check with doctor before using.
3. Patients with malignant tumors, heart disease, or any acute disease should not use chair.
4. Any person who is pregnant should not use the massage chair.
5. Anyone with osteoporosis or fractured spine should not use the chair.
6. Anyone with skin disease or skin injury should not use the chair.
7. Anyone with a high fever should not use the massage chair.
8. Should for any reason, the product does not work or an abnormality occurs please disconnect power immediately and contact the distributor for an overhaul repair.
9. When descending the footrest or backrest, please be sure there are no children, animals or any other obstructions under the footrest or backrest.
10. Use the rated power supply to avoid fire or electrical shock.
11. Should the power socket, plug or cord be damaged or loose, do not use.
12. Keep power cord unobstructed at all times, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.
13. Do not disassemble, repair or alter the product. Only technicians authorized by our company should repair the product.
14. Should any abnormal phenomenon occur when using it, stop immediately and consult with the doctor.
15. Cut the power off after use.

⊘ Prohibited


1. Use the massage chair in damp places.
2. Put the massage chair close to a furnace or under the sunshine directly.
3. Use product on heated carpet or other heating devices.
4. Put the massage chair on an uneven surface during operation.
5. Use the controller with wet hands.
6. Drop the controller on floor or into water.
7. Pull the controller cord with excessive strength.
8. Put heavy things on the controller.

Assembly/ folding method


Unfold the backrest in the direction indicated by the arrow, At approximate 115 degrees , a locking sound is heard.

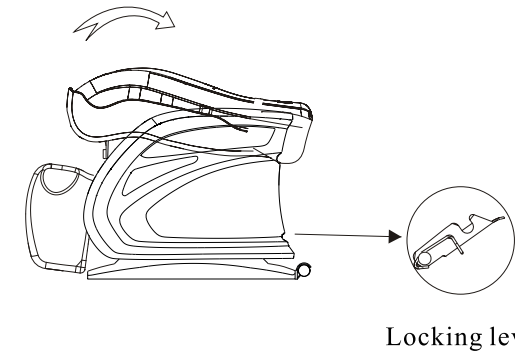

 
Release locking lever situated under the backrest and behind the seat, then fold backrest forward According to the arrow direction until it touches the seat cushion.


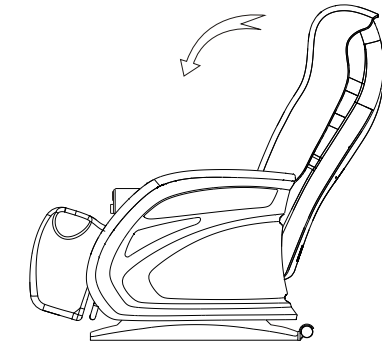


Backrest disassembly method

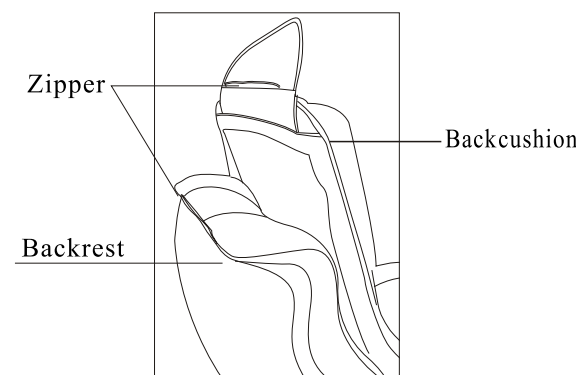 

Seat cushions disassembly method

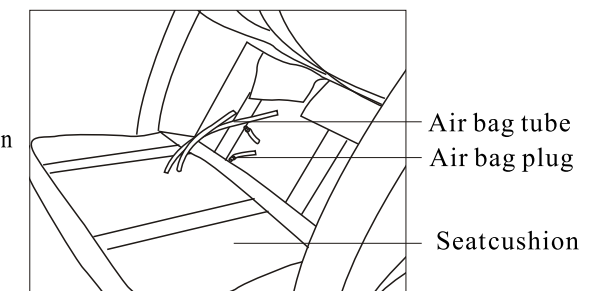 

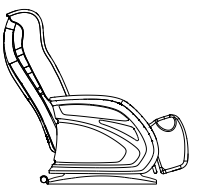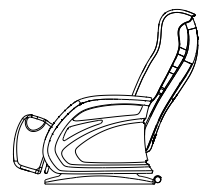  

OPERATION STEPS

Power on

- Insert the plug into fine grounding three core wire power socket.
- Switch the power on.(behind the backrest)

Self-inspection

The bill acceptor massage chair box enters into the self-inspection state after it is powered. If the self-inspection is normal, it will go into standby state. Now the parameters can be set. If the self-inspection is abnormal, there are the following three display:

Err0 internal communication is abnormal.
 Err1 massage mechanism reposition is abnormal.
 Err2 bill acceptor initialization is abnormal.
 Abnormal phenomena : refer to the “troubleshooting”.

Bill-insertion

 
When the massage chair in the standby state, the bills can be inserted. When the quantity of the inserted bills are less than the set starting quantity, the display screen will show the current bill quantity, when the bill quantity is equal to the setting quantity, the machine starts to show the corresponding running time. If no more bills are inserted within 5 seconds; the machine will begin to work, the running time is the present time; the display screen will show the remaining time. When the inserted bill quantity is more than the setting quantity, every inserted bills will make the time increase accordingly (the added value: starting time / starting bill quantity). For example: the starting bill quantity is 3, the starting time is 2 (2 minutes i.e. 120 sec.), then it means 3 bills can start it, every bill added will make the time increase: 120 sec./3=40 seconds.

Shutting off the machine

When the remaining time on the display screen is 0, all the massage function will be shut off, and shows “rEst”, This shows the massage chairs is in the state of reposition. When the massage mechanism finished its reposition, the massage chair will return to standby state. The display screen shows “0” .


Take out the cash

- 1.Unlock
- 2.Unfold cover to take out bill box

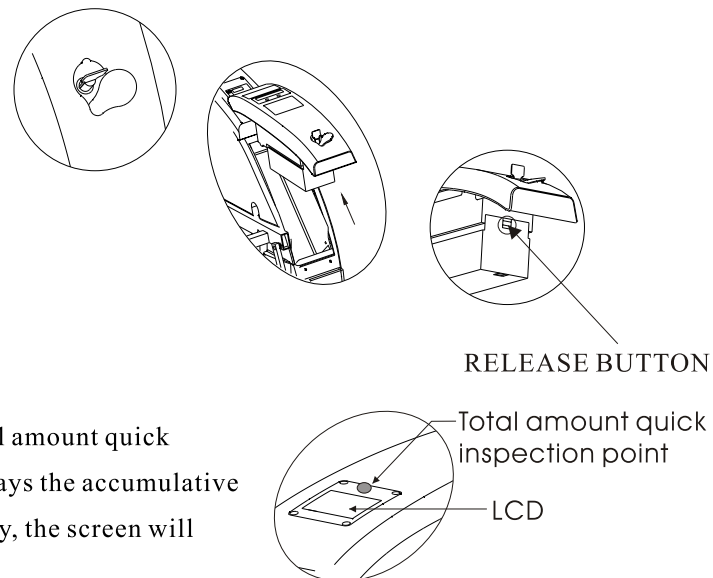

Total amount quick inspection

 Put the magnetic pen on top of the total amount quick inspection point, the screen then displays the accumulative amount, remove the magnetic pen away, the screen will return to normal state after 3 seconds.

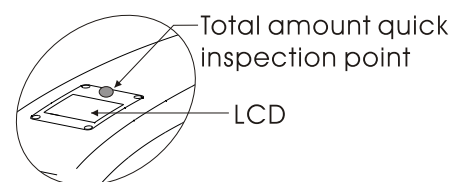

! CAUTIONS!

 
 
Mandatory

- 1.Remove the plug from power socket when out of use.
- 2.Should product receive maintenance, switch off and remove plug from power socket.
- 3.When disconnecting plug from socket, be sure to hold insulating bush instead of power cord.
- 4.Do not use the product while smoking or near a fire place.
- 5.Please ensure to install grounding. In case malfunction, leakage may cause an electrical shock. Additionally, consult with the dealer when installing the grounding.
- 6.Should a blackout or power failure occur, switch power off immediately and remove plug from power socket.
- 7.Before use, uncover back cushion and make sure if the back and the inner cushion is in good order. Should any part be damaged contact distributor immediately and do not use until repaired.
- 8.When descending the footrest or backrest, use moderate pressure and be sure there are no obstructions or children near or under the footrest or backrest.
9. If the power cord is damaged , it can only be replaced by the manufacturer's maintenance department or similar department.

Prohibited

1. Use the product when using other therapy devices.
2. Use the product for medical treatment purpose.
3. Let children to play on the massage chair.
4. Exert heavy force on the product, or prick or thrust sharply by the knife or other sharp articles.
5. Clean the product with petrol, detergent and spray pesticide on it to avoid any damage to the cover.
6. Sit on backrest, armrest or footrest to avoid injury.
7. Move the chair off of any fragile wood or carpet in case of any damage to the floor or caster.
8. Immediately use the product after meal .
9. Move it after the people sit or loading anything on the chair.
10. Have two people or more than two people on the product to avoid any injury or damage.
11. Put your head or hands under the product when operation.
- 12.When operating, put knives, keys, or valuables in the pocket.
13. Let the children use the product alone or unconscious people to use it.

Do not disassemble, repair or alter the product except for technicians authorized by our company. If you have any problem with the product, contact the distributor immediately.

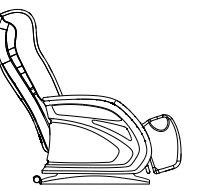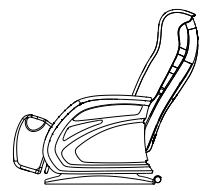


FUNCTION AND FEATURES


1. Backrest ascending and descending structure can fit the body curve automatically; the ergonomically design offers the best massage. The armrest has a ball acceptor inside.



 
2. Delicate massage features presents humanistic and an overall enjoyable massage. The movable backrest massage mechanism between neck and waist performs kneading, knocking, kneading & knocking and finger-pressing modes; meanwhile adjustable speed and width help to relieve muscular fatigue and increase blood circulation.

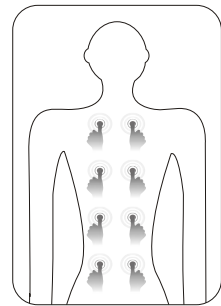


KNEADING

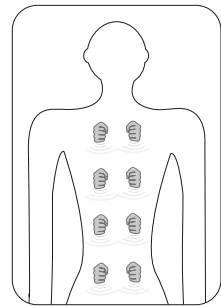 

KNOCKING

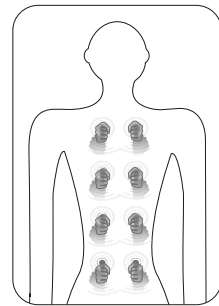 


KNEADING & KNOCKING

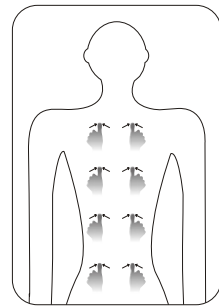 


FINGER PRESSING

 3. Lower back allows wavelet air pressure massages. Air bags at the thigh, buttock and legs areas will be inflated and deflated with air alternatively to offer a repeated air pressure massage and really helps relax nerves and improve blood circulation for lower body.

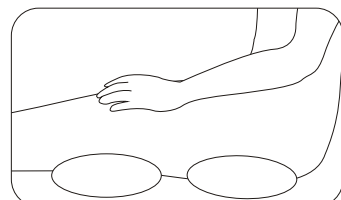

Buttocks and thigh air bags

 4. One air bag in the upper and the lower position of the left and right side respectively and the air bags in the middle of the two sides make the alternant and circulative massage.

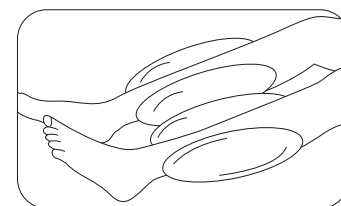


Leg air bags

PREPARATION BEFORE USE


Installation place

 Appropriate safety distance from surrounding objects.
The horizontal distance between peak point and bottom point of the backrest is over 50cm.
The horizontal distance between peak point and bottom point of the footrest is over 15cm.

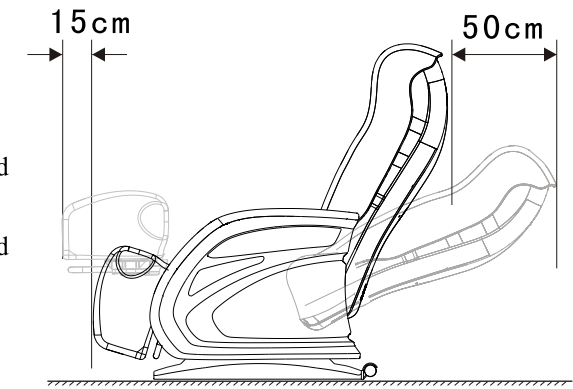

Floor protection

 The base of the massage chair may cause damage to the floor, we advise to place firm cushioning (such as cushion) under the chair.

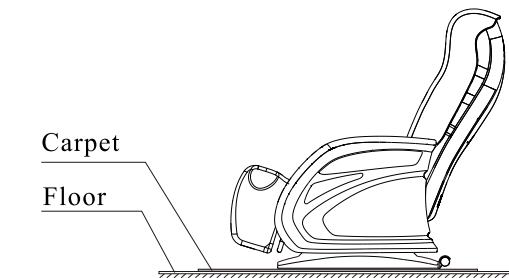

Surroundings



Do not put massage chair in damp place (such as bath room), to avoid the machine getting wet and causing electrical shock.



Do not place the massage chair near a hot place (such as burner), to avoid fire or damage to the cover.

 
Grounding

 
 


The massage chair belongs to class I electric appliance with a three core power source plug, please confirm the earth wire is installed so as to avoid electric shock coming from an electricity leakage during operation.

Moving method


Adjust the backrest to the peak point, place the controller and the plug on the seat cushion, be sure all the wires are not close to the floor, use your hands to press the top of the backrest until it is lowered, make sure the back two plastic foot cushions are far enough from the floor and has enough space, then use the castor to move the chair smoothly.

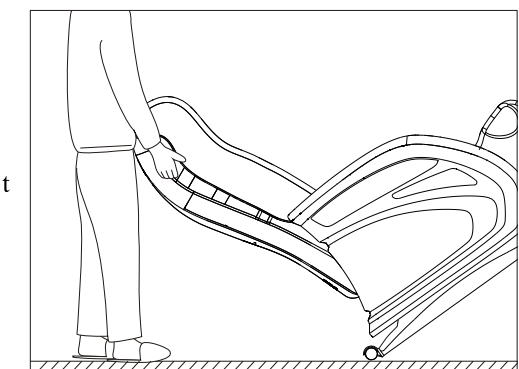

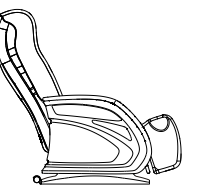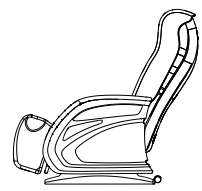

NAME AND FUNCTION FOR EACH PART

 LCD screen

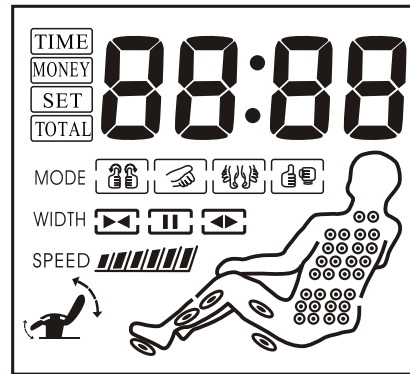

Display area for the setting data, running time, remaining time

After the machine is initialized it shows “rEst”.

After it recovered to the standby state it shows “0”.

When the inserted bill's value didn't reach the setting it shows “---X” (X:0-9).

When the inserted bill's value reach the set it shows time “XX : XX” (X:0-9)

When error occurs, it shows the malfunction code (ErrX) (X:0-3)

Under standby state, you can check or change the settings. (Refer to “ remote controller” chapter for details)When change the settings, “_XX” will flash, you can press“▲” “▼” to change the data.

TIME
MONEY
SET
TOTAL

Display area for check/change settings

When running, “TIME” appear.

When check or change total time, “TOTAL”and “TIME” appear.

When check or change total bill quantity, “TOTAL” and “MONEY” appear.

When setting starting bill quantity, “SET”and “MONEY” appear.

when setting starting time, “SET” and “TIME” appear.

when setting massage chair descending time, “SET” and “TIME” appear.

MODE [Icons]

Massage mode display area

[Icon] Kneading [Icon] Knocking [Icon] Finger-pressing [Icon] Kneading & Knocking

WIDTH [Icons]

Width indicate for knocking and finger-pressing massage modes.

[Icon] Narrow [Icon] Middle [Icon] Wide

SPEED [Icons]

Speed indicate for kneading, knocking and kneading &knocking massage modes.

[Icon] Slow [Icon] Middle [Icon] Fast



Indicator for the parts of air bags.

 
Calf ascending & descending indicator




Backrest ascending & descending indicator



NAME AND FUNCTION FOR EACH PART

External structure

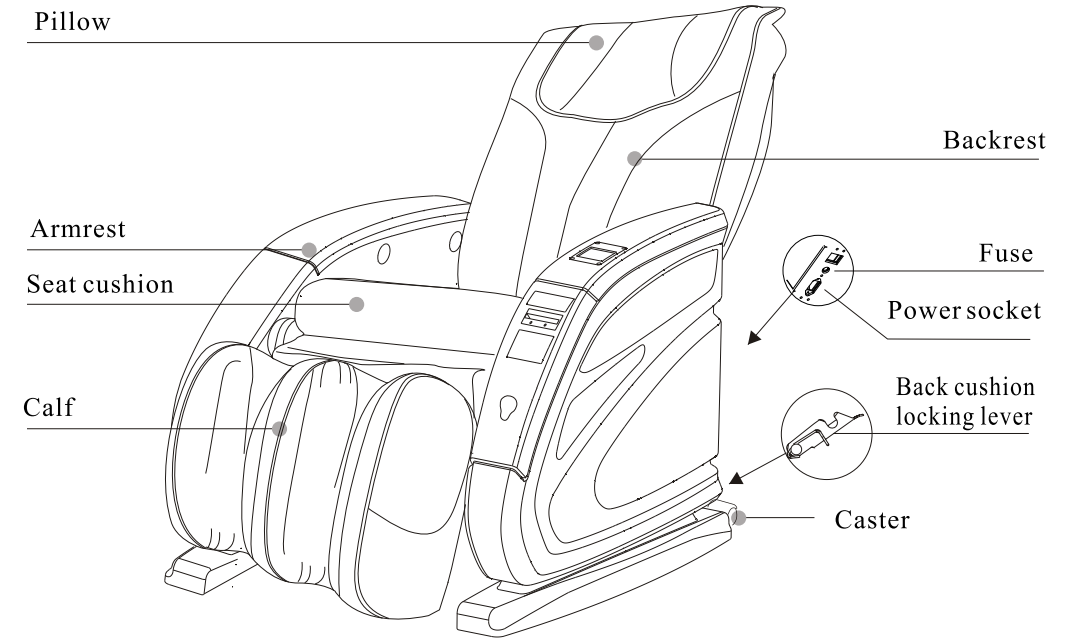

Internal structure

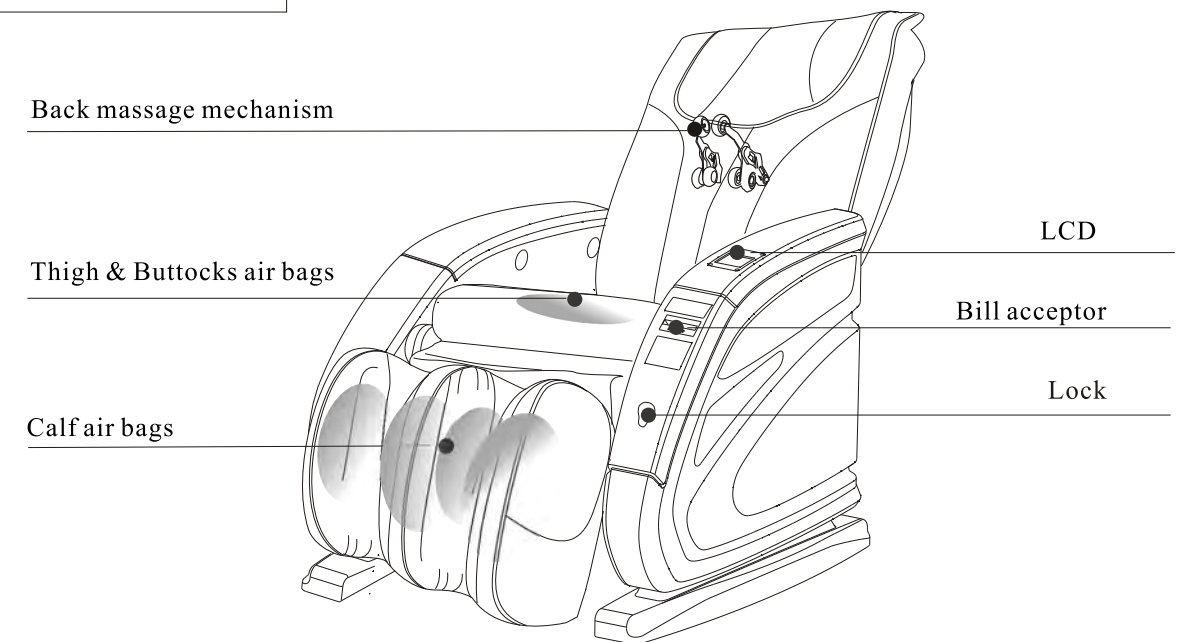 

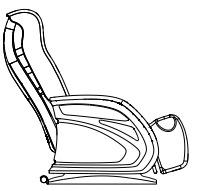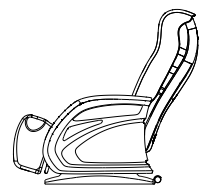  


NAME AND FUNCTION FOR EACH PART

Bill acceptor

After the bill acceptor initialized, the green light on the bill acceptor will flash, then it can accept bills.

 
Remote controller

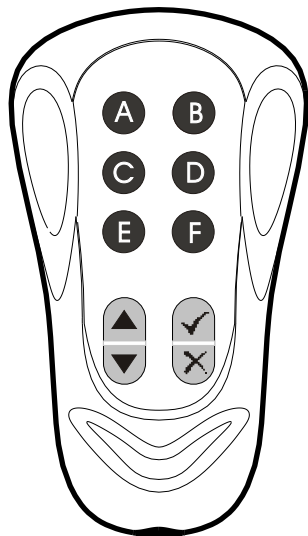

- A B C D E F For password setting
- ▲ Previous menu / increase
- ▼ Next menu / decrease
- ✓ Confirm / enter sub-menu
- ✕ Cancel / back to previous menu

Password Validated

 Under standby mode, connecting remote controller to the machine to start setting, screen shows "____", please input user's password which consisted by four digital, then press "✓" to confirm password (includes supervisor's password and user's password, original supervisor's password is ABCD, original user's password is AAAA), After successfully proofread password, the machine will select users automatically; while if the system will fail to proofread the password for three times, the machine will be locked and all buttons will be invalid for selection. But you may shut off power and restart the machine. Once the plug of the remote controller pulled out, the massage chair will be the condition out of setting.

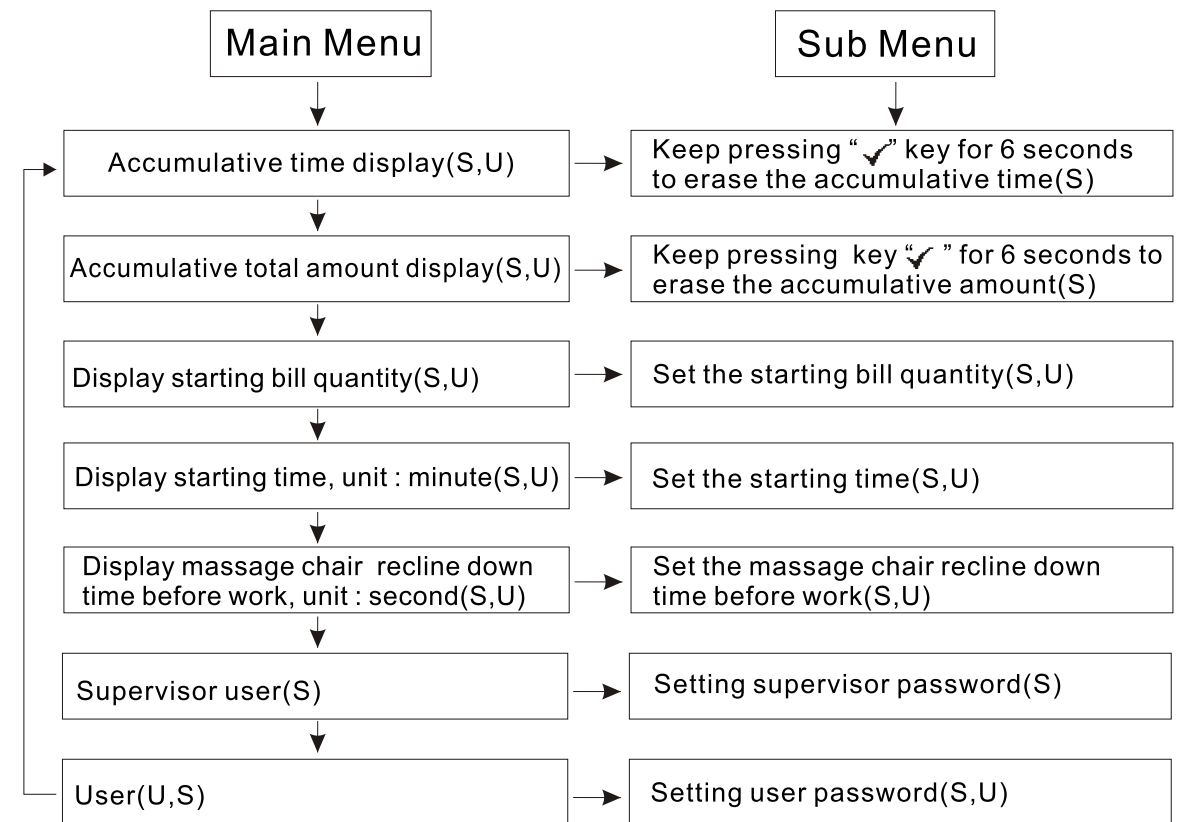

S:supervisor U:user

Accumulative time: If the accumulative time is less than 100 hours, the display format is : HH : MM(HH is hour, MM is minute). If the accumulative time is more than or equal to 100 hours and less than 10000 hours, the display is 3 to 4 digits integer of hours (minutes are omitted).

Accumulative amount: If the amount is less than 10000pcs of bill's value, the display is 1 to 4 digits integer.

Starting bill' s quantity: setting range is 1-10; which corresponds to 1-10 bills.

Starting time: setting range is 1-15; corresponding time is 1-15 minutes.

Massage chair: recline down time before work : setting range is 0-30; corresponding recline down time is 0-30 seconds.

Password setting : when screen shows "SUP_" (supervisor) or "USE_"(user), press "✓" button to enter password setting, screen shows "____" to remind consumer inputting password which consists of 4 numbers, press "✓" to save it, screen shows "____" again to remind consumer inputting password again, press "✓" to confirm. System will be back to standby mode only when passwords are the same for two times inputting.

Accumulative time erasure: Under the display of accumulative time state, keep pressing "✓" for 3 seconds, the display screen will show "CLEA", the time will be erased after 6 seconds. When the action is successful, the screen will show "0".

Accumulative amount erasure: Under the display of showing the accumulative amount state, keep pressing "✓" for 3 seconds, the display screen will show "CLEA", the amount will be erased after 6 seconds. When the action is successful, the screen will show "0".