 


In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

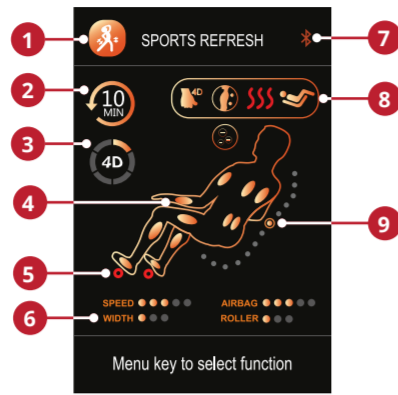

- | | |
|------------------|------------------------------------|
| 1 Program | 6 Indicators |
| 2 Time left | 7 Bluetooth connected |
| 3 4D intensity | 8 Status Icons |
| 4 Active airbags | 9 Back-roller position & direction |
| 5 Active rollers | |

Chromotherapy

From the **HOME** screen, select the **LIGHTS** menu. Navigate to **THEMES** and select your desired light setting.

Solid: Single color light.

Breathe: Single color that dims and brightens on a loop.

Wake Up: Blue enriched lights to boost energy levels - gradually increasing brightness.

Wind Down: Colors of sunset - gradually decreasing brightness.

Multi-wave: All the colors of the rainbow morphing into each other.

Multi-rotate: Colors rotate from one to another.

Intelligent Voice Commands

Awaken Intelligent Voice Commands by saying: **'Switch to Voice Mode'**.

You may now give your chair any of the commands below **within 5 seconds**. Make sure to speak clearly and slowly. After 5 seconds the Intelligent Voice Command function will turn off automatically and must be awakened again.

Commands

Power On	Deep Shiatsu
Switch Off	Healthy Breath
Activate Massage	Massage Extend
Sports Refresh	Relaxation
Extension	Air Bag Massage
Rest & Sleep	Zero Gravity
Working Relief	Start Heat
Neck & Shoulder	Heat Off
Waist & Spine	

Sounds

From the **HOME** screen, select the **SOUNDS** menu. Toggle the following settings to play Nature sounds from your chair.

Sound: Select from Nature sounds.

Volume: Set volume level.

BEEP: Set to OFF to stop sounds from remote control.

To play Nature sounds, Bluetooth must be **ON** prior to selection.

Quick Access Controller

Button Operation

On/Off:

 
Press and hold.

Change Auto Program:

Short press; new program will be announced and start.

Dial Operation

Turn left or right to recline or incline.

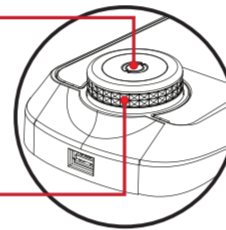


KYOTA | The World's Most Advanced Massage Chairs®

72 Stard Road, Seabrook, NH 03874 | (800) 242-0761
www.kyotamassagechairs.com

Version 1.6

KYOTA®

 Quick Start Guide

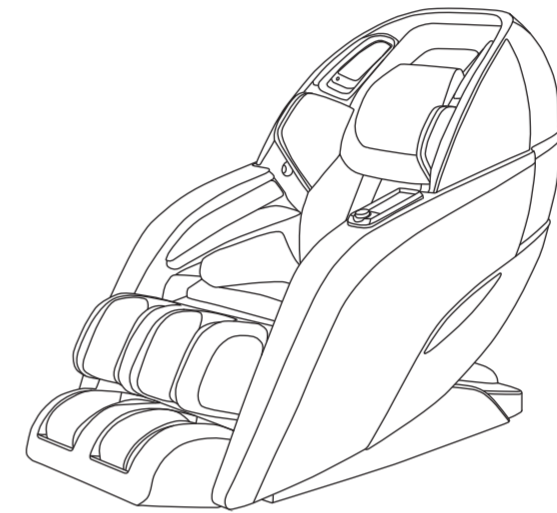

Yutaka M898 4D Massage Chair

KYOTA®

Power – Powers up the remote or returns the chair to the exit position and powers down remote.

Home – Shortcut to the home page of all menu screens.

OK – After navigating to the command desired on the display, push OK to select.

Zero Gravity – Press for zero gravity 1, press again for zero gravity 2, press again to restore recline.

Foot Roller – Press to turn off foot roller, press again to resume foot roller.

Footrest – Press and hold up arrow to bring footrest up, press and hold down arrow to bring footrest down.

Leg Length – Press and hold right arrow to extend the leg length, press and hold left arrow to retract the leg length.



Multi-Functional Screen – Use the directional buttons below to navigate these menu screens. Then press OK to select.

Pause – Press pause to immediately stop all massage chair activity, press again to resume.

Auto – Shortcut to the auto programs menu screen.

Directional Button – Press up, down, left or right to navigate the display screen.

Back Adjustment – Back mechanism position adjustment; press and hold up to raise, press and hold down to lower. Use during initial body scan fine tuning or in manual point or partial zone mode.

4D – Press to increase or decrease 4D intensity of back mechanism. In-use screen displays intensity dial.

Seat Back Position – Press and hold down arrow to recline the seat back, press and hold up arrow to upright the seat back.