


In-Use Screen

After a Massage program is selected, the In-use screen displays all settings for that program.

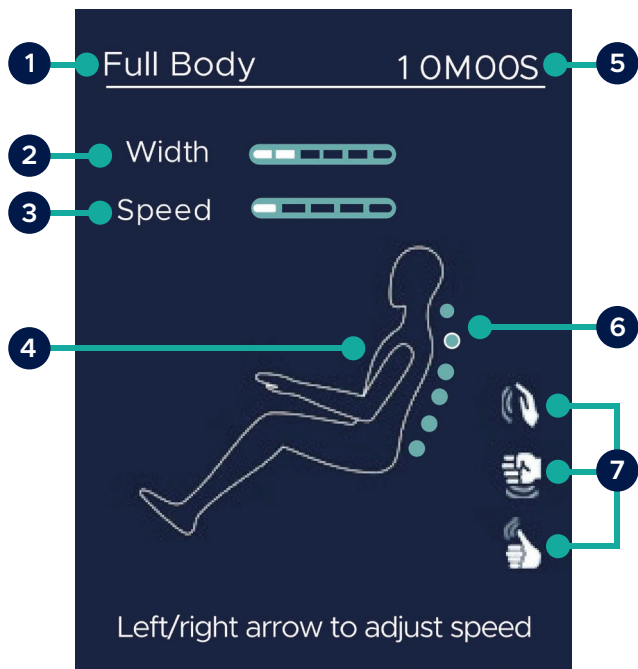

- 1 Auto Program
- 2 Setting: Width
- 3 Setting: Speed
- 4 Display Model
- 5 Time Remaining
- 6 Massage Intervals
- 7 Massage Techniques

Auto Programs

From the home screen press AUTO PROGRAMS to select a pre-choreographed massage.

- Full Body
- Decompression
- Neck & Shoulder
- Back Massage
- Waist Massage

Share a photo and tag us:

- @Infinitymassagechairs
- @infinity_chairs
- @Infinitymassagechairs

Don't forget to use **#lovemyinfinitychair**

INFINITY

72 Stard Road, Seabrook, NH 03874
603-910-5000
www.infinitymassagechairs.com
Version 1.0

INFINITY
MASSAGE CHAIRS

Quick Start
Guide

The
Restora Chair™

INFINITY
MASSAGE CHAIRS

Multi-Functional Screen

Use the directional buttons below to navigate these menu screens. Then press OK to select.

Power Button

Press the power button to turn on/off.

Directional Buttons

Moves the selector up, down, right, or left. Can also be used to adjust the massage experience on specific pages.

OK Button

Confirm button: press OK to make the selection.

Home Button

Returns you to the main menu page.

Posture Buttons

Adjust the chair to sitting, reclined, and lying.

Time Adjustment

Adjust the time settings for the program that you wish to change, "+" to increase time in increments of 5 minutes to a total of 30 minutes and "-" to decrease time by 5 minutes to a minimum of 5 minutes.



Pause Button

The pause button temporarily halts the massage, allowing users to take a break or adjust settings.

Return Button

Press to return to the previous page and/or setting.

Posture Adjustment

Adjust the backrest by pressing "+" to raise and "-" to lower the backrest; release the buttons to stop raising and lowering.

Rocking Button

Initiates the rocking feature of the chair: press once to turn on and off.