 
 


Start an Auto Program

Sit comfortably with your head against the headrest and your back fully against the backrest. Select an Auto Program to begin the TrueFit® Body Scan.

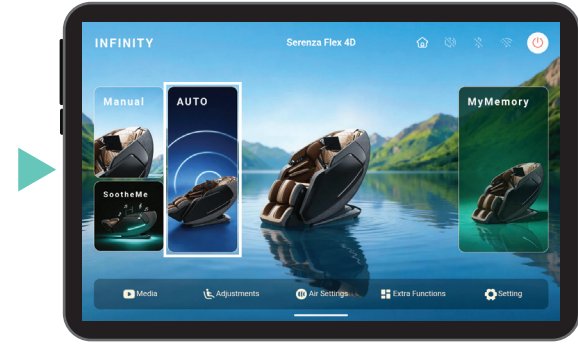

The massage rollers will scan your back and detect your shoulder position. After the scan, use the **shoulder position adjustment** controls, if needed, to align the massage mechanism to the top of your shoulders.

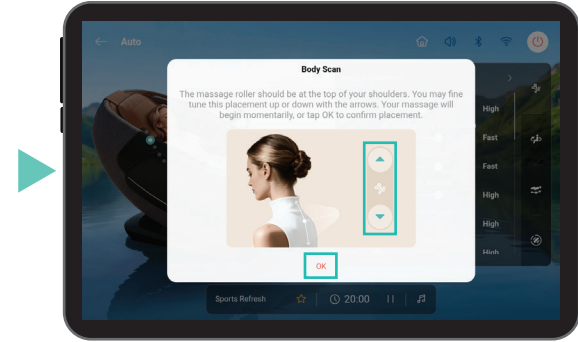

Once the TrueFit® Body Scan is complete, you will be taken to the controls allowing you to make specific adjustments to your **Auto Program** massage session.



Quick Access Control Panel

Use the quick access control panel to quickly jump into an auto program, adjust zero gravity, incline/recline of the backrest, legrest up/down, and/or utilizing the USB-C charging port.

Power Button

Press and hold to turn the Massage Chair on/off. Auto Programs will display on screen.

Smart Dial

Turn clockwise or counter-clockwise to choose your preferred auto program.

Zero Gravity

Press to cycle through 3 Zero Gravity angles.

Backrest Up/Down

Press to incline or recline the backrest.

Legrest Up/Down

Press to move the legrest up or down.

USB-C Port

Charge your favorite compatible device by plugging in to the port.

Share a photo and tag us:

@Infinitymassagechairs

@infinity_chairs

@Infinitymassagechairs

Don't forget to use #infinitymassagechairs

INFINITY®

72 Stard Road, Seabrook, NH 03874
603-910-5000
www.infinitymassagechairs.com

Version 1.1

INFINITY®

 
MASSAGE CHAIRS

Quick Start Guide

Serenza™ Flex 4D Massage Chair



Alternatively, scan the QR code to watch a remote tutorial video.

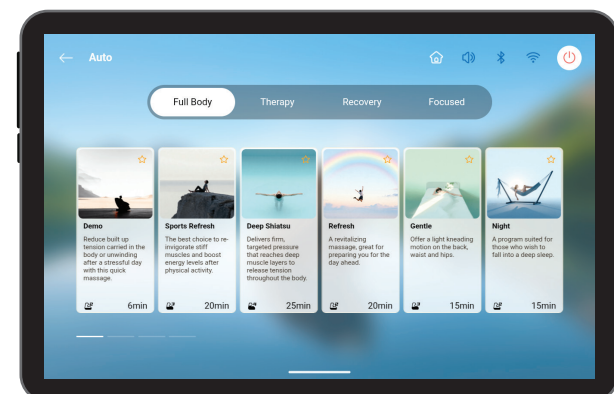

Auto - Select a category to see specific programs or swipe left and right to scroll. Tap your program of choice to start.

 


Manual - Take control to manually build a massage sequence. Selections are available in each of the 4 tabs to the right.




SootheMe - Choose from 10 relaxing sounds to enhance your massage. Tap to select a sound, then tap again to turn it off. Adjust the volume using the tablet's side buttons or the speaker icon in the top right navigation.

INFINITY®

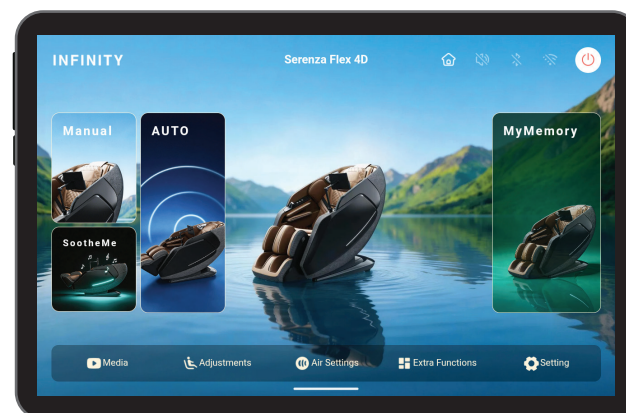

 Home Screen - The main screen when the massage chair turns on. Here you will find access to all the chairs functions.

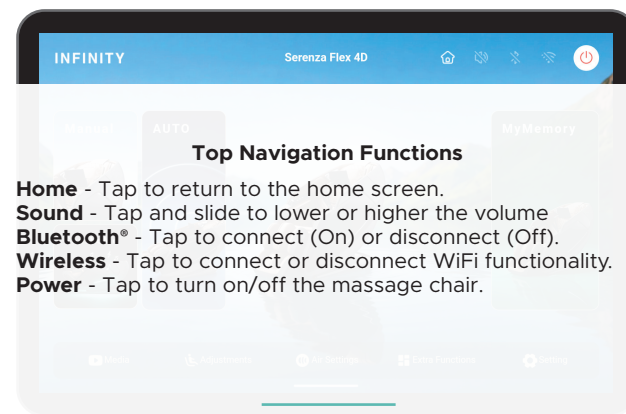


Bottom Navigation Functions


Media - Tap to access a Google Browser, YouTube, Netflix or HBO/Max. (Subscriptions are required for Netflix and HBO/Max)

Adjustments - Tap to turn/change Lumbar Heat, Foot Heat, Foot Roller, Calf Kneading & Oscillation, and Chair Adjustments.

 
Air Settings - Tap to change Airbag Regions and Air Intensity.

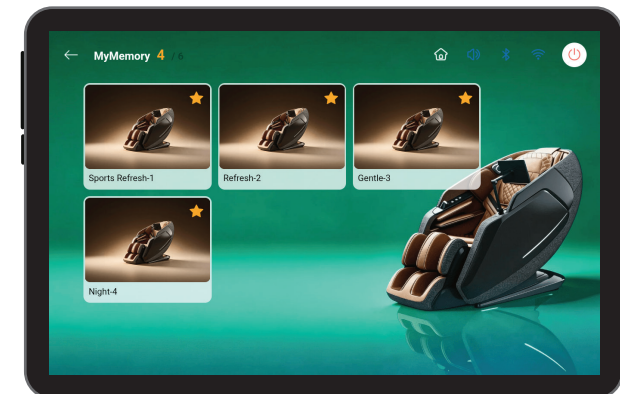

 MyMemory - Access up to 6 saved massage sessions here. Tap to run or tap the star to delete from memory.

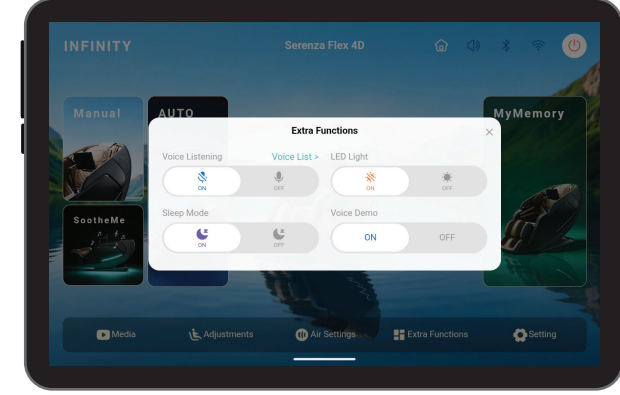

 Extra Functions - Change functions such as Sleep Mode, Voice Demo, Voice Listening, and LED Light.

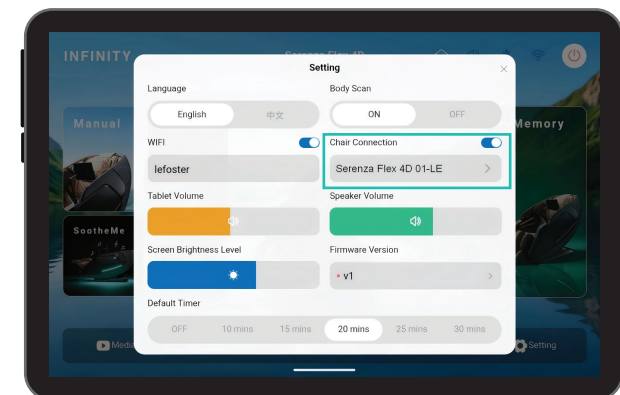

Settings - Ensure Chair Connection is ON and connected to **Serenza Flex 4D**. If the chair name is blank, select **Serenza Flex 4D** and tap Confirm to reconnect. Connect to Wi-Fi for Media features. The top navigation Bluetooth icon controls speaker connections, this control and the Chair Connection must also be on for the Speakers to work.